







Embedded Systems SIA, VAT No LV40003411103 47. Katolu str., Riga, LV 1003, LATVIA

Phone: +371 67648888, fax: +371 67205036, e-mail: sales@openrb.com

CANx / LoRa 433 MHz 6 x 10A Relays

ENG - Data sheet Issue date 5.02.2019

Application

6 channel CAN relay extension is designed to be used in building and industrial automation applications as an extension module to LogicMachine series devices based on CAN FT bus and LoRa 433 wireless. The configuration and monitoring of the device is done through separate LogicMachine CANx application. The device is designed for DIN-rail mounting and requires 4 DIN-units.



Types of product

CAN-R6-LoRa CANx / LoRa 433 MHz 6 x 10A Relays

Standards and norms compliance

CE conformity: EMBS-CE-110926/01 Electromagnetic compatibility

EMC: EN61000-6-1

EN61000-6-3

PCT Certificate

Technical data:

Power supply: 12-32V DC Power supply

Power consumption 10 mA (LoRa not active, relays

off)

25 mA (LoRa peak load, relays

off

76 mA (LoRa peak load, relays

on)

Interface: Relays 6

Rated voltage/current 250V AC (10A),

30V DC (5 A)

USB 1 microUSB for upgrade

firmware flashing

CAN FT 1

Operating elements LED 1 – CPU load

1 - Error

1

2 – RX/TX LoRa

Relays status LED 6

Relay manual operating

Buttons 6

Programming/reset button

LoRa specification Power on transmitter 1.6-50 mW (software

adjustable)

Frequency range 433-434,750 MHz Channel bandwidth 125 / 250 / 500 kHz

Carrier frequency step 125 kHz Spreading factor 7-12

Clamps: CAN FT Terminal 0.8mm2

Relays 5 mm2 Power supply 5 mm2

Enclosure: Material: Polyamide

Color: Gray

Dimensions: 70(W)x91(H)x68(L) mm

Protection: IP20 according to EN 60529

Usage temperature: -5C ... +55C Storage temperature: -20C ... +70C

Net weight: 158g Gross weight: 173g



Caution

Security advice

The installation and assembly of electrical equipment may only be performed by skilled electrician. The devices must not be used in any relation with equipment that supports, directly or indirectly, human health or life or with application that can result danger of people, animals or real value

Mounting advice

The devices are supplied in operational status. The cables connections included can be clamped to the housing if required.

Electrical connection

The devices are constructed for the operation of protective low voltage (SELV). Grounding of device not needed. When switching the power supply on or off, power surges must be avoided.

Default settings

Line ID: 0

Node ID: 1


Max. number of group addresses per object: 16

Reset to defaults

Press programming button for 5 seconds, the RED LED blinks 2 times, then release button - GREEN lights up shortly.

Programming physical address

Press *Tools* \rightarrow *Write device address* from CANx app. Choose address and press *Write*. Then press programming button shortly on the device, GREEN LED lights up shortly. The LED is switched off automatically in 1 second which means address is written.

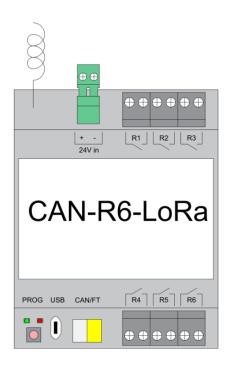


Manual relay control

When opening the front cover, you will find buttons for manual relay control.




Connection diagrams

CAN FT connection and power supply

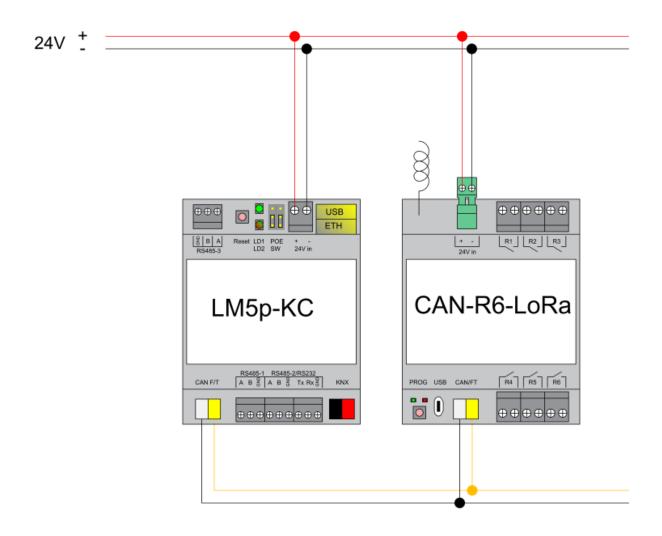


Lamp / motor / etc. connection

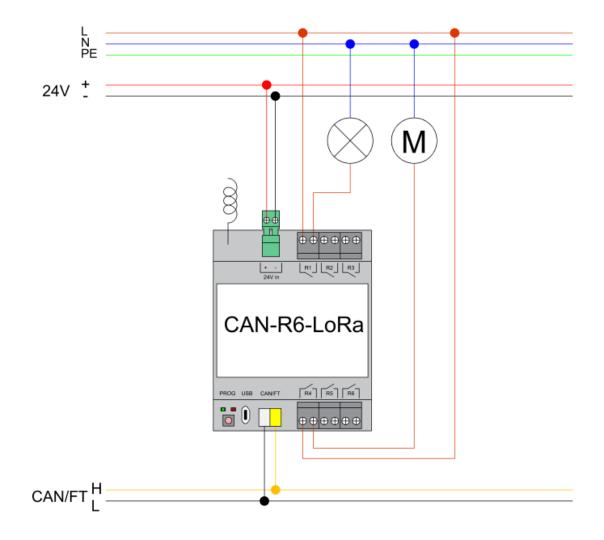

canX software settings

<u>Relay</u>

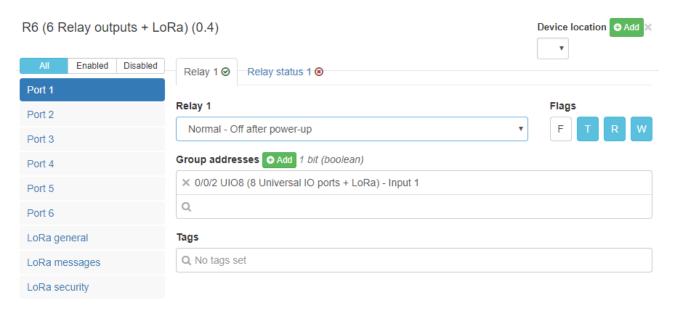



Default flags: read (R), write (W), transmit (T)

Relay mode:

Normal – Off after power-up

Inverse – Off after power-up

Normal – On after power-up

Inverse – On after power-up

Group addresses – you can assign group addresses from the predefined list or add manually by clicking on ADD button. You can assign max 16 group addresses to one object / output.

Relay status




Default flags: read (R), transmit (T)

Output status: Disabled, Normal, Inverse


Group addresses – you can assign group addresses from the predefined list or add manually by clicking on ADD button. You can assign max 16 group addresses to one object / relay status

LoRa General settings

Frequency – define the frequency LoRa will operate in. Frequency should be equal on transmitter and receiver(-s).

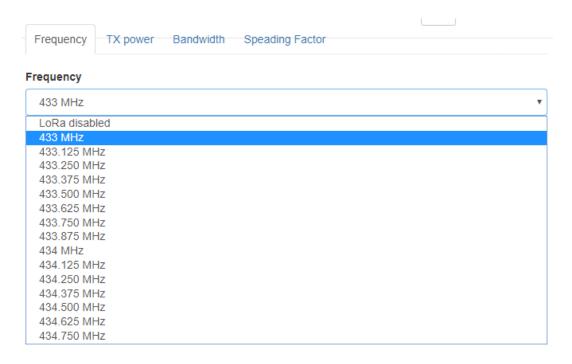

TX power – output power of LoRa transceiver

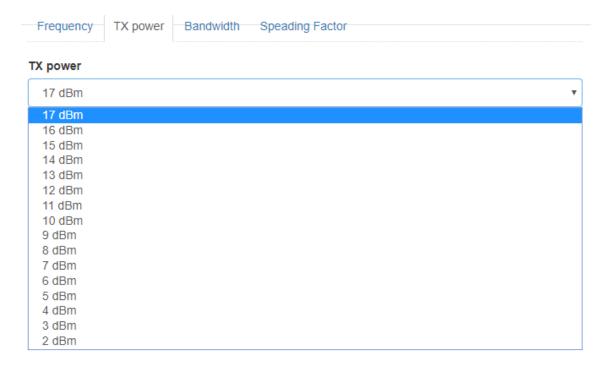

Bandwidth – define the bandwidth of the channel. The lower the bandwidth – the lower the data rate / longer the distance. Bandwith should be equal on transmitter and receiver(-s).



Spreading factor - The basic principle of spread spectrum is that each bit of information is encoded as multiple chirps. Within the given bandwidth the relationship between the bit and chirp rate for LoRa modulation may differ between spreading factor (SF) 7 to 12. Spreading factor should be equal on transmitter and receiver(-s).



Date rates

Best case: SF7 / 500 kHz = 16ms per message (22 kbps) Default: SF7 / 125 kHz = 62ms per message (5.5kbps)

Worst case: SF12 / 125 kHz = 1300ms per message (0.3 kbps)

2x increase in bandwidth provides 2x less air time SF+1 takes approximately 2x more air time compared to previous SF

LoRa Messages

ACK mode – message acknowledgement mode


ACK disabled - no ACK will be done (faster and less reliable communication)
ACK enabled - each message will be acknowledged (slower, more reliable)
ACK gateway mode – the node will retransmit ACK to the next node




Filter mode – define either to pass messages with F (Filter) flag enabled in object settings



Statistics – receive statistic information to group address – source address / RSSI signal level / TX power. Statistics telegram can be sent on all valid telegrams which are received by LoRa.

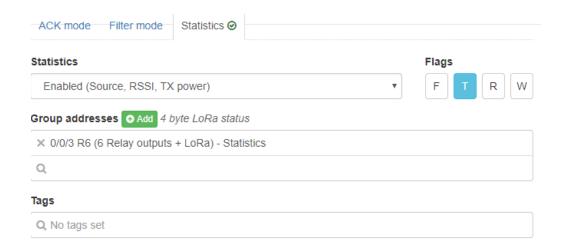

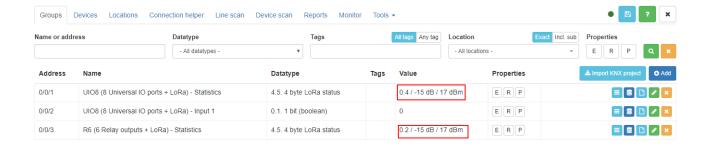


LoRa Security

Define security key 1 or/and key 2 in HEX form. Up to 8 HEX characters are supported for each of the keys. Encryption keys must be equal for all LoRa devices on the same line



Notification LEDs

 During transmission you can see two LEDs on LoRa device



- In case statistics is enabled on receiver device and CAN FT line is disconnected from it, both LEDs will light up (receiving telegram from sender, sending telegram with statistics).
- In case ACK is enabled, both orange and blue LEDs will light up.