

LogicMachine5 Power (LM5p2-KC)



Product Manual

November, 2021

Technical Support:
support@openrb.com

Copyright

Copyright © 2019 Embedded Systems SIA. All Rights Reserved.

Notice

Embedded Systems SIA., reserves the right to modify the information contained herein as necessary. Embedded Systems SIA assumes no responsibility for any errors which may appear in this document. Information in this document is provided solely to enable system and software implementers to use KNX/EIB LogicMachine product.

Trademarks

LogicMachine is a trademark of Embedded Systems SIA. All other names and trademarks are the property of their respective owners and are hereby acknowledged.

Introduction

LogicMachine (LM) is your easiest way to program complex logic in KNX, CAN, Modbus, BACnet networks. LM will enable you to efficiently customize building automation processes, easily delivering unlimited flexibility benefit to end users in a cost-effective way.

LM5 Power is an embedded platform with integrated Ethernet, USB, KNX TP1, CAN FT, Serial interfaces. LM allows to use it as cross-standard gateway, logic engine, visualization platform, IP Router. Scripting templates provides user-friendly, flexible configuration interface and integration with cloud/web services, 3rd party devices. Via applying custom scripts LM can simultaneously act as thermostat, security panel, lighting controller, etc. LogicMachine application store and external app development possibility allows to extend device functionality and adjust to a specific market segment

Technical support

Any faulty devices should be returned to Embedded Systems.

If there are any further technical questions concerning the product please contact our support, available Mon-Fri 9:00 – 17:00 GMT +02:00. Please write to support@openrb.com.

Firmware updates are available at www.openrb.com



Caution Security advice

The installation and assembly of electrical equipment may only be performed by skilled electrician. The devices must not be used in any relation with equipment that supports, directly or indirectly, human health or life or with application that can result danger of people, animals or real value

Mounting advice

The devices are supplied in operational status. The cables connections included can be clamped to the housing if required.

Electrical connection

The devices are constructed for the operation of protective low voltage (SELV). Grounding of device is not needed. When switching the power supply on or off, power surges must be avoided.

Contents

DEVICE SPECIFICATION.....	8
1. TERMINAL CONNECTION SCHEMES.....	10
2. STANDARDS SUPPORTED	16
3. QUICK STARTUP GUIDE.....	18
3.1. QUICK STARTUP GUIDE.....	18
3.2. DEFAULT LOGIN PARAMETERS	18
3.3. FACTORY DEFAULT	18
3.4. IP SETTINGS	19
3.5. DISCOVER LOGICMACHINE IP ADDRESS	20
3.6. FIRMWARE UPGRADE	22
3.7. LOGICMACHINE FOR KNX/EIB NETWORK CONFIGURATION MANAGEMENT WITH ETS	23
3.8. KNX AND IP ROUTER SETTINGS	24
3.9. SECURITY NOTES FOR LOGICMACHINE INSTALLATION	28
3.10. QUICK GUIDE - MOSAIC APPLICATION FOR EASY VISUALIZATION	29
3.11. QUICK GUIDE - CREATE VISUALIZATION FOR IPAD/PC	34
4. GRAPHICAL USER INTERFACE LOGIN.....	43
4.1. Customize background / Language.....	44
4.2. Find applications.....	45
4.3. Unlock the screen for sorting order and hiding apps.....	46
4.4. Admin mode: adding/removing/administering apps.....	47
5. APPLICATION DEVELOPMENT	51
6. LOGICMACHINE CONFIGURATION.....	62
6.1. REACTOR	63
6.1.1. Universal input/output.....	63
6.1.2. Output: Binary.....	64
6.1.3. Input: Voltage.....	66
6.1.4. Input: Binary: On/Off.....	67
6.1.5. Input: Binary: Short/Long	68
6.1.6. Input: Step dimmer (1 byte)	69
6.1.7. Input: Relative dimmer (4 bit)	71
6.1.8. Input: Pulse meter	73
6.1.9. Input: Frequency	75
6.1.10. Voltage input.....	77
6.1.11. Current clamp input.....	78
6.2. SCRIPTING.....	79
6.2.1. Functional Blocks (FB) app.....	80
6.2.2. Adding a new script in Scripting tab	91
6.2.3. Event-based scripting	94
6.2.4. Resident scripting	94
6.2.5. Scheduled scripting.....	94
6.2.6. Script editor	96
6.2.7. Object functions.....	97
6.2.8. Returned object functions, group communication functions.....	98
6.2.9. Group communication functions.....	99
6.2.10. Object function examples.....	99
6.2.11. Data type functions, data types	100
6.2.12. Data types	100
6.2.13. Data storage function	101
6.2.14. Alert function	103
6.2.15. Log function.....	103
6.2.16. Scheduled scripting date/time format	103
6.2.17. Time function	104
6.2.18. Data Serialization	104

6.2.19.	String functions.....	104
6.2.20.	Input and output functions	109
6.2.21.	Script control functions.....	110
6.2.22.	JSON library.....	110
6.2.23.	Conversion.....	110
6.2.24.	Bit operators	111
6.2.25.	Input and Output Facilities.....	112
6.2.26.	Mathematical functions.....	113
6.2.27.	Table manipulations	115
6.2.28.	Operating system facilities.....	116
6.2.29.	Extended function library	118
6.2.30.	User libraries.....	119
6.2.31.	Common functions	120
6.2.32.	Start-up (init) script	120
6.2.33.	Tools	121
6.3.	OBJECTS.....	123
6.3.1.	Object parameters	124
6.3.2.	RGB group object	125
6.3.3.	Object visualization parameters	127
6.3.4.	Change the object state.....	131
6.3.6.	Object control bar	131
6.3.7.	Filter objects.....	133
6.4.	OBJECT LOGS	134
6.4.1.	Export logs.....	135
6.5.	SCHEDULERS.....	137
6.5.1.	Add new scheduler.....	137
6.5.2.	Scheduler events	138
6.5.3.	Scheduler holidays.....	139
6.5.4.	Direct link.....	139
6.6.	TREND LOGS.....	140
6.6.1.	Add new trend log.....	140
6.6.2.	Direct link.....	141
6.6.3.	Trend logs functions	141
6.7.	SCENES	143
6.8.	VISUALIZATION STRUCTURE	144
6.8.1.	Levels / Plans.....	145
6.8.2.	Layouts / Widgets.....	148
6.9.	VISUALIZATION.....	151
6.9.1.	Plan editor	151
6.9.2.	Object	152
6.9.3.	Link.....	154
6.9.4.	Text Label	155
6.9.5.	Image.....	156
6.9.6.	Frame	157
6.9.7.	Gauge	159
6.9.8.	Camera	159
6.9.9.	Graph.....	161
6.10.	VIS.GRAPHICS	163
6.11.	UTILITIES	166
6.12.	USER ACCESS	170
6.13.	ALERTS	173
6.14.	ERROR LOG	174
6.15.	LOGS	174
7.	USER MODE VISUALIZATION	175
7.1.	CUSTOM DESIGN USERMODE VISUALIZATION	176
8.	TOUCH VISUALIZATION	177
9.	SYSTEM CONFIGURATION	178

9.1.	HOSTNAME.....	178
9.2.	CHANGING ADMIN PASSWORD	179
9.3.	PACKAGES.....	179
9.4.	UPGRADE FIRMWARE	179
9.5.	REBOOT LOGIC MACHINE	180
9.6.	SHUTDOWN LOGIC MACHINE	180
9.7.	INTERFACE CONFIGURATION	180
9.8.	KNX CONNECTION.....	182
9.9.	KNX STATISTICS.....	186
9.10.	BACNET SETTINGS.....	187
9.11.	BACNET OBJECTS	189
9.12.	HTTP SERVER.....	190
9.13.	NTP CLIENT/SERVER.....	190
9.14.	HTTP SSL CERTIFICATE	191
9.15.	FTP SERVER.....	192
9.16.	REMOTE SERVICES	193
9.17.	SYSTEM MONITORING	195
9.18.	REMOTE DIAGNOSTICS	196
9.19.	NTP CLIENT	196
9.20.	SYSTEM STATUS.....	197
9.21.	NETWORK UTILITIES	198
9.22.	SYSTEM LOG	198
9.23.	RUNNING PROCESSES	199
10.	USER MODE SCHEDULERS	200
10.1.	EVENTS	200
10.2.	HOLIDAYS	201
11.	TREND LOGS	202
12.	MODBUS RTU/TCP INTERCONNECTION WITH LM	206
12.1.	MODBUS DEVICE PROFILE	206
12.2.	READING MODBUS RTU COIL / REGISTER FROM THE INTERFACE.....	208
12.3.	RTU SCAN	208
12.4.	RTU SETTINGS	209
12.5.	ADDING MODBUS DEVICE	210
12.6.	PROGRAM ADDRESS FOR UIO20 MODBUS DEVICE	211
12.7.	MODBUS SLAVE EXAMPLES	211
13.	BACNET IP INTERCONNECTION WITH LM	221
13.1.	BACNET SERVER MODE: TRANSPARENT DATA TRANSFER TO BACNET NETWORK	221
13.2.	BACNET CLIENT MODE	223
14.	DALI CONFIGURATION.....	226
14.1.	DALI OBJECT MAPPING.....	228
14.2.	ACCESS DALI BUS FROM SCRIPTS.....	229
15.	1-WIRE CONFIGURATION	237
16.	DMX INTERCONNECTION WITH LM	240
17.	ENOCEAN TRANSMITTER CONFIGURATION	246
17.1.	ENOCEAN INTERFACES	246
17.2.	ENOCEAN TO KNX MAPPING	246
17.3.	KNX TO ENOCEAN MAPPING	248
17.4.	MAPPING TO ENOCEAN PROFILES OUT OF THE SUPPORTED LIST	249
17.5.	SUPPORTED ENOCEAN PROFILES.....	252
18.	3G/GSM CONFIGURATION	254
18.1.	EXAMPLES	257

18.2.	SEND SMS MESSAGES TO SPECIFIC SIM NUMBERS AFTER GROUP-READ OR GROUP-WRITE IS TRIGGERED	257
18.3.	SEND SMS MESSAGES WITHOUT 3G MODEM.....	258
19.	COMMUNICATION WITH RS232/RS485 SERIAL PORTS	259
20.	BLUETOOTH 4.0 INTEGRATION	263
21.	SIP SERVER ON LOGICMACHINE	266
22.	OBJECT VALUE EXPORT VIA XML	268
23.	ALERTS, ERRORS VALUES.....	270
24.	READ ALERTS RSS FEEDS FROM LOGICMACHINE	271
25.	CLOUD SOLUTION	273
26.	USB2.0 PORT SPECIFICATION	279
27.	CANX CONFIGURATION	280
27.1.	SCANNING CAN FT LINE	280
27.2.	DEVICE SCAN	281
27.3.	GROUP ADDRESS CONFIGURATION	283
27.4.	DEVICE CONFIGURATION.....	286
27.5.	LOCATIONS	290
27.6.	REPORTS	291
27.7.	MONITORING THE FIELDBUS LINE.....	291
27.8.	WRITE DEVICE / PHYSICAL ADDRESS	295
27.9.	SEE CURRENT PHYSICAL ADDRESS OF THE DEVICE	295
27.10.	PROJECT CONFIGURATION	296
27.11.	NEW DEVICE PROFILES	296
27.12.	FIND DEVICE IF YOU HAVE SEVERAL OF THEM IN THE LINE	297
27.13.	CONNECTION HELPER	297
27.14.	RESET THE DEVICE	298
27.15.	ACCESSING CANX OBJECTS FROM LOGICMACHINE SCRIPTS.....	298
28.	OTHER EXAMPLES	299

Device specification

Types of product

LogiMachine5 Power LM5p2-KC

Standards and norms compliance

EMC:	EN61000-6-1
	EN61000-6-3
PCT	Certificate

Technical data:

Power supply: 1 x 12V-30V DC on terminal connectors or 12V-30V DC Passive Power-over-Ethernet

Power consumption: 1.3W

Interface:	KNX/EIB TP1	1
	CAN FT	1
	10BaseT/100BaseTX	1
	RS-485	1
	RS-485/RS-232	1
	(switchable in software – full-duplex=RS232, half-duplex=RS485)	
	USB2.0	1

Connections:	KNX bus:	Bus Connection Terminal 0.8 mm2
	CAN bus:	Bus Connection Terminal 0.8 mm2
	Power supply	Screw, 5 mm2
	Serial	Screw, 3.5 mm2


Operating elements	LED	1 – CPU load 1 - Activity
--------------------	-----	------------------------------

Enclosure: Material: Polyamide

	Color:	Gray
	Dimensions:	71(W)x90(H)x61(L) mm
Usage temperature:	0C ... +45C	
Storage temperature:	-15C ... +55C	
Net Weight:	119g	
Gross Weight:	137g	
Warranty:	2 years	
Relative Humidity:	10...95 % without condensation	

1. Terminal connection schemes


Model

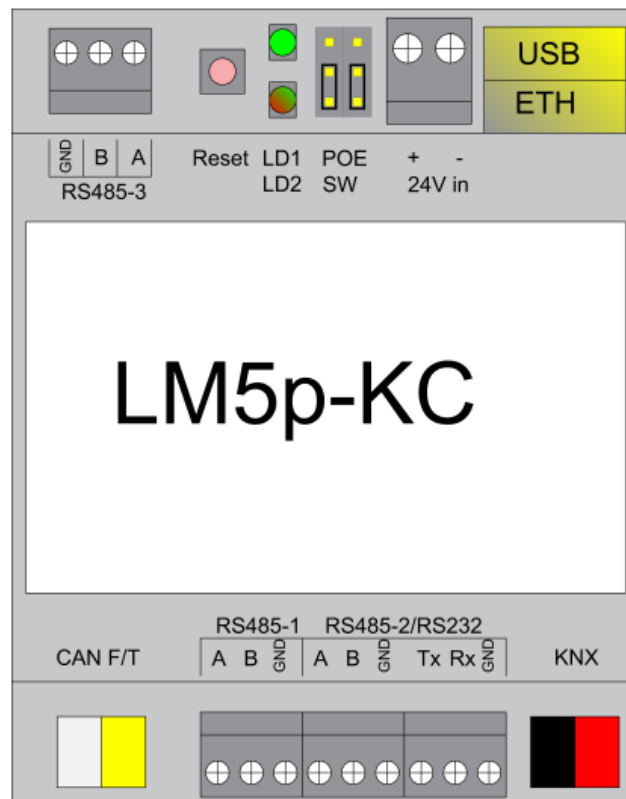

Powering over Ethernet


LM5 supports two powering modes:

 - regular powering over screw terminals (Jumpers up or down)
- passive PoE powering over 24V DC (Jumpers down)
- when using active PoE 48V, jumpers have to be UP or the product **will be damaged!**




Please note that there are two PoE types of PoE switches/adapters – passive and active (802.3af). In passive mode 4 Ethernet cable wires are used for data and 4 are used for power. In active PoE mode data and power goes together.

Note! By default LM is set into Passive PoE + 24V DC powering mode. Make sure not to connect it to active PoE switch or change jumpers accordingly before doing that.

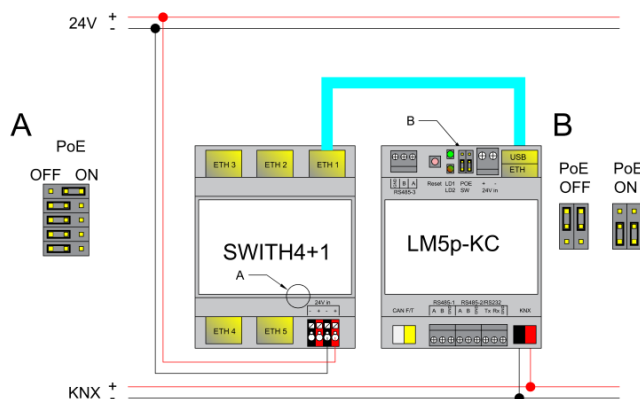


Passive PoE switch

Passive PoE adapters

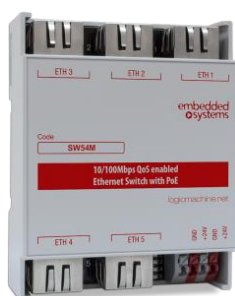


CANx connection / Powering over 24V terminals

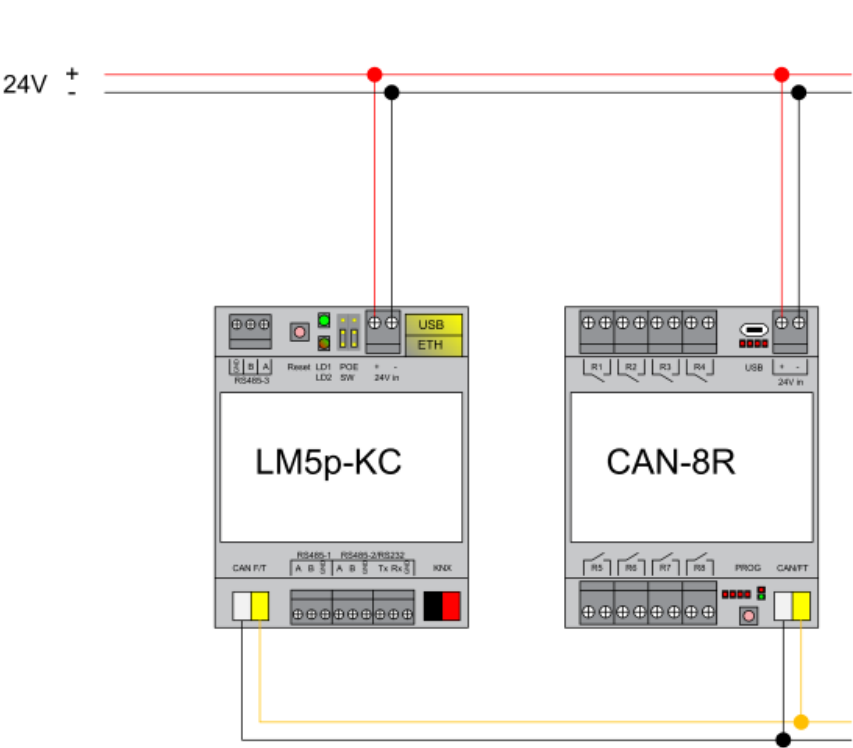

RS-485 connection

There can be used max two RS-485 on LM5 Lite. First one is definitive, second one is software switchable – either it works as RS-485 or as RS-232 :


- If it is set up as full-duplex it will operate as RS-232 and respective TX/RX/GND screw terminals should be used
- If it is set up as half-duplex (*) it will operate as RS-485 and respective A/B/GND screw terminals should be used

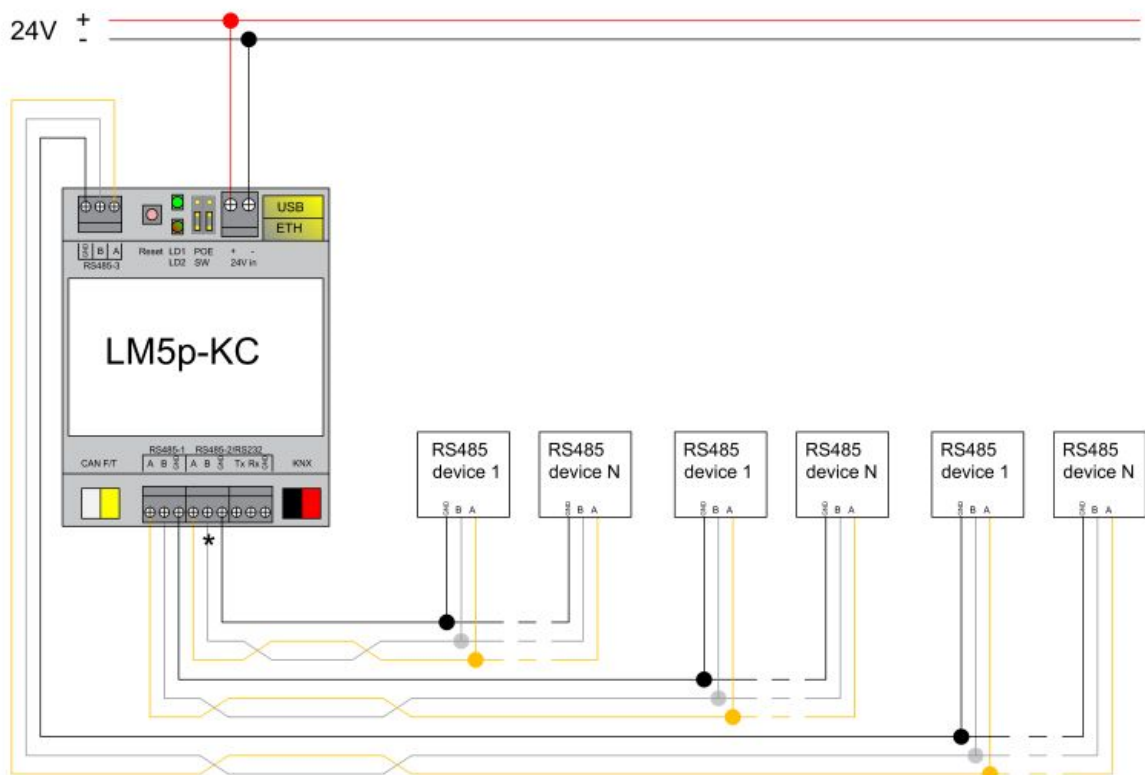

*RS-485 is chosen in this case, RS-232 is not activated


RS-485/RS-232 connection

If second serial port is set as full-duplex in LogicMachine configuration, it will operate as RS-232 and respective TX/RX/GND screw terminals should be used.

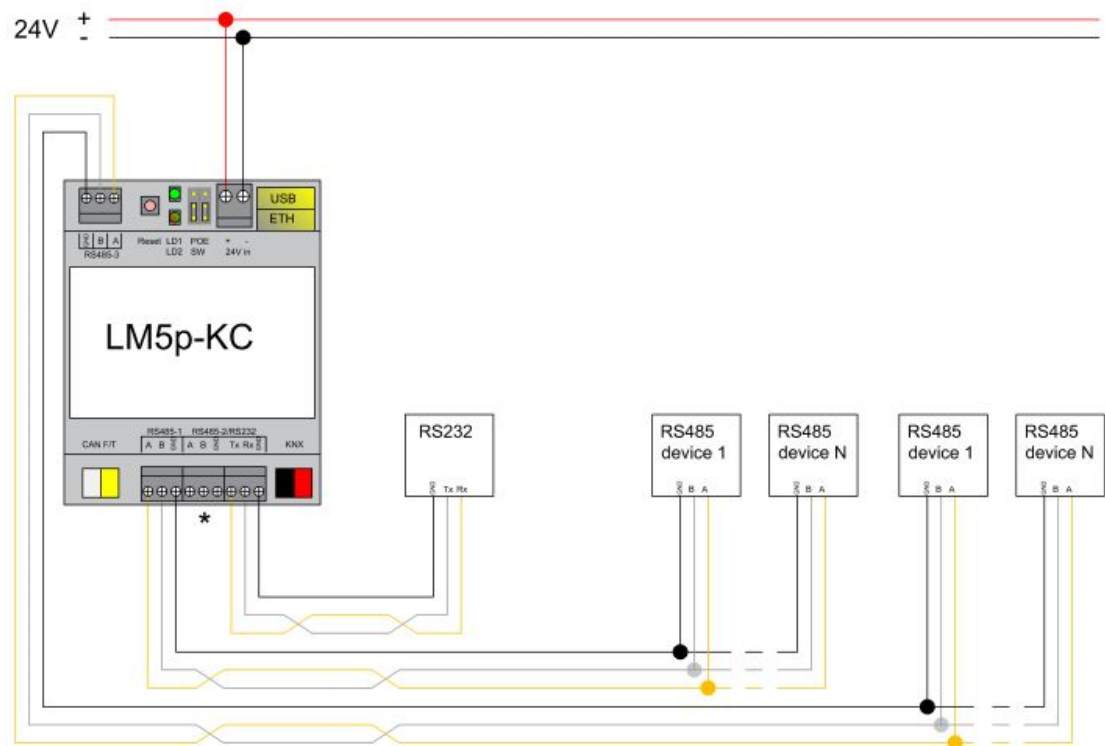


*RS-232 is chosen in this case, RS-485 is not activated

KNX connection

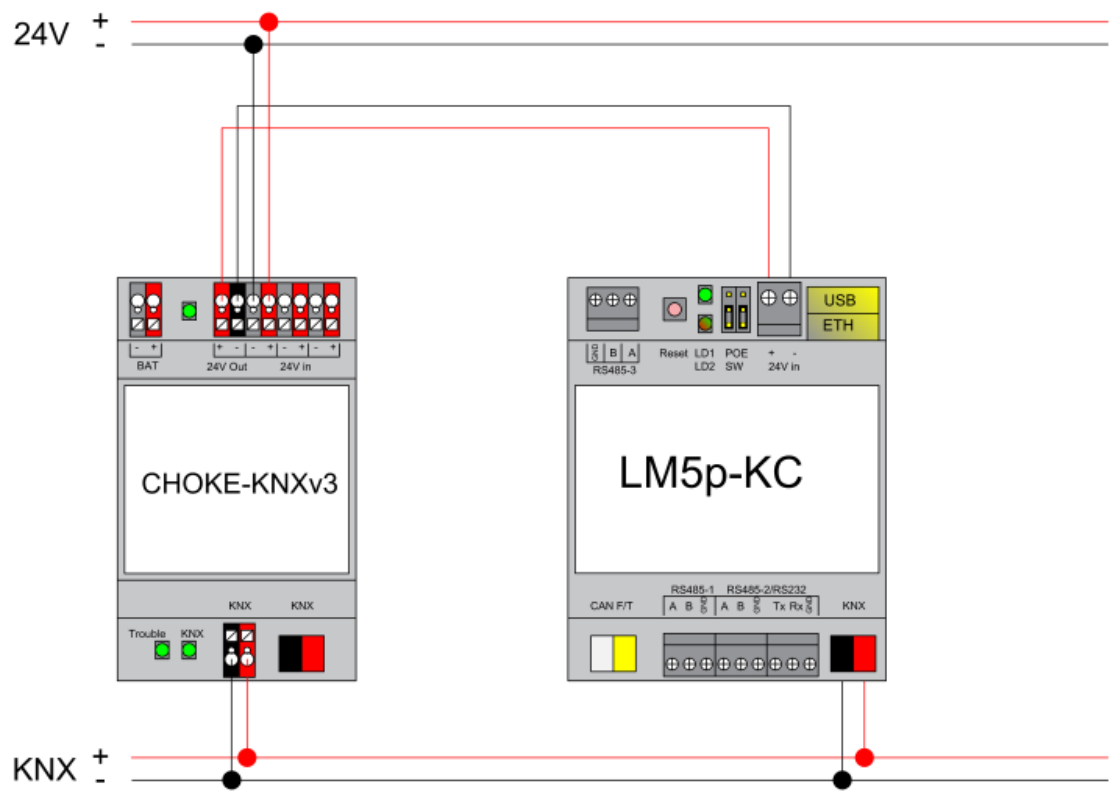

2. Standards supported

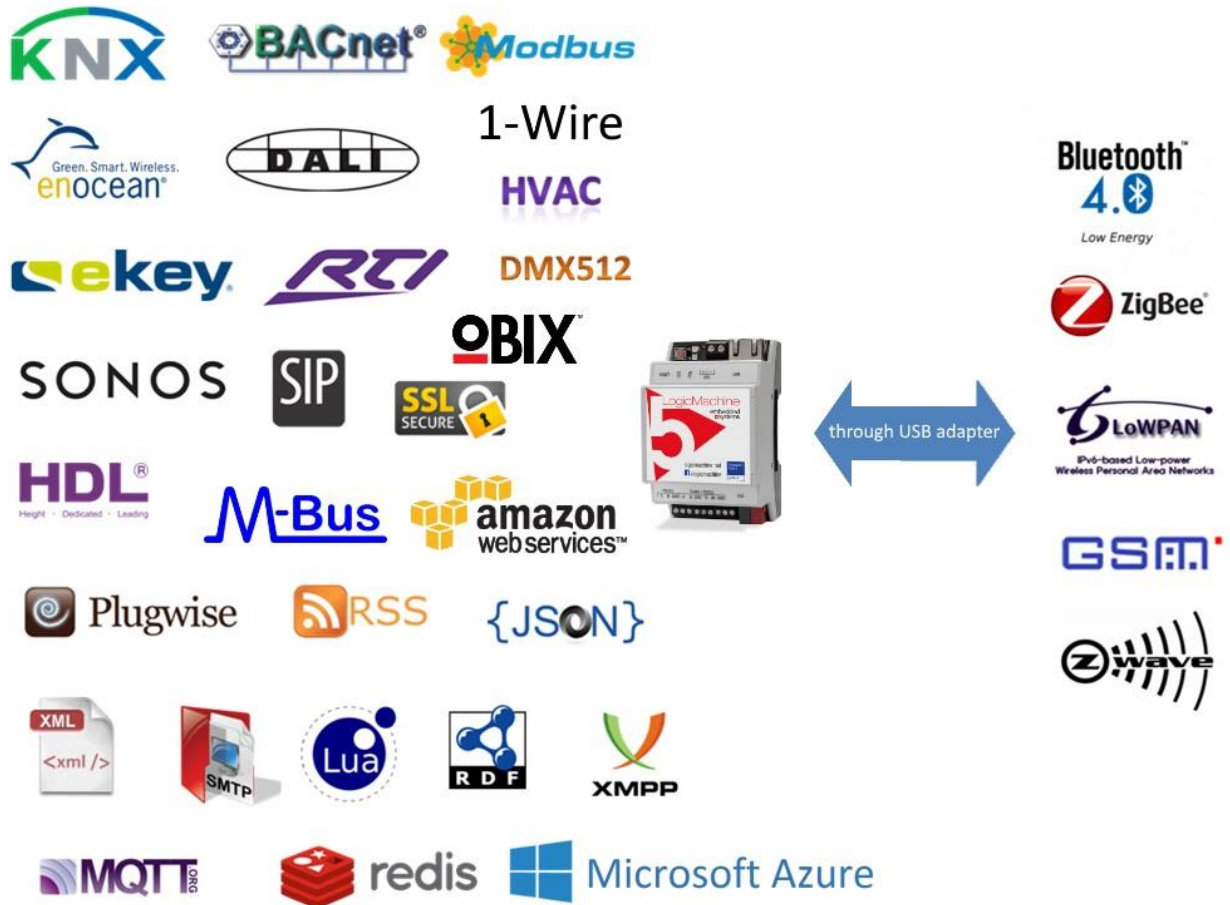

LogicMachine is compatible with the following standards:

- KNX/EIB TP1, KNXnet/IP
- CAN FT
- Modbus TCP, Modbus RTU Client/Server
- BACnet IP, Client/Server
- GSM/3G for Internet access; optionally for sending SMS notifications and controlling the installation by receiving SMS commands.
- Bluetooth 3.0 and 4.0 (through USB modem)
- DMX512 (through RS485)
- DALI (through RS485 gateway)
- 1-Wire
- AllJoyn
- Ekey biometrical access systems (RS485)
- HVAC systems can be controller through RS485/Ethernet interface by using scripting
- SMTP/Email, SSL
- SIP
- XML (export object values, alerts or errors; integration with Fidelio)
- RSS (read Error or Alert tab content)
- JSON, XMPP
- MQTT
- REDIS
- etc.

The system is made so that each of the standards can be used with each other, so LogicMachine can act as BACnet to DALI gateway or Modbus to GSM etc.

3. Quick startup guide

3.1. Quick startup guide

- 1) Mounting the device on DIN rail
- 2) Connect the KNX bus cable
- 3) Connect CANx extensions
- 4) Connect 24V power supply to the device (either through separate 24V screw terminals or through Passive 24V DC Power-Over-Ethernet)
- 5) Connect Ethernet/LAN cable coming from the PC

3.2. Default login parameters

Login name	admin
Password	admin
IP address	192.168.0.10
Network mask	255.255.255.0

The device can be accessed by opening web browser (Chrome, Firefox, Safari are supported) and entering IP of the device [HTTP://IP](http://IP)

Secure access to the device is available via [HTTPS://IP:Port](https://IP:Port)

Supported web browsers: Google Chrome or Mozilla Firefox (for OS Windows), Safari (for OS X)

3.3. Factory default


You can either reboot the device by pressing RESET button or reset the configuration to factory defaults:

- *Press and hold for <10 sec* – reboot the device
- *Press and hold for >10 sec* – reset networking with IP to factory default
- *Press and hold for >10 sec and again press and hold for >10 sec* – full reset of configuration to factory defaults

For more info please see here: <http://openrb.com/discover-ip-of-logic-machine-or-streaming-player/>

3.4. IP settings

In *System configuration* → *Network* → *Interfaces* window click on the specific interface to change the IP settings.

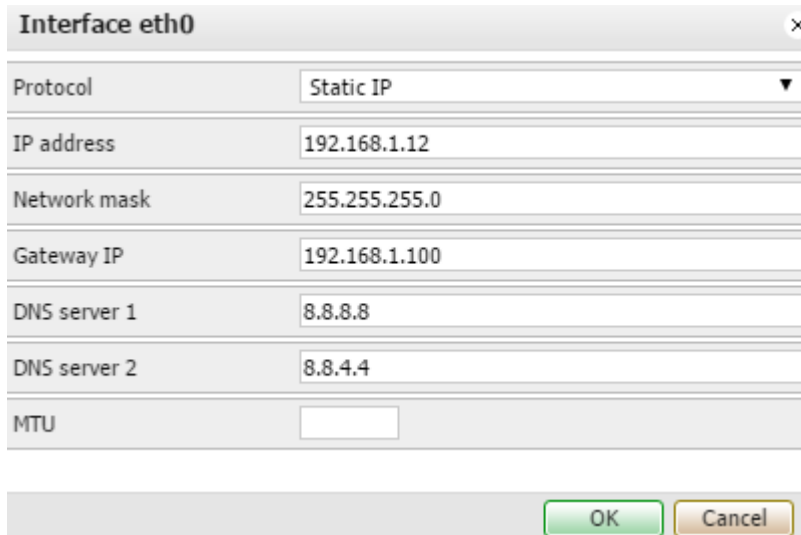

Interface eth0	
Protocol	Static IP
IP address	192.168.1.12
Network mask	255.255.255.0
Gateway IP	192.168.1.100
DNS server 1	8.8.8.8
DNS server 2	8.8.4.4
MTU	

OK Cancel

- **Protocol**– specific protocol used for addressing
 - **Static IP** – static IP address. By default 192.168.0.10
 - **DHCP** – use DHCP protocol to get IP configuration.
 - **Current IP**– the IP address got from DHCP server. This field appears only if the IP address is given otherwise it's hidden.
- **Network mask** – network mask. By default 255.255.255.0 (/24)
- **Gateway IP** – gateway IP address
- **DNS server** – DNS server IP address
- **MTU**– maximum transmission unit, the largest size of the packet which could be passed in the communication protocol. By default 1500

When changes are done, the following icon appears in the top-right corner. This should be applied changes to take effect.




3.5. Discover LogicMachine IP address

LM has built-in zeroconf utility by default, so using the following applications you can find out the IP:

- Windows PC – *ServiceBrowser*
- Linux PC – *Avahi*
- Android – *ZeroConf Browser*
- iOS – *Discovery*

Windows PC

Easiest way is by using the utility **ServiceBrowser** which can be downloaded here:
<http://marknelson.us/2011/10/25/dns-service-discovery-on-windows/>

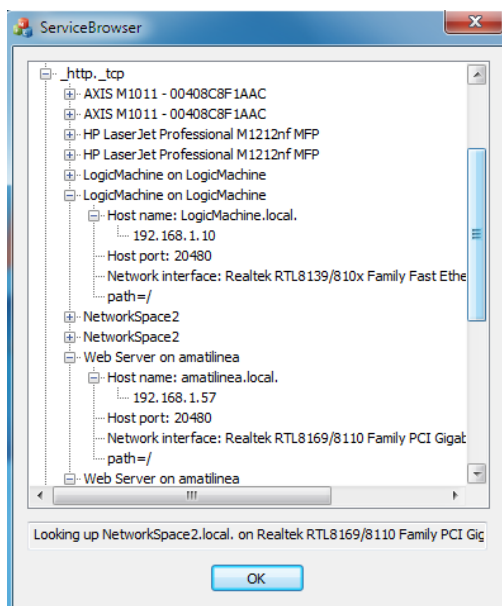

Linux PC

The utility called **Avahi**, can be downloaded here:
www.avahi.org



Android

The freely available app called **ZeroConf Browser**, can be downloaded in *Play Store*:

<https://play.google.com/store/apps/details?id=com.grokkt.android.bonjour&hl=en>



iOS/Mac OS

The freely available app called **Discovery**, can be downloaded in *App Store*:

<https://itunes.apple.com/en/app/discovery-bonjour-browser/id305441017?mt=8>



For iPad install the iPhone/iPod version of the utility.




3.6. Firmware upgrade

Note! Before each upgrade please backup your visualization, scripts and object in *Logic Machine* → *Tools* → *Backup*.


Note! After each upgrade, we strongly recommend to clean your browser cache.

Use web browser to perform upgrade of the software of Logic Machine. Firmwares are available in a form of images and could be downloaded from support page of www.openrb.com.

Complete system upgrade can be done in *System Configuration* → *System* → *Upgrade firmware*

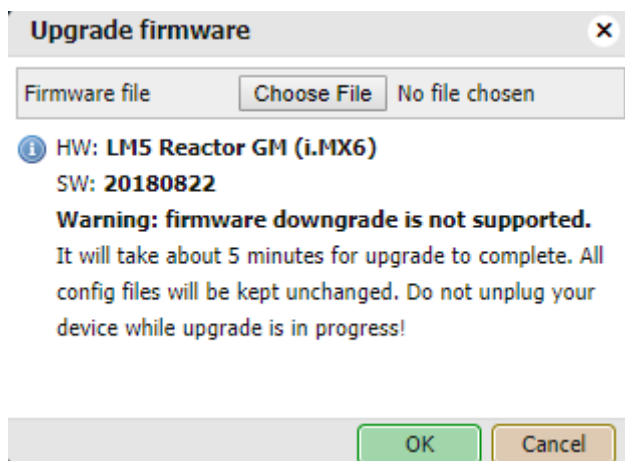


LogicMachine visualization upgrade or patch installation can be done in *Utilities* tab and press on *Install updates* icon. After *.LMU file is chosen from the corresponding location press *Save* button. The device will be rebooted after 5 seconds and new firmware will be installed.

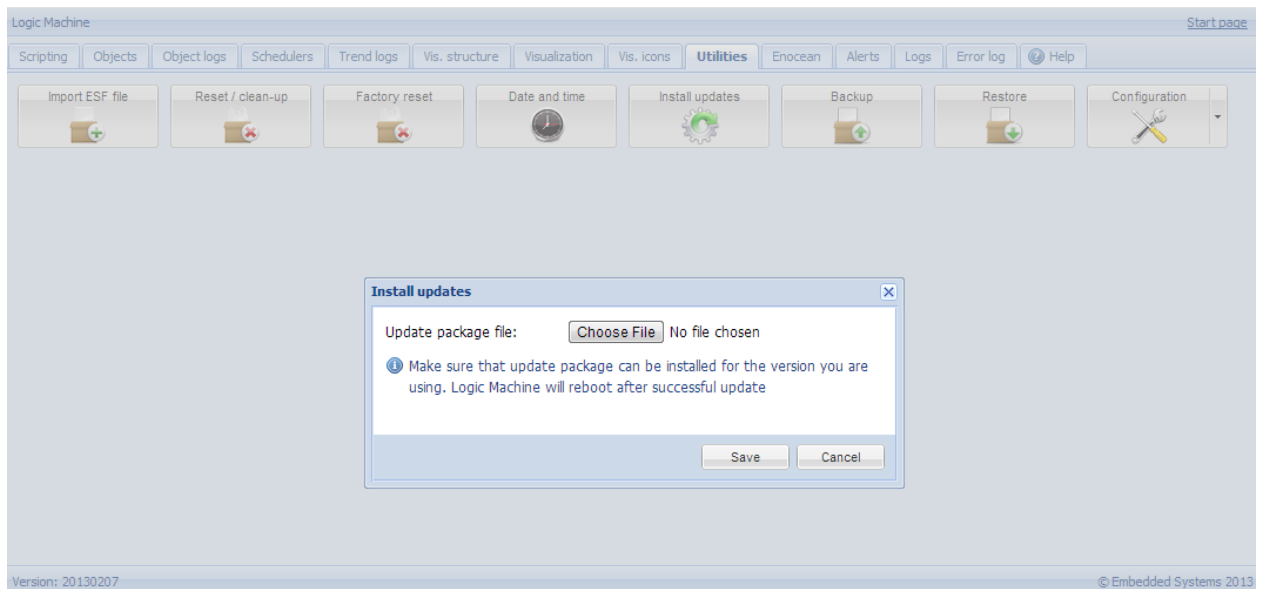


3.7. LogicMachine for KNX/EIB network configuration management with ETS

To use LogicMachine with KNXnet/IP functionality and program other KNX bus devices, the device should be added into *ETS Connection Manager*.

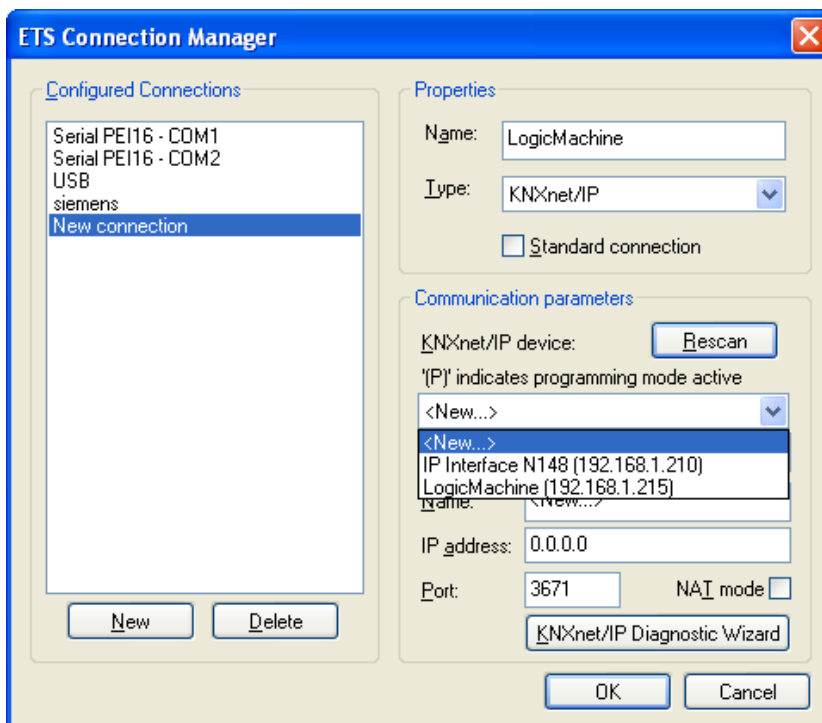

- Go to *Extras* → *Options* → *Communication* → *Configure interfaces*
- Put some freely chosen *Name* for the connection

- Chose **Type = KNXnet/IP**
- Press **Rescan** button and then choose from the drop down menu found LogicMachine
- Press **OK**
- Back in **Options → Communication** window select newly created interface as **Communication Interface** from the drop-down menu.
- To test the communication with ETS, press **Test** button.

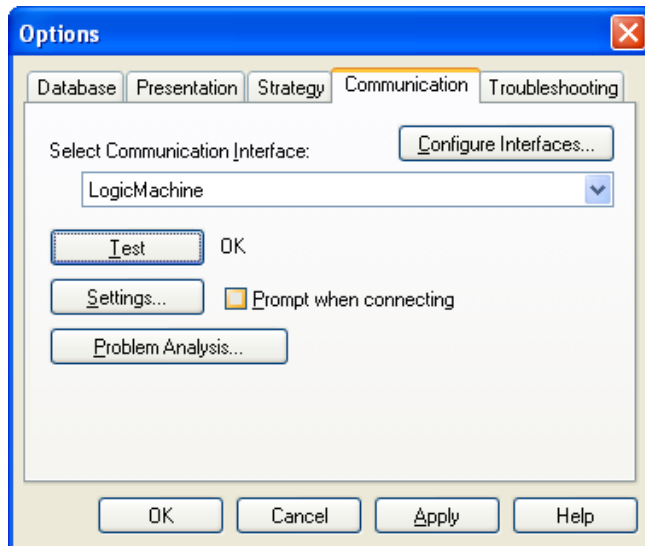

- Make sure that bus status is Online – press  button in ETS.

3.8. KNX and IP Router settings

KNX specific configuration is located in *System configuration → Network → KNX connection* window.

KNX connection

General IP > TP filter TP > IP filter

Mode TP-UART

ACK all group telegrams ☐

KNX address 15.15.255

KNX IP features ☒

Multicast IP 224.0.23.12

Multicast TTL 1

Maximum telegrams in queue 100

OK Cancel

General tab

- **Mode** [TP-UART / EIBnet IP Tunneling / EIBnet IP Tunneling(NAT mode) / EIBnet IP Routing] – KNX connection mode. LogicMachine5 has TPUART interface by default built-in. **Note!** If there is no KNX TP connected to the device, it will automatically offer to switch to KNXnet/IP mode.
- **ACK all group telegrams** – acknowledge receipt of telegram to all group communication
- **Parameter**–KNX corresponding interface in OS of the system
- **KNX address** – KNX physical address of the device
- **KNX IP features** – Use this device with KNX IP features e.g. for KNXnet/IP network configuration
- **Multicast IP** – multicast IP address
- **Multicast TTL** – Time to live for multicast telegram in seconds
- **Maximum telegrams in queue** – count of maximum telegrams in the queue

IP > TP filter

Filtering table for telegrams going from IP network to KNX TP1 is located in this submenu.

KNX connection

General

IP > TP filter

TP > IP filter

Apply filter to tunneling

SRC policy

No filter

Ind. address list

One address/range per line. Use * (e.g. 1.1.*) to filter all addresses in the given line.

DST group policy

No filter

Group address list

1/1/1-1/1/2

One address/range per line. Use * (e.g. 1/1/*) to filter all addresses in the given line.

Note: KNX IP features are required for filter to work.

Filtering lists are updated at once, changing policies requires restart.

OK

Cancel

- **Apply filter to tunneling** – either to apply filter policy to telegrams in tunneling mode. If ETS is used it is recommended to turn this feature off.
- **SRC policy** [No filter / Accept selected individual addresses / Drop selected individual addresses]– policy to apply to the list of source addresses
- **Ind. address list** – list of individual addresses. One address/range per line. Use * (e.g. 1.1.*) to filter all addresses in the given line.
- **DST group policy**[No filter / Accept selected group addresses / Drop selected group addresses]– policy to apply to the list of destination group addresses
- **Group address list** – list of group addresses. One address/range per line. Use * (e.g. 1/1/*) to filter all addresses in the given line.

Note! KNX IP features should be on for filter to work. Filtering lists are updated at once, changing policies requires restart.

Note that group address list can be filled automatically by checking necessary group addresses in *LogicMachine* → *Objects* list

Logic Machine

Reactor Scripting **Objects** Object logs Schedulers Trend logs Vis. structure Visualization Vis. graphics Utilities Modbus EnOcean Alerts Logs Error log Help

Object filter	Group address	Object name	IP > TP filter	TP > IP filter	Event script	Data type	Current value	Log	Export
Name or group address:	1/1/1	Digital output 1	☒	☒		01.001 switch	on	☐	☐
	1/1/2	Digital output 16	☒	☐		01. 1 bit (boolean)	1	☐	☐
	1/1/3	Digital output 2	☐	☐		01. 1 bit (boolean)	1	☐	☐
Data type:	1/1/4	Digital output 3	☐	☐		01.001 switch	on	☐	☐

TP > IP filter

Filtering table for telegrams going from KNX TP1 to IP network is located in this submenu.

KNX connection [X]

General **IP > TP filter** TP > IP filter

Apply filter to virtual objects ☐

SRC policy No filter

Ind. address list

One address/range per line. Use * (e.g. 1.1.*) to filter all addresses in the given line.

DST group policy No filter

Group address list

1/1/1

One address/range per line. Use * (e.g. 1/1/*) to filter all addresses in the given line.

Note: KNX IP features are required for filter to work.
Filtering lists are updated at once, changing policies requires restart.

OK Cancel

- **Apply filter to virtual objects** – either to apply filter policy to objects added in Objects tab as virtual objects without attraction to bus
- **SRC policy** [No filter / Accept selected individual addresses / Drop selected individual addresses] – policy to apply to the list of source individual addresses
- **Ind. address list** – list of individual addresses. One address/range per line. Use * (e.g. 1.1.*) to filter all addresses in the given line.
- **DST group policy** [No filter / Accept selected group addresses / Drop selected group addresses] – policy to apply to the list of destination group addresses
- **Group address list** – list of group addresses. One address/range per line. Use * (e.g. 1/1/*) to filter all addresses in the given line.

Note! KNX IP features should be on for filter to work. Filtering lists are updated at once, changing policies requires restart.

3.9. Security notes for LogicMachine installation

1. Do not connect LM to an external IP, **use it with a local IP**. In this case you will be able to control which ports/services can communicate with LM from outside through your router
2. **Always disable unnecessary services** – FTP, Remote Diagnostics, Remote services, IP Features in *System config*
3. **Change all passwords**. We created the annoying reminder on password change because of this, don't push the OK button every time. Change all three passwords – FTP/APPs (*System config* -> *Services* -> *FTP server*), admin (*System config* -> *System* -> *Admin access*), remote services (*System config* -> *Services* -> *Remote Services*)
4. **Change the default KNX physical address** in *System config* -> *Network* -> *KNX connection*
5. **Disable KNX/IP features** (*System config* -> *Network* -> *KNX connection*) if:
 - You have finished programming your KNX devices from ETS and this is not needed anymore. This will protect from situation when somebody is in the same LAN and by using ETS it's very easy to access KNX bus through LM
 - No IP filter tables are used
6. If you are not sure of your ISP or there is public access, **we recommend using HTTPS access** to LM instead of HTTP – <https://192.168.0.10> (you can block all ports except HTTPS 433 in this case on your router). Do not be afraid if you receive browser warning, because LM uses a self-signed certificate (we cannot use normal certificates because it can only be assigned to a domain, not an IP address). If you are located in a local network and connecting to LM directly, you can stay on port 80/HTTP – in this way the communication will be slightly faster and there will be no browser warnings

7. **For external connection** to LM we do not recommend using IP port forwarding because all the services and group addresses becomes available in an unsecured form. If you want to use port forwarding, do it only with secure port 443 (HTTPS). The best solution is to use our cloud service as described here: <http://openrb.com/logicmachine-cloud-solution/> (you can control only selected group addresses remotely, data exchange between LM/cloud and cloud/client is done in secure encrypted way)

8. **If FTP is used, use SSL/TLS** . Also, change default FTP/APPs password in *System config -> Services -> FTP server*

9. **If communication between several LMs** is required in one building:

- By default KNXnet/IP communication is unsecure. If you have any doubts about security of your LAN, enable secure communication and specify encryption key in *System config -> Network -> KNX connection*. All LMs must have the same key and system clocks must be synchronized. We recommend using a local NTP server for this
- Enable TOS (type of service) if your router supports this. This way you can enable prioritization for KNX telegrams (7 – highest priority, 0 – lowest). It means other IP packets will have lower priority over KNX telegrams – KNX telegrams will be always delivered first and then all the rest

10. There are cases when somebody tries to reprogramm KNX devices. We can supply KNX devices that blocks all peer-to-peer telegrams (which are used for device programming) while keeping group communication unchanged

3.10. Quick guide - MOSAIC application for easy visualization

Mosaic app is the fastest way to create a nice visualization for your installation.


Getting started.

1. Open the controller's web interface by typing it's IP address in your web browser.
2. Click on Mosaic Editor Mode icon. You will see the constructor interface with clear template.
3. Once you've entered the Editor Mode you are ready to construct a visualization.
4. When you have made visualization, enter Client




Client mode Home screen


This is a first screen that you will see after opening Mosaic application. First page consists of Notification, Room and Control Type areas. You can browse the objects either by rooms or by functions.

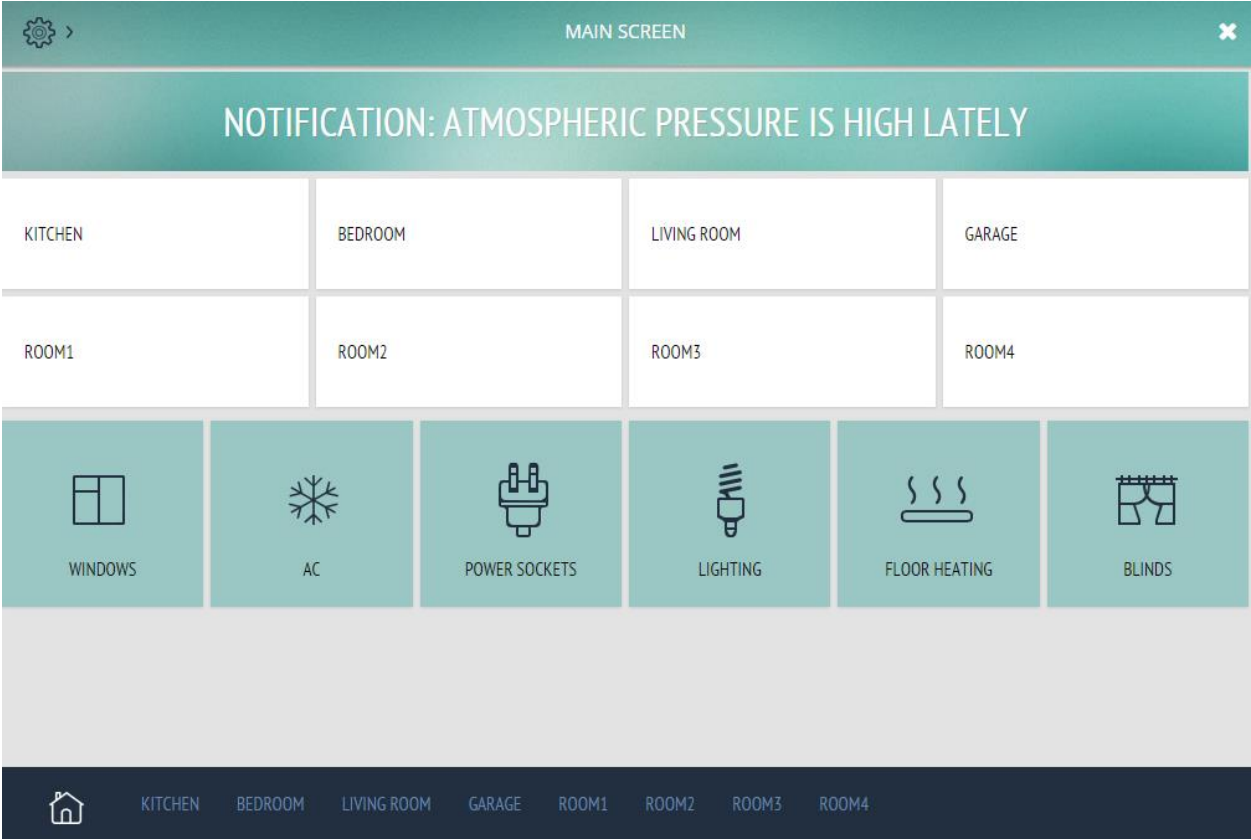

For example, entering one of room, you see the following view

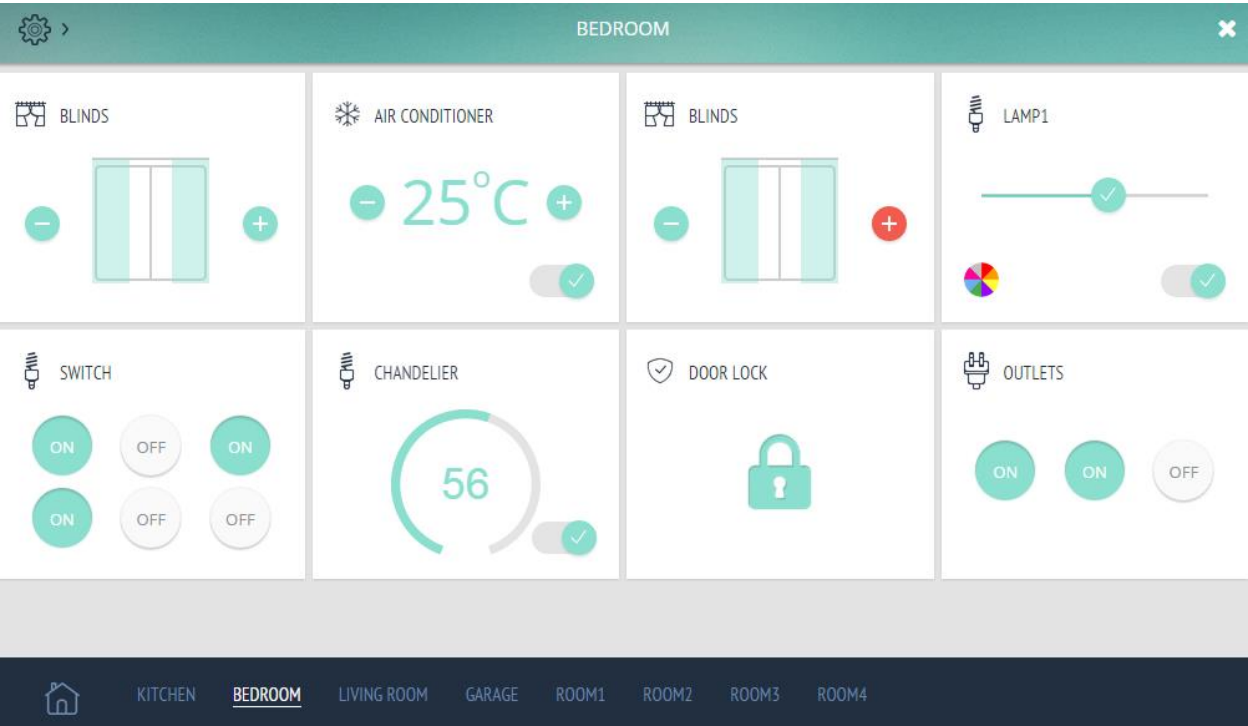

There are also Control Type shortcuts on the left side by clicking on Settings button

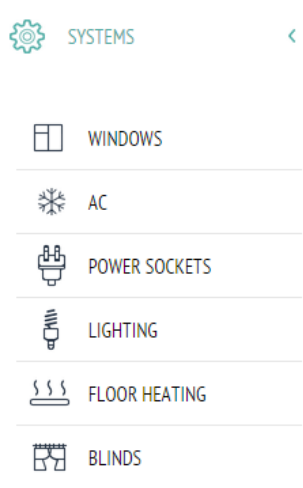

THEME: DEFAULT, RED, BLACK

 
In Settings you can also change skin of the visualization

Advanced visualization with more widgets is planned to be available for fixed monthly developers fee.




Building structure / Editor Mode

On the bottom panel you can set up your building structure by adding new rooms onto it. This panel is also designed to navigation by rooms for end-users. Just click on *Add new room*, then type a title for it and press "enter". This will take you to the screen of the new room. Now you can start to fill it with widgets. If you want to rename or delete a room just right-click on it's title and select the option you want.



Widgets

To add new widget on the home or room screen just click to *Add new widget* at the top right corner to open the widgets panel. Once you opened the widget panel choose a widget you want to add and click on it - it will appear on the screen. A popup window with widget's properties opens automatically at the same moment.

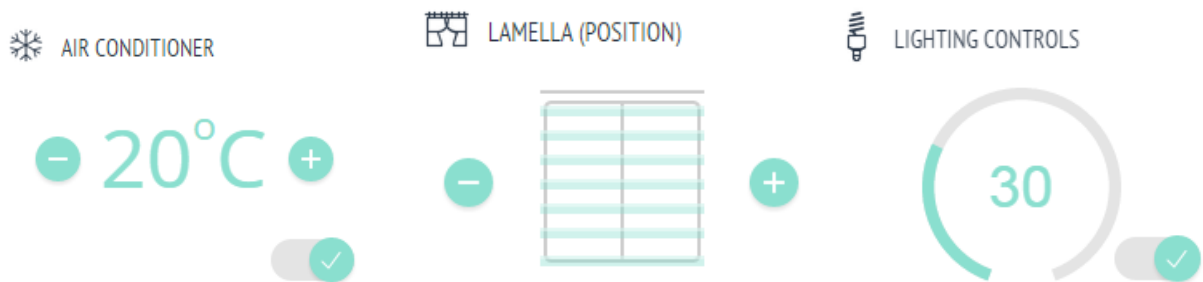


Now you can set a title for this widget and link KNX objects to widget's controls. After you've set up a widget click on the "Add this widget" button. Well done, the widget on the screen. Right-click on it to see/edit it's properties or delete the widget.

Lighting Controls
✕

Title:	central lamp
On/Off Object:	0/0/1
On/Off Status Object:	0/1/1
Dimmer Object:	1/1/11 (light1-1)
Dimmer Status Object:	0/1/2
Color Object:	1/1/12 (light1-2)
Color Status Object:	1/1/12 (light1-2)

Notifications

There is a special Messages field in Client mode where you can send specific notifications or alerts. Use storage name *mosaic-message* to write notifications.

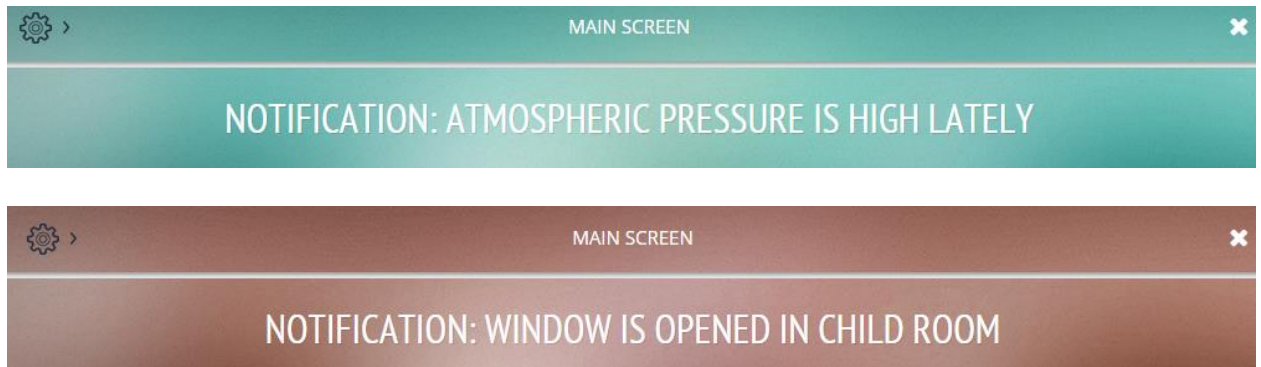

Custom widgets

Here you can download Mosaic custom widget creation manual: http://openrb.com/wp-content/uploads/2016/11/Mosaic_widgets_eng.pdf

Here you can download couple of custom widgets examples together with the instruction on how to install them:

<http://forum.logicmachine.net/showthread.php?tid=122&pid=2651#pid2651>


3.11. Quick guide - create visualization for iPad/PC

You can download ready LM backup files here:


<http://forum.logicmachine.net/showthread.php?tid=196>

Import objects

Fastest way is to import *.ESF file from ETS in *Logic Machine* → *Utilities* → *Import ESF file*.

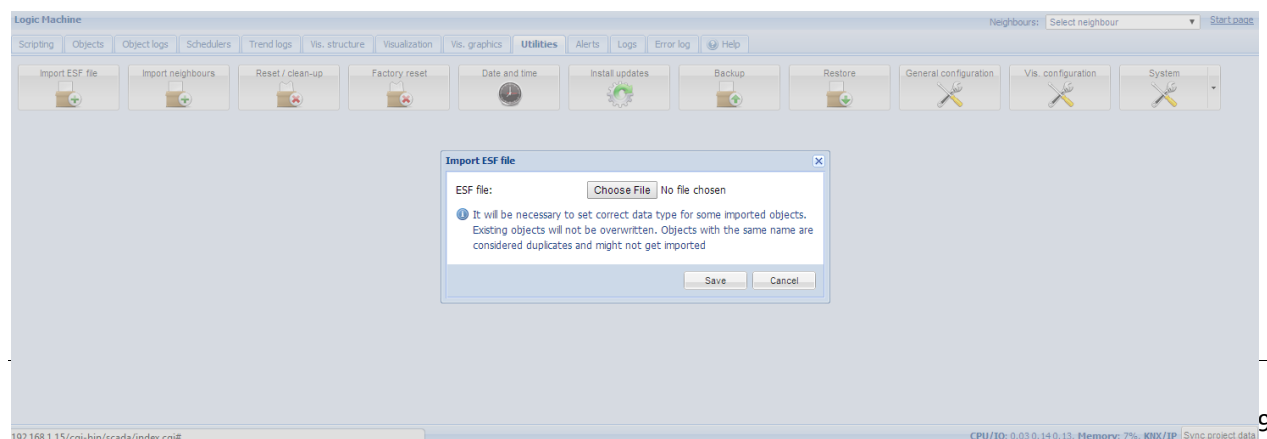


Or connect LM to the bus and it will detect objects automatically (in yellow) in *Objects* tab once they are activated. Objects can be added manually as well.

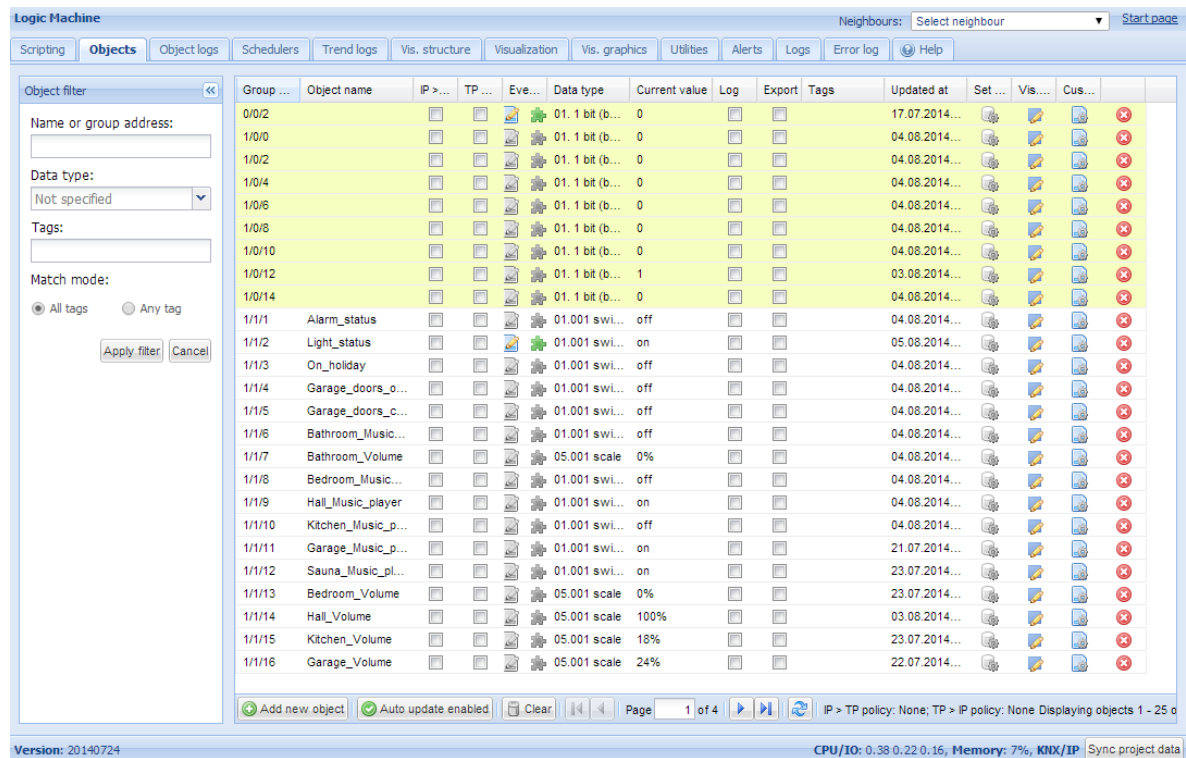


Prepare graphics

Either in Adobe Illustrator or any ready images can be used. In this example we use professionally created designs in Illustrator in SVG form (so we can do scaling depending of the screen size and not losing the quality)

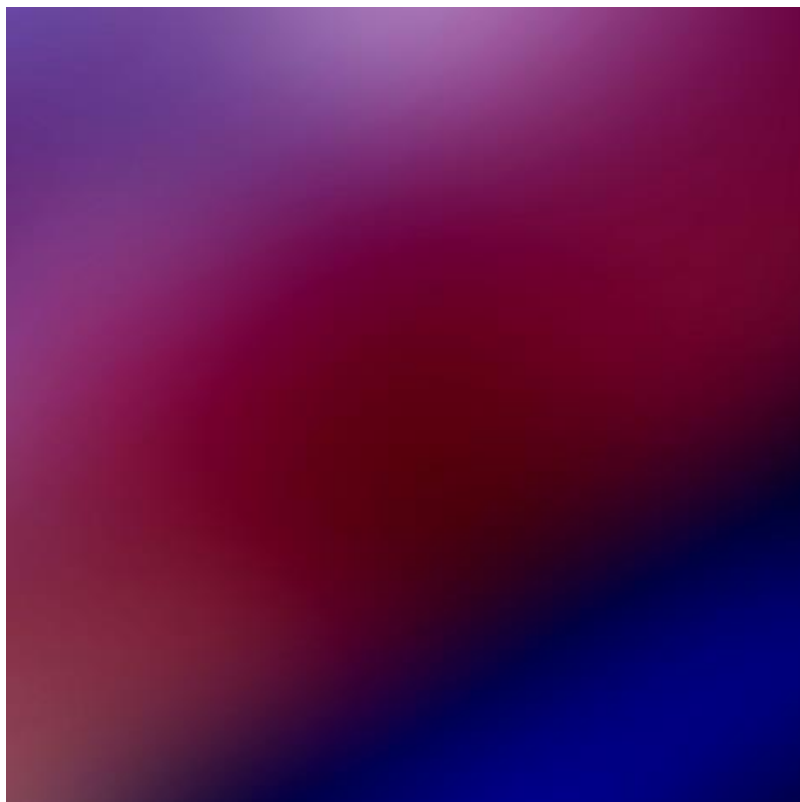


a) basic background which can be changed by necessity


b) foreground which will stay unchanged

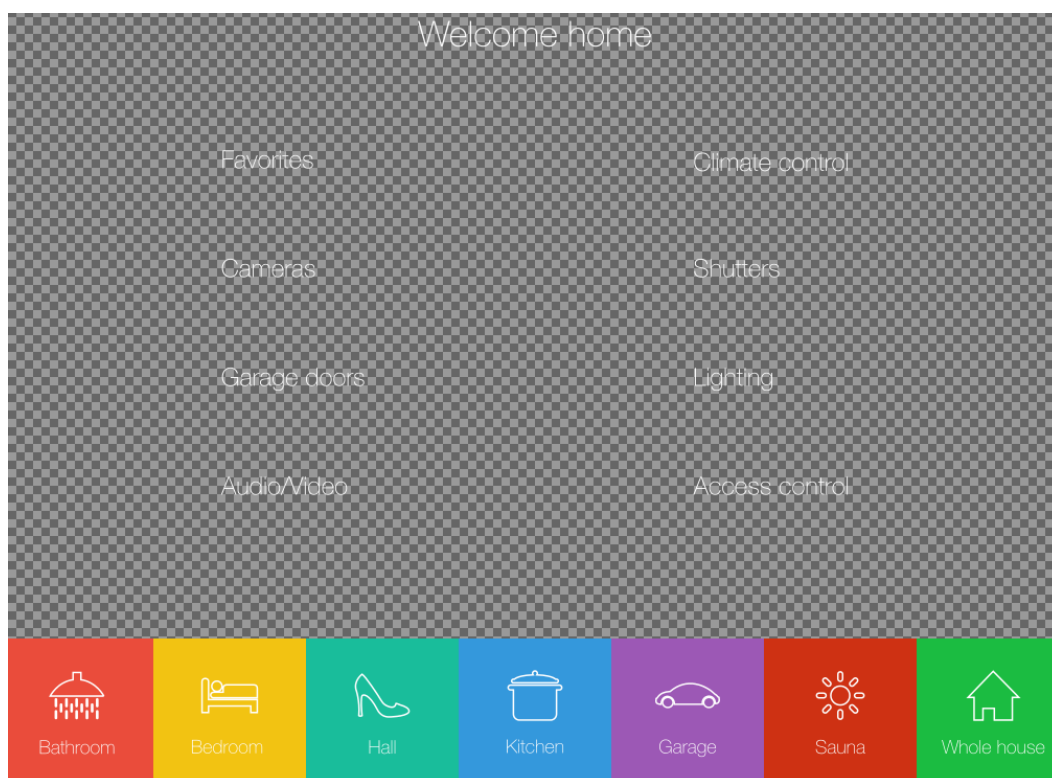

Add both files in *Logic Machine* → *Vis. Graphics* → *Images/Backgrounds*

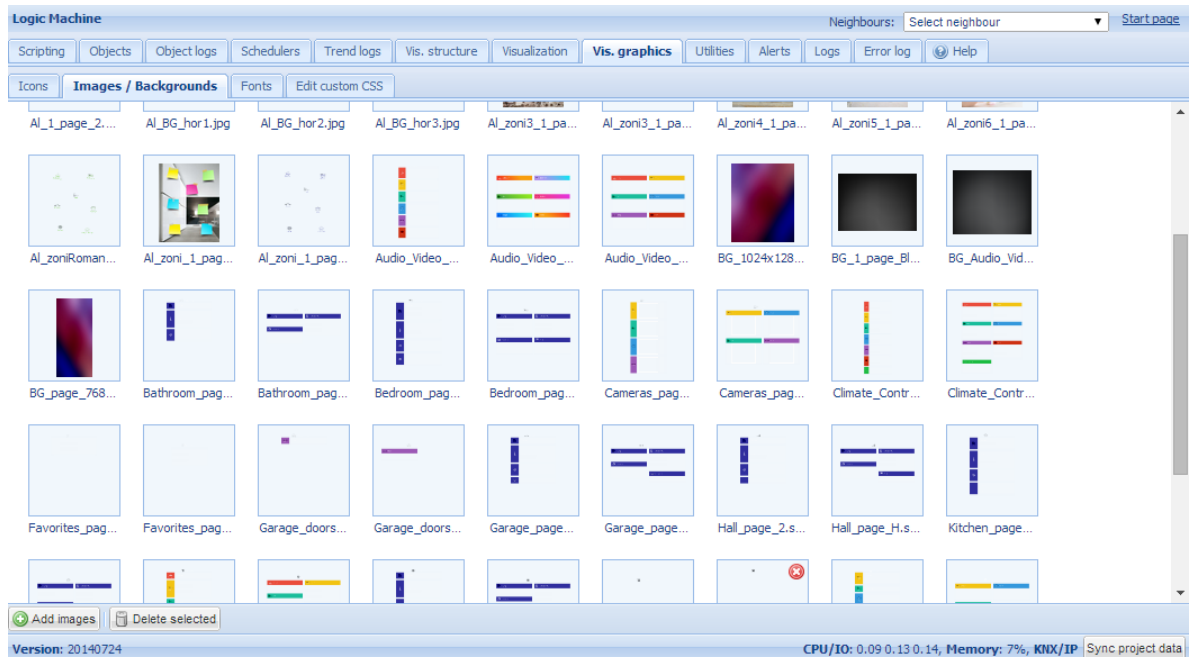


Prepare set of icons (preferably in SVG form) and add them in *Logic Machine* → *Vis. Graphics* → *Icons*. Or you can use icons predefined in LogicMachine by default.

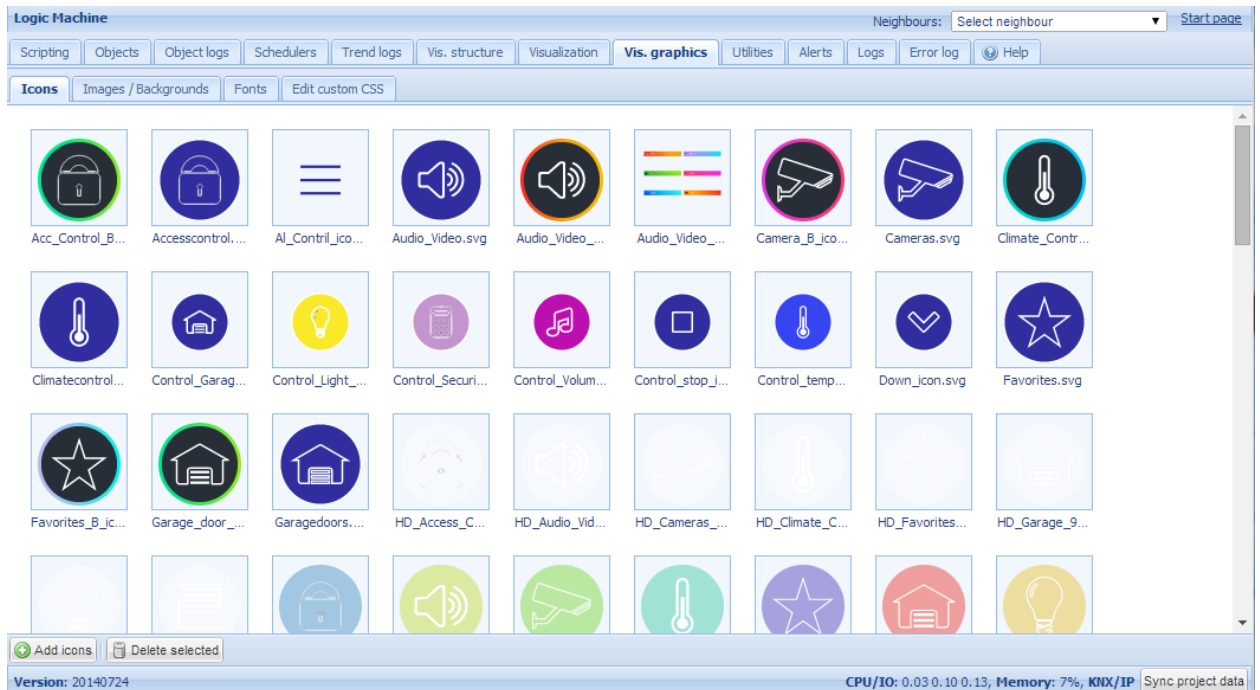



Create “floor” structure and add objects to the map

In *Logic Machine* → *Vis.structure* menu the structure of the visualization is defined and visualization backgrounds are uploaded. Use icon to add  floor.

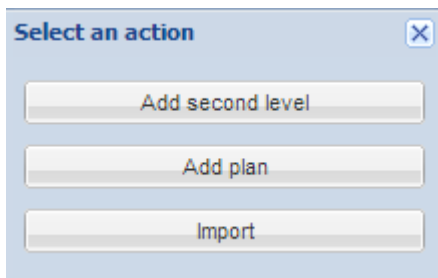


In this example we will create a new floor named “1_page_H” and “Bathroom_H”. First Floor will be a dashboard with link to other rooms and functions. Choose screen resolution for which you are creating this visualization, choose first and second background images from the ones added before.

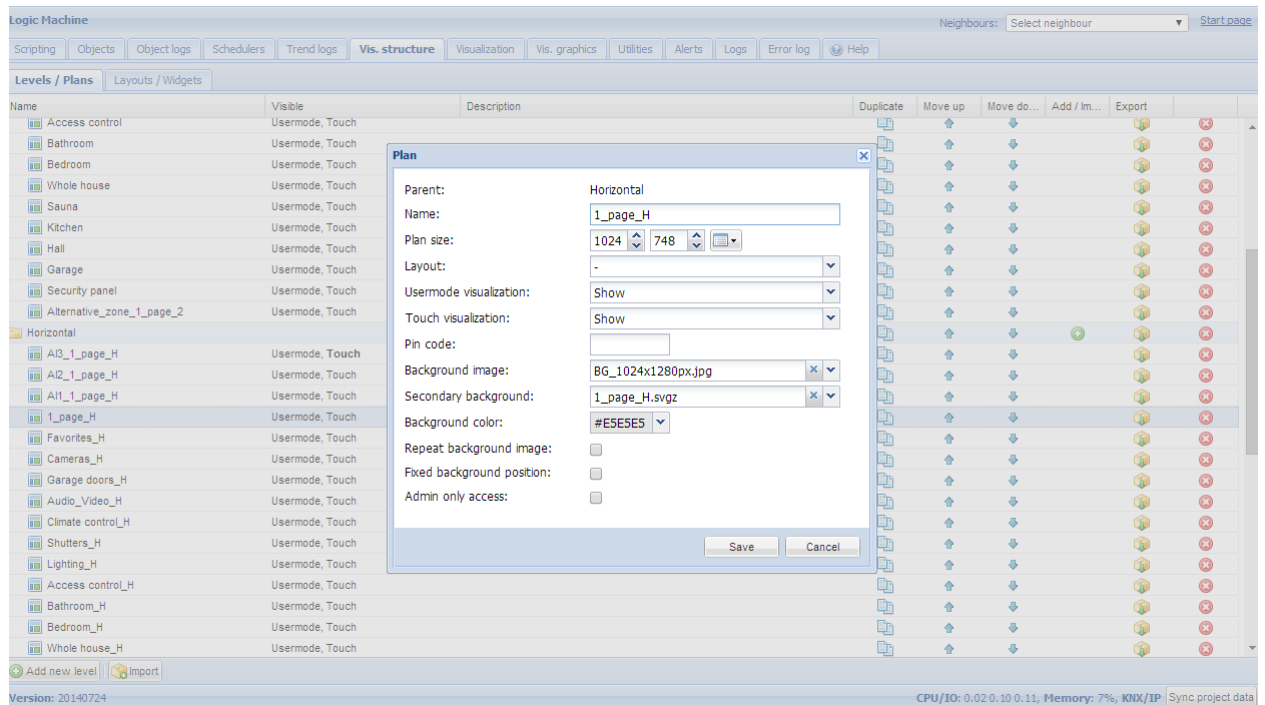

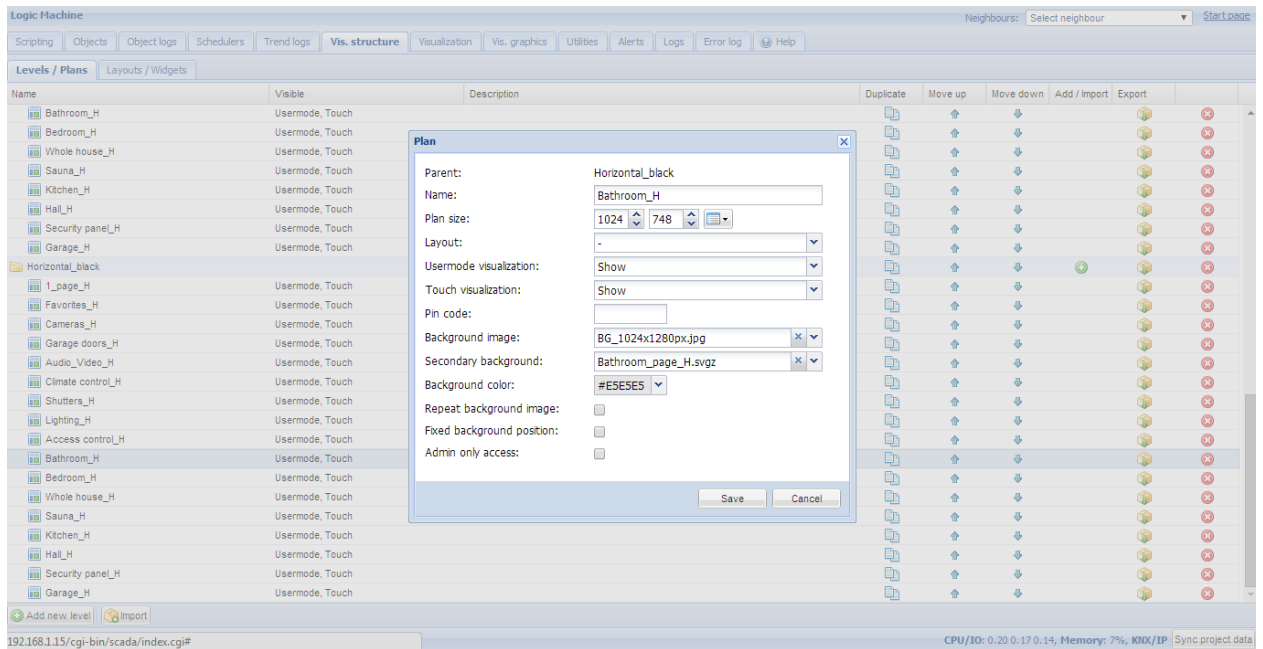


Add objects to newly created visualization map

After the building and floor structure is defined, it is visualized in *Visualization* tab. Controlled and monitored objects can be added and managed in this section. Both side bars can be minimized by pressing on left/right arrow icon making the map more visible especially on small displays.

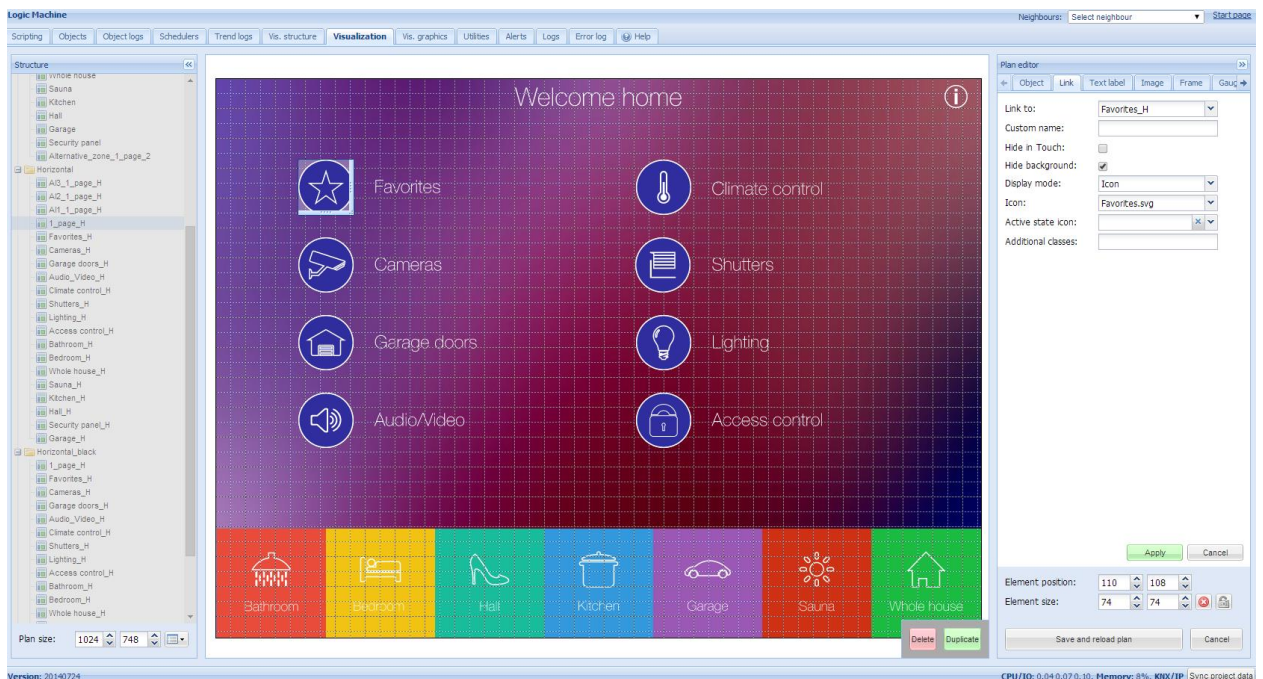


Objects can be added to the map by clicking on *Unlock current floor plan for editing* button. In this example we are creating first page of visualization which will link to other Floors with specific object control. Add link by clicking on Link tab, choosing specific icon, scale it and place in desired location.

This example's secondary background already contains icons on it, so what is needed, is to add transparent image in *Vis.graphics* and add this image on top of every icon.

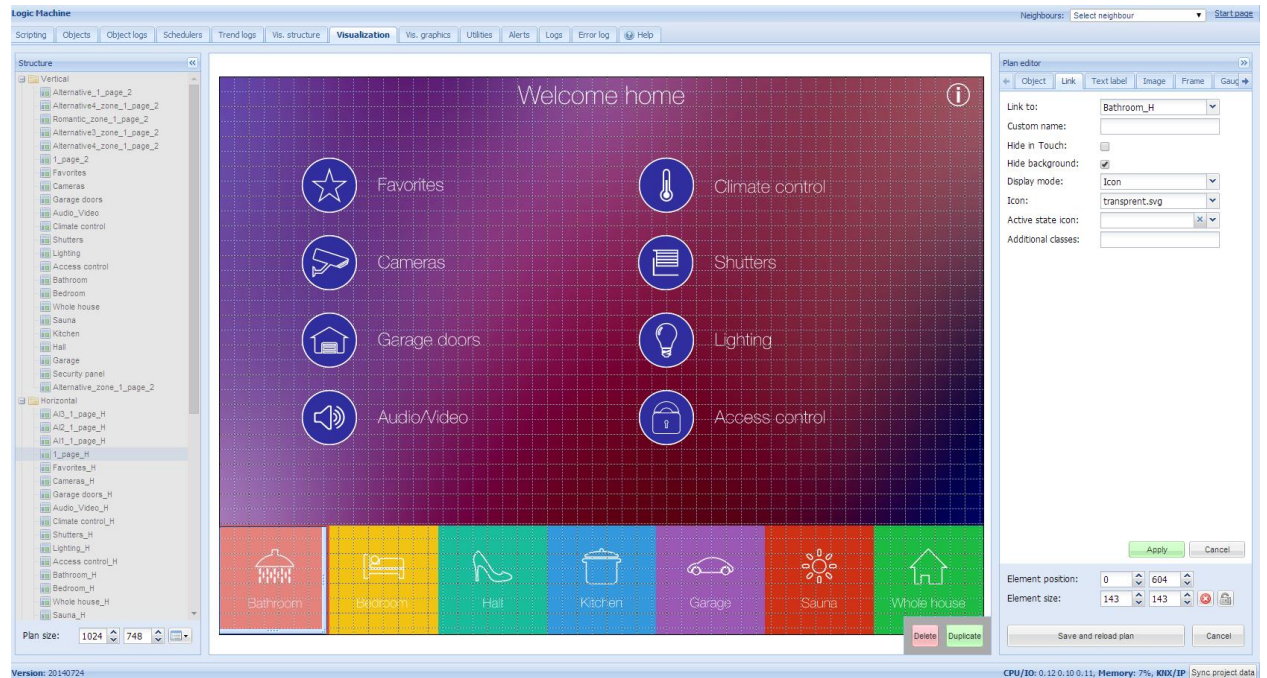


When all links are defined, press *Save and reload floor plan* button.

In same way fill the Bedroom plan with object parameters in Object tab.

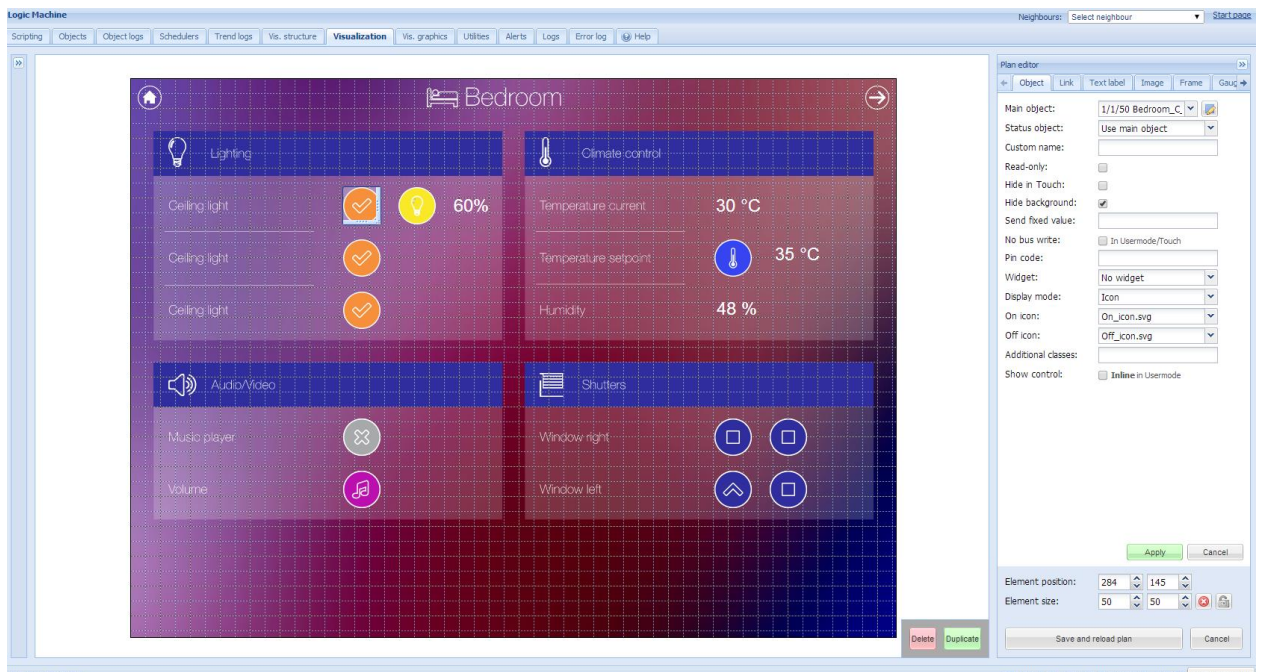


Launching visualization on touch device (iPad in this case)

- Make sure your iPad is connected wirelessly to the Logic Machine
- In the browser enter Logic Machine's IP (default 192.168.0.10).
- Click on the User *mode visualization*
- Save the application as permanent/shortcut in your iPad

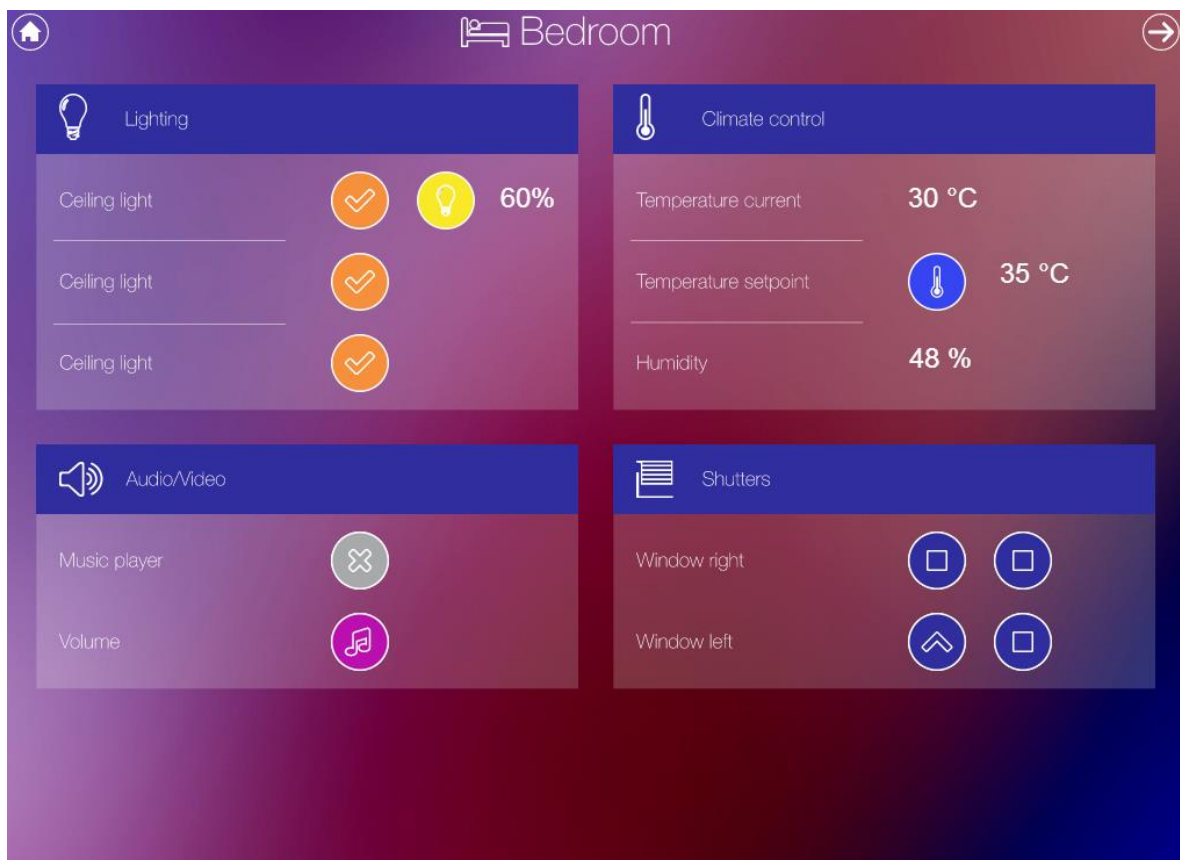

Touch visualization is also automatically created with list of Floor objects.

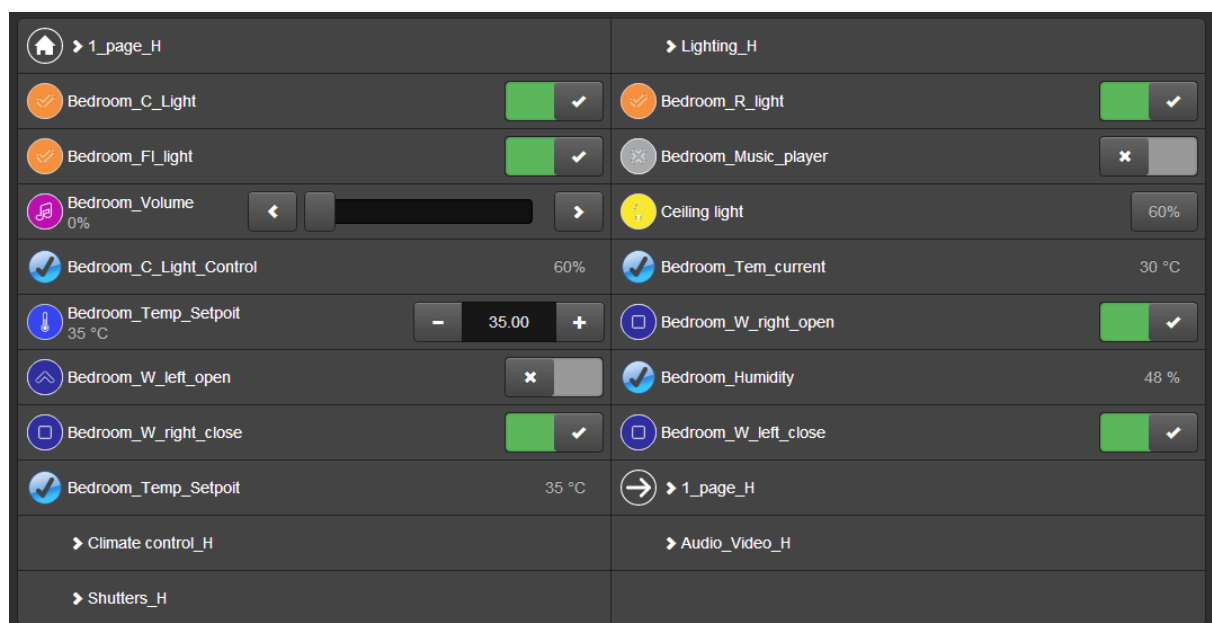


4. Graphical User Interface Login

KNX/EIB LogicMachine has IP address 192.168.0.10 set by default to LAN interface. Use this address as www address in the browser's address field.

Note! Make sure that the PC connecting to the LogicMachine has IP set from the same subnet.

After successful login a default page appears.

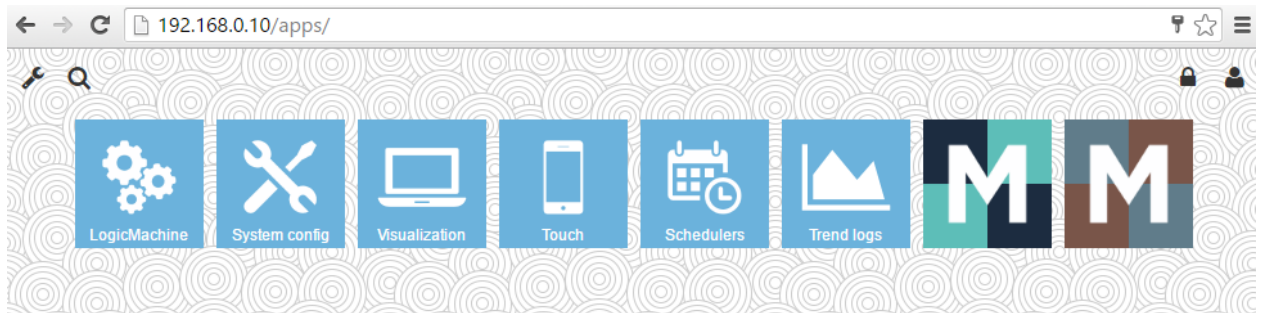


- **Logic Machine** – visualization creator, scripts, object relations, alerts, KNX objects and KNX objects, designing building view and visualization maps
- **System config** – IP and KNX specific configuration
- **Visualization** – defined visualization maps with objects
- **Touch** – Visualization system for iPhone/iPod/iPad/Android touch screen devices
- **Schedulers** – User defined schedulers
- **Trend logs** – Trends for data logs
- **Mosaic app** – Mosaic easy visualization creation and presentation apps


First screen of the interface is a constructor of applications – you can change applications which you see on specific device, change background color, install or remove apps, sort order etc. Note that the mentioned settings are individual for each device you are connecting from.

4.1. *Customize background / Language*

By clicking on Customize icon , you access the window where you can choose background image of your first screen for this particular device

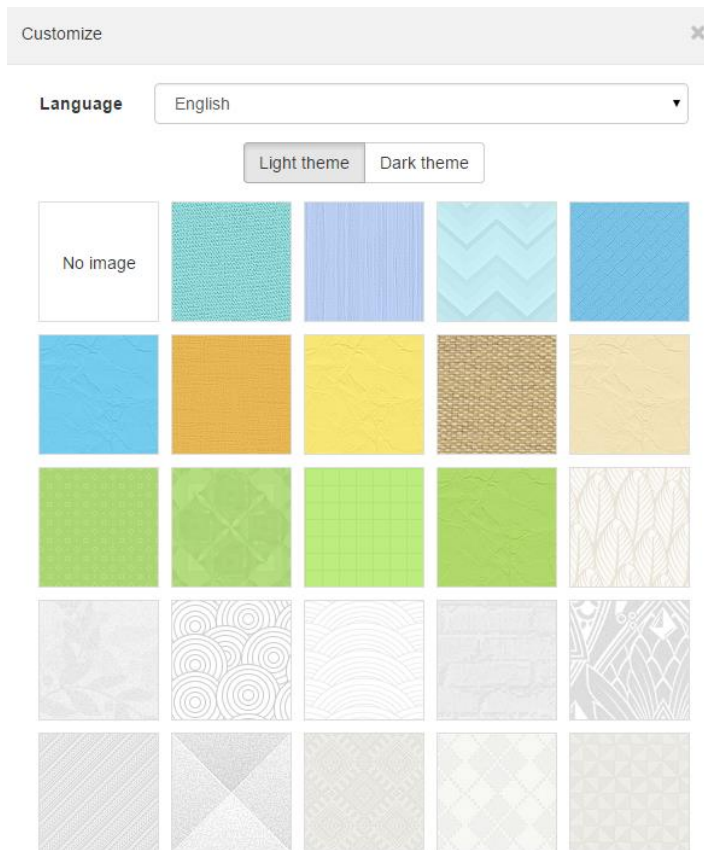

You can choose the interface language by clicking on *Language* drop-down menu.

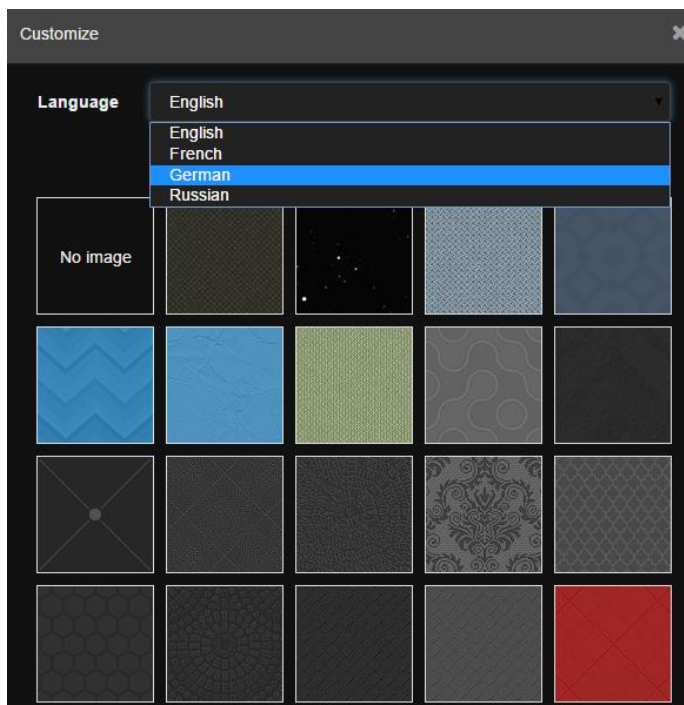


After you choose the style, the interface is automatically set to chosen background




4.2. Find applications

By clicking on the zoom icon  on the left top corner, you can quickly find applications containing search phrase.

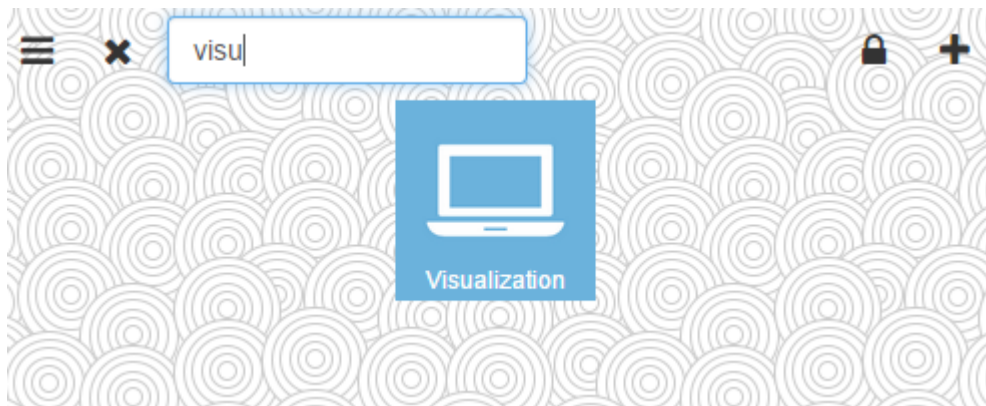

4.3. Unlock the screen for sorting order and hiding apps

Sorting the order of applications is available when the screen is unlocked. Press Unlock icon for this purpose .

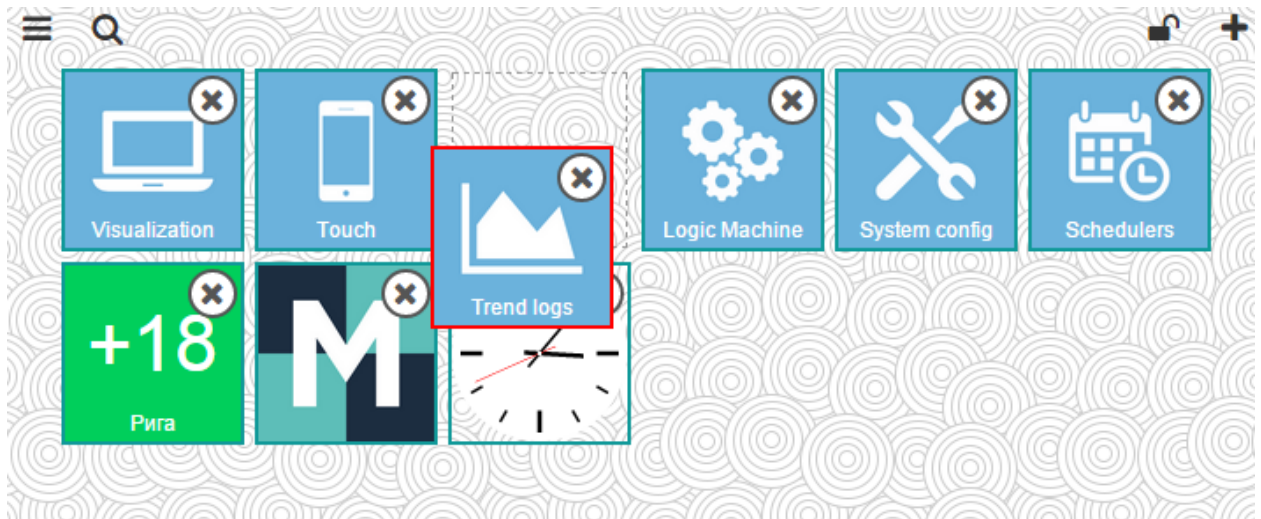

If you press Visibility icon  you will be able to hide/unhide apps from main screen. This setting can be disabled by admin.

For example if you disable specific apps and finish sorting, click Lock icon  to see the new screen.



4.4. Admin mode: adding/removing/administering apps

Enter admin mode by clicking on Admin icon  and entering the password.

Password
admin

Enter admin password 

.....

OK

Change admin password

Once in admin mode, click on Settings icon  and press *Change admin password* button.

Another setting here is *Allow users to show/hide apps* which will enable/disable the possibility to show or hide apps for end-users as shown in 4.3.

Change default page view for users

While in admin mode, do the necessary page adjustments – you can change background texture, hide/unhide/sort apps by using same icons as in user mode (see 4.3)  

Once all necessary changes are done, click on Save icon  to save the default page.


Add / remove apps

Click on plus icon  to enter the administration window of apps. If you see the following window, make sure you have set correct IP/gateway/DNS settings for your LogicMachine (System config → Network → Interfaces)

Load failed, check that device has Internet connection and correct DNS configuration

OK

On the default App management page you see available applications.

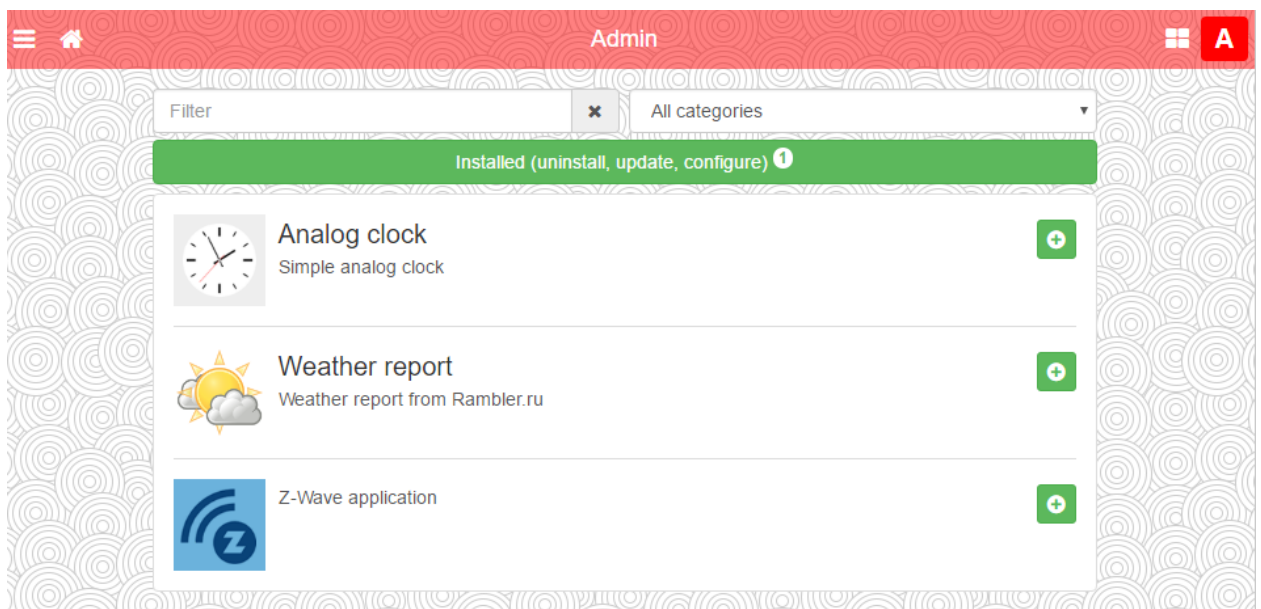


You can add the App to your first screen by clicking on Install button  and approve the choice

Install Analog clock?

Yes

No

The installed Apps will appear then in **Installed** section where you can uninstall them by necessity.

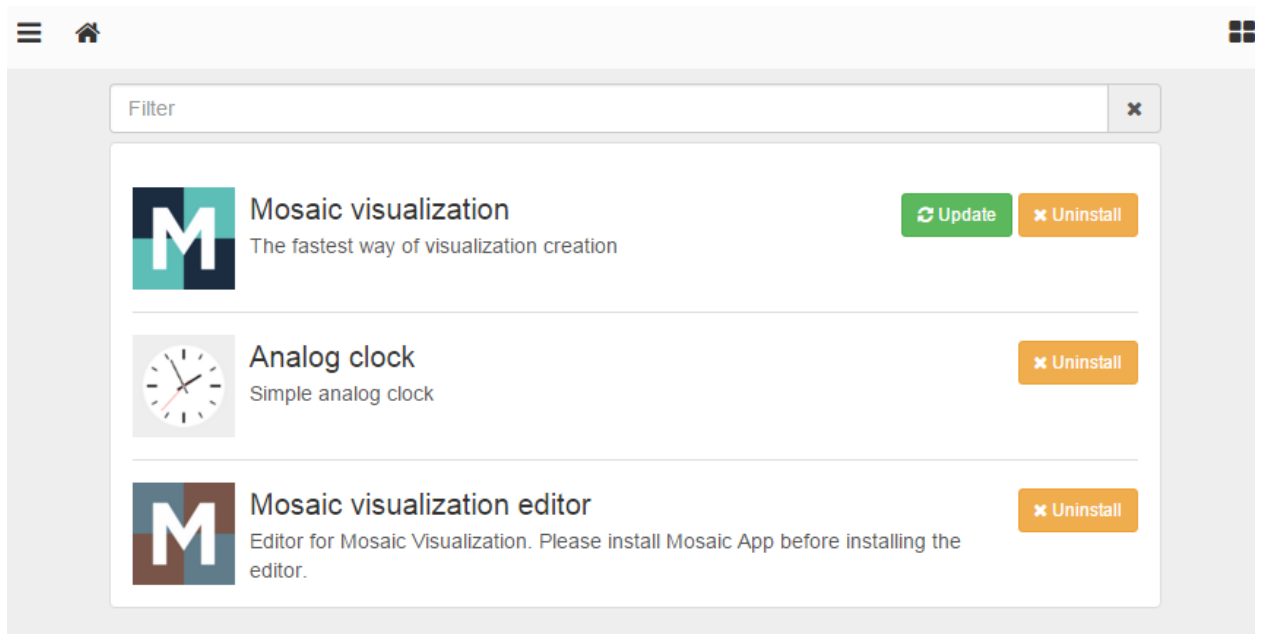

You can install the app also from the file, by clicking on **Install from file** entry

Install package from file



Choose File No file chosen

OK

Cancel

To update app click on respective Update icon  or from main administration screen – on the following icon:

Installed (uninstall, update, configure) 1

By pressing on this icon  you will be redirected to initial front page.

Exit admin mode

Click  icon to exit admin mode.

5. Application development

Available libraries/frameworks

- jQuery v2 (<http://jquery.com/>)
- Bootstrap v3 (<http://getbootstrap.com>)
- Font Awesome v4 (<http://fontawesome.io>)

Bootstrap comes without *Glyphicons*, use *Font Awesome* instead.

Base directory structure

- `/data` – apps and widgets are stored here, accessible at `http://IP/apps/data/`
- `/libs` – Lua library storage, loaded via `require('custom.lib')` where *lib* is library name.
- `/user` – allows storing user files and LP scripts, accessible at `http://IP/user/`

App / Widget structure

Application name (ID) must be unique and can only contain alphanumeric characters, hyphens and underscores. Maximum name length is 64 characters.

Directory structure

- *index.lp* or *index.html* – required for apps, unless *url* is specified, clicking app icon will open app directory in the same window. Applications must provide a *Back* button so user can return to starting page
- *icon.svg* or *icon.png* – required for apps, contains application icon, *SVG* is recommended
- *widget.lp* or *widget.js* – required for widgets, can contain *JavaScript* + *Lua* code or pure *JavaScript* source which displays widget contents
- *title* – optional for apps, text file with title that is shown beneath the icon
- *url* – optional for apps, text file with *URL* that should be open when icon is clicked
- *style.css* – optional for widget, contains custom CSS stylesheet for given widget
- *config.lp* or *config.html* – optional configuration file, see description below

In widget mode icon element ID is the same as widget name, all other HTML element IDs must be prefixed with unique application name to minimize collisions between different applications. The same rule applies to CSS selectors.

Default widget size is 100×100px. Width/height can be increased by calling *setWidgetSize(cols, rows)* on widget element. Width formula: $cols * 110 - 10$, height formula: $rows * 110 - 10$

Example

Clock widget which takes double width/height and places SVG image which fills all available space inside of widget container:

```
(function() {  
    // get widget element and set double width/height  
    var el = $('#clock').setWidgetSize(2, 2);  
    $('<object type="image/svg+xml"></object>') // object allows SVG+JavaScript  
        .css('width', '100%') // full width  
        .css('height', '100%') // full height  
        .attr('data', '/apps/data/clock/clock.svg') // SVG image source  
        .appendTo(el); // add to container  
})();
```

Configuration

- Application directory must contain either *config.lp* or *config.html* file
- This file must contain *form* element, id must be set in *myapp-config* format, where *myapp* is unique application name
- Data exchange is done via events triggered on *form* element:
 - *config-load* – (to app) provides an object with all configuration key/value pairs
 - *config-check* – (to app) triggered when *Save* button is clicked, app configuration must either show an error message if configuration is invalid or trigger *config-save*
 - *config-save* – (from app) saves configuration on server side and closed modal window, application must pass configuration parameters as an object
- Configuration can be accessed from Lua using these functions:
 - *config.get(app, key, default)* – returns single value for given application name, default value or *nil* if key is not found
 - *config.getall(app)* – return *table* with all configuration values for given application name or *nil* if configuration is empty
 - *config.set(app, key, value)* – adds a new key/value pair or overwrites an existing one
 - *config.setall(app, cfg)* – overwrites existing config with given *cfg table* with keys/values
 - *config.delete(app, key)* – deletes existing key/value pair
- Unpublished apps that have configuration file present will appear under *Dev apps* in admin page

Example (config.html)

Create a simple form element with single numeric input which accepts values in 0..100 range

```
<form id="myapp-config">
  <div class="form-group">
    <label for="myapp-input">Numeric input</label>
    <input type="number" name="input" id="myapp-input" class="form-control" min="0"
max="100">
  </div>
</form>

<script>
(function() {
  var el = $('#myapp-config') // form element
    , input = $('#myapp-input'); // input element

  // set element values when config is loaded
  el.on('config-load', function(event, data) {
    $.each(data, function(key, value) {
      $('#myapp-' + key).val(value);
    });
  });

  // runs when Save button is clicked
  el.on('config-check', function() {
    var val = parseInt(input.val(), 10) // input value
      , min = parseInt(input.attr('min'), 10) // minimum value
      , max = parseInt(input.attr('max'), 10); // maximum value

    // invalid value
    if (isNaN(val) || val < min || max < val) {
      alert('Please enter a value between ' + min + ' and ' + max);
    }
    // all good, save configuration
    else {
      el.triggerHandler('config-save', { input: val });
    }
  });
})();
</script>
```

localStorage wrapper functions

localStorage allows saving client-side configuration. Several functions are provided to safely execute *localStorage* functions, as they might fail in some cases like private mode on iOS. It also allows storing any values that can be serialized using *JSON.stringify*.

- *storeSet(key, value)* – sets key/value pair
- *storeGet(key)* – retrieves key value, returns *null* when key is not found
- *storeRemove(key)* – removes key from storage

Storage keys must be prefixed with unique application name to minimize collisions between different applications

Examples

Get currently selected theme (light/dark)

```
var theme = storeGet('theme') || 'light';
```

Store JavaScript objects

```
var user = { name: 'John', surname: 'Doe', age: 42 };  
storeSet('myapp_user', user);
```

Translation

- `$.i18n.lang` – current language or *undefined* if default language is used
- `$.i18n.add(ns, dictionary)` – adds translations to current dictionary, *ns* must be a unique application name
- `$.i18n.translate(key, default, vars)` or `$.tr(key, default, vars)` – translates a given *key* or uses *default* value if translation is not found for current language. Additional *vars* object can be passed to replace variables inside of translation text

Example 1

```
// register translation for application "myapp"
$.i18n.add('myapp', {
  // translation for mylang
  mylang: {
    hello: 'Hello %{username}, current temperature is %{temperature}',
    goodbye: 'Goodbye %{username}'
  }
});

var text = $.tr('myapp.hello', 'No translation', { username: 'John', temperature: 21 });

// alerts "Hello John, current temperature is 21" if current language is "mylang"
// otherwise alerts "No translation"
alert(text);
```

Example 2

You can apply translation to *jQuery* selectors by using *tr* function: all HTML elements that have *tr* class and *data-tr-key* attribute will have contents replaced with translated version

HTML:

```
<div id="myapp-container">
  <span class="tr" data-tr-key="myapp.hello">Hello!</span>
</div>
```

JavaScript:

```
// register french translation
$.i18n.add('myapp', {
  fr: {
    hello: 'Bonjour!'
  }
});

// apply translation to all elements inside of myapp-container
$('#myapp-container').tr();
```

LP scripts

Allows mixing HTML and Lua inside a single file, Lua chunks must be enclosed in `<? ?>` tags, closing tag at the end of the document is not required.

Example

Print current date

```
<!DOCTYPE html>
<html>
<body>Current date is <? write(os.date()) ?></body>
</html>
```

Available functions:

- *header(hdr)* – adds a custom header to the output
- *getvar(name)* – returns named *GET/POST* variable or *nil* when variable is not set
- *getvars()* - returns all *GET/POST* variables as *Lua table*
- *getcookie(name)* – returns named *cookie* contents or *nil* when cookie is not set
- *print(...)* – outputs any number of variables, ending output with *CRLF*
- *write(...)* – similar to *print* but does not output *CRLF* at the end
- *escape(val)* – escape single/double quotes, less than/greater than characters to HTML entities

Library package is loaded via *require('apps')* and provides access to these functions:

- all built-in LM functions: *alert*, *log*, *grp*, *storage* etc
- *config* library
- *vprint(...)* and *vprinthex(...)* functions to view variable contents in human-readable form
- *json* library

Example

Output multiplication table. Size can be a *GET/POST* variable in 1..20 range (defaults to 10).

```
<!DOCTYPE html>
<html>
<body>
<?
size = getvar('size') -- GET/POST variable
size = tonumber(size) or 0 -- convert to number
if size < 1 or 20 < size then
    size = 10 -- set to default value if empty or invalid
end
?>
```

```

<table border="1" cellpadding="3">
<? for i = 1, size do ?>
  <tr>
    <? for j = 1, size do ?>
      <td><? write(i * j) ?></td>
    <? end ?>
  </tr>
<? end ?>
</table>
</body>
</html>

```

Full Lua function reference manual is available at:

<http://openrb.com/docs/lua.htm>

Object functions

Most functions use *alias* parameter — either object group address or object name. (e.g. '1/1/1' or 'My object')

Finding single/multiple objects

grp.find(alias)

Returns single object for given alias. Object value will be decoded if data type is set.

Returns *nil* when object cannot be found, otherwise it returns *table* with the following items:

- address — object group address
- updatetime — latest update time in *UNIX timestamp* format. Use `os.date()` to convert to readable date formats
- name — unique object name
- datatype — object data type
- decoded — set to *true* when decoded value is available
- value — decoded object value

grp.tag(tags [, mode])

Returns a *table* containing objects with given tag. Tags parameter can be either table or a string. Mode parameter can be either 'or' (default — returns objects that have any of given tags) or 'and' (return objects that have all of given tags). You can use object functions on the returned table.

grp.dpt(dpt, [strict])

Find all objects with matching data type. *Dpt* can be either a *string* (“bool”, “scale”, “uint32” etc) or a field from *dt* table (dt.bool, dt.scale, dt.uint32). For example, if *dpt* is set to *dt.uint8*, in normal mode all sub-datatypes like *dt.scale* and *dt.angle* will be included. If exact data type match is required, set *strict* to *true*.

grp.all()

Returns a table with all known objects.

Helpers

grp.alias(alias)

Converts group address to object name or name to address. Returns *nil* when object cannot be found.

grp.getvalue(alias)

Returns value for given alias or *nil* when object cannot be found.

Bus requests

grp.write(alias, value [, datatype])

Sends group write request to given alias. Data type is taken from the database if not specified as third parameter. Returns boolean as the result.

grp.response(alias, value [, datatype])

Similar to *grp.write*. Sends group response request to given alias.

grp.read(alias)

Sends group read request to given alias. Note: this function returns immediately and cannot be used to return the result of read request. Use event-based script instead.

grp.update (alias, value [, datatype])

Similar to *grp.write*, but does not send new value to the bus. Useful for objects that are used only in visualization.

Tag manipulation

grp.gettags(alias)

Returns a *table* with all tags that are set for given alias.

grp.addtags(alias, tags)

Adds single or multiple tags to given alias. *Tags* parameter can be either a *string* (single tags) or *Lua table* consisting of strings (multiple tags).

grp.removetags(alias, tags)

Removes single or multiple tags from given alias. *Tags* parameter can be either a *string* (single tags) or *Lua table* consisting of strings (multiple tags).

grp.removealltags(alias)

Removes all tags for given alias.

grp.settags(alias, tags)

Overwrites all tags for given alias. *Tags* parameter can be either a *string* (single tags) or *Lua table* consisting of strings (multiple tags)

Object creation and modification

grp.setcomment(alias, comment)

Sets *comment* field for given alias

grp.create(config)

Creates a new or overwrites an existing object based on provided *config*, which must be a *Lua table*. Returns object ID on success, nil plus error message otherwise.

Config fields:

- *datatype* – *required*, object data type. Can be either a *string* (“bool”, “scale”, “uint32” etc) or a field from *dt* table (dt.bool, dt.scale, dt.uint32)
- *name* – *optional*, unique object name. If an object with the same name already exists, numeric prefix will be added
- *comment* – *optional*, object comment (*string*)
- *units* – *optional*, object units/suffix (*string*)
- *address* – *optional*, object group address (*string*). If not set the first free address from configured range will be used
- *tags* – *optional*, object tags, can be either a *string* (single tags) or *Lua table* consisting of strings (multiple tags)

If an object with the same group address already exists, only *units*, *datatype* and *comment fields* will be changed. All other properties will be kept unchanged.

Examples

Create new object with known address

```
address = grp.create({  
  datatype = dt.float16,  
  address = '1/1/1',  
})
```

```

name = 'My first object',
comment = 'This is my new object',
units = 'W',
tags = { 'My tag A', 'My tag B' },
})

```

Create new object with automatic address assignment

```

address = grp.create({
    datatype = dt.bool,
    name = 'My second object',
})

```

Database functions

SQLite v3 is used as the database engine.

Note: Database tables must be prefixed with unique application name to minimize collisions between different applications.

Core functions

- *db:execute(query)* – executes given query, return value can be either a database cursor or query result
- *db:escape(value)* – escapes given *string* value so it can be safely used in a query
- *db:query(query, ...)* – executes given query, question marks in the query are replaced by additional parameters (see examples below)

INSERT/UPDATE/DELETE helpers

Note: *Lua tables* passed as *values* and *where* parameters must not have fields that are not present in given database table. Otherwise query will fail

- *db:insert(tablename, values)* – performs *INSERT* query based on given *values*
- *db:update(tablename, values, where)* – performs *UPDATE* query based on given *values* and *where* parameters
- *db:delete(tablename, where)* – performs *DELETE* query based on *where* parameter

SELECT helpers

Note: parameters must be passed in the same way as for *db:query()* function

- *db:getone(query, ...)* – returns first field value from the first matching row from given query
- *db:getrow(query, ...)* – returns first matching row from given query
- *db:getlist(query, ...)* – returns complete query result as *Lua table*, where each table item is first field from each row
- *db:getall(query, ...)* – returns complete query result as *Lua table*, where each table item is Lua table with field→value mapping

Examples

```
-- Query parameter replacement
db:query('UPDATE table SET field=? WHERE id=?', 'test', 42)
-- Same as INSERT INTO table (id, value) VALUES (42, 'test')
db:insert('table', {
    id = 42,
    value = 'test',
})
-- Same as UPDATE table SET value='test' WHERE id=42
db:update('table', { value = 'test' }, { id = 42 })
-- Same as DELETE FROM table WHERE id=42
db:delete('table', { id = 42 })
```

6. LogicMachine configuration


Login	Password
admin	admin

This is a home directory for LogicMachine configuration management. The main menu consists of the following menus:

- **Reactor** – LM Reactor specific IO settings
- **Scripting** – scripting repository management
- **Objects**– KNX bus object management
- **Object logs**– KNX bus object historical logs
- **Schedulers**– administrator interface for user mode schedulers
- **Trend logs** – administrator interface for trend logs
- **Scenes** – scene visual editor
- **Vis.structure** – visualization structure definition
- **Visualization**– Visualization creation, control and monitoring
- **Vis.graphics**– icon, background, font management
- **Utilities** – utilities including import from ETS, reset object DB, backup, update system installation
- **User access** – user access level definition
- **BACnet** – BACnet client with scanner
- **Power meter** – voltage, current, power value mapping to KNX objects
- **DALI** – DALI master (over RS485 gateway)
- **Modbus** – Modbus mapper
- **BLE** – Bluetooth device mapping (over USB gateway)
- **Alerts** – alert messages defined with *alert* function
- **Logs** – log messages defined with *log* function
- **Error log** – error messages in KNX bus
- **Help** – documentation for scripting syntaxes

6.1. Reactor

Reactor IO configuration and mapping to KNX is done under *Reactor* tab. No additional software is needed to configure KNX mapping of IO ports.

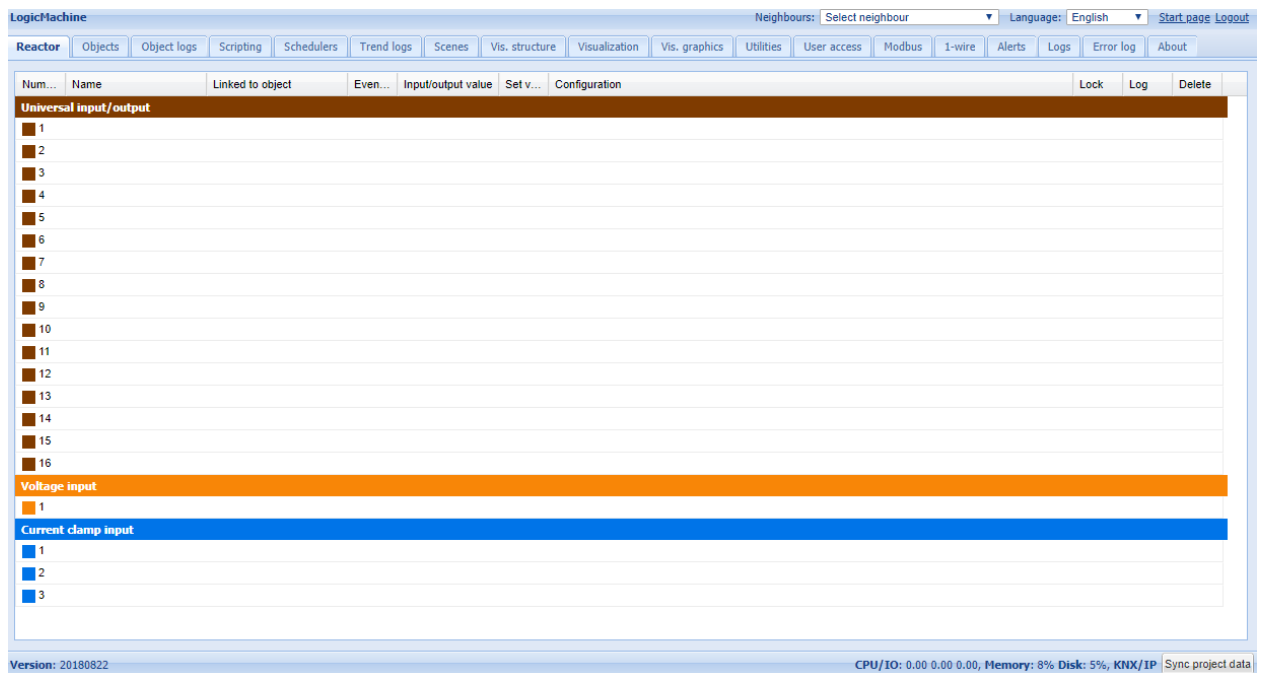

6.1.1. Universal input/output

You can set up Universal I/O port as binary output, voltage input, binary ON/OFF input, binary SHORT/LONG input, Step dimmer 1 byte, Relative dimmer 4 bit, Pulse meter and Frequency meter.

6.1.2. Output: Binary

Universal input/output 1

Name: Universal input/output 1

Link to object: 1/1/1 (New object) +

Additional objects

Status object: 1/1/2 (New object) +

Lock object: 1/1/3 (New object) +

Write to bus: ☒ Does not apply to virtual objects

Mode: Output: Binary

Invert output: ☐

On delay (seconds): 0

Off delay (seconds): 0

Comments:

Save Cancel

- **Name** – name of the port
- **Link to object** – group address to link the object with. By pressing the  button, the field will be automatically filled with the next free group address. You can add up to 6 objects to one output.
- **Status object** – status object group address.
- **Lock object** – lock object group address
- **Write to bus** – defines either to write or not to bus on value change
- **Mode** – port operating mode
- **Invert output** – defines either to invert the output value
- **On delay (seconds)** – delay in seconds when getting in On state
- **Off delay (seconds)** – delay in seconds when getting in Off state
- **Comments** – comment of the object

6.1.3. Input: Voltage

Universal input/output 1

Name: Universal input/output 1

Link to object: 1/1/1 (New object) +

Lock object: 1/1/3 (New object) +

Write to bus: ☒ Does not apply to virtual objects

Mode: Input: Voltage

Send delta: 2

Send timer (seconds):

Value compensation: 0

Base value (at 0V): 0

Multiplier: 1

Comments:

Save Cancel

- **Name** – name of the port
- **Link to object** – group address to link the object with. By pressing the  button, the field will be automatically filled with the next free group address
- **Lock object** – lock object group address
- **Write to bus** – defines either to write or not to bus on value change
- **Mode** – port operating mode
- **Send delta** – send the data upon specific delta value has changed
- **Send timer (seconds)** – time interval to send the reading
- **Value compensation** – compensation of the value
- **Base value (at 0V)** – value at 0V
- **Multiplier** – multiplier for the received value
- **Comments** – comment of the object

6.1.4. Input: Binary: On/Off

Universal input/output 1

Name: Universal input/output 1

Link to object: 1/1/1 (New object) +

Lock object: 1/1/3 (New object) +

Write to bus: ☒ Does not apply to virtual objects

Mode: Input: Binary: On/Off

On press (rising edge): Toggle

On release (falling edge): No action

Midpoint voltage: 10

Input hysteresis (V): 1

Comments:

Save Cancel

- **Name** – name of the port
- **Link to object** – group address to link the object with. By pressing the  button, the field will be automatically filled with the next free group address.
- **Lock object** – lock object group address
- **Write to bus** – defines either to write or not to bus on value change
- **Mode** – port operating mode
- **On press (rising edge) [Send 0; Send 1; Toggle]** – action on rising edge
- **On release (falling edge) [Send 0; Send 1; Toggle]** – action on falling edge
- **Midpoint voltage** – voltage midpoint to determine the On/Off state
- **Input hysteresis (V)** – If binary input is OFF, it will change to ON when voltage level is above MIDPOINT + HYSTERESIS. If binary input is ON, it will change to OFF when voltage level is below MIDPOINT – HYSTERESIS
- **Comments** – comment of the object

6.1.5. Input: Binary: Short/Long

Universal input/output 1

Name: Universal input/output 1

Short press object: 1/1/1 (New object)

Long press object:

Lock object: 1/1/3 (New object)

Write to bus: ☒ Does not apply to virtual objects

Mode: Input: Binary: Short/Long

Short press: Send 0

Long press (1 second): Send 1

Midpoint voltage: 10

Input hysteresis (V): 1

Comments:

Save Cancel

- **Name** – name of the port
- **Short press object** – group address to link the object with on short press. By pressing the button, the field will be automatically filled with the next free group address.
- **Long press object** – group address to link the object with on long press. By pressing the button, the field will be automatically filled with the next free group address.
- **Lock object** – lock object group address
- **Write to bus** – defines either to write or not to bus on value change
- **Mode** – port operating mode
- **Short press [Send 0; Send 1; Toggle]** – action on short press
- **Long press (1 second) [Send 0; Send 1; Toggle]** – action on long press
- **Midpoint voltage** – voltage midpoint to determine the On/Off state
- **Input hysteresis (V)** – If binary input is OFF, it will change to ON when voltage level is above MIDPOINT + HYSTERESIS. If binary input is ON, it will change to OFF when voltage level is below MIDPOINT – HYSTERESIS

- **Comments** – comment of the object

6.1.6. Input: Step dimmer (1 byte)

Universal input/output 1

Name: Universal input/output 1

Link to object: 1/1/1 (New object)

Lock object: 1/1/3 (New object)

Write to bus: ☒ Does not apply to virtual objects

Mode: Input: Step dimmer (1 byte)

Dimmer step (%): 10

On preset (%): 50

Midpoint voltage: 10

Input hysteresis (V): 1

Comments:

Save Cancel

- **Name** – name of the port
- **Link to object** – group address to link the object with. By pressing the button, the field will be automatically filled with the next free group address.
- **Lock object** – lock object group address
- **Write to bus** – defines either to write or not to bus on value change
- **Mode** – port operating mode
- **Dimmer step (%)** – value on which the brightness value will change by one step
- **On preset (%)** – brightness preset when getting in On state
- **Midpoint voltage** – voltage midpoint to determine the On/Off state

- **Input hysteresis (V)** – If binary input is OFF, it will change to ON when voltage level is above $\text{MIDPOINT} + \text{HYSTERESIS}$. If binary input is ON, it will change to OFF when voltage level is below $\text{MIDPOINT} - \text{HYSTERESIS}$
- **Comments** – comment of the object

6.1.7. Input: Relative dimmer (4 bit)

Universal input/output 1

Name: Universal input/output 1

Short press object: 1/1/1 (New object) +

Long press object: +

Lock object: 1/1/3 (New object) +

Write to bus: ☒ Does not apply to virtual objects

Mode: Input: Relative dimmer (4 bit)

Midpoint voltage: 10

Input hysteresis (V): 1

Comments:

Save Cancel

- **Name** – name of the port
- **Short press object** – group address to link the object with on short press. By pressing the  button, the field will be automatically filled with the next free group address.
- **Long press object** – group address to link the object with on long press. By pressing the  button, the field will be automatically filled with the next free group address.
- **Lock object** – lock object group address
- **Write to bus** – defines either to write or not to bus on value change
- **Mode** – port operating mode
- **Midpoint voltage** – voltage midpoint to determine the On/Off state
- **Input hysteresis (V)** – If binary input is OFF, it will change to ON when voltage level is above MIDPOINT + HYSTERESIS. If binary input is ON, it will change to OFF when voltage level is below MIDPOINT – HYSTERESIS

➤ **Comments** – comment of the object

6.1.8. Input: Pulse meter

Universal input/output 1

Name: Universal input/output 1

Link to object: 1/1/1 (New object) +

Lock object: 1/1/3 (New object) +

Write to bus: ☒ Does not apply to virtual objects

Mode: Input: Pulse meter

One pulse weight: 1

Send delta: 2

Midpoint voltage: 10

Input hysteresis (V): 1

Comments:

Save Cancel

- **Name** – name of the port
- **Link to object** – group address to link the object with. By pressing the  button, the field will be automatically filled with the next free group address.
- **Lock object** – lock object group address
- **Write to bus** – defines either to write or not to bus on value change
- **Mode** – port operating mode
- **One pulse weight** – multiplier of the received value
- **Send delta** – send the data upon specific delta value has changed
- **Midpoint voltage** – voltage midpoint
- **Input hysteresis (V)** – If binary input is OFF, it will change to ON when voltage level is above MIDPOINT + HYSTERESIS. If binary input is ON, it will change to OFF when voltage level is below MIDPOINT – HYSTERESIS
- **Comments** – comment of the object

6.1.9. Input: Frequency

Universal input/output 1

Name: Universal input/output 1

Link to object: 1/1/1 (New object)

Lock object: 1/1/3 (New object)

Write to bus: ☒ Does not apply to virtual objects

Mode: Input: Frequency

Multiplier: 1

Send delta: 2

Midpoint voltage: 10

Input hysteresis (V): 1

Comments:

Save Cancel

- **Name** – name of the port
- **Link to object** – group address to link the object with. By pressing the button, the field will be automatically filled with the next free group address.
- **Lock object** – lock object group address
- **Write to bus** – defines either to write or not to bus on value change
- **Mode** – port operating mode
- **Multiplier** – multiplier for the received value
- **Send delta** – send the data upon specific delta value has changed
- **Midpoint voltage** – voltage midpoint
- **Input hysteresis (V)** – If binary input is OFF, it will change to ON when voltage level is above MIDPOINT + HYSTERESIS. If binary input is ON, it will change to OFF when voltage level is below MIDPOINT – HYSTERESIS
- **Comments** – comment of the object

6.1.10. Voltage input

Voltage input 1

Name: Voltage input 1

Link to object: 1/1/1 (New object)  

Lock object:  

Write to bus: ☒ Does not apply to virtual objects

Send delta (V): 0.5  

Send timer (seconds):  

Value compensation: 0  

Base value (at 0V): 0  

Multiplier: 1  

Comments:

Save Cancel

- **Name** – name of the port
- **Link to object** – group address to link the object with. By pressing the  button, the field will be automatically filled with the next free group address
- **Lock object** – lock object group address
- **Write to bus** – defines either to write or not to bus on value change
- **Send delta** – send the data upon specific delta value has changed
- **Send timer (seconds)** – time interval to send the reading
- **Value compensation** – compensation of the value
- **Base value (at 0V)** – value at 0V
- **Multiplier** – multiplier for the received value
- **Comments** – comment of the object

6.1.11. Current clamp input

Current clamp input 1

Name: Current clamp input 1

Link to object: 1/1/1 (New object)  

Lock object:  

Write to bus: ☒ Does not apply to virtual objects

Send delta (V): 0.1 

Send timer (seconds): 

Value compensation: 0 

Base value (at 0V): 0 

Multiplier: 19 

Comments:

Save Cancel

- **Name** – name of the port
- **Link to object** – group address to link the object with. By pressing the  button, the field will be automatically filled with the next free group address. You can add up to 6 group addresses to one output.
- **Status object** – status object group address.
- **Lock object** – lock object group address
- **Write to bus** – defines either to write or not to bus on value change
- **Send delta** – send the data upon specific delta value has changed
- **Send timer (seconds)** – time interval to send the reading
- **Value compensation** – compensation of the value
- **Base value (at 0V)** – value at 0V
- **Multiplier** – multiplier for the received value
- **Comments** – comment of the object

6.2. Scripting

Scripting menu allows adding and managing various scripts, depending on the type of the script. There are two ways to program logics – FB (functional blocks) and via Lua programming language. Most of the Lua language aspects are covered in the first edition of "Programming in Lua" which is freely available at <http://lua.org/pil/>

Note! Here is available LUA Reference Manual for LogicMachine:
<http://openrb.com/docs/lua.htm>

There are six main types of scripts:

Event-based – scripts that are executed when a group event occurs on the bus. Usually used when nearly real-time response is required.

Resident– scripts that use polling to check for object state changes. Usually used for heating and ventilation when data is gathered from more than one group address.

Scheduled– scripts that run at the required time and day. Can be used for various security systems and presence simulations.


User libraries – user defined scripts to call from other scripts

Common functions – common functions to call from other scripts


Start-up (init) script – initialization script that is run upon system starting.

6.2.1. Functional Blocks (FB) app

FB (Function blocks) editor allow easy, PLC like approach to programming based on IEC 61499(event execution) and on IEC61131(cyclic execution) standard. FB editor allows of mixing both standards on single diagram.

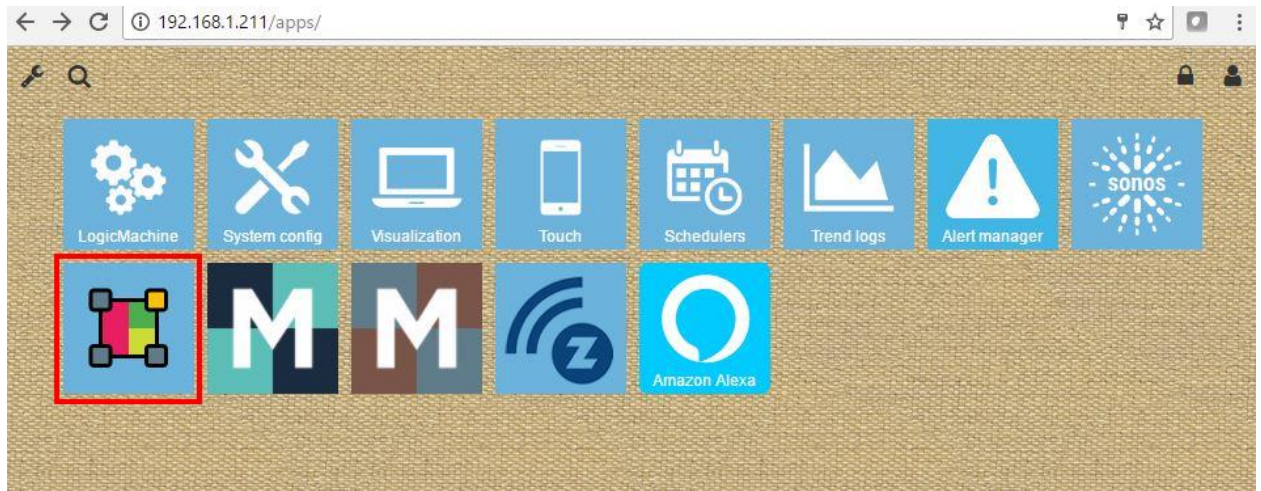

Menu

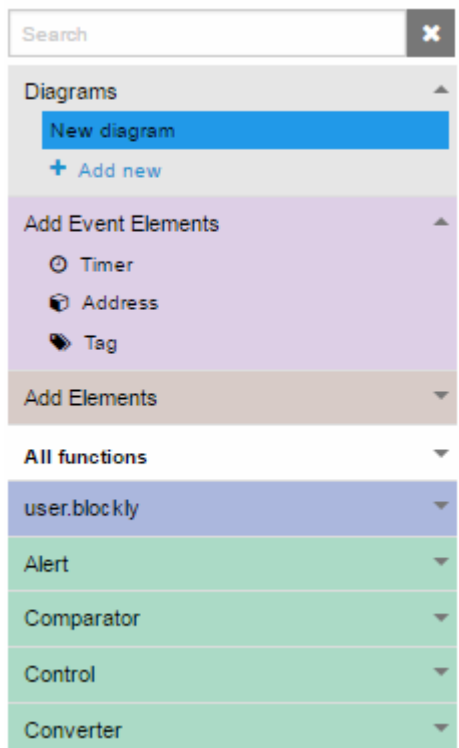

- **Diagrams** – All logic diagrams are created here. Name of diagram must be unique
- **Event Elements** – elements used to trigger event type logic
- **Elements** – Are normal elements which are equal to function properties
- **All functions** - Contains build in functions (green) and user defined function (purple)

- **Search box**- will find function block containing typed letter

FB editor basic controls




- **Undo** – undo last change
- **Redo** – redo last change
- **Clear and New** – delete all function blocks in diagram
- **Print** – print current diagram
- **Zoom in** – enlarge view
- **Zoom out** – reduce view
- **Live monitoring** – live monitoring of values changes by sending values from block to contained group objects which will trigger block functions on outputs.
- **Save as file** – save current diagram as a file
- **Load from file** – reload diagram from file
- **Preview code** – preview of LUA code
- **Show and generate** – show and generate LUA code

Adding a new diagram

New diagram can be added by clicking **+ Add new** in diagram tab. Diagram can be renamed by double click on diagram name. Name of each Diagram must be unique. Diagram can be deleted by clicking on **x** on beside diagram name.


All unsaved changes will be lost when creating new diagram

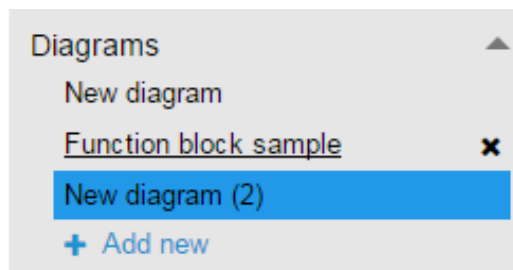

Adding new function block to the diagram

Left click on selected function block to be added to the working space. When added, element need to be assigned /set. Clicking on element will open Properties dialog window on the right side.

Sample: Description of **Address** Function block changed from “Address” to selected object “0/1/0”.

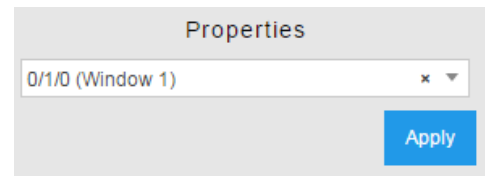

Function properties

Each function block has set of properties which are defined by function block definition.

Objects connected to the function block must be created first.

Event – object triggered by event / timer

Input:

- *Show* – Show / hide input value/connection point in function block. Must be selected for event elements.
- *Object* – selecting object / value / storage / string. Variable depend of definition.
- *Select object* – select concerned object

Output:

- *Show* – Show / hide output value / connection point in function block
- *Write to bus* – value will be written to bus when checked
- *Select output* – selecting output
- *Min delta* – minimal difference in value change

The image shows a 'Function Properties' dialog window. It has a dropdown menu at the top with 'event' selected. Below the dropdown are several sections: 'Input', 'Duration', 'Enable_Trigger', 'Flashing_time', and 'Lock'. Each section has a 'show' checkbox, a 'Value' dropdown, and a 'Select object' dropdown. The 'Output' section has a 'show' checkbox, a 'write to bus' checkbox (checked), a 'Select output' dropdown, and a 'min delta' dropdown. The 'Flashing' section has a 'show' checkbox, a 'write to bus' checkbox (checked), a 'Select output' dropdown, and a 'min delta' dropdown. The 'Output no flash' section has a 'show' checkbox, a 'write to bus' checkbox (checked), a 'Select output' dropdown, and a 'min delta' dropdown. At the bottom right is a blue 'Apply' button.


Add timer function block

Timer block represent old IEC61131(cyclic execution) standard.

- Select required block and set event to TIMER
- Set block properties as required and press **apply**.

The 'Function Properties' dialog for a timer block. It has sections for 'event', 'Input', and 'Output'. The 'event' dropdown is set to 'timer'. Under 'Input', there are eight 'Input' blocks (Input_1 to Input_8). Input_1 is set to 'Object' with value '1/1/246 (Sonos Play ... *'. Input_2 is set to 'Value' with value '1'. Input_3 is set to 'Storage' with value 'storage1'. Inputs 4 through 8 are set to 'Value' with empty fields. Under 'Output', there are two 'Output' blocks. The first is set to 'write to bus' with value '1' and a multiplier of '1/1/104'. The second is set to 'write to bus' with value 'min delta' and a multiplier of '1/1/104'. An 'Apply' button is at the bottom right.

- Select Timer from Event Elements and link output to timer input of your block

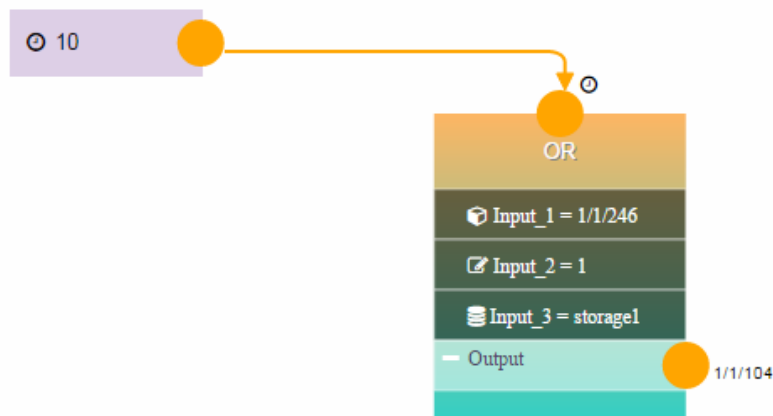

- Set timer properties to requires cycle frequency and press **Show and generate**. Logic will run every X seconds set in timer properties. In this example every 10 seconds.
- If no error generated script will be shown. Errors are highlighted with red mark around the block.

Scripts added

FB Resident (sleep 10)

```


require('custom.fbeditor20.Gate')

Input_1 = grp.getvalue('1/1/246')
Input_2 = 1
Input_3 = storage.get('storage1')
Input_4 = nil
Input_5 = nil
Input_6 = nil
Input_7 = nil
Input_8 = nil
out, out_not = fbe_OR(Input_1, Input_2, Input_3, Input_4, Input_5, Input_6)
if out ~= nil then
    grp.checkwrite('1/1/104', out, 1)
end

```

OK


- Logic can be tested under live monitoring.

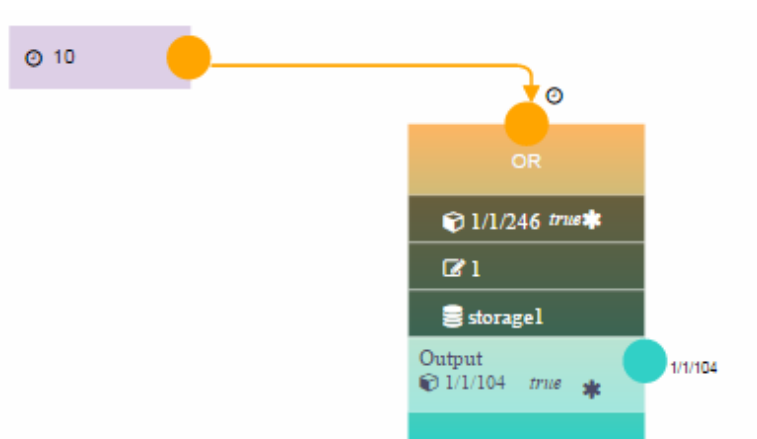


Add event function block

Event block represent new IEC61499 standard.


- Select required block and set event to EVENT
- Event block must use Event element to trigger at last one of the inputs. Select **show** for each input which should trigger the logic when its value will change.

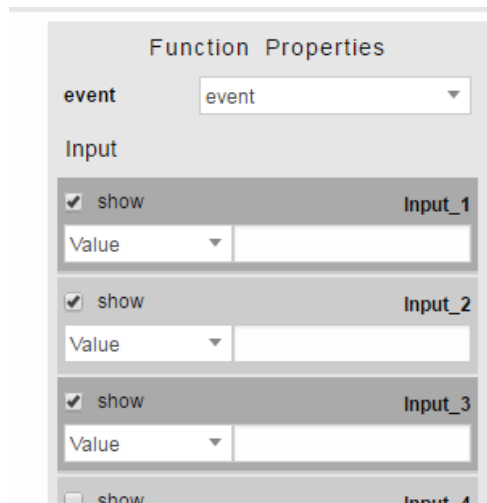


- Do not select object from function properties if it must be used as triggerable event. If object will be selected from Function Properties, it will act as simple static parameter.

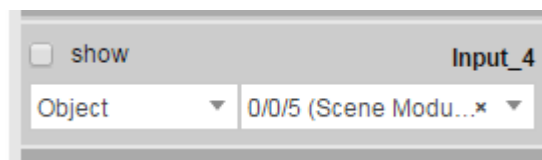


- Set rest of parameter of the Function Properties and press Apply. Block will change its appearance and will show exposed inputs.

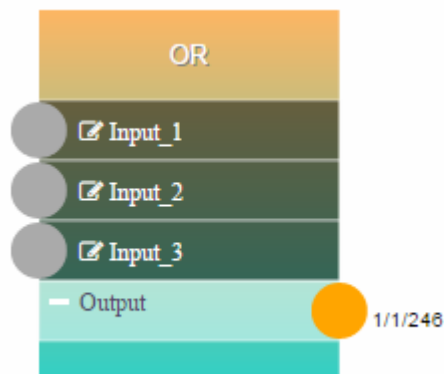

- Select Address from Event Elements and select its object. Elements can be duplicated for quicker multiplication

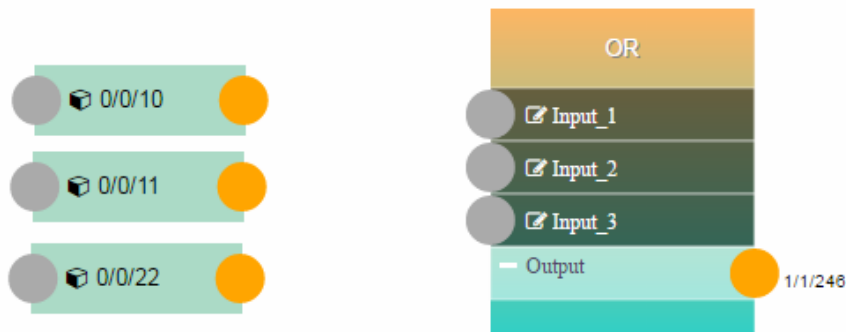

- Link Address to desired input. Orange lines represent event signals

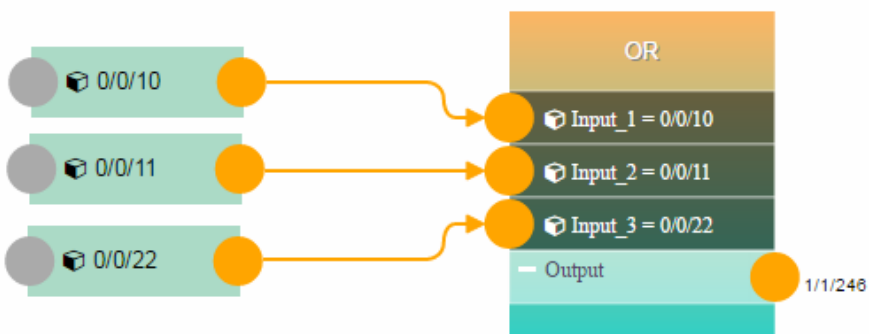

- Press **show** and generate to save and generate the logic. Created script will be displayed. Generated script will be triggered by TAG which was automatically added to all Event elements.

Scripts added

FB Event for tag fbtag__Event__fbc_OR__event

```
require('custom.fbeditor20.Gate')


Input_1 = grp.getvalue('0/0/10')
Input_2 = grp.getvalue('0/0/11')
Input_3 = grp.getvalue('0/0/22')
Input_4 = grp.getvalue('0/0/5')
Input_5 = nil
Input_6 = nil
Input_7 = nil
Input_8 = nil
out, out_not = fbc_OR(Input_1, Input_2, Input_3, Input_4, Input_5, Input_6,
if out ~= nil then
    grp.checkwrite('1/1/246', out, 1)
end
```

Linking blocks together


There are 2 ways of linking blocks together:

- Via storage
- Via event object


To link two blocks via storage, add a block and leave output without object and select **Show**, Press **Apply** to save changes.

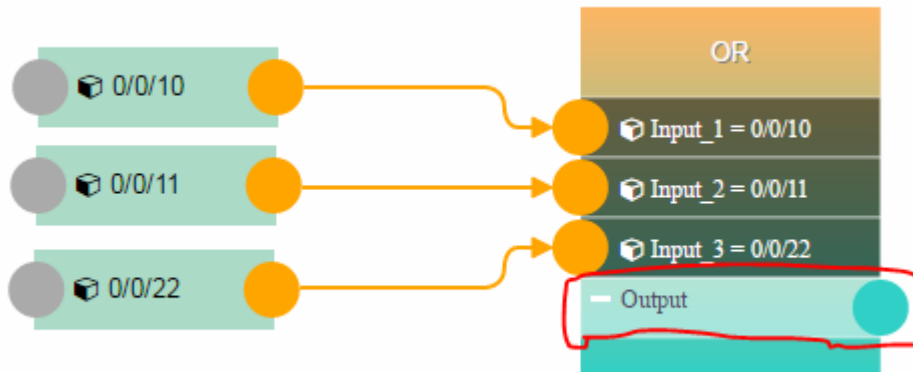

Add second block and leave one of the inputs without object and select **Show**. Finish configuration of block and press **Apply**.

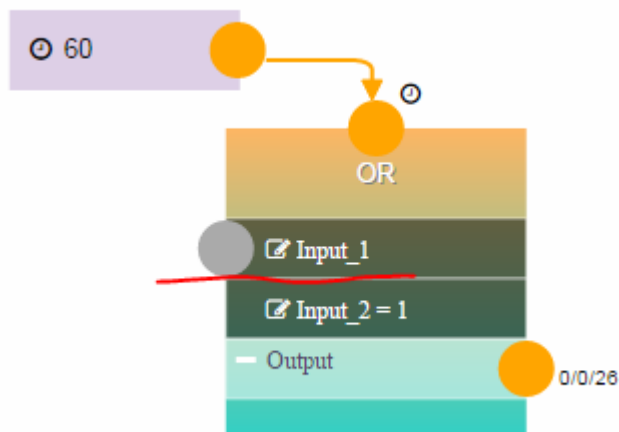


Link output with input.

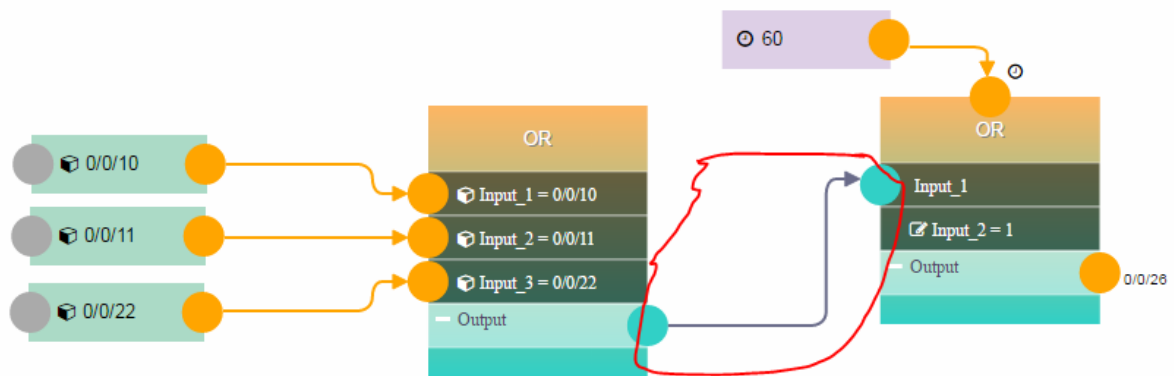

Grey link is automatically generated storage. As this link is grey it will not trigger the second block.

To link two blocks with event object follow the same actions only select object on output of the block and change the second block to run as Event.

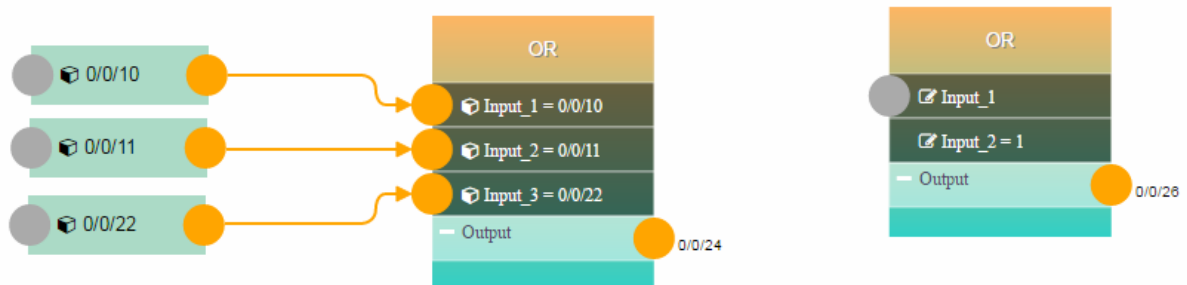


Link output with input and popup question will appear

Is it event link?

Yes No

Select yes and both block will be linked via orange line. Telegram received on the output object will trigger logic in second block.

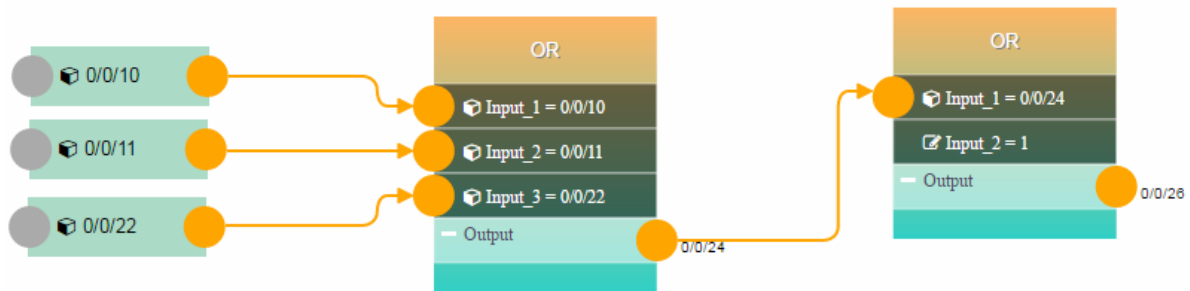

Creation of custom blocks

Description

In the same way as puzzle programming FB editor will use user libraries to import new logic blocks. Each user library will be visible as separate category. Each input and output must be defined. There are several options which can be used.

Example of one function

```

--- [Function] fb_editor_OR --function name
--- OR -- function display name
--- [Comment] – below this line comment can be added
--- This module enables OR linking of 8 inputs.
--- If value != 0 (not equal to zero) is active on at least one of the inputs, result is 1.
--- [Input] - below all inputs are listed with its types
--- Input 1 [object, storage]
--- Input 2 [storage]
--- Input 3 [object:find]
--- Input 4 [tag, storage, value]
--- Input 5 [tag:find]
--- Input 6 [value:sdDKRhgsdkajhg | 12 | true | dkDsghdskjgh | djkgshdskgh]
--- Input 7 [object]
--- Input 8 [object]
--- [Output] - below this line all outputs are define
--- out - Output [object, storage]
--- out_not - Output Not [storage]
--Function is defined here
function fb_editor_OR(input1, input2, input3, input4, input5, input6, input7, input8)
  local result = false
  local inputs = { input1, input2, input3, input4, input5, input6, input7, input8 }
  for i, input in ipairs(inputs) do
    if input then

```

```

    result = true
    break

end
end
return result, not result
end

```

Input definition

- Input1 [object] - Input 1 = grp.getvalue('object')
- Input2 [storage] – Input2 = storage.get('storage')
- Input3 [object:find] – Input3 = grp.find('object')
- Input4 [tag] – Input4 = tag
- Input5 [tag:find] - Input5 = grp.tag('tag')
- Input6 [value] – Input6 = value
- Input7 [value:atext|12|true|false] – Input7 is a value which can only be selected from (atext|12|true|false)

Output definition


out – Output [object] - grp.write('object', out)

out_not – Output Not[storage] -- storage.set('storage', out_not)

If result is = null then nothing is sent on the output.

6.2.2. Adding a new script in Scripting tab

Click on *Add new script* button on the bottom part of the *Event-based*, *Resident* or *Scheduled* submenus

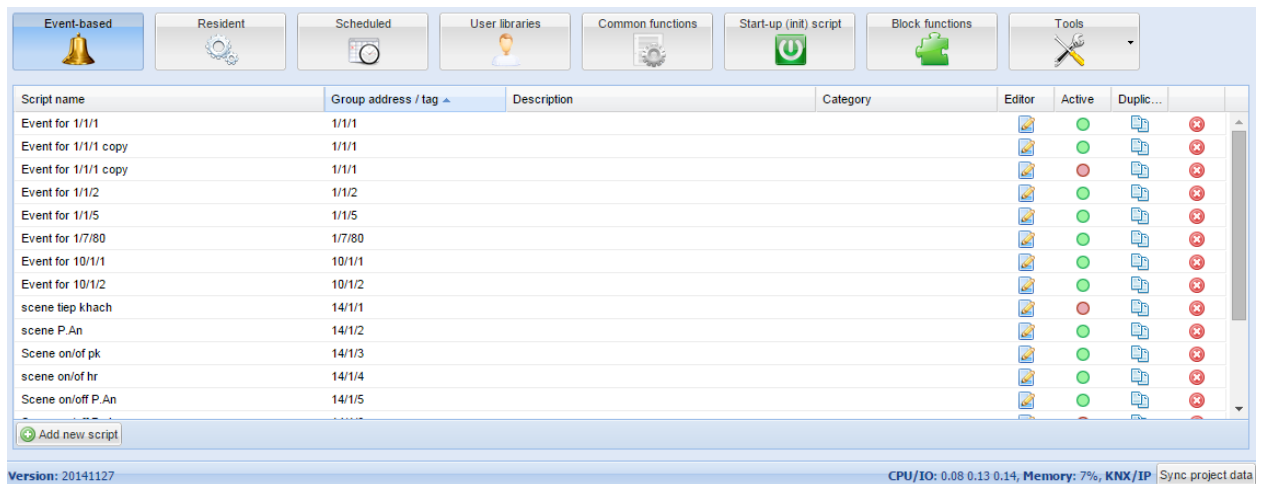

The following fields should be filled when adding a new script:

Event-based

The 'Event-based script' dialog box is shown. It contains the following fields and controls:

- Script name:** A text input field containing 'Scene_away'.
- Group address / tag:** A dropdown menu showing '2/2/2'.
- Active:** A checkbox that is checked.
- Execute on group read:** A checkbox that is checked.
- Category:** A dropdown menu.
- Description:** A large text area for entering a description.
- Buttons:** 'Save' and 'Cancel' buttons at the bottom right.

- **Script name** – the name of the script
- **Group address / Tag** – specific group address or tag name on which the script will be triggered
- **Active**– specifies whether the script is active (green circle) or disabled (red circle)
- **Execute on group read**– specifies whether the script is executed on KNX group read telegram

- **Category** – a new or existing name of the category the script will be included. This will not affect on script action, helps only by grouping the scripts and watching by categories in *Tools* ➤ *Print* script listings page
- **Description**– description of the script

Resident

The screenshot shows a 'Resident script' configuration window. It includes fields for script name, sleep interval, active status, category, and description. The 'Active' checkbox is checked, and the description text is visible in the text area.

- **Script name** – the name of the script
- **Sleep interval (seconds)** – interval after which the script will be executed.
- **Active**– specifies whether the script is active (green circle) or disabled (red circle)
- **Category** – a new or existing name of the category the script will be included. This will not affect on script action, helps only by grouping the scripts and watching by categories in *Tools* ➤ *Print* script listings page
- **Description**– description of the script

Scheduled

Scheduled script

Script name: Floor heating off

Minute: 0

Hour: 8,19

Day of the month: *

Month of the year: Every month of the year

Day of the week: Every day of the week

Active: ☐

Category:

Description: Turns floor heating OFF at 8:00 and 19:00

Save Cancel

- **Script name** – the name of the script
- **Minute** – Minute
- **Hour** – Hour
- **Day of the month** – Day of the month
- **Month of the year** – Month of the year
- **Day of the week** – Day of the week
- **Active**– specifies whether the script is active (green circle) or disabled (red circle)
- **Category** – a new or existing name of the category the script will be included. This will not affect on script action, helps only by grouping the scripts and watching by categories in *Tools* [Print script listings page](#)
- **Description**– description of the script

List of scripts

Logic Machine

Neighbours: Select neighbour Start page

Reactor Scripting Objects Object logs Schedulers Trend logs Vis. structure Visualization Vis. graphics Utilities Modbus Enocan Alerts Logs Error log Help

Event-based Resident Scheduled User libraries Common functions Start-up (init) script Tools

Filter scripts by category: All categories

Script name	Sleep interval (seconds)	Description	Category	Editor	Active	Dupli...
mpd	30					
redis	2					

There are five actions you can do with each of the script:

- Duplicate** – Duplicate the script with its source code
- Editor** – Enter scripting editor to write specific code for the particular program. It can be source code editor or block programming
- Active** – Make script active (green) or deactivate it (red)

Delete – Delete the script. When pressing this icon the confirmation is asked to accept the delete.

6.2.3. Event-based scripting

Event-based scripting can be used to implement custom logic for group address or tag events. User-defined function is executed when a "group write" or "group read" (if checked while adding the script) event occurs for given group address. Event information is stored in global **event** variable. Variable contents:

- *dstraw (integer)* — raw destination group address
- *srcraw (integer)* — raw source individual address
- *dst (string)* — decoded destination group address (for example: 1/1/4)
- *src (string)* — decoded source individual address (for example: 1.1.2)
- *type (string)* — type of event, either "groupwrite", "groupread", "groupresponse". Currently user-defined scripts are bound to "group write" events only.
- *dataraw (integer/string)* — raw binary data
- *datahex (string)* — data as a hex-encoded string which can be used to convert value to Lua variable

Note! *event* variable is available only in Event-based functions, not in Resident and Scheduled.

Note! *All event-based scripts are executed in a single queue-like manner. Make sure event scripts do not contain infinite loops, sleep calls or other blocking parts.*

Note! *To get event value in scripts, use the following command: **a = event.getvalue()***

Note! *To get event group address object name, use the following command:
a = grp.alias(event.dst)*

6.2.4. Resident scripting

Resident scripts are executed infinite amount of times. Scripts are put into inactive state after each call and are resumed after delay timer expires.

Note! *even though resident scripts are executed in parallel they should not have infinite loops or it will not be possible to reload scripts after editing.*

6.2.5. Scheduled scripting

Scheduled scripts are executed when the system time matches the specified script start time. Scheduled script is run only once after each timer call.

Scheduled scripting date/time format

Scheduled scripting uses standard [cron](#) format for date/time parameters. Valid values are:

***** — execute script every minute, hour or day.

***/N** — execute script every N minutes, hours or days. N is an integer, script is executed when current value divided by N gives 0 in modulo. For example, script with hour parameter set to */8 will be executed when hour is 0, 8 and 16.


N — execute script exactly at N minute, hour or day.

N-K — execute script when minute, hour or day is between N-K range (inclusive).

N,K — it is possible to specify several N and N-K type parameters separated by comma. For example, script with minute parameter set to 15,50-52 will get executed when minute is 15, 50, 51 and 52

6.2.6. Script editor

When a script is added  icon appears in *Editor* column that allows opening a script in scripting editor and re-working it with built-in code snippets.

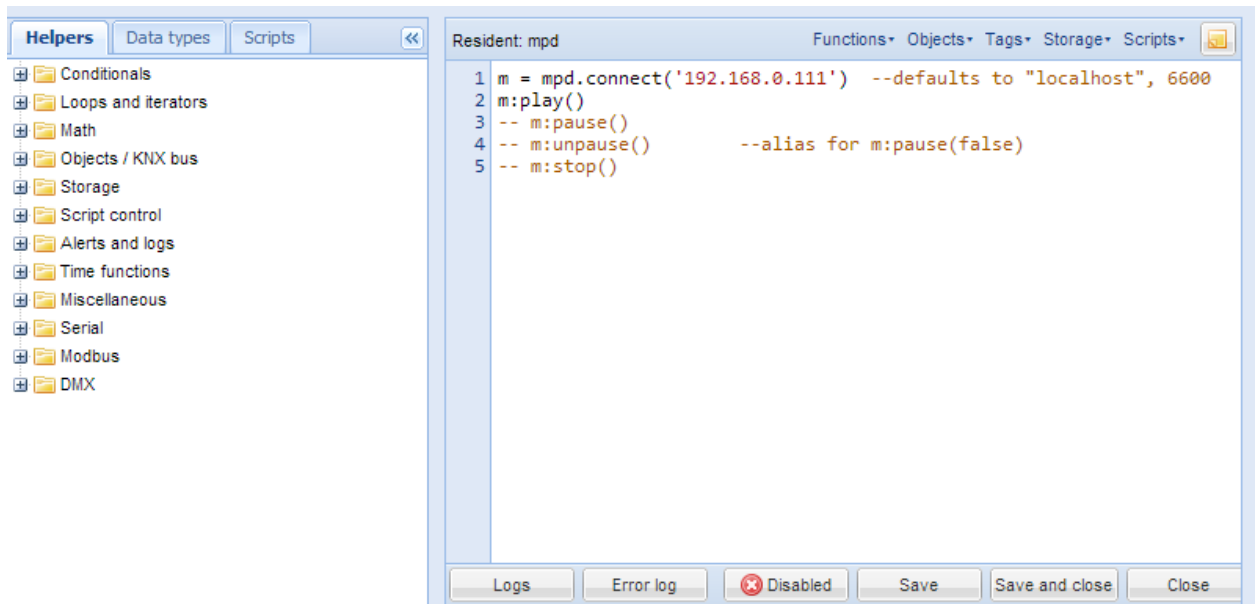

The idea is that not knowing the syntaxes you get a helper for writing your own scripts. Code snippets save also a time and make the coding much more convenient. After clicking on appropriate snippet, it automatically adds code to the editor field.

There are three main groups of Script editor:

Helpers – predefined code snippets, like if-then statement. Helpers consist of three main sub-groups:

Conditionals – If Else If, If Then etc.

Loops and iterators – Array, Repeat..Untiletc

Math – Random value, Ceiling, Absolute value, Round etc.

Objects/KNX bus – Get object value, Group read, Group write, Update interval etc.

Storage – Get data from storage, Save data to storage

Script control – Get other script status, enable or disable other scripts

Alerts and logs – Alert, Log variables, Formatted alert

Time functions – Delay script execution

Miscellaneous – Sunrise/sunset etc.

Serial – Communication through internal LogicMachine IO ports


Modbus – Create RTU/TCP connection, Write register, Read register etc.

DMX – Communication with DMX devices


Data types – choose object by data type

Scripts – list of all scripts added in the LogicMachine
Code helpers on the right side of the editor


There is a special section in scripting editor which allows quickly find functions, objects or tags by name and storage variables.

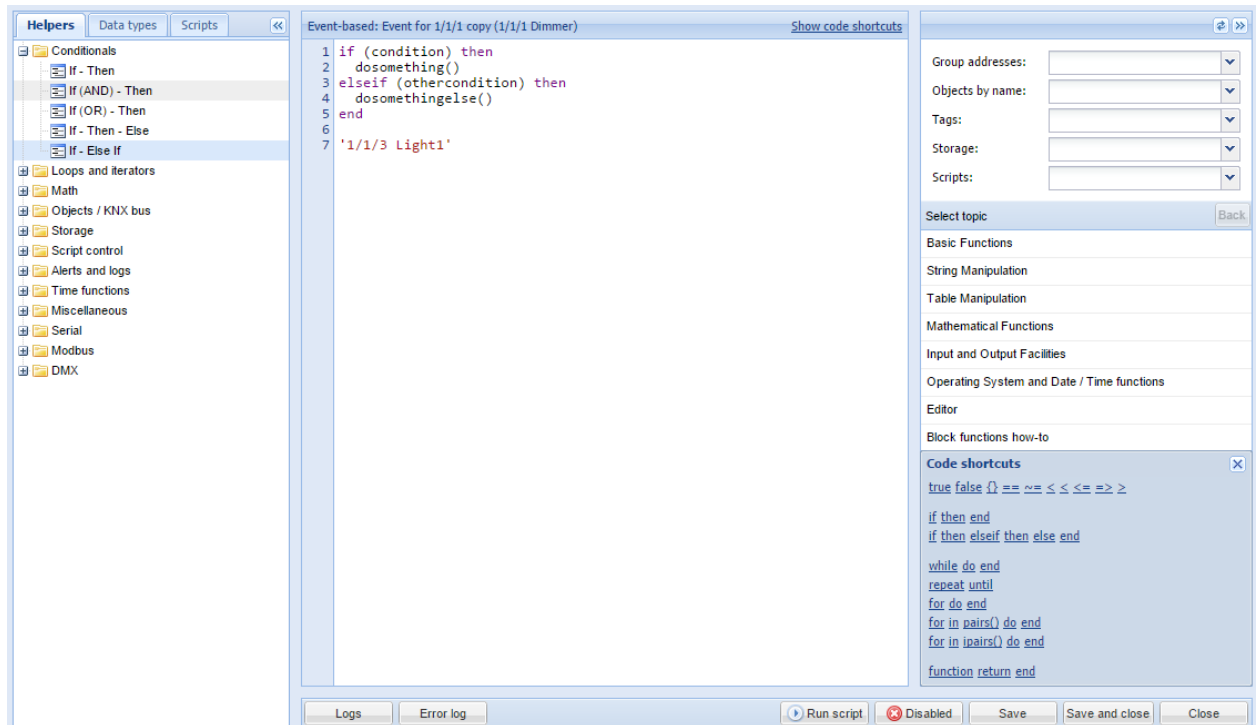

There is also a code shortcut button, which helps with most common function structure.

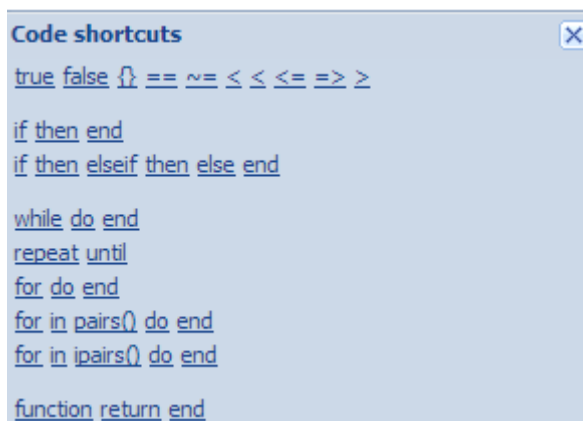

 There are also following helpful button in the script editor, which allows quickly access Error Logs, Test the script, Enable or disable it.



6.2.7. Object functions

grp provides simplified access to the objects stored in the database and group address request helpers.

Most functions use **alias** parameter — object group address or unique object name. (e.g. '1/1/1' or 'My object')

grp.getvalue(alias)

Returns value for the given alias or Lua **nil** when object cannot be found.

grp.find(alias)

Returns single object for the given alias. Object value will be decoded automatically only if the data type has been specified in the 'Objects' module. Returns Lua **nil** when object cannot be found, otherwise it returns Lua **table** with the following items:

- **address** — object group address
- **updatetime** — latest update time in UNIX timestamp format. Use Lua **os.date()** to convert to readable date formats

When object data type has been specified in the 'Objects' module the following fields are available:

- **name** — unique object name
- **datatype** — object data type as specified by user
- **decoded** — set to **true** when decoded value is available
- **value** — decoded object value

grp.tag(tags, mode)

Returns Lua **table** containing objects with the given tag. Tags parameter can be either Lua **table** or a string. Mode parameter can be either 'all' (return objects that have all of the given tags) or 'any' (**default** — returns objects that have any of the given tags). You can use *Returned object functions* on the returned table.

grp.alias(alias)

Converts group address to object name or name to address. Returns Lua **nil** when object cannot be found.

6.2.8. Returned object functions, group communication functions

Objects received by using **grp.find(alias)** or **grp.tag(tags, mode)** have the following functions attached to them:

Always check that the returned object was found otherwise calling these functions will result in an error. See the example below.

object:write(value, datatype)

Sends group write request to object's group address. Data type is taken from the database if not specified as second parameter. Returns Lua **boolean** as the result.

object:response(value, datatype)

Similar to **object:write**. Sends group response request to object's group address.

object:read()

Sends group read request to object's group address. Note: this function returns immediately and cannot be used to return the result of read request. Use event-based script instead.

object:update(value, datatype)

Similar to **object:write**, but **does not send** new value to the bus. Useful for objects that are used only in visualization.

6.2.9. Group communication functions

These functions should only be used if it is required to access objects by group address directly, it is recommended to use single or multiple object functions.

grp.write(alias, value, datatype)

Sends group write request to the given alias. Data type is taken from the database if not specified as third parameter. Returns Lua **boolean** as the result.

grp.response(alias, value, datatype)

Similar to **grp.write**. Sends group response request to the given alias.

grp.read(alias)

Sends group read request to the given alias. Note: this function returns immediately and cannot be used to return the result of read request. Use event-based script instead.

grp.update(alias, value, datatype)

Similar to **grp.write**, but **does not send** new value to the bus. Useful for objects that are used only in visualization.

6.2.10. Object function examples

Find object by name and write new value.

1. `myobject=grp.find('My object')`
2. `-- grp.find will return nil if object was not found`

```

3. if myobject then
4. myobject:write(1) -- update object value with 1
5. end

```

Find object by address and write new value.

```

1. myobject=grp.find('1/1/15')
2. -- verify that the requested object was found
3. if myobject then
4. myobject:write(52.12, dt.float16) -- explicitly set data type to dt.float16 (2-byte
   floating point)
5. end

```

Switch all binary objects tagged 'lights' off.

```

1. lights =grp.tag('lights')
2. lights:write(false)

```

Group write to the specified group address and data type.

```

1. grp.write('1/1/1', true, dt.bool) -- write 1-bit 'on' to 1/1/1
2. grp.write('1/1/2', 50, dt.scale) -- write 1-byte 50% to 1/1/2

```

6.2.11. Data type functions, data types

knxdatatype object provides data encoding and decoding between Lua and KNX data formats.

knxdatatype.decode(value, datatype)

Converts hex-encoded data to Lua variable based on given data type. Data type is specified either as KNX primary data type (integer between 1 and 16) or a secondary data type (integer between 1000 and 16000). Return values:

- success — decoded data as Lua variable (type depends on data type), value length in bytes
- error — nil, error string

6.2.12. Data types

The following data types can be used for encoding and decoding of KNX data. Data representation on Lua level and predefined constants (in bold) is given below:

- *1 bit (boolean)* - **dt.bool** — boolean
- *2 bit (1 bit controlled)* - **dt.bit2** — number
- *4 bit (3 bit controlled)* - **dt.bit4** — number

- *1 byte ASCII character - **dt.char*** — string
- *1 byte unsigned integer - **dt.uint8*** — number
- *1 byte signed integer - **dt.int8*** — number
- *2 byte unsigned integer - **dt.uint16*** — number
- *2 byte signed integer - **dt.int16*** — number
- *2 byte floating point - **dt.float16*** — number
- *3 byte time / day - **dt.time*** — table with the following items:
 - day — number (0-7)
 - hour — number (0-23)
 - minute — number (0-59)
 - second — number (0-59)
- *3 byte date - **dt.date*** — table with the following items:
 - day — number (1-31)
 - month — number (1-12)
 - year — number (1990-2089)
- *4 byte unsigned integer - **dt.uint32*** — number
- *4 byte signed integer - **dt.int32*** — number
- *4 byte floating point - **dt.float32*** — number
- *4 byte access control - **dt.access*** — number, currently not fully supported
- *14 byte ASCII string - **dt.string*** — string, null characters ('\0') are discarded during decoding

6.2.13. Data storage function

storage object provides persistent key-value data storage for user scripts. Only the following Lua data types are supported:

- **boolean**
- **number**
- **string**
- **table**

storage.set(key, value)

Sets new value for the given key. Old value is overwritten. Returns boolean as the result and an optional error string.

storage.get(key, default)

Gets value for the given key or returns default value (**nil** if not specified) if key is not found in the data storage.

Note: all user scripts share the same data storage. Make sure that same keys are not used to store different types of data.

Examples

- The following examples shows the basic syntax of `storage.set`. Result will return boolean `true` since the passed parameters are correct

```
result=storage.set('my_stored_value_1', 12.21)
```

- This example will return `false` as the result because we are trying to store a function which is not possible.

```
1. testfn=function(t)
2. return t * t
3. end
4. result =storage.set('my_stored_value_2', testfn)-- this will result in an error
```

- The following examples shows the basic syntax of `storage.get`. Assuming that key value was not found, first call will return `nil` while second call will return number `0` which was specified as a default value.

```
1. result =storage.get('my_stored_value_3')-- returns nil if value is not found
2. result =storage.get('my_stored_value_3', 0)-- returns 0 if value is not found
```

- When storing tables make sure to check the returned result type. Assume we have created a storage item with key `test_object_data`.

```
1. objectdata={}
2. objectdata.temperature=23.1
3. objectdata.scene='default'
4. result =storage.set('test_object_data', objectdata)-- store objectdata variable as
   'test_object_data'
```

- Now we are retrieving data from storage. Data type is checked for correctness.

```
1. objectdata=storage.get('test_object_data')
2. if type(objectdata)=='table' then
3. if objectdata.temperature> 24 then
4. -- do something if temperature level is too high
5. end
6. end
```

6.2.14. Alert function

`alert(message, [var1, [var2, [var3]]])`

Stores alert message and current system time in the main database. All alerts are accessible in the "Alerts" module. This function behaves exactly as Lua [string.format](#).

Example

```
1. temperature = 25.3
2. if temperature > 24 then
3. -- resulting message: 'Temperature levels are too high: 25.3'
4. alert('Temperature level is too high: %.1f', temperature)
5. end
```

6.2.15. Log function

`log(var1, [var2, [var3, ...]])`

Converts variables to human-readable form and stores them in the main database. All items are accessible in the "Logs" module.

Example

```
1. -- log function accepts Lua nil, boolean, number and table (up to 5 nested levels) type
   variables
2. a = { key1 = 'value1', key2 = 2 }
3. b = 'test'
4. c = 123.45
5. -- logs all passed variables
6. log(a, b, c)
```

6.2.16. Scheduled scripting date/time format

Scheduled scripting uses standard *cron* format for date/time parameters. Valid values are:

- *** — execute script every minute, hour or day.
- */N** — execute script every N minutes, hours or days. N is an integer, script is executed when current value divided by N gives 0 in modulo. For example, script with hour parameter set to ***/8** will be executed when hour is 0, 8 and 16.
- N** — execute script exactly at N minute, hour or day.
- N-K** — execute script when minute, hour or day is between N-K range (inclusive).

N,K — it is possible to specify several *N* and *N-K* type parameters separated by comma. For example, script with minute parameter set to 15,50-52 will get executed when minute is 15, 50, 51 and 52

6.2.17. *Time function*

os.sleep(delay)

Delay the next command execution for the *delay* seconds.

os.microtime ()

Returns two values: current timestamp in seconds and timestamp fraction in nanoseconds

os.udifftime (sec, usec)

Returns time difference as floating point value between now and timestamp components passed to this function (seconds, nanoseconds)

6.2.18. *Data Serialization*

serialize.encode (value)

Generates a storable representation of a value.

serialize.decode (value)

Creates a Lua value from a stored representation.

6.2.19. *String functions*

This library provides generic functions for string manipulation, such as finding and extracting substrings, and pattern matching. When indexing a string in Lua, the first character is at position 1 (not at 0, as in C).

Indices are allowed to be negative and are interpreted as indexing backwards, from the end of the string. Thus, the last character is at position -1, and so on.

The string library provides all its functions inside the table *string*. It also sets a meta table for strings where the *__index* field points to the string table. Therefore, you can use the string functions in object-oriented style. For instance, *string.byte(s, i)* can be written as *s:byte(i)*. The string library assumes one-byte character encodings.

string.trim (str)

Trims the leading and trailing spaces off a given string.

string.split (str, sep)

Splits string by given separator string. Returns Lua table.

string.byte (s [, i [, j]])

Returns the internal numerical codes of the characters $s[i]$, $s[i+1]$, ..., $s[j]$. The default value for i is 1; the default value for j is i . Note that numerical codes are not necessarily portable across platforms.

string.char (...)

Receives zero or more integers. Returns a string with length equal to the number of arguments, in which each character has the internal numerical code equal to its corresponding argument. Note that numerical codes are not necessarily portable across platforms.

string.find (s, pattern [, init [, plain]])

Looks for the first match of pattern in the string s . If it finds a match, then `find` returns the indices of s where this occurrence starts and ends; otherwise, it returns *nil*. A third, optional numerical argument `init` specifies where to start the search; its default value is 1 and can be negative. A value of `true` as a fourth, optional argument `plain` turns off the pattern matching facilities, so the function does a plain "find substring" operation, with no characters in pattern being considered "magic". Note that if `plain` is given, then `init` must be given as well. If the pattern has captures, then in a successful match the captured values are also returned, after the two indices.

string.format (formatstring, ...)

Returns a formatted version of its variable number of arguments following the description given in its first argument (which must be a string). The format string follows the same rules as the `printf` family of standard C functions. The only differences are that the options/modifiers `*`, `l`, `L`, `n`, `p`, and `h` are not supported and that there is an extra option, `q`. The `q` option formats a string in a form suitable to be safely read back by the Lua interpreter: the string is written between double quotes, and all double quotes, newlines, embedded zeros, and backslashes in the string are correctly escaped when written. For instance, the call

```
string.format('%q', 'a string with "quotes" and \n new line')
```

will produce the string:

```
"a string with \"quotes\" and \n new line"
```

The options `c`, `d`, `E`, `e`, `f`, `g`, `G`, `i`, `o`, `u`, `X`, and `x` all expect a number as argument, whereas `q` and `s` expect a string. This function does not accept string values containing embedded zeros, except as arguments to the `q` option.

string.gmatch (s, pattern)

Returns an iterator function that, each time it is called, returns the next captures from pattern over strings. If pattern specifies no captures, then the whole match is produced in each call. As an example, the following loop

```
1. s = "hello world from Lua"
2. for w in string.gmatch(s, "%a+") do
3.   print(w)
4. end
```

will iterate over all the words from string *s*, printing one per line. The next example collects all pairs *key=value* from the given string into a table:

```
1. t = {}
2. s = "from=world, to=Lua"
3. for k, v in string.gmatch(s, "(%w+)=(%w+)") do
4.     t[k] = v
5. end
```

For this function, a '^' at the start of a pattern does not work as an anchor, as this would prevent the iteration.

string.gsub (s, pattern, repl [, n])

Returns a copy of *s* in which all (or the first *n*, if given) occurrences of the pattern have been replaced by a replacement string specified by *repl*, which can be a string, a table, or a function. *gsub* also returns, as its second value, the total number of matches that occurred.

If *repl* is a string, then its value is used for replacement. The character % works as an escape character: any sequence in *repl* of the form %*n*, with *n* between 1 and 9, stands for the value of the *n*-th capture string (see below). The sequence %0 stands for the whole match. The sequence %% stands for a single %.

If *repl* is a table, then the table is queried for every match, using the first capture as the key; if the pattern specifies no captures, then the whole match is used as the key.

If *repl* is a function, then this function is called every time a match occurs, with all captured substrings passed as arguments, in order; if the pattern specifies no captures, then the whole match is passed as a sole argument.

If the value returned by the table query or by the function call is a string or a number, then it is used as the replacement string; otherwise, if it is *false* or *nil*, then there is no replacement (that is, the original match is kept in the string).

Examples:

```
x = string.gsub("hello world", "(%w+)", "%1 %1")
--> x="hello hello world world"

x = string.gsub("hello world", "%w+", "%0 %0", 1)
--> x="hello hello world"

x = string.gsub("hello world from Lua", "(%w+)%s*(%w+)", "%2 %1")
--> x="world hello Lua from"

x = string.gsub("home = $HOME, user = $USER", "%$(%w+)", os.getenv)
--> x="home = /home/roberto, user = roberto"

x = string.gsub("4+5 = $return 4+5$", "%$(.-%)$", function(s)
returnloadstring(s)()
end)
--> x="4+5 = 9"

local t = {name="lua", version="5.1"}
x = string.gsub("$name-$version.tar.gz", "%$(%w+)", t)
--> x="lua-5.1.tar.gz"
```

string.len (s)

Receives a string and returns its length. The empty string "" has length 0. Embedded zeros are counted, so "a\000bc\000" has length 5.

string.lower (s)

Receives a string and returns a copy of this string with all uppercase letters changed to lowercase. All other characters are left unchanged. The definition of what an uppercase letter is depends on the current locale.

string.match (s, pattern [, init])

Looks for the first match of pattern in the string s. If it finds one, then match returns the captures from the pattern; otherwise it returns *nil*. If pattern specifies no captures, then the whole match is returned. A third, optional numerical argument init specifies where to start the search; its default value is 1 and can be negative.

string.rep (s, n)

Returns a string that is the concatenation of n copies of the string s.

string.reverse (s)

Returns a string that is the string s reversed.

string.sub (s, i [, j])

Returns the substring of s that starts at i and continues until j; i and j can be negative. If j is absent, then it is assumed to be equal to -1 (which is the same as the string length). In particular, the call *string.sub(s,1,j)* returns a prefix of s with length j, and *string.sub(s, -i)* returns a suffix of s with length i.

string.upper (s)

Receives a string and returns a copy of this string with all lowercase letters changed to uppercase. All other characters are left unchanged. The definition of what a lowercase letter is depends on the current locale.

Patterns

Character Class:

A character class is used to represent a set of characters. The following combinations are allowed in describing a character class:

- **x**: (where x is not one of the magic characters `^$()%.[]*+~?`) represents the character x itself.
- **.**: (a dot) represents all characters.
- **%a**: represents all letters.
- **%c**: represents all control characters.
- **%d**: represents all digits.
- **%l**: represents all lowercase letters.
- **%p**: represents all punctuation characters.
- **%s**: represents all space characters.
- **%u**: represents all uppercase letters.
- **%w**: represents all alphanumeric characters.
- **%x**: represents all hexadecimal digits.
- **%z**: represents the character with representation 0.

- **%x**: (where x is any non-alphanumeric character) represents the character x. This is the standard way to escape the magic characters. Any punctuation character (even the non magic) can be preceded by a '%' when used to represent itself in a pattern.
- **[set]**: represents the class which is the union of all characters in set. A range of characters can be specified by separating the end characters of the range with a '-'. All classes %x described above can also be used as components in set. All other characters in set represent themselves. For example, [%w_] (or [_%w]) represents all alphanumeric characters plus the underscore, [0-7] represents the octal digits, and [0-7%l%-] represents the octal digits plus the lowercase letters plus the '-' character.
- The interaction between ranges and classes is not defined. Therefore, patterns like [%a-z] or [a-%] have no meaning.
- **[^set]**: represents the complement of set, where set is interpreted as above.

For all classes represented by single letters (%a, %c, etc.), the corresponding uppercase letter represents the complement of the class. For instance, %S represents all non-space characters. The definitions of letter, space, and other character groups depend on the current locale. In particular, the class [a-z] may not be equivalent to %l.

Pattern Item:

A pattern item can be:

- a single character class, which matches any single character in the class;
- a single character class followed by '*', which matches 0 or more repetitions of characters in the class. These repetition items will always match the longest possible sequence;
- a single character class followed by '+', which matches 1 or more repetitions of characters in the class. These repetition items will always match the longest possible sequence;
- a single character class followed by '-', which also matches 0 or more repetitions of characters in the class. Unlike '*', these repetition items will always match the shortest possible sequence;
- a single character class followed by '?', which matches 0 or 1 occurrence of a character in the class;
- %n, for n between 1 and 9; such item matches a substring equal to the n-th captured string (see below);
- %bxy, where x and y are two distinct characters; such item matches strings that start with x, end with y, and where the x and y are balanced. This means that, if one reads the string from left to right, counting +1 for an x and -1 for a y, the ending y is the first y where the count reaches 0. For instance, the item %b() matches expressions with balanced parentheses.

Pattern:

A pattern is a sequence of pattern items. A '^' at the beginning of a pattern anchors the match at the beginning of the subject string. A '\$' at the end of a pattern anchors the match at the end of the subject string. At other positions, '^' and '\$' have no special meaning and represent themselves.

Captures:

A pattern can contain sub-patterns enclosed in parentheses; they describe captures. When a match succeeds, the substrings of the subject string that match captures are stored (captured) for future use. Captures are numbered according to their left parentheses. For instance, in the pattern "(a*(.)%w(%s*))", the part of the string matching "a*(.)%w(%s*)" is stored as the first capture (and therefore has number 1); the character matching "." is captured with number 2, and the part matching "%s*" has number 3.

As a special case, the empty capture () captures the current string position (a number). For instance, if we apply the pattern "()aa()" on the string "flaaap", there will be two captures: 3 and 5. A pattern cannot contain embedded zeros. Use %z instead.

6.2.20. *Input and output functions*

io.exists (path)

Checks if given path (file or directory) exists. Return boolean.

io.readfile (file)

Reads whole file at once. Return file contents as a string on success or nil on error.

io.writefile (file, data)

Writes given data to a file. Data can be either a value convertible to string or a table of such values. When data is a table then each table item is terminated by a new line character. Return boolean as write result when file can be open for writing or nil when file cannot be accessed.

Example: Write event status to log file located on plugged USB flash drive:

```
1. value = knxdatatype.decode(event.datahex, dt.bool)
2. data =string.format('%s value is %s', os.date('%c'), tostring(value))
3. -- write to the end of log file preserving all previous data
4. file =io.open('/mnt/usb/log.txt', 'a+')
5. file:write(data .. '\r\n')
6. file:close()
```

Output:

```
Mon Jan 3 05:25:13 2011 value is false
Mon Jan 3 05:25:14 2011 value is true
Mon Jan 3 05:25:32 2011 value is false
Mon Jan 3 05:25:33 2011 value is true
```

Example: Read data from file (config in format key=value)

```
1. for line inio.lines('/mnt/usb/config.txt')do
2. -- split line by '=' sing
3.   items = line:split('=')
4. -- two items, line seems to be valid
5. if #items == 2 then
6.   key = items[1]:trim()
7.   value = items[2]:trim()
```

```
8.     alert('[config] %s = %s', key, value)
9. end
10. end
```

6.2.21. *Script control functions*

script.enable('scriptname')

Enable the script with the name `scriptname`.

script.disable('scriptname')

Disable the script with the name `scriptname`.

status = script.status('scriptname')

Returns true/false if script is found, nil otherwise

6.2.22. *JSON library*

Note: `json` is not loaded by default, use `require('json')` before calling any functions from this library.

json.encode (value)

Converts Lua variable to JSON string. Script execution is stopped in case of an error.

json.pencode (value)

Converts Lua variable to JSON string in protected mode, returns nil on error.

json.decode (value)

Converts JSON string to Lua variable. Script execution is stopped in case of an error.

json.pdecode (value)

Converts JSON string to Lua variable in protected mode, returns nil on error.

6.2.23. *Conversion*

Compatibility layer: `lmcore` is an alias of `cnv`.

cnv.strtohex (str)

Converts given binary string to a hex-encoded string.

cnv.hextostr (hex [, keepnulls])

Converts given hex-encoded string to a binary string. NULL characters are ignored by default, but can be included by setting second parameter to true.

cnv.tonumber (value)

Converts the given value to number using following rules: numbers and valid numeric strings are treated as is, boolean *true* is 1, boolean *false* is 0, everything else is *nil*.

cnv.hextoint(hexvalue, bytes)

Converts the given hex string to an integer of a given length in bytes.

cnv.inttohex(intvalue, bytes)

Converts the given integer to a hex string of given bytes.

cnv.strtohex(str)

Converts the given binary string to a hex-encoded string.

cnv.hextostr(hexstr)

Converts the given hex-encoded string to a binary string.

6.2.24. Bit operators

bit.bnot (value)

Binary not

bit.band (x1 [, x2...])

Binary and between any number of variables

bit.bor (x1 [, x2...])

Binary or between any number of variables

bit.bxor (x1 [, x2...])

Binary xor between any number of variables

bit.lshift (value, shift)

Left binary shift

bit.rshift (value, shift)

Right binary shift

6.2.25. *Input and Output Facilities*

The I/O library provides two different styles for file manipulation. The first one uses implicit file descriptors; that is, there are operations to set a default input file and a default output file, and all input/output operations are over these default files. The second style uses explicit file descriptors.

When using implicit file descriptors, all operations are supplied by table *io*. When using explicit file descriptors, the operation *io.open* returns a file descriptor and then all operations are supplied as methods of the file descriptor.

The table *io* also provides three predefined file descriptors with their usual meanings from C: *io.stdin*, *io.stdout*, and *io.stderr*. The I/O library never closes these files.

Unless otherwise stated, all I/O functions return *nil* on failure (plus an error message as a second result and a system-dependent error code as a third result) and some value different from *nil* on success.

io.close ([file])

Equivalent to *file:close()*. Without a file, closes the default output file.

io.flush ()

Equivalent to *file:flush* over the default output file.

io.input ([file])

When called with a file name, it opens the named file (in text mode), and sets its handle as the default input file. When called with a file handle, it simply sets this file handle as the default input file. When called without parameters, it returns the current default input file. In case of errors this function raises the error, instead of returning an error code.

io.lines ([filename])

Opens the given file name in read mode and returns an iterator function that, each time it is called, returns a new line from the file. Therefore, the construction

```
for line in io.lines(filename) do body end
```

will iterate over all lines of the file. When the iterator function detects the end of file, it returns *nil* (to finish the loop) and automatically closes the file.

The call *io.lines()* (with no file name) is equivalent to *io.input():lines()*; that is, it iterates over the lines of the default input file. In this case it does not close the file when the loop ends.

io.open (filename [, mode])

This function opens a file, in the mode specified in the string mode. It returns a new file handle, or, in case of errors, *nil* plus an error message. The mode string can be any of the following:

- "r": read mode (the default);
- "w": write mode;
- "a": append mode;
- "r+": update mode, all previous data is preserved;
- "w+": update mode, all previous data is erased;

- "a+": append update mode, previous data is preserved, writing is only allowed at the end of file.

The mode string can also have a 'b' at the end, which is needed in some systems to open the file in binary mode. This string is exactly what is used in the standard C function *fopen*.

io.output ([file])

Similar to *io.input*, but operates over the default output file.

6.2.26. Mathematical functions

This library is an interface to the standard C math library. It provides all its functions inside the table *math*.

math.abs (x)

Returns the absolute value of x.

math.acos (x)

Returns the arc cosine of x (in radians).

math.asin (x)

Returns the arc sine of x (in radians).

math.atan (x)

Returns the arc tangent of x (in radians).

math.atan2 (y, x)

Returns the arc tangent of y/x (in radians), but uses the signs of both parameters to find the quadrant of the result. (It also handles correctly the case of x being zero.)

math.ceil (x)

Returns the smallest integer larger than or equal to x.

math.cos (x)

Returns the cosine of x (assumed to be in radians).

math.cosh (x)

Returns the hyperbolic cosine of x.

math.deg (x)

Returns the angle x (given in radians) in degrees.

math.exp (x)

Returns the value e^x .

math.floor (x)

Returns the largest integer smaller than or equal to x.

math.fmod (x, y)

Returns the remainder of the division of x by y that rounds the quotient towards zero.

math.frexp (x)

Returns m and e such that $x = m2^e$, e is an integer and the absolute value of m is in the range [0.5, 1) (or zero when x is zero).

math.huge

The value HUGE_VAL, a value larger than or equal to any other numerical value.

math.ldexp (m, e)

Returns $m2^e$, (e should be an integer).

math.log (x)

Returns the natural logarithm of x.

math.log10 (x)

Returns the base-10 logarithm of x.

math.max (x, ...)

Returns the maximum value among its arguments.

math.min (x, ...)

Returns the minimum value among its arguments.

math.modf (x)

Returns two numbers, the integral part of x and the fractional part of x.

math.pi

The value of pi.

math.pow (x, y)

Returns x^y . (You can also use the expression x^y to compute this value.)

math.rad (x)

Returns the angle x (given in degrees) in radians.

math.random ([m [, n]])

This function is an interface to the simple pseudo-random generator function rand provided by ANSI C. (No guarantees can be given for its statistical properties.)

When called without arguments, returns a uniform pseudo-random real number in the range [0,1). When called with an integer number m, math. random returns a uniform pseudo-random integer in the range [1,m]. When called with two integer numbers m and n, math. random returns a uniform pseudo-random integer in the range [m, n].

math.randomseed (x)

Sets x as the "seed" for the pseudo-random generator: equal seeds produce equal sequences of numbers.

math.sin (x)

Returns the sine of x (assumed to be in radians).

math.sinh (x)

Returns the hyperbolic sine of x.

math.sqrt (x)

Returns the square root of x. (You can also use the expression $x^{0.5}$ to compute this value.)

math.tan (x)

Returns the tangent of x (assumed to be in radians).

math.tanh (x)

Returns the hyperbolic tangent of x.

6.2.27. Table manipulations

This library provides generic functions for table manipulation. It provides all its functions inside the table. Most functions in the table library assume that the table represents an array or a list. For these functions, when we talk about the "length" of a table we mean the result of the length operator.

table.concat (table [, sep [, i [, j]]])

Given an array where all elements are strings or numbers, returns $table[i]..sep..table[i+1] \dots sep..table[j]$. The default value for sep is the empty string, the default for i is 1, and the default for j is the length of the table. If i is greater than j, returns the empty string.

table.insert (table, [pos,] value)

Inserts element value at position pos in table, shifting up other elements to open space, if necessary. The default value for pos is $n+1$, where n is the length of the table, so that a call $table.insert(t,x)$ inserts x at the end of table t.

table.maxn (table)

Returns the largest positive numerical index of the given table, or zero if the table has no positive numerical indices. (To do its job this function does a linear traversal of the whole table.)

table.remove (table [, pos])

Removes from table the element at position pos, shifting down other elements to close the space, if necessary. Returns the value of the removed element. The default value for pos is n,

where *n* is the length of the table, so that a call *table.remove(t)* removes the last element of table *t*.

table.sort (table [, comp])

Sorts table elements in a given order, in-place, from *table[1]* to *table[n]*, where *n* is the length of the table. If *comp* is given, then it must be a function that receives two table elements, and returns true when the first is less than the second (so that not *comp(a[i+1],a[i])* will be true after the sort). If *comp* is not given, then the standard Lua operator < is used instead.

The sort algorithm is not stable; that is, elements considered equal by the given order may have their relative positions changed by the sort.

6.2.28. *Operating system facilities*

os.date ([format [, time]])

Returns a string or a table containing date and time, formatted according to the given string format. If the time argument is present, this is the time to be formatted (see the *os.time* function for a description of this value). Otherwise, date formats the current time.

If format starts with '!', then the date is formatted in Coordinated Universal Time. After this optional character, if format is the string "*t", then date returns a table with the following fields: year (four digits), month (1--12), day (1--31), hour (0--23), min (0--59), sec (0--61), wday (weekday, Sunday is 1), yday (day of the year), and isdst (daylight saving flag, a boolean).

If format is not "*t", then date returns the date as a string, formatted according to the same rules as the C function *strftime*.

When called without arguments, date returns a reasonable date and time representation that depends on the host system and on the current locale (that is, *os.date()* is equivalent to *os.date("%c")*).

os.difftime (t2, t1)

Returns the number of seconds from time *t1* to time *t2*. In POSIX, Windows, and some other systems, this value is exactly *t2-t1*.

os.execute ([command])

This function is equivalent to the C function *system*. It passes *command* to be executed by an operating system shell. It returns a status code, which is system-dependent. If *command* is absent, then it returns nonzero if a shell is available and zero otherwise.

os.exit ([code])

Calls the C function *exit*, with an optional code, to terminate the host program. The default value for code is the success code.

os.getenv (varname)

Returns the value of the process environment variable *varname*, or *nil* if the variable is not defined.

os.remove (filename)

Deletes the file or directory with the given name. Directories must be empty to be removed. If this function fails, it returns *nil*, plus a string describing the error.

os.rename (oldname, newname)

Renames file or directory named *oldname* to *newname*. If this function fails, it returns *nil*, plus a string describing the error.

os.time ([table])

Returns the current time when called without arguments, or a time representing the date and time specified by the given table. This table must have fields *year*, *month*, and *day*, and may have fields *hour*, *min*, *sec*, and *isdst* (for a description of these fields, see the *os.date* function).

The returned value is a number, whose meaning depends on your system. In POSIX, Windows, and some other systems, this number counts the number of seconds since some given start time (the "epoch"). In other systems, the meaning is not specified, and the number returned by *time* can be used only as an argument to *date* and *difftime*.

os.tmpname ()

Returns a string with a file name that can be used for a temporary file. The file must be explicitly opened before its use and explicitly removed when no longer needed. On some systems (POSIX), this function also creates a file with that name, to avoid security risks. (Someone

else might create the file with wrong permissions in the time between getting the name and creating the file.) You still have to open the file to use it and to remove it (even if you do not use it).

When possible, you may prefer to use *io.tmpfile*, which automatically removes the file when the program ends.

6.2.29. Extended function library

toboolean(value)

Converts the given value to boolean using following rules: *nil*, boolean *false*, 0, empty string, '0' string are treated as *false*, everything else as *true*

string.split(str, sep)

Splits the given string into chunks by the given separator. Returns Lua table.

knxlib.decodeia(indaddressa, indaddressb)

Converts binary-encoded individual address to Lua string. This function accepts either one or two arguments (interpreted as two single bytes).

knxlib.decodega(groupaddressa, groupaddressb)

Converts binary-encoded group address to Lua string. This function accepts either one or two arguments (interpreted as two single bytes).

knxlib.encodega(groupaddress, separate)

Converts Lua string to binary-encoded group address. Returns group address a single Lua number when second argument is *nil* or *false* and two separate bytes otherwise.

ipairs (t)

Returns three values: an iterator function, the table *t*, and 0, so that the construction

```
for i,v in ipairs(t) do body end
```

will iterate over the pairs (1,t[1]), (2,t[2]), ..., up to the first integer key absent from the table.

next (table [, index])

Allows a program to traverse all fields of a table. Its first argument is a table and its second argument is an index in this table. *next* returns the next index of the table and its associated value. When called with *nil* as its second argument, *next* returns an initial index and its associated value. When called with the last index, or with *nil* in an empty table, *next* returns *nil*. If the second argument is absent, then it is interpreted as *nil*. In particular, you can use *next(t)* to check whether a table is empty. The order in which the indices are enumerated is not specified, even for numeric indices. (To traverse a table in numeric order, use a numerical *for* or the *ipairs* function.) The behavior of *next* is undefined if, during the traversal, you assign any value to a non-existent field in the table. You may however modify existing fields. In particular, you may clear existing fields.

pairs (t)

Returns three values: the *next* function, the table *t*, and *nil*, so that the construction

```
for k,v in pairs(t) do body end
```

will iterate over all key–value pairs of table *t*.

tonumber (e [, base])

Tries to convert its argument to a number. If the argument is already a number or a string convertible to a number, then *tonumber* returns this number; otherwise, it returns *nil*.

An optional argument specifies the base to interpret the numeral. The base may be any integer between 2 and 36, inclusive. In bases above 10, the letter 'A' (in either upper or lower case) represents 10, 'B' represents 11, and so forth, with 'Z' representing 35. In base 10 (the default), the number can have a decimal part, as well as an optional exponent part. In other bases, only unsigned integers are accepted.

tostring (e)


Receives an argument of any type and converts it to a string in a reasonable format. For complete control of how numbers are converted, use *string.format*.

If the meta table of *e* has a `"__tostring"` field, then *tostring* calls the corresponding value with *e* as argument, and uses the result of the call as its result.

type (v)

Returns the type of its only argument, coded as a string. The possible results of this function are "nil" (a string, not the value *nil*), "number", "string", "boolean", "table", "function", "thread", and "userdata".

6.2.30. User libraries

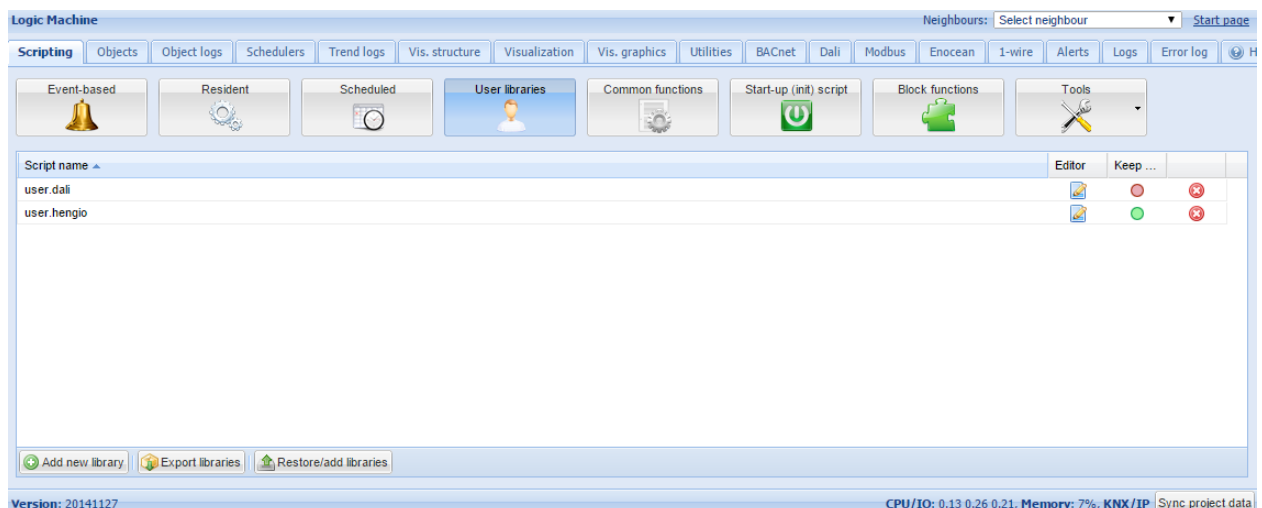


User libraries usually contain user defined functions which are later called from other scripts.

You have to include your library in the script with the following command:

require('user.test') unless you have enabled *Auto load library*.

Secure the code

There is an option *keep source* available for user libraries. Once disabled, the code is compiled in the binary form and can't be seen for further editing. If this option is enabled, the source code is seen in the editor.

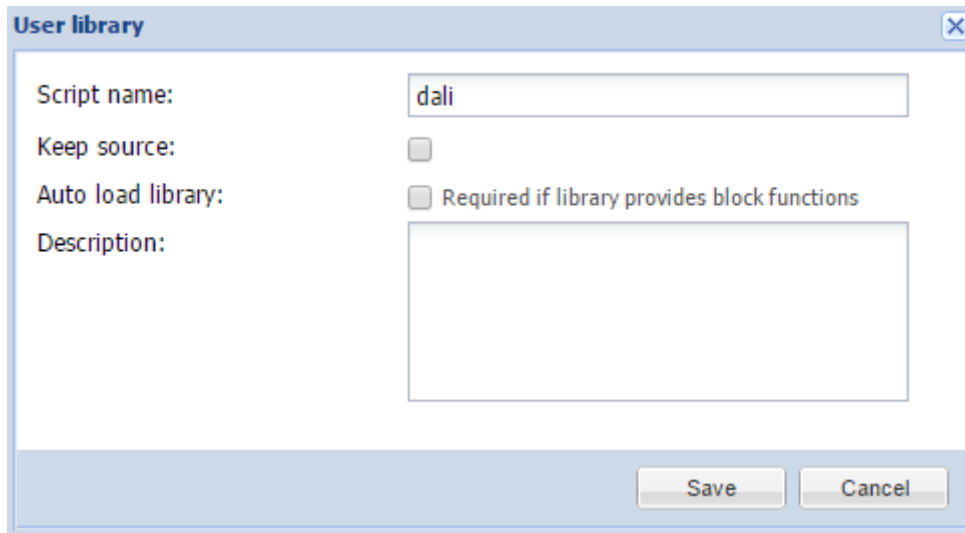

Auto load library means that the library will be automatically loaded so you don't have to use **require** when writing scripts. Also this have to be checked if Block programming is used.

6.2.31. Common functions

Common functions contains library of globally used functions. They can be called from any script, any time, without special including like with *user libraries*. Functions like *sunrise/sunset*, *Email* are included by default in *Common functions*.




6.2.32. Start-up (init) script


Init script is used for initialization on specific system or bus values on system start. Init script is run each time after system is restarted for some reason.



6.2.33. Tools

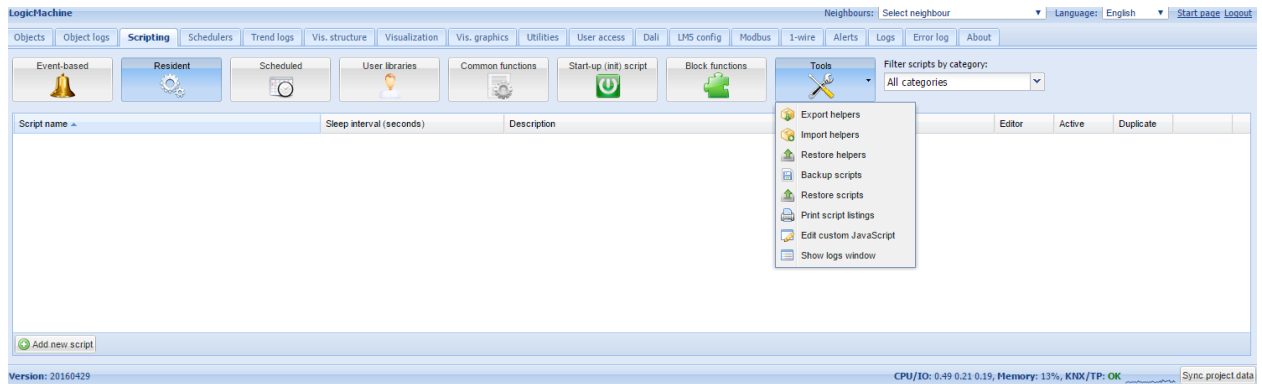

- **Export helpers** – export scripting helpers
- **Import helpers** – import scripting helpers
- **Restore helpers** – restore default scripting helpers
- **Backup user scripts** – backup all scripts in *.gz file
- **Restore from archive** – restore script from archive (*.gz) file with two possibilities:
 - Remove existing scripts and import from backup
 - Append keeping existing (s) scripts

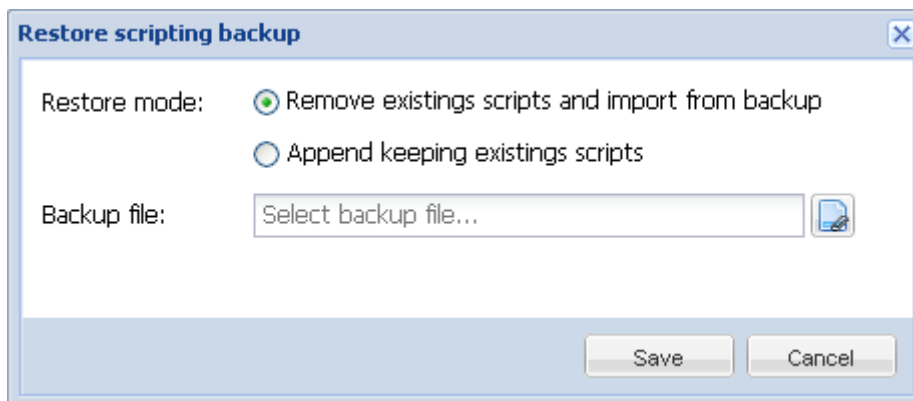

- **Print script listings** – shows all scripts with codes in list format sorted by Categories.

Category: Presence

Presence simulator (id: 1)

Type: Resident

Active: Yes

Script sleep interval: 20


Synchronizes 0/0/2 value with 0/0/1

```
-- if object exists "presence" variable will be a table, nil otherwise
presence = knxobject.get('address', '0/0/1')

-- check that object exists and data has been decoded
if presence and presence.decoded then
  -- result will be either "value = true" or value = "false"
  alert('value = %s', tostring(presence.data))

  -- update 0/0/2 with the same data
  knxobject.write('0/0/2', presence.data, dt.bool)
else
  alert('read error')
end
```

- **Show logs window** – show logs in separate window
- **Edit custom JavaScript**

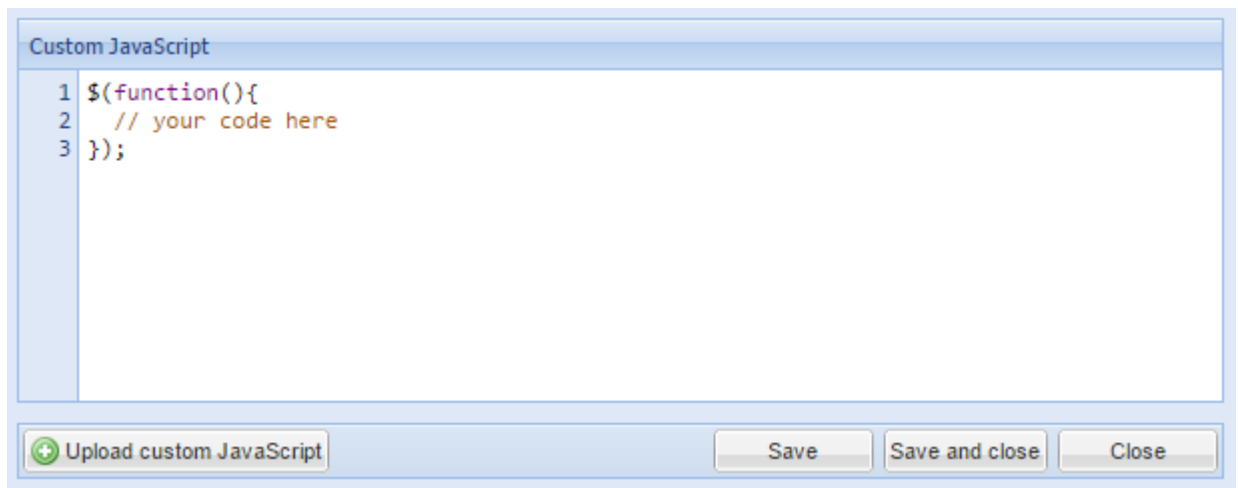

With custom JavaScripts it is possible to create different dynamic tasks, like detect short/long press from visualization using one icon or we can open specific Floor/Plan when some grp address is triggered - useful e.g. when you want IP Camera page automatically to be opened when Intercom button is pressed:

```
$(function(){
  if (typeof objectStore !== 'undefined') {
    var id = Scada.encodeGroupAddress('1/1/2');

    objectStore.addListener(id, function(object, type) {
      if (type == 'value') {
        showPlan(69);
      }
    });
  }
});
```

See more examples here: <http://forum.logicmachine.net/showthread.php?tid=275>

6.3. Objects

List of KNX network objects appears in *Objects* menu. The object appears in the list by way of:

- sniffing the bus for telegrams from unknown group addresses (if enabled in *Utilities*)
- adding manually
- importing ESF file (in *Utilities*)

Object can be created as standard KNX object or virtual object. Virtual objects are marked with  icon, their range starting from 32/1/1 and therefore they cannot be sent to the KNX TP bus. Filtering is disabled for virtual objects. Virtual objects are useful for visualization purposes or communication with 3rd parties i.e. BACnet.


Group address	Object name	IP > TP	TP > IP	Event s...	Data type	Current value	Log	Export	Tags	Updated at	Set value	Vis. pa...	Custom...
0/0/2					01. 1 bit (boolean)	0				17.07.2014 13:49:17			
1/0/0					01. 1 bit (boolean)	0				08.08.2014 01:00:42			
1/0/2					01. 1 bit (boolean)	1				07.08.2014 23:01:48			
1/0/4					01. 1 bit (boolean)	0				07.08.2014 22:55:23			
1/0/6					01. 1 bit (boolean)	1				08.08.2014 12:49:10			
1/0/8					01. 1 bit (boolean)	1				07.08.2014 01:00:24			
1/0/10					01. 1 bit (boolean)	1				08.08.2014 00:59:04			
1/0/12					01. 1 bit (boolean)	1				03.08.2014 12:28:05			
1/0/14					01. 1 bit (boolean)	1				07.08.2014 01:00:29			
1/1/1	Alarm_status				01.001 switch	off				08.08.2014 12:15:52			
1/1/2	Light_status				01.001 switch	off				08.08.2014 12:15:53			
1/1/3	On_holiday				01.001 switch	on				08.08.2014 12:15:28			
1/1/4	Garage_doors_open				01.001 switch	on				08.08.2014 11:59:55			
1/1/5	Garage_doors_close				01.001 switch	off				04.08.2014 15:36:16			
1/1/6	Bathroom_Music_player				01.001 switch	on				07.08.2014 19:07:13			
1/1/7	Bathroom_Volume				05.001 scale	48%				08.08.2014 12:49:13			
1/1/8	Bedroom_Music_player				01.001 switch	off				04.08.2014 14:21:17			
1/1/9	Hall_Music_player				01.001 switch	on				04.08.2014 14:24:08			
1/1/10	Kitchen_Music_player				01.001 switch	on				07.08.2014 22:56:59			
1/1/11	Garage_Music_player				01.001 switch	on				21.07.2014 15:23:34			
1/1/12	Sauna_Music_player				01.001 switch	on				23.07.2014 10:00:12			
1/1/13	Bedroom_Volume				05.001 scale	15%				23.07.2014 10:17:57			

Version: 20140711

CPU/IO: 0.52/0.21/0.20, Memory: 14%, KNX/IP Sync project data

6.3.1. Object parameters

To change the settings for existing or new objects, press on the specific list entry.

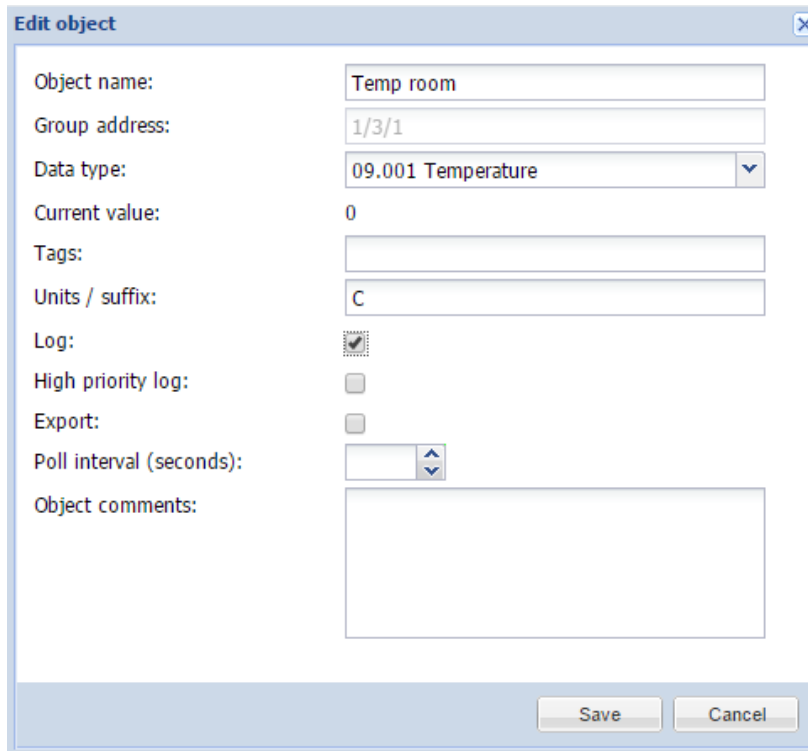


- **Object name** – Name for the object
- **Group address** – Group address of this object
- **Data type** – KNX data type for the object. This has to be set once the LM sniffs the new object for proper work.
- **Units / suffix** – units for the object which will appear on the visualization along with the value
- **Log** – enable logging for this object. Logs will appear in *Objects logs* menu.
- **High priority log** – mark the object for high priority logging; when the log database is cleared, first standard logs are cleared, only then high priority
- **Export** – Make object visible by remote XML requests and in BACnet network (if KNX – BACnet gateway functionality is used)
- **Poll interval (seconds)** – perform automatic object read after some time interval
- **Tags** – assign this object to some tag which can be later used in writing scripts, for example, *All_lights_first_floor*.
- **Current value** – Current value of the object
- **Object comments** – Comment for the object

There is a possibility to sort the objects by one of the following – Name, Group address, Data type, Current value, Tags, Comments

6.3.2. RGB group object


A special *RGB color* data type is added in *Data type* list.

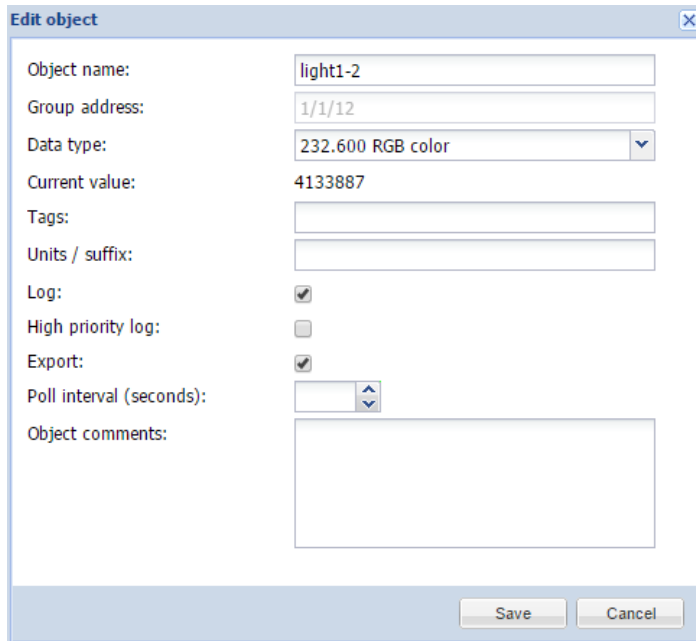

The 'Edit object' dialog box contains the following fields and controls:

- Object name: light1-2
- Group address: 1/1/12
- Data type: 232.600 RGB color (dropdown menu)
- Current value: 4133887
- Tags: (empty text field)
- Units / suffix: (empty text field)
- Log: ☒
- High priority log: ☐
- Export: ☒
- Poll interval (seconds): (empty text field with up/down arrows)
- Object comments: (empty text area)
- Buttons: Save, Cancel

In *Visualization Parameters*  you can do the following settings for the object:

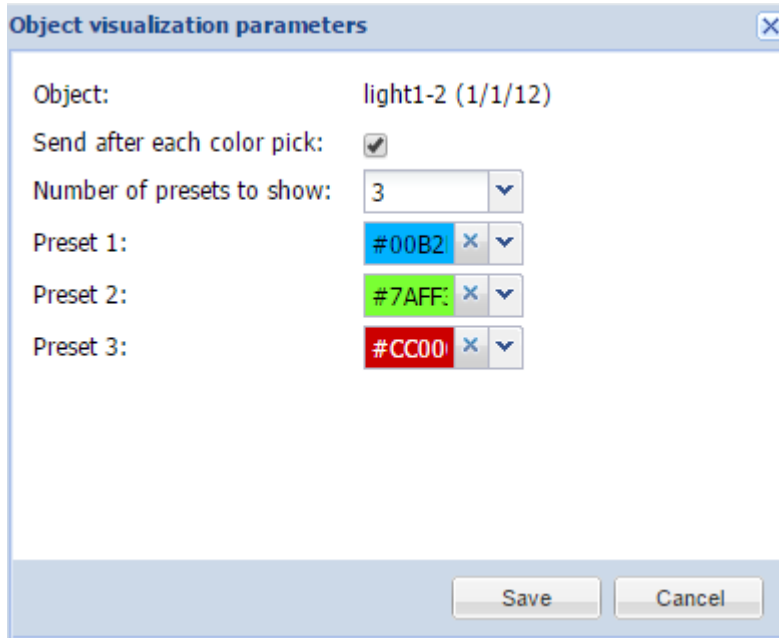

The 'Object visualization parameters' dialog box contains the following fields and controls:

- Object: light1-2 (1/1/12)
- Send after each color pick: ☒
- Number of presets to show: 3 (dropdown menu)
- Preset 1: #00B2 (color picker with 'x' and 'v' buttons)
- Preset 2: #7AFF (color picker with 'x' and 'v' buttons)
- Preset 3: #CC00 (color picker with 'x' and 'v' buttons)
- Buttons: Save, Cancel

Send after each color pick – specifies either to send the telegram automatically into KNX bus once the color is selected in color picker.

Number of presets to show – count of predefined presets in color picker in Visualization

Preset 1..6 – preset color


When you add the object with RGB color data type in the Visualization, the color picker with predefined colors appears.



6.3.3. Object visualization parameters

By pressing on the  button of the corresponding object you can set specific visualization parameters for this type of object.

1 bit

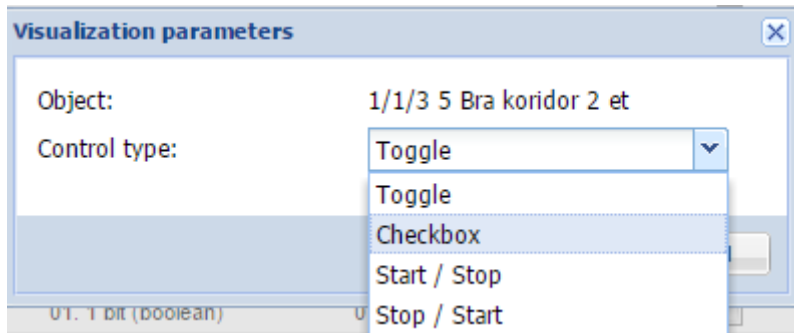

- **Control type** – type of the visual control element which will appear in Touch Visualization

- Toggle




- Checkbox



- Start/Stop – while icon is pressed it send one value, when it is released, it send opposite value

4 bit (3 bit controlled)

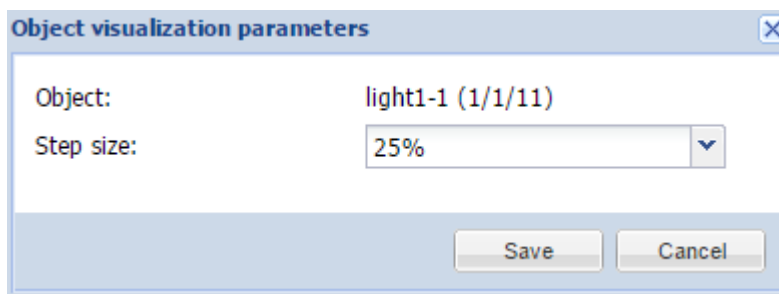

- **Step size** – step size for object change, example for blinds control

1byte and 4byte float

- **Control type** – type of the visual control element

- Slider

Object visualization parameters

Object: light1-1 (1/1/11)

Control type: Slider

Minimum value: 0

Maximum value: 255

Step: 10

Vertical slider: ☒ Visible only Usermode

Invert vertical slider: ☐

Save Cancel




*inimum
value –
minimum
value on the
slider*


*aximum
value –
maximum
value on the
slider*

- *Step* – step for one slider movement
- *Vertical slider* – special option for Usermode visualization
- *Invert vertical slider* – invert vertical slider so the maximum is on top

- Direct input / Step +/-

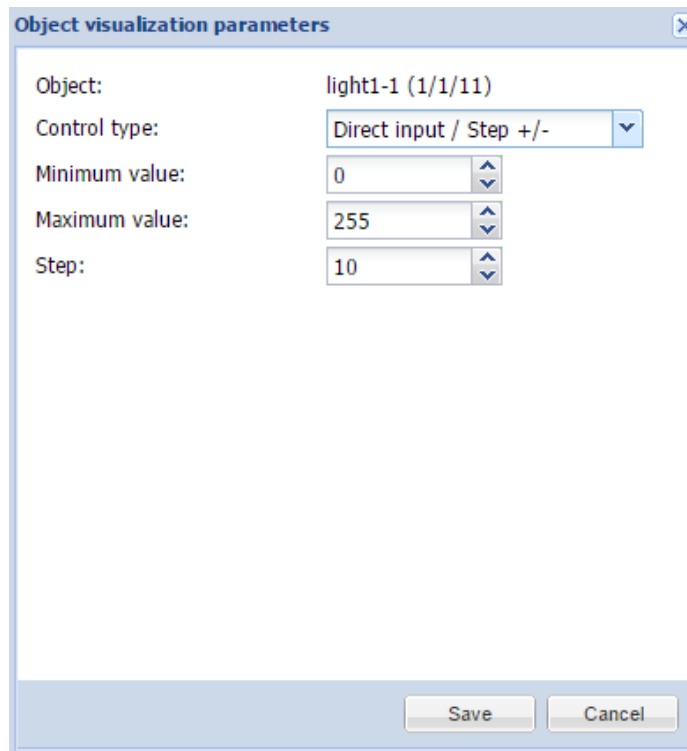

 - *Minimum value* – minimum value on the control bar
- *Maximum value* – maximum value on the control bar
- *Step* – step for one position change



○ Circular slider

- *Minimum value* – minimum value on the control bar
- *Maximum value* – maximum value on the control bar
- *Step* – step for one position change
- *Slider color* – color of slider
- *Background color* – background color of the slider
- *Round line cap* – make round ends of slider
- *Hide title* – hide title
- *Hide min/max/step buttons* – hide min, max and step buttons
- *Line thickness* – specify the thickness of slider line
- *Size* – Size in px of the control

Object visualization parameters

Object: light1-1 (1/1/11)

Control type: Circular slider

Minimum value: 0

Maximum value: 255

Step: 10

Slider color: #00991E

Background color: #3351FF

Round line cap: ☒

Hide title: ☐

Hide min/max/step buttons: ☐

Line thickness: 15 %

Size: 200 In Show control mode

Save Cancel

- Custom value select – select from list of custom values. Custom values should be defined  in
 - *Show icons in Usermode* – show icons instead of values for the object in visualization. You will be able to choose from defined icons/custom values. Icons should be defined in visualization constructor as *Additional*

Object visualization parameters

Object: light1-1 (1/1/11)

Control type: Custom value select


Show icons in Usermode: ☐

Save Cancel

Icons

6.3.4. Change the object state


In the object list, by pressing on the  button, you can change the state of the object. The appearance of the *New value* depends on what visualization parameters are set for specific object.

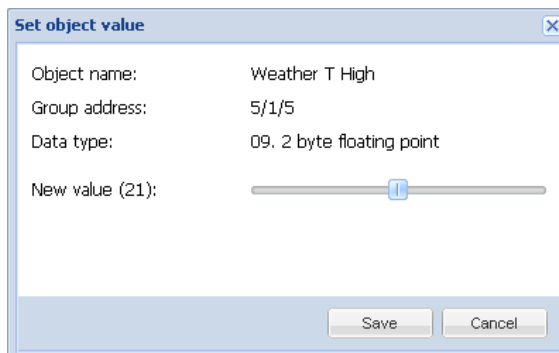

Set object value

Object name: Weather T High
Group address: 5/1/5
Data type: 09. 2 byte floating point
New value (21):

Save Cancel

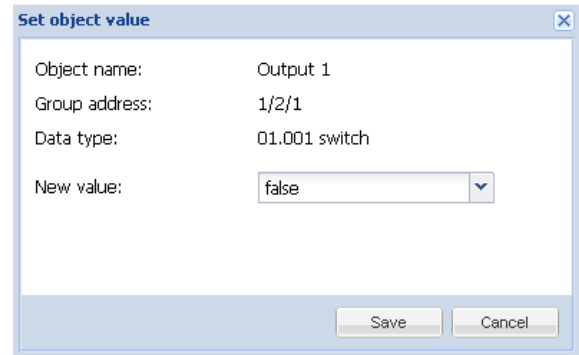


Set object value

Object name: Output 1
Group address: 1/2/1
Data type: 01.001 switch
New value:

Save Cancel

6.3.5. Custom values

If special value naming is necessary, use this icon  to set it up (only for Boolean and Integer data types)

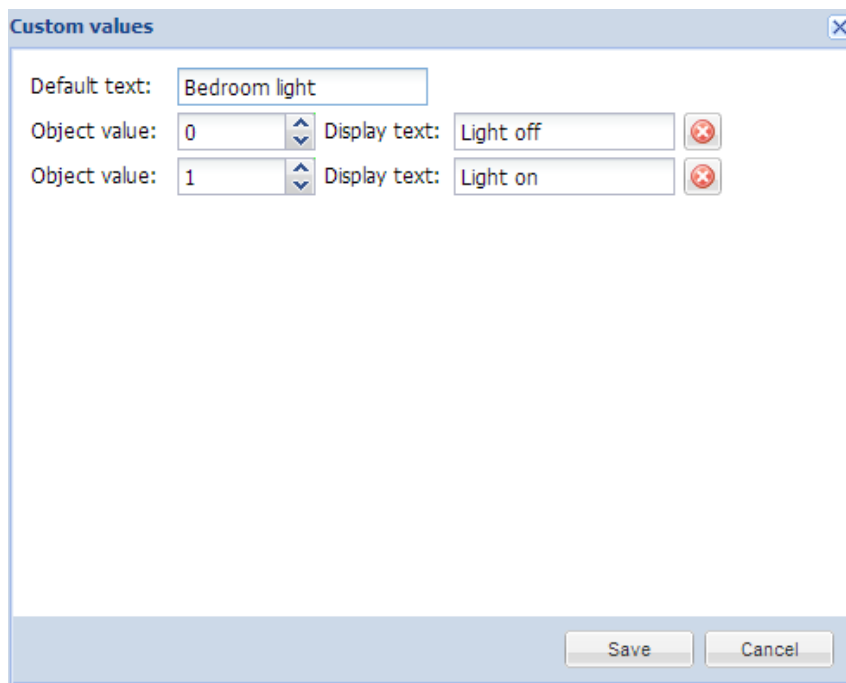

Custom values

Default text:

Object value: Display text:

Object value: Display text:

Save Cancel

6.3.6. Object control bar

- **Add new object** – Manually add new object to the list
- **Auto update enabled** – Specifies either the object list is updated automatically or not
- **Clear** – Clear the list of group addresses
- **Next/Previous page** – move to next or previous page
- **Refresh** – refresh the object list
- **Mass edit** – mass edit objects by a specific criteria – object properties, visualization parameters or custom values.

Visualization parameters

Group address list: 9 object(s) selected

Control type: Toggle

Save Cancel

Custom values

Group address list: 9 object(s) selected

Default text:

Object value: 1 Display text: On

Add custom value

Save Cancel

Mass edit

Group address list: 24 object(s) selected

Field list: 1 field(s) selected

Data type: 01.002 boolean

Save Cancel

- **Mass delete** – delete mass object either by current Mass Edit filters or all unnamed objects

There is also the following bar on the bottom of the configuration screen:

- **CPU/IO** –Load average. The load average represents the average system load over a period of time. It conventionally appears in the form of three numbers which represent the system load during the last one-, five-, and fifteen-minute periods. The lower number the better.

Note! Inspect your running tasks if the load exceeds the level 0.70!

More on UNIX style load calculation can be found here:

[http://en.wikipedia.org/wiki/Load_\(computing\)#Unix-style_load_calculation](http://en.wikipedia.org/wiki/Load_(computing)#Unix-style_load_calculation)

- **Memory** – memory usage in %
- **KNX/IP / KNX/TP** – type of connection to KNX bus. If KNX/TP is set and it is not available, there will be error notification
- **Sync project data** – save all project data to internal flash by pressing this button. Otherwise the data is saved once in 30 minutes from RAM to Flash, or when Reboot or Shutdown commands are sent
- **KNX statistics graphs** – shows average KNX bus load

6.3.7. Filter objects

On the left side of the object list there is filtering possible. To perform the filtering type the name, group address, tag or specify the data type of the object and press on *Filter* button.

The screenshot shows the Logic Machine software interface. On the left, the 'Object filter' panel is active, showing fields for 'Name or group address' (containing 'bedroom'), 'Data type' (set to 'Not specified'), and 'Tags'. Below these are 'Match mode' options: 'All tags' (selected) and 'Any tag'. 'Apply filter' and 'Cancel' buttons are at the bottom of the panel. The main area displays a table of objects with columns: Group, Object name, IP, TP, Eve, Data type, Current value, Log, Export, Tags, Updated at, Set, Vis, and Cus. The table lists 13 objects related to a 'Bedroom' group, including 'Bedroom_Music...', 'Bedroom_Volume', 'Bedroom_Tem...', 'Bedroom_Humidity', and various 'Bedroom_W_rig...' and 'Bedroom_C_Light' objects. At the bottom of the interface, a status bar shows 'Version: 20140711', 'CPU/IO: 0.39 0.54 0.36', 'Memory: 13%', 'KNX/IP', and a 'Sync project data' button.

Group	Object name	IP	TP	Eve	Data type	Current value	Log	Export	Tags	Updated at	Set	Vis	Cus
1/1/8	Bedroom_Music...				01.001 swi...	off				04.08.2014...			
1/1/13	Bedroom_Volume				05.001 scale	0%				23.07.2014...			
1/1/21	Bedroom_Tem...				09.001 Te...	30 °C				10.07.2014...			
1/1/22	Bedroom_Temp...				09.001 Te...	35 °C				25.07.2014...			
1/1/23	Bedroom_Humidity				05.001 scale	48 %				10.07.2014...			
1/1/38	Bedroom_W_rig...				01.001 swi...	on				22.07.2014...			
1/1/39	Bedroom_W_rig...				01.001 swi...	on				23.07.2014...			
1/1/40	Bedroom_W_left...				01.001 swi...	off				22.07.2014...			
1/1/41	Bedroom_W_left...				01.001 swi...	on				23.07.2014...			
1/1/50	Bedroom_C_Light				01.001 swi...	on				23.07.2014...			
1/1/51	Bedroom_C_Lig...				05.001 scale	60%				24.07.2014...			
1/1/52	Bedroom_R_light				01.001 swi...	on				23.07.2014...			
1/1/53	Bedroom_FI_light				01.001 swi...	on				23.07.2014...			

Match mode:

All tags – represents AND function when all tags should match

Any tag – represents OR function when any one of listed should match

6.4. Object logs

Object historical telegrams are available in *Object logs*. Once logging is enabled for object, all it's further history will be logged.

Log time	Object address	Type	Source address	Object name	Decoded value	Data type	Object data (number)
14.08.2014 10:34:44	1/1/1	write	1.1.11	Alarm_status	on	01.001 switch	01
14.08.2014 10:34:43	1/1/1	write	1.1.11	Alarm_status	off	01.001 switch	00
14.08.2014 10:34:43	1/1/1	write	1.1.11	Alarm_status	on	01.001 switch	01
14.08.2014 10:34:42	1/1/1	write	1.1.11	Alarm_status	off	01.001 switch	00
14.08.2014 10:34:42	1/1/1	write	1.1.11	Alarm_status	on	01.001 switch	01
14.08.2014 10:34:41	1/1/1	write	1.1.11	Alarm_status	off	01.001 switch	00

Filtering is available when there is a need to find specific period information

- **Start date** – start date and time for log filtering
- **End date** – start date and time for log filtering
- **Name or group address** – specific name or group address of object
- **Tags** – tag names
- **Value** – specific object value
- **Source address** – specific source address

You can clear all logs by pressing on *Clear* button.

Size of log is defined in *Utilities* → *General Configuration*

General configuration

Interface language: English

List items per page: 25

Automatic address range start: 1/1/1

Discover new objects: Yes, bus sniffer enabled

Object log size: 1000

Default log policy: Log only selected objects

Alert log size: 200

Log size: 200

Error log size: 200

Enable Blockly editor: ☒

Code editor tab size: 2

• If log size is changed to a smaller value, excess logs will be deleted on next auto clean-up (every 10 minutes)

• Log policy only affects new objects, current per-object log settings are kept unchanged

Warning: excessive object logging degrades performance


Save Cancel

6.4.1. Export logs

Example

Once an hour, make CSV file with all objects logs and send to external FTP server with IP 192.168.1.11, login 'ftplogin', password 'ftppassword'.

➤ In *Scripting* -> *Scheduled* add the script which will run once an hour

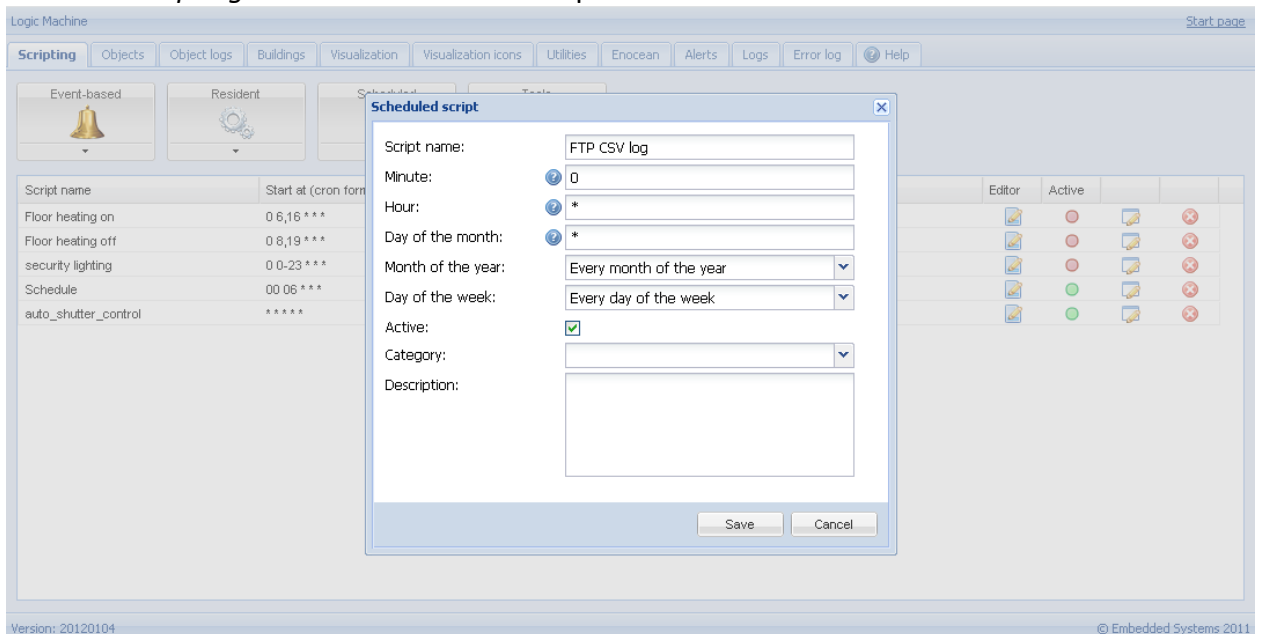

➤ Add the following code in Script editor for this particular script.

```
1. require('socket.ftp')
2.
3. -- ftp file
4. ftpfile=string.format('ftp://ftplogin:ftppassword@192.168.1.11/%s.csv', os.date('%Y-%m-%d_%H-%M'))
5. -- get past hour data (3600 seconds)
6. logtime=os.time() - 60*60
7.
8. -- List of objects by id
9. objects ={}
10.
11. -- objects with Logging enabled
12. query = 'SELECT address, datatype, name FROM objects WHERE disablelog=0'
13. for _, object in ipairs(db:getall(query)) do
14.   objects[tounumber(object.address)]={}
15.   datatype=tounumber(object.datatype),
16.   name =tostring(object.name or ''),
```

```

17. }
18. end
19.
20. -- csv buffer
21. buffer ={"date","address","name","value"}
22.
23. -- get object logs
24. query='SELECT src, address, datahex, logtime, eventtype FROM objectlog WHERE logtime>=
      ? ORDER BY id DESC'
25. for _, row in ipairs(db:getall(query, logtime))do
26.   object = objects[tonumber(row.address)]
27.
28. -- found matching object and event type is group write
29. if object and row.eventtype=='write' then
30.   datatype=object.datatype
31.
32. -- check that object datatype is set
33. if datatype then
34.   -- decode data
35.     data =knxdatatype.decode(row.datahex, datatype)
36.
37. -- remove null chars from char/string datatype
38. if datatype==dt.char or datatype==dt.string then
39.   data =data:gsub('%z+', '')
40. -- date to DD.MM.YYYY
41. elseifdatatype==dt.date then
42.   data =string.format('%d.%d.%d', data.day, data.month, data.year)
43. -- time to HH:MM:SS
44. elseif datatype==dt.time then
45.   data =string.format('%d:%d:%d', data.hour, data.minute, data.second)
46. end
47. else
48.   data =''
49. end
50.
51. -- format csv row
52. logdate=os.date('%Y.%m.%d %H:%M:%S', row.logtime)
53. csv=string.format('%q,%q,%q,%q', logdate, knxlib.decodega(row.address), object.name,
      tostring(data))
54.
55. -- add to buffer
56. table.insert(buffer, csv)
57. end
58. end
59.

```


```

60. -- upload to ftp only when there's data in buffer
61. if #buffer > 1 then
62.   result, err =socket.ftp.put(ftpfile, table.concat(buffer, '\r\n'))
63. end
64.
65. -- error while uploading
66. if err then
67.   alert('FTP upload failed: %s', err)
68. end

```


6.5. Schedulers

Schedulers contain administration of user mode schedulers. Schedulers allow for end user to control KNX group address values based on the date or day of the week.

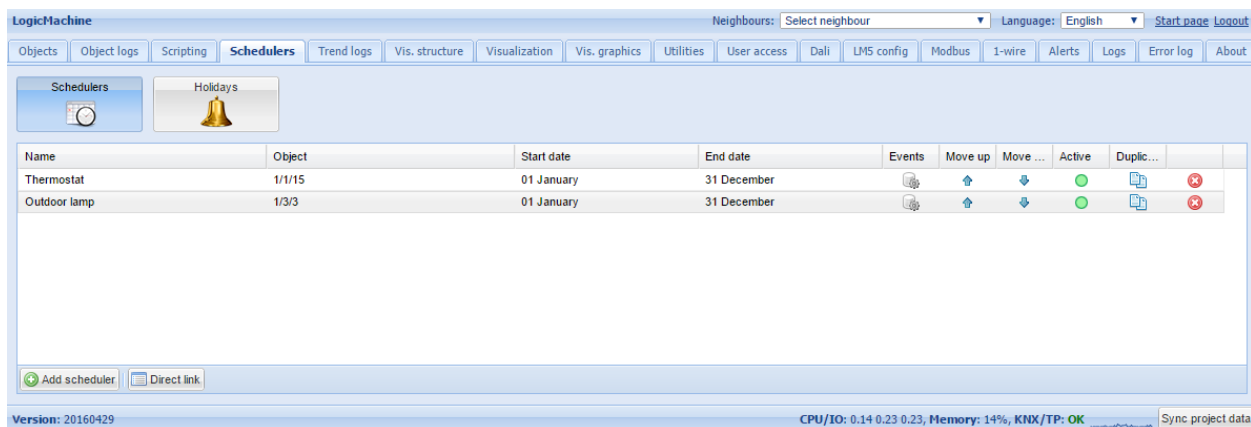

6.5.1. Add new scheduler

By clicking on the *Schedulers* → *Add new scheduler* you will see such parameter window:

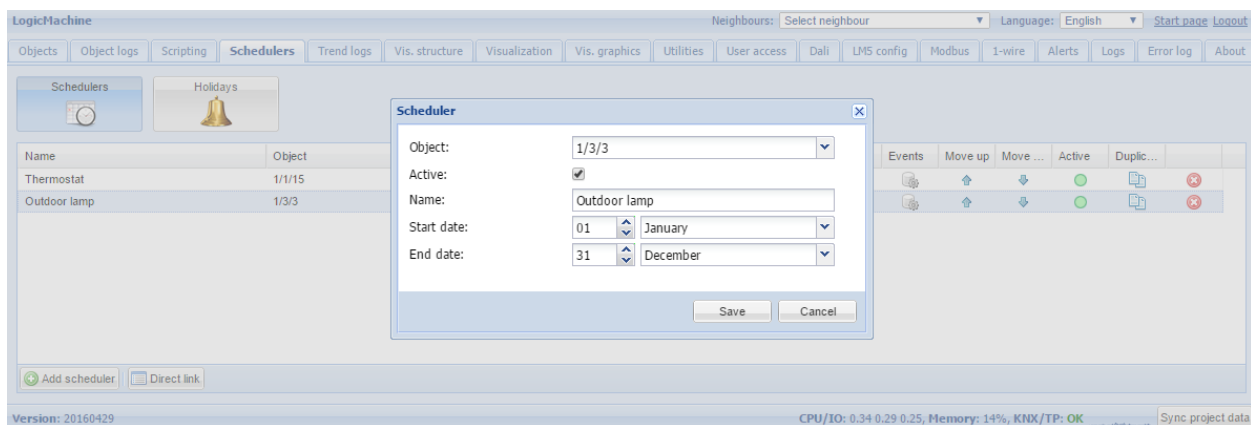

➤ **Object** – the object group address which will be controlled by scheduler

- **Active** – define this scheduler as active or not
- **Name** – name of the scheduler
- **Start date** – start date of the scheduler
- **End date** – end date of the scheduler

6.5.2. Scheduler events

Event can be added both in administrator interface as well as by end user in the special *User mode schedulers* interface.

Events for scheduler Thermostat				
Start time	Days of the week	Value	Active	
12:00	We, Th	24		
22:00	Mo, Tu, We, Th	20		

Add new event

Event

Active: ☒

Name:

Run at:

Specific time

Start time:

12

 hr

00

 min

Day of the week:

All

Weekday in month:

All

Days of the month:

All

Months:

All

Year:

Holidays:

Do not run on holidays

Value:

1

Leave year blank for recurring events

Save

Cancel

- **Active** – Defines the Event to be active or not.
- **Name** – name of the Event
- **Run at** – Even could be triggered by specific time, sunrise or sunset.
- **Start time offset** – offset can be set for sunrise/sunset i.e. when location is in the valley and surrounding hills casting shadows.
- **Start time** – time of Event activation.
- **Day of the week** – days in which Event will be active.

- **Weekday in month** – weekday in which Event will be active i.e. every 1st Monday in the month which may fall to the second week in some months.
- **Months** – Months in which Event will be active
- **Year**– Year in which Event will be active, (leave year blank for recurring events).
- **Holidays** – Holidays which are defined in the Holidays - “No effect”, “Do not run on holidays” and “Run only on holidays” options available.
- **Value** – Value to send to the group address when the Event will be triggered.

The screenshot shows a 'Holiday' dialog box with the following fields and values:

- Name: New Year
- Holiday type: Specific date
- Day: 01
- Month: January
- Year: (blank)
- Duration (days): 1

Below the fields is a note: "Leave year blank for recurring holidays". At the bottom right are 'Save' and 'Cancel' buttons.

6.5.3. Scheduler holidays

Once the event will be marked to run in *Hol*, Holiday entries will be activated.

- **Name** – name of Holidays
- **Holiday type** – type of Holidays, specific date or Day in the week can be selected
- **Day**– day in which Holidays will be active.
- **Months** – Months in which Holidays will be active
- **Year**– Year in which Event will be active, (leave year blank for recurring events).
- **Duration(days)** – duration of Holidays

6.5.4. Direct link

To get direct link to a specific scheduler click on *Direct link* button on bottom left part.

Direct link

Scheduler:

Outdoor lamp

Link:

/scada-vis/schedulers?id=2

Include IP / host:

☐

Show holidays:

☒

6.6. Trend logs

Trends logs are administration of user mode trends, used to see historical object graphical values, compare with other period values.

LogicMachine

Neighbours: Select neighbour

Language: English

Start page Logout

Objects

Object logs

Scripting

Schedulers

Trend logs

Vis. structure

Visualization

Vis. graphics

Utilities

User access

Dali

LMS config

Modbus

1-wire

Alerts

Logs

Error log

About

Name	Object	Log type	Decimal places	Trend resolution	Resolution data	Daily data	Log size	Created	Move up	Move d...	
Thermostat bedroom	1/1/15 (Thermostat)	Absolute value	2	1 hour	180 days	2 years	40 KB	2016.06.28 13...	⬆	⬇	✖
Humidity	1/1/22 (Humidity sensor)	Absolute value	2	5 minutes	30 days	2 years	74 KB	2016.06.28 13...	⬆	⬇	✖

Add new trend log

Direct link

Version: 20160429

CPU/IO: 0.18 0.26 0.24, Memory: 15%, KND/TP: OK

Sync project data

6.6.1. Add new trend log

Trend log

Object:

1/1/15 Thermostat

Name:

Thermostat

Log type:

Counter

Trend resolution:

1 hour

Decimal places:

2

Resolution data:

180 days

Daily data:

2 years

Always show zero:

☐ On graph Y axis

Save

Cancel


- **Object** – choose from list of object the one to make trends for
- **Name** – name of the trend
- **Log type** [**Counter**, **Counter with negative delta**, **Absolute value**] – type of the log. *Counter* type is used to count the date, *Absolute value* – saves the actual readings
- **Trend resolutions** [**5 min .. 1 hour**] – average value of 1 minute for specific time interval data will be shown on the trend. E.g. if 1 hour – trend step will be 1 hour with average 60 readings data
- **Decimal places** – decimal places for the presentation
- **Resolution data** – Number of data points to store at the selected resolution
- **Daily data** – average value of daily data for specific time interval

Note! One trend data point reading takes *8bytes* of flash memory. E.g. reading some value once in every 10 minutes, will consume ~0.4MB of flash each year.

Note! Trend's number have flexible limit based on total size of all trends. Each trend reserves part of system memory according to its settings. System will not allow you to create further trends when full. Do not store data for unnecessary long time or use high rate of trend sampling if not necessary. Export your trend data regularly.

6.6.2. Direct link

To get direct link to a specific trend log click on *Direct link* button on bottom left part.

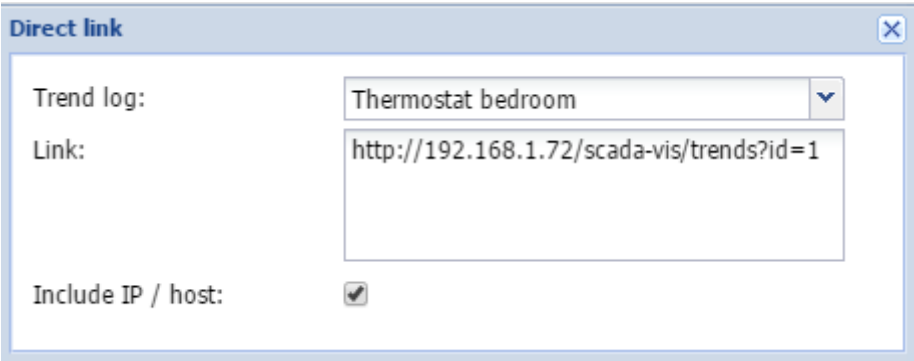

6.6.3. Trend logs functions

To process logged information in trends, you can use built in trend log functions from scripting.

Include library before calling trend log functions:

require('trends')

Include library before calling trend log functions

trends.fetch(name, dates, resolution)

trends.fetchone(name, dates, resolution)

Fetch one or many values for the given period

Parameters:

- **name** trend log name, required
- **dates** Lua table with two items - 'start' and 'end', each item must contain 'year', 'month', 'day' keys, required
- **resolution** optional, will use trend resolution if not specified, set to 86400 for retrieve daily data

Return values:

- **fetch** returns Lua table with values for the given period or nil on error. Number of values depends on period, resolution and data retention settings
- **fetchone** returns single value for the given period or nil on error

Example:

```
require('trends')

-- will fetch data between 2016.04.15 00:00 and 2016.04.16 00:00
dates = {
  ['start'] = { year = 2016, month = 4, day = 15 },
  ['end'] = { year = 2016, month = 4, day = 16 },
}

-- fetch current value
day = trends.fetchone('Gas', dates)

-- get data for the past year
dates = {}
dates['start'] = os.date('*t')
dates['start'].year = dates['start'].year - 1
dates['end'] = os.date('*t')

-- fetch previous value
yearly = trends.fetch('Gas', dates, 86400)
```

➤ **trends.NaN** value is used for points which contain invalid values or cannot be found. The default value is 0, but it can also be set to 0 / 0 (NaN - not a number).

Example:

```
require('trends')

-- use "not a number" for invalid values
trends.NaN = 0 / 0

-- get data for the past year
dates = {}
dates['start'] = os.date('*t')
dates['start'].year = dates['start'].year - 1
dates['end'] = os.date('*t')
```

```

value = trends.fetchone('Hot Water', dates)


-- NaN ~= NaN, means value was not found
if value ~= value then
    return
end

```

6.7. Scenes

Scenes section allows creating scenes visually (without using event-based scripting).


Add scene

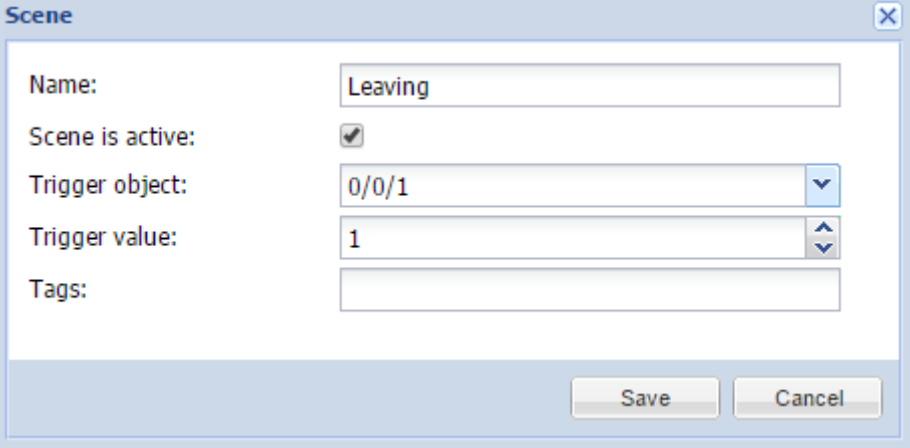

- **Name** – scene name
- **Scene is active** – define either this scene is active or not
- **Trigger object** – group address for scene trigger object
- **Trigger value** – scene object trigger value

Scene sequence


List of object and the sequence is defined here.

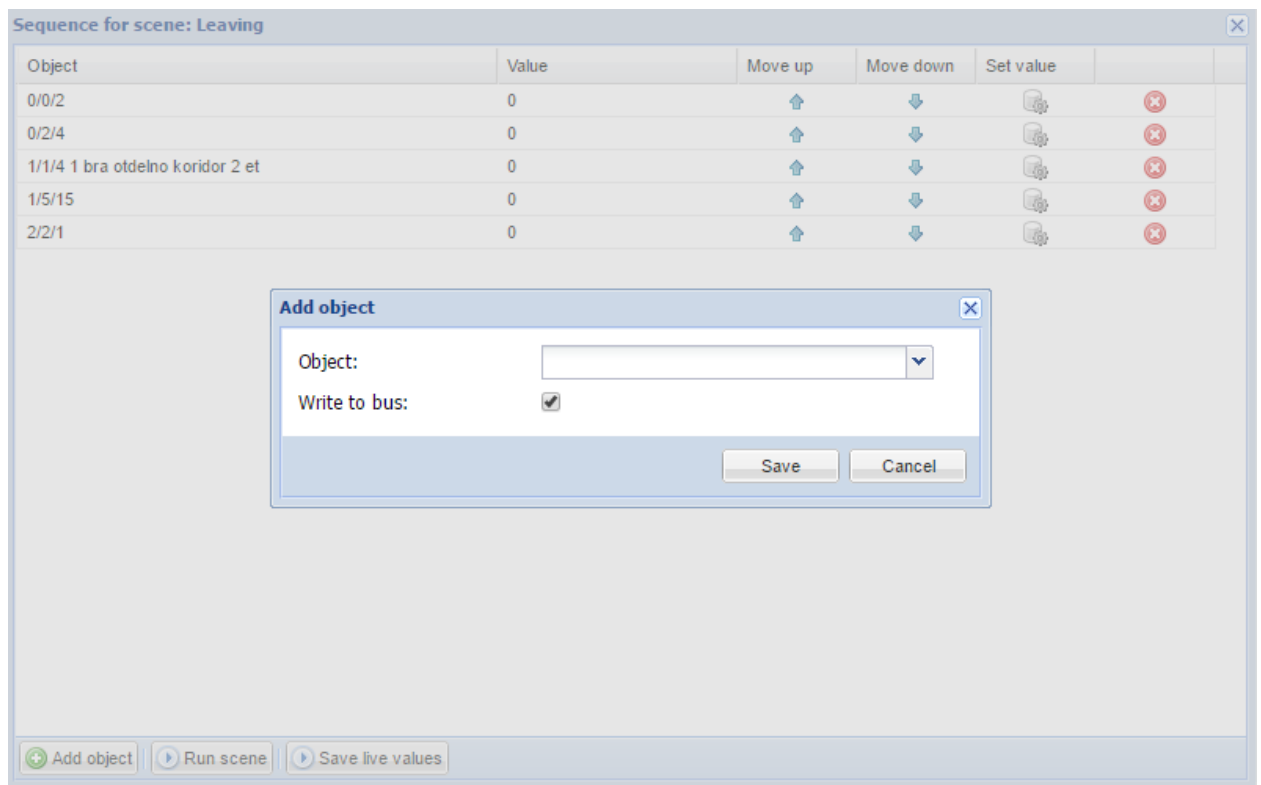

- **Object** – group address
- **Write to bus** – define either to send KNX bus telegram

6.8. Visualization structure

In *Vis.structure* menu the structure of the visualization is defined and visualization backgrounds are uploaded.

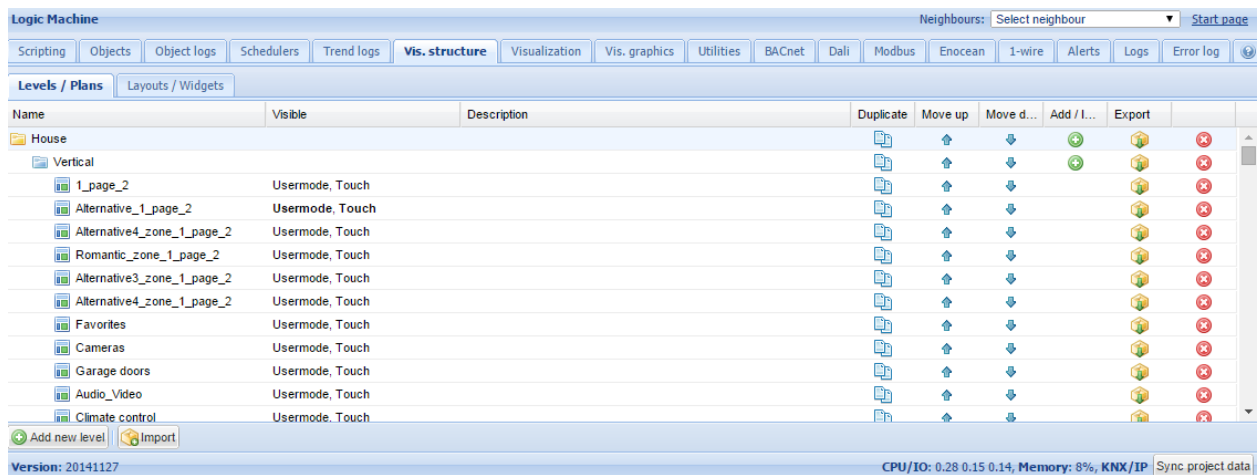


6.8.1. Levels / Plans


By default there is *Main* level added. To add a new level/building, press “Add new level” button. Please note that you can limit access to this specific level by adding PIN code.

You can also add a new level by importing it from the file (which is exported on other LM for example). Press *Import* button for this purpose. Object linkage can be either cleared or imported as-is.

Once a new level is added, you can add second level or upload floor pictures related to this particular building. To add a new entry, click on the green icon , to delete a specific entry press on the red icon .

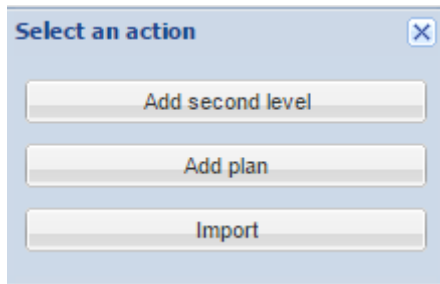

When adding new plan, the following parameters should be defined:

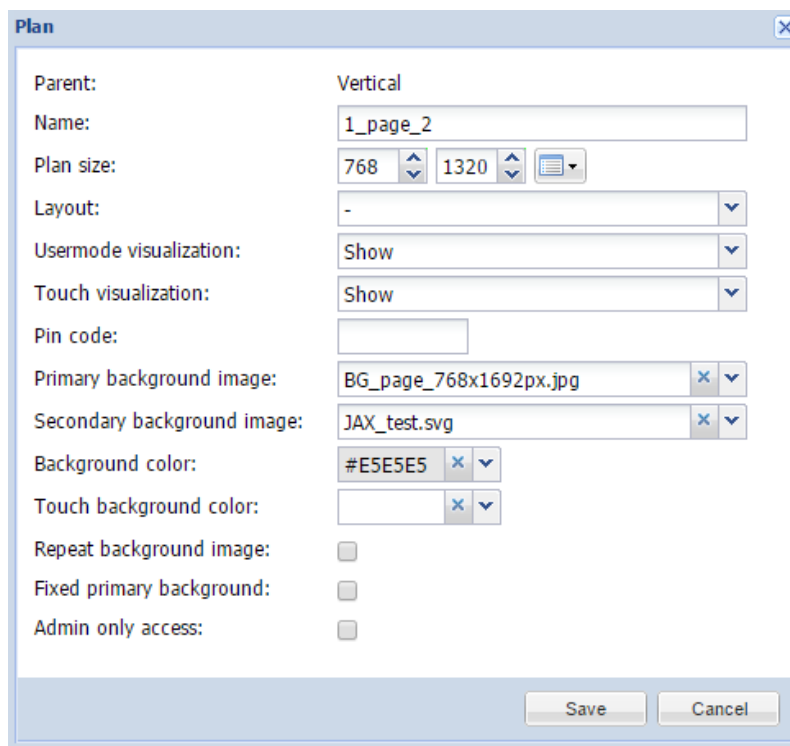

Plan

Parent: Vertical

Name: 1_page_2

Plan size: 768 1320

Layout: -

Usermode visualization: Show

Touch visualization: Show

Pin code:

Primary background image: BG_page_768x1692px.jpg

Secondary background image: JAX_test.svg

Background color: #E5E5E5

Touch background color:

Repeat background image: ☐

Fixed primary background: ☐

Admin only access: ☐


Save Cancel

- **Parent** – name of parent level
- **Name** – name for the plan
- **Plan size** – plan size in pixels. There are predefined resolutions available when clicking on the icon on the right side of this parameter:

iPad landscape, fullscreen (XGA) 1024 x 748
iPad landscape, browser (XGA) 1024 x 672
iPad portrait, fullscreen (XGA) 768 x 1004
iPad portrait, browser (XGA) 768 x 928
Tablet landscape (WSVGA) 1024 x 600
Tablet portrait (WSVGA) 600 x 1024
Laptop / Tablet landscape (WXGA) 1280 x 800
Laptop / Tablet portrait (WXGA) 800 x 1280
Laptop / Tablet landscape (HD) 1360 x 768
Laptop / Tablet portrait (HD) 768 x 1360
Big screen (Full HD) 1920 x 1080

- **Layout** – layout for this specific plan. All object from Layout will be duplicated on this particular plan including background color and plan image if they are not defined separately for this specific plan
- **Usermode visualization [Show, Show and make default, Hide]** – visibility for this particular plan in Usermode visualization
- **Touch visualization [Show, Show and make default, Hide]** – visibility for this particular plan in Touch visualization
- **PIN code** – specify PIN code to access the plan
- **Primary background image** – choose primary background image from the list added in *Vis.graphics* → *Images/Backgrounds*
- **Secondary background image** – choose secondary background image from the list added in *Vis.graphics* → *Images/Backgrounds*
- **Background color** – choose background color of the plan
- **Touch background color** – define a color for touch visualization
- **Repeat background image** – either to show the image once or repeat it and fill the whole plan
- **Fixed primary background** – specify if first background image should be fixed. By enabling this, you can enable Parallax effect for your visualization
- **Admin only access** – enable admin only access for this floor


When clicking on Background image, the following window appears with background images which has to be added in *Vis.graphics* → *Images/Backgrounds* in advance:

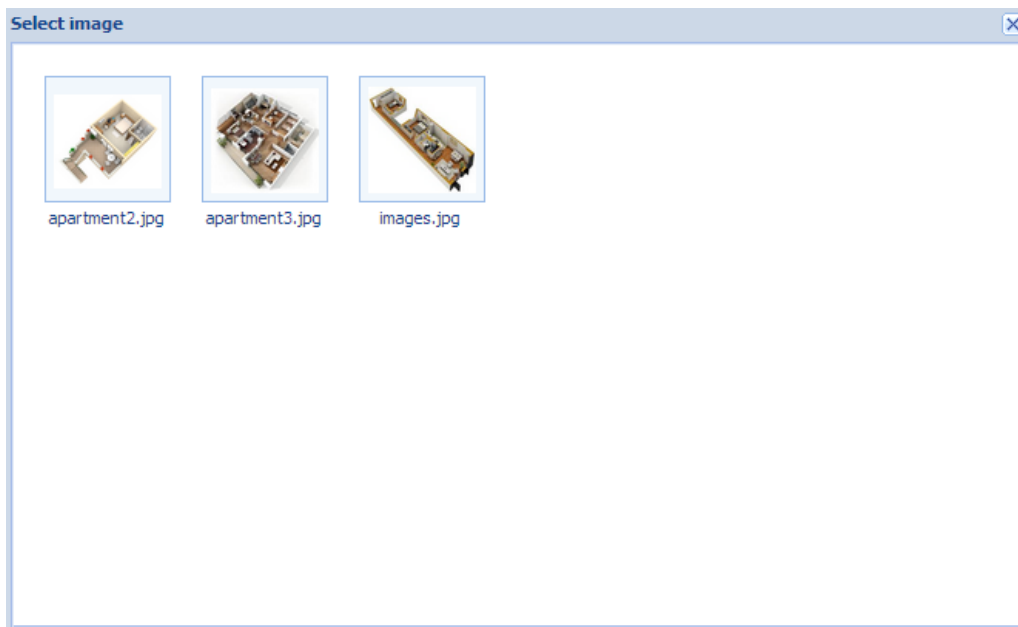

You can duplicate the plan with all its objects and settings by pressing on  icon. Levels can be sorted by pressing  and  icons. You can export the plan structure by clicking in this icon .

6.8.2. Layouts / Widgets

Layouts are used as templates for further use when adding *Levels* in *Levels/Plans* tab. Layouts will not be visible from the Usermode/Touch visualizations. When you add any background, objects to layouts level in *Visualization*, they will automatically appear on all linked Levels.

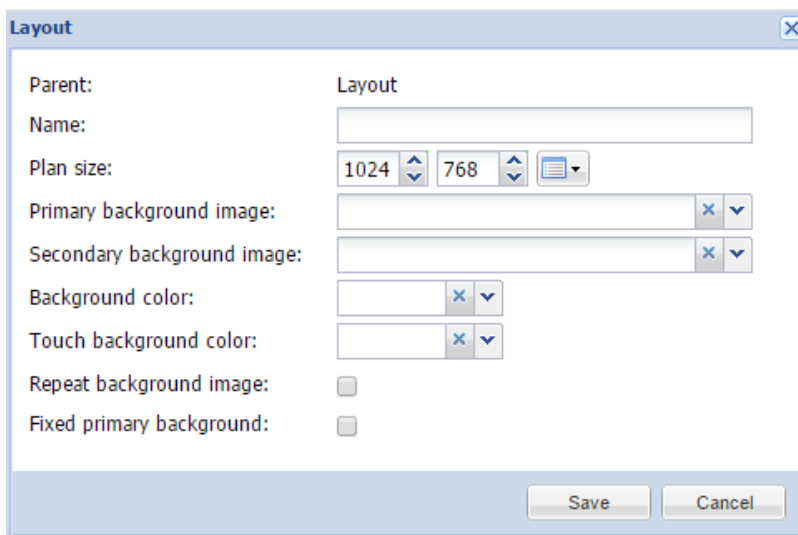

- **Parent** – name of parent layout
- **Name** – name for the layout
- **Plan size** – plan size in pixels. There are predefined resolutions available when clicking on the icon on the right side of this parameter
- **Primary background image** – choose primary background image from the list added in *Vis.graphics* → *Images/Backgrounds*
- **Secondary background image** – choose secondary background image from the list added in *Vis.graphics* → *Images/Backgrounds*
- **Background color** – choose background color of the plan
- **Touch background color** – define a color for touch visualization
- **Repeat background image** – either to show the image once or repeat it and fill the whole plan
- **Fixed primary background** – specify if first background image should be fixed. By enabling this, you can enable Parallax effect for your visualization


Widgets are used to combine several objects under one object in visualization, will pop-up when activated.

Background image for the widget should be added in *Vis.graphics* → *Images/Backgrounds* in advance.


- **Parent** – name of parent widget
- **Name** – name for the widget
- **Plan size** – plan size in pixels. There are predefined resolutions available when clicking on the icon on the right side of this parameter
- **Widget position** – default position of the widget on the screen

- **Primary background image** – choose primary background image from the list added in *Vis.graphics* → *Images/Backgrounds*
- **Background color** – choose background color of the widget
- **Touch background color** – define a color for touch visualization
- **Repeat background image** – either to show the image once or repeat it and fill the whole plan
- **Fixed primary background** – specify if first background image should be fixed. By enabling this, you can enable Parallax effect for your visualization

When you have defined the widget in *Layouts/Widgets* tab, you can add objects to it in *Visualization* tab.

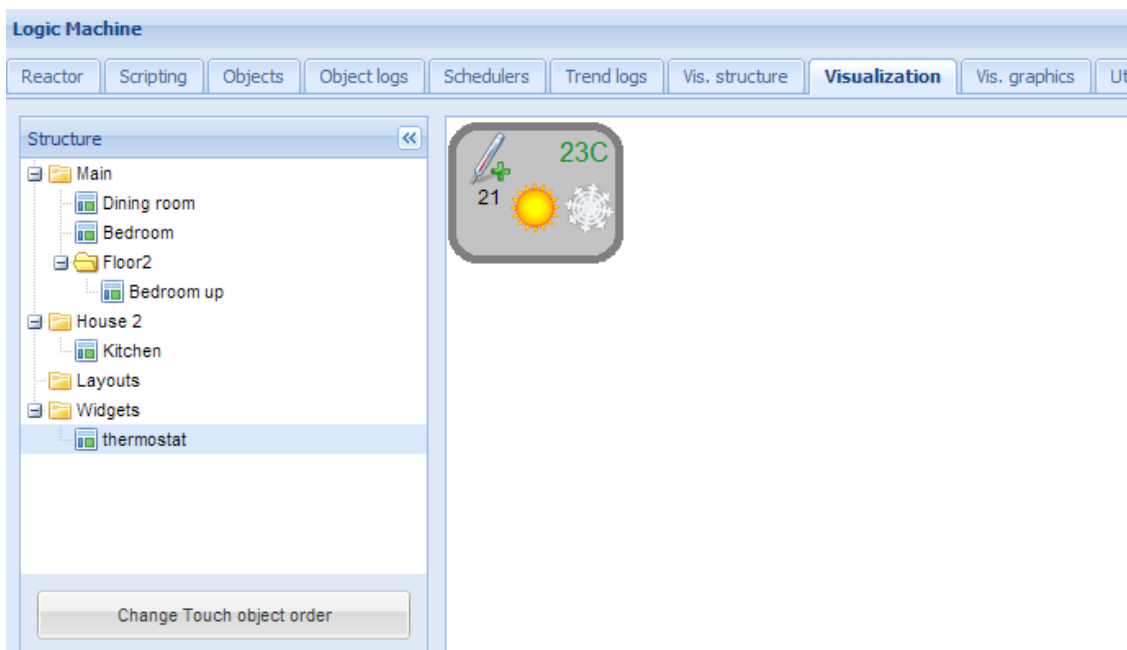

When you have added necessary objects to the widget, you can choose it when adding objects for main Levels e.g. Bedroom in Main level.

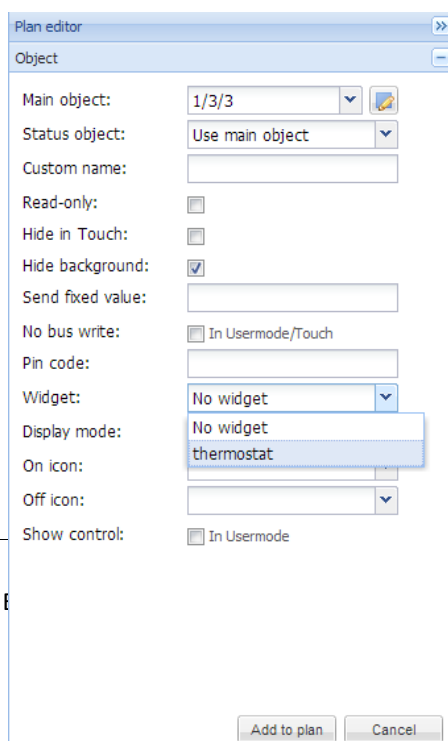


Once added, you can try out the widget in *Usermode visualization* by clicking on added object (temperature sensor icon on the left), the widget appears on click.



6.9. Visualization

After the building and floor structure is defined in *Vis.structure* tab, it is visualized in *Visualization* tab. Controlled and monitored objects can be added and managed in this section.

Both side bars can be minimized by pressing on  icon making the map more visible especially on small displays.

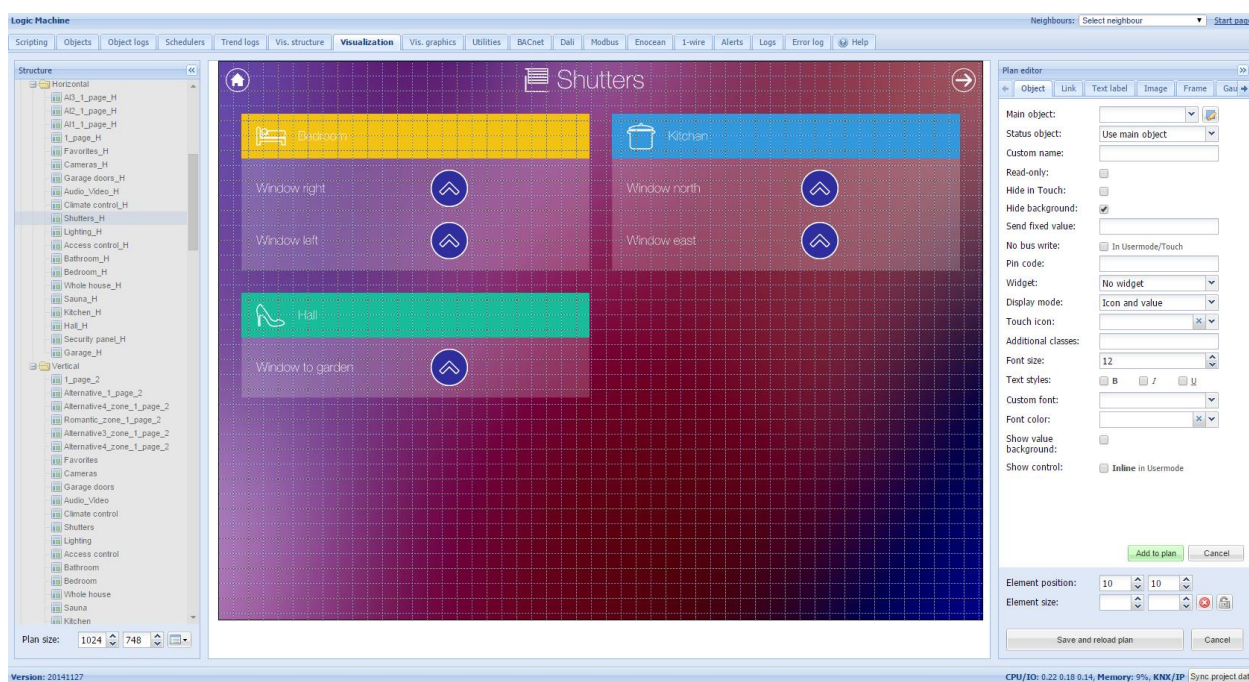

6.9.1. Plan editor

Plan editor is located on the right side of the visualization map. By clicking on *Unlock current plan for editing* button, the following main menus appear for configuration:

- **Object** – new object to be added to the map

- **Link** – linking several floors with special icons
- **Text Label** – text label to put on visualization
- **Image** – Add specific image on the visualization
- **Frame** – add frame object to the visualization
- **Gauge** – Metering gauge
- **Camera** – IP web camera integration into visualization
- **Graph** – Real-time graph to monitor value of scale-type objects

 
While in editing mode, on the left side you can change plan resolution on the fly



When some object is selected and in the editing mode, there appears Delete / Duplicate buttons so you can either delete or copy the object



6.9.2. Object

- **Main object** – list of existing group addresses on KNX/EIB bus, the ones available for configuration in *Objects* tab
- **Status object** – list of status objects on KNX/EIB bus
- **Custom name** – Name for the object
- **Read-only** – the object is read-only, no write permission
- **Hide in touch** – do not show this object in *Touch Visualization*
- **Hide background** – Hide icon background
- **Send fixed value** – Allows to send specific value to the bus each time the object is pressed
- **No bus write** – do not send telegram into the bus once clicked on this object in Usermode/Touch visualizations
- **PIN code** – PIN code which will be asked to provide when click on this object to perform group write
- **Widget** – specify widget which will be launched when click on this object
- **Display mode [icon and value; icon; value]** – how to display the object
- **Touch icon** – icon for Touch visualization
- **On icon** – On state icon for binary-type objects. Icons library is located in *Vis.graphics* → *Icons tab*
- **Off icon** – Off state icon for binary-type objects. Icons library is located in *Vis.graphics* → *Icons tab*
- **Additional classes** – additional CSS classes for the element
- **Show control** – scale-type object
either to show the control in  without icon specific setting defining Usermode visualization
- **Show value background** – show value background color

Plan editor

Object Link Text label Image Frame Gau

Main object:

Visualization parameters

Status object: Use main object

Custom name:

Read-only: ☐

Hide in Touch: ☐

Hide background: ☒

Send fixed value:

No bus write: ☐ In Usermode/Touch

Pin code:

Widget: No widget

Display mode: Icon and value

Touch icon: x

Additional classes:

Font size: 12

Text styles: ☐ B ☐ I ☐ U

Custom font:

Font color: x

Show value background: ☐

Show control: ☐ Inline in Usermode

Add to plan Cancel

Element position: 10 10

Element size: x

Save and reload plan Cancel

➤ Visualization parameters

Defines global or local visualization parameter for specific group address.

Select which parameters to edit

Global (per-object) parameters

Local (per-element) parameters

Override global parameters with local

Clear local parameters


Global (per-object) parameters – specify type of visualization parameter for this specific group address as seen in point 6.2.3. Once specified as global, the same visualization parameter will be used with this group address.

Local (per-element) parameters – specify type of visualization parameter for this specific group address for this specific element as seen in point 6.2.3. Once specified as local, it will only be used in this specific place.


Override global parameters with local – override global parameter for this specific element to local

Clear local parameters – clear all local parameters

For scale-type objects additional button appears while specifying parameters – *Additional icons*. It's possible to define different icons for different object values in the window.

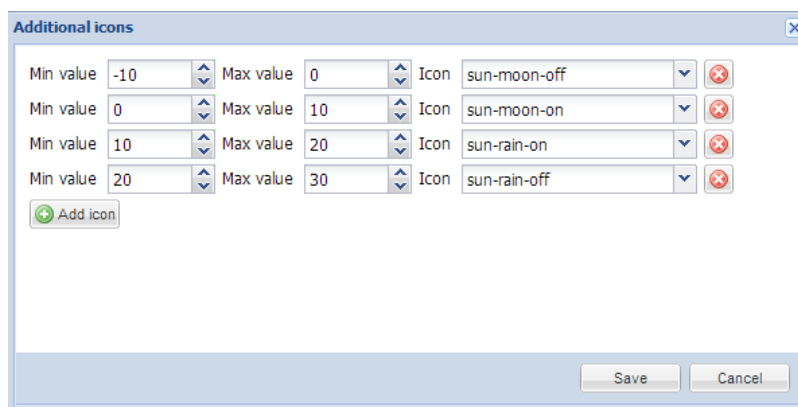

On the bottom of setting you can see element position and size parameters, which you can freely change. By pressing  you will reset size. By pressing  you can lock aspect ratio.

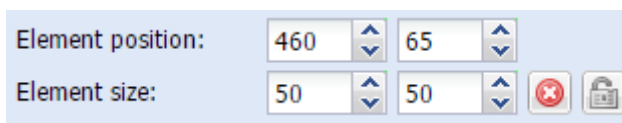

Once the object parameters are defined, press *Add to plan* button and newly created object will appear. You can move the object to the location it will be located. Note that while being in editing mode, the object will not work. When all necessary objects are added, press *Save and reload plan* button so the objects starts functioning.

You can edit each added object when clicking on it while in Editing mode.

6.9.3. Link

In order to make visualization more convenient, there are floor links integrated. You can add icons or text on the map, which links to other floors.

Plan editor

Object Link Text label Image Frame Gauge

Link to: Garage doors

Custom name: Link to garage

Hide in Touch: ☐

Hide background: ☒

Display mode: Icon

Icon: Garagedoors.svg

Active state icon:

Additional classes:

Add to plan Cancel

Element position: 460 65

Element size: 50 50

Save and reload plan Cancel

- **Link to** – Linked plan name or link to Schedulers / Trends or External Link (use the link in form <http://www.openrb.com>)
- **Custom name** – name for the link
- **Hide in touch** – do not show this object in *Touch Visualization*
- **Hide background**– Hide icon background
- **Display mode [Icon; Value]** – either to show icon or its value
- **Icon** – Icon which will be showed in visualization (if chosen, no further parameters are available)
- **Active state icon** – active state icon if the link is to current plan (in case you have several smaller plans on one visualization and want to display the current one)
- **Additional classes** – additional CSS classes for the element

Once the floor link parameters are defined, press *Add to plan* button and newly created object will appear. You can move the object to the location it will be located. Note that while being in editing mode, the object will not work. Press on *Save and reload plan* button so the objects starts functioning.

6.9.4. Text Label

Text labels can be added and moved across the visualization map.

Plan editor

Object Link **Text label** Image Frame Gau

Text:

Font size:

Text styles: ☒ B ☐ I ☐ U

Custom font:

Font color:

Additional classes:

Add to plan Cancel

Element position:

Element size:


Save and reload plan Cancel

- **Text** – label text
- **Font size** – label font size
- **Text style** – style of the text – bold, italic, underscored
- **Custom font** – font name
- **Font color** – label font color
- **Additional classes** – additional CSS classes for the element

Once the label parameters are defined, press *Add to plan* button and newly created object will appear on the map. You can move the object to the location it will be located. Press on *Save and reload plan* button so the objects starts functioning.

6.9.5. Image

Image section allows adding images from the internet into the visualization map. Useful for example, to grab dynamic weather cast images.

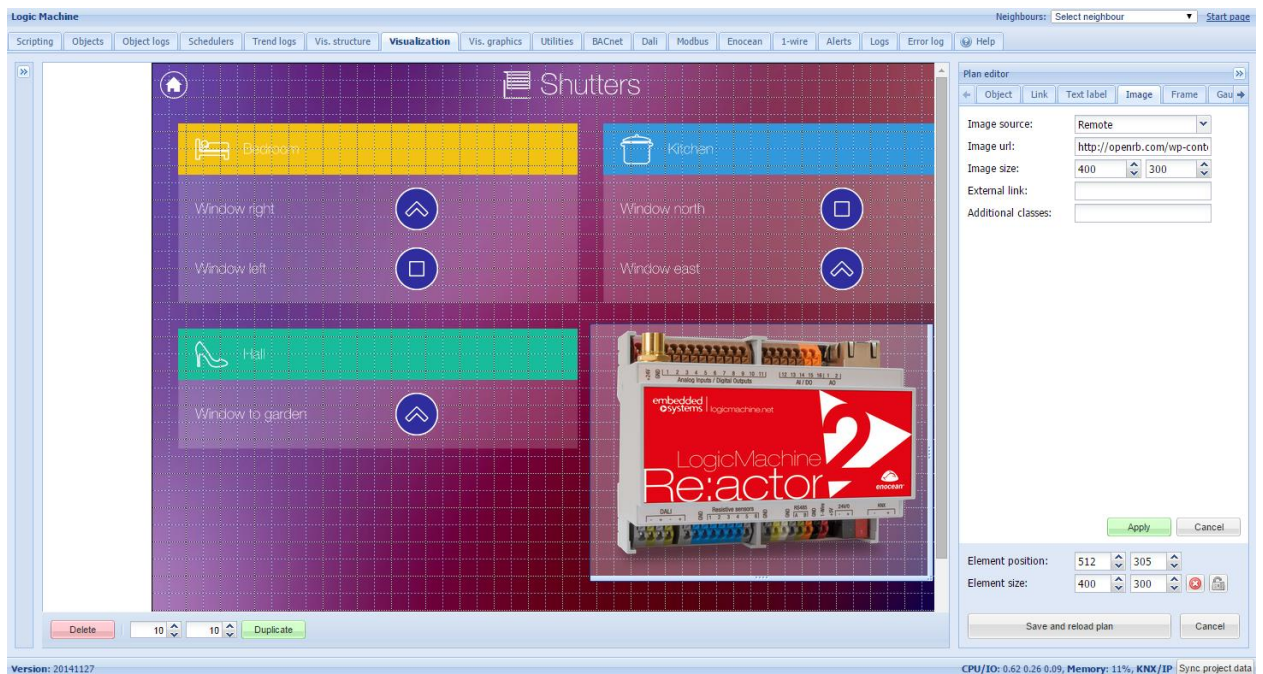

- **Image source [Local; Remote]** – image source location
- **Source url / Select image** – Source URL of the image or image from local database
- **Image size** – width and height of the image
- **External link** – external link URL when pressing on the image
- **Additional classes** – additional CSS classes for the element

Once the image parameters are defined, press *Add to plan* button and newly created object will appear on the map. You can move the object to the location it will be located. Press on *Save and reload plan* button so the objects starts functioning.

6.9.6. Frame

With Frame functionality you can integrate 3rd party applications, we resources or local Trends/Schedulers into one common visualization.

- **Source [Url, Schedulers; Trend logs]** – frame source
- **Url** – Source URL of the page to integrate
- **Frame size** – width and height of the frame
- **Custom name** – custom name of the frame object
- **External link** – external link URL when pressing on the image
- **Hide in Touch** – defines either to hide frame in Touch visualization

➤ **Additional classes** – additional CSS classes for the element

Plan editor

Object Link Text label Image Frame Gau

Source: Schedulers

Frame size: 480 320

Custom name:

Hide in Touch: ☐

Additional classes:

Add to plan Cancel

Element position: 10 10

Element size:

Save and reload plan Cancel

Plan editor

Object Link Text label Image Frame Gau

Source: Url

Url:

Frame size: 480 320

Custom name:

Hide in Touch: ☐

Additional classes:

Add to plan Cancel

Element position: 10 10


Element size:

Unlock current plan for editing Cancel

123		
Status: active, period: 1 January - 31 December Edit		
Value	Run at	Add event
false	12:00	Edit Delete
true	12:00	Edit Delete
false	12:00	Edit Delete

6.9.7. Gauge

Gauge allows visualizing and changing object value in the gauge.

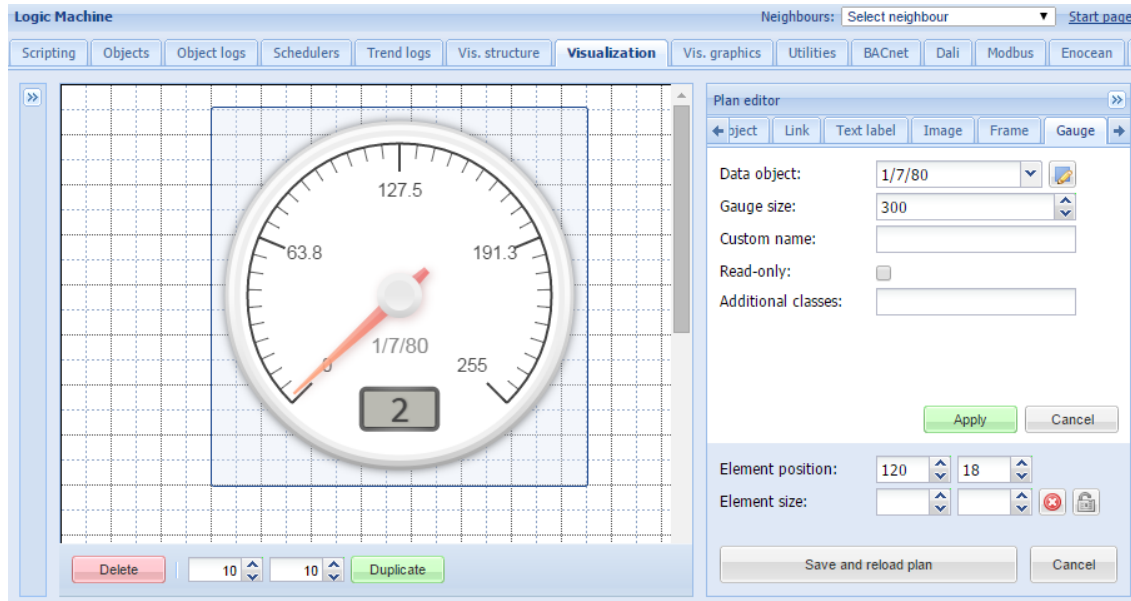

- **Data object** – KNX group address
- **Gauge size** – size of the gauge
- **Custom name** – custom name for the object
- **Read only** – make the gauge read only
- **Additional classes** – additional CSS classes for the element

Once the gauge parameters are defined, press *Add to plan* button and newly created object will appear on the map. You can move the object to the location it will be located. Press on *Save and reload plan* button so the objects starts functioning.


6.9.8. Camera

LogicMachine supports third party IP web camera integration into its visualization.

- **Source url** – source address of the video stream
- **Window size** – size of the window of camera picture
- **Custom name** – name for the object
- **Icon** – icon for the object
- **Auto open window** – automatically open video window, otherwise it is launched by click on the icon
- **Hide background** – hide icon background
- **Additional classes** – additional CSS classes for the element


Note! If IP camera requires user name and password, enter the url in form ***http://USER:PASSWORD@IP***

Once the camera parameters are defined, press *Add to plan* button and newly created object will appear in look of video camera. You can move the object to the location it will be located. Note that while being in editing mode, the object will not work. Press on *Save and reload plan* button so the objects starts functioning. By pressing on video camera, a new sub-window appears with a picture from your IP web camera. The window can be freely moved to other location so not to cover other visualization objects.

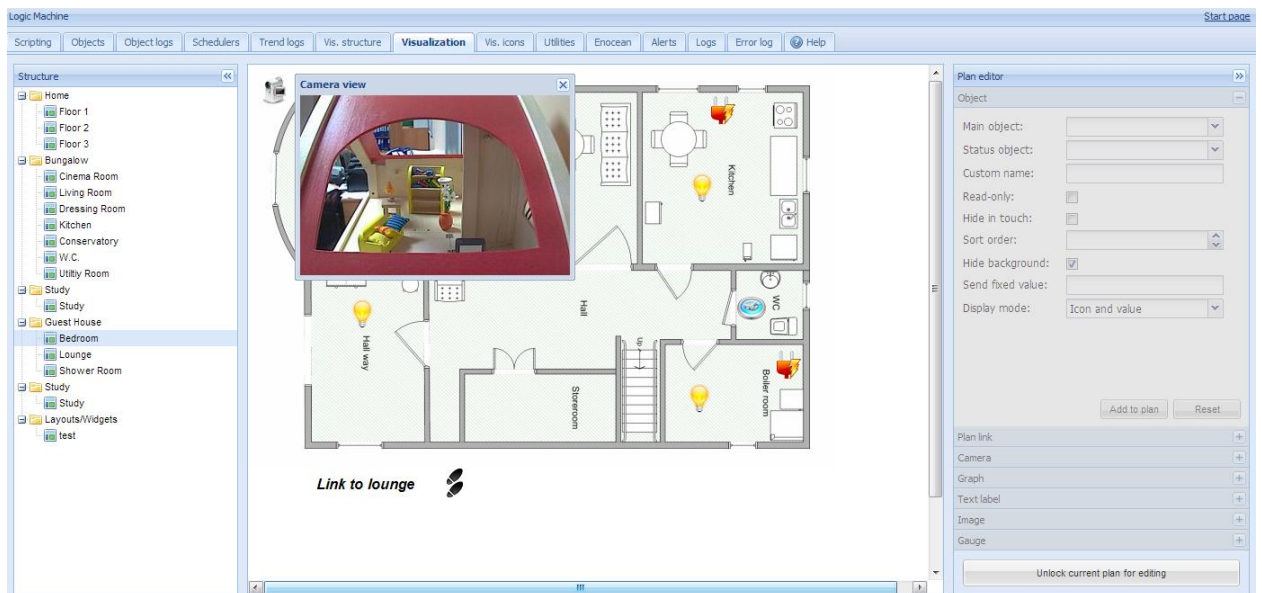

6.9.9. Graph


Real-time graphs can be integrated into visualization system to monitor the current and old value of scale-type objects. Make sure logging is enabled for the object in *Object* tab which values is planned to be shown in the graph.

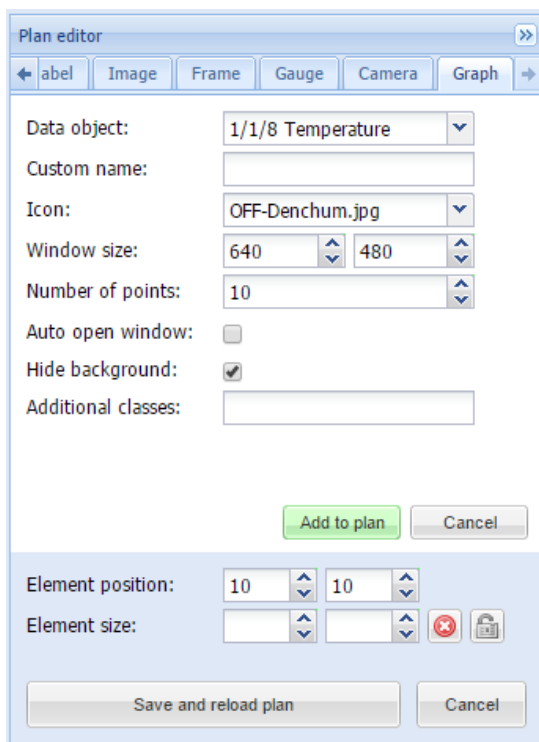

- **Data object** – group address of the object
- **Custom name** – name of the object


- **Icon**– icon to launch the graph
- **Windows size** – size of the graph window
- **Number of points** – number of data points to show in the graph
- **Auto open window** – graph window is automatically opened
- **Hide background** – hide icon background
- **Additional classes** – additional CSS classes for the element

Once the graph parameters are defined, press *Add to plan* button and newly created object will appear. You can move the object to the location it will be located. Note that while being in editing mode, the object will not work. Press on *Save and reload plan* button so the objects starts functioning.

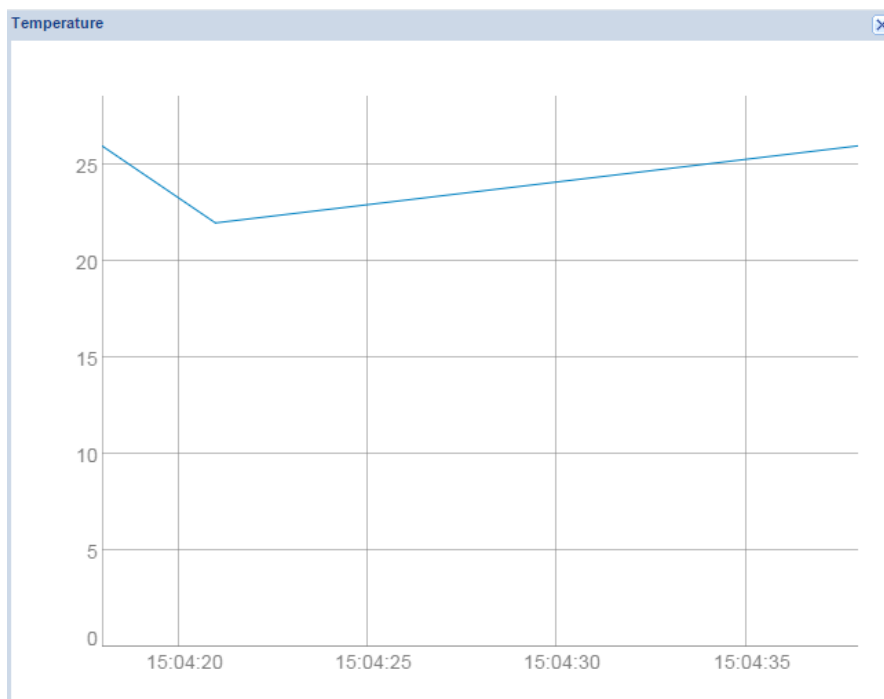


6.10. Vis.graphics

The list of predefined icons, list of images and backgrounds is available in *Vis.graphics* tab.

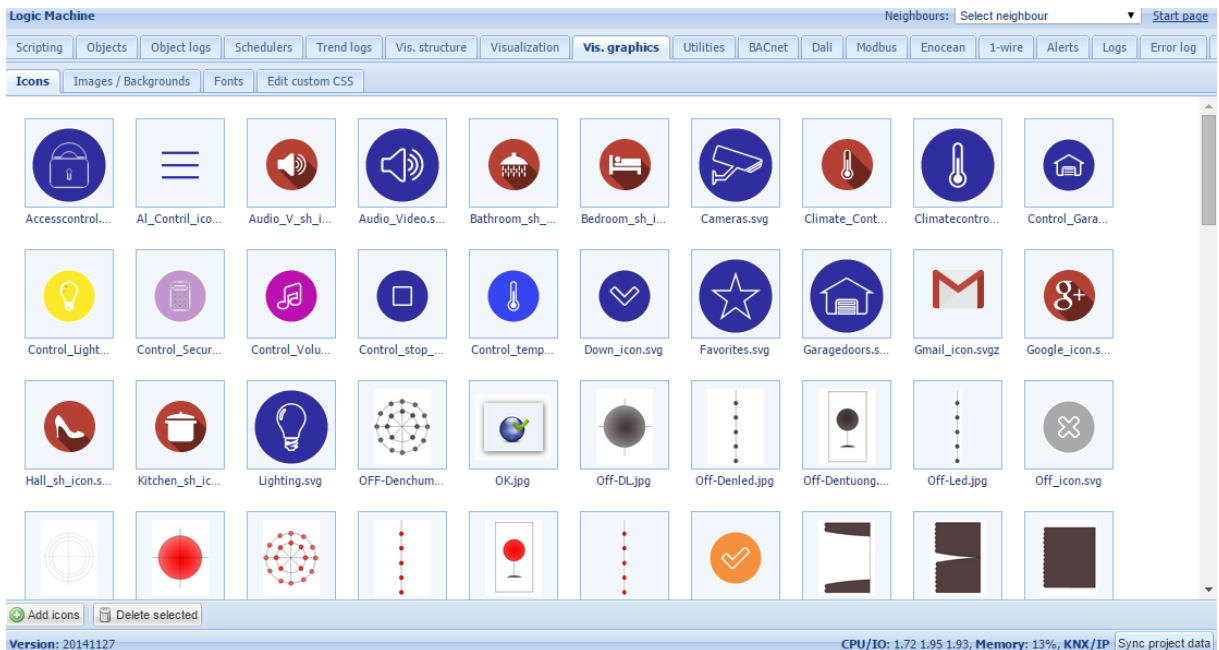


Press on *Add icons* button to add a new entry. The system accepts any size icons. GIF is also supported.

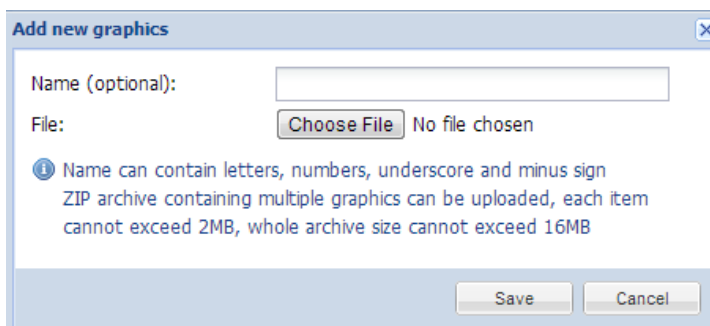


- **Name (optional)** – the name of the icon
- **File** – Icon file location

Images/Backgrounds tab is used to upload image files for visualization purposes

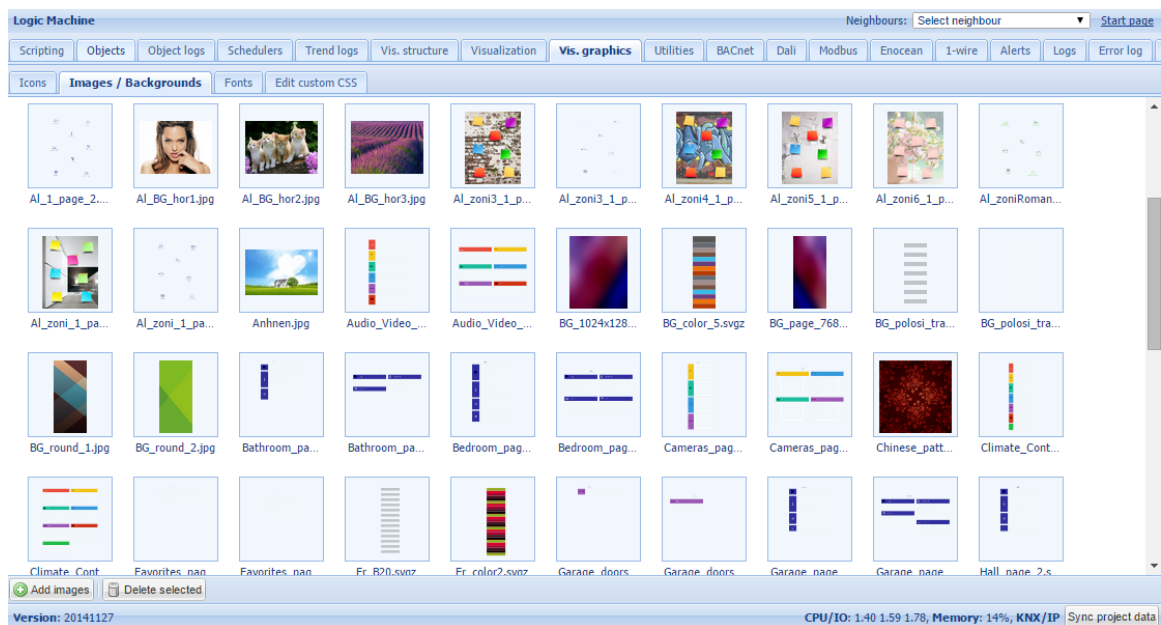


In *Fonts* tab you can add custom fonts

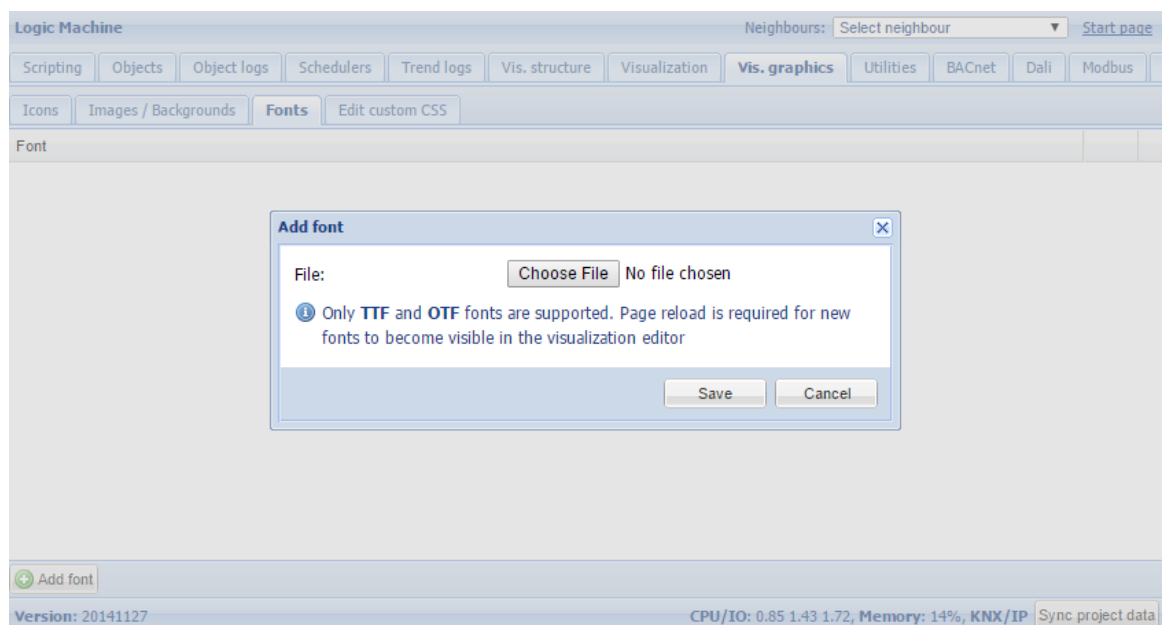


In *Custom CSS* tab you can add your CSS style for the visualization which you can use when adding elements into visualization, so any elements of Look and Feel is customizable with this solution.

6.11. Utilities


There are following utilities in the tab available:

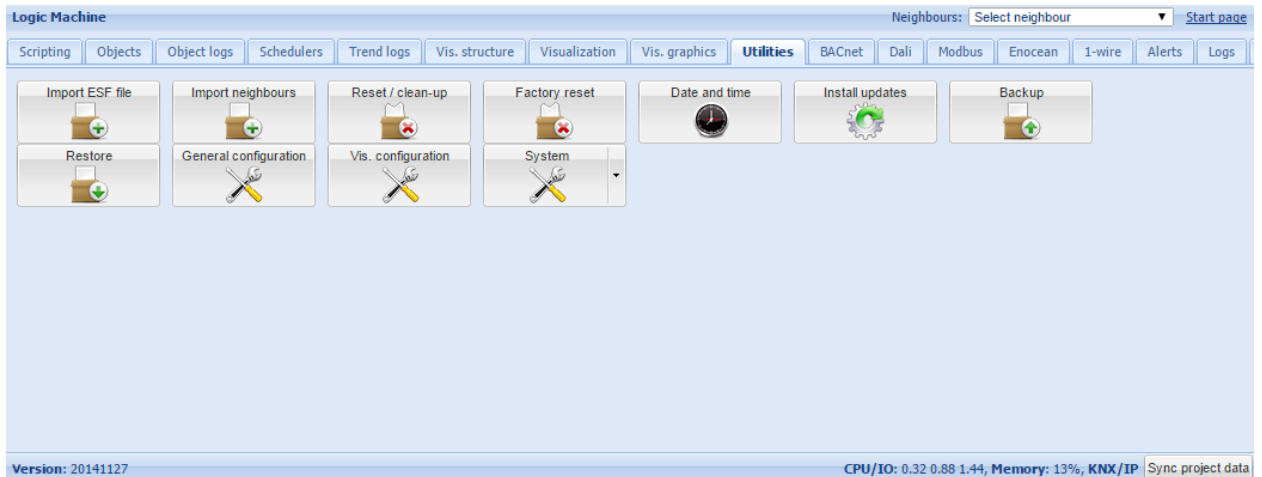


Import ESF file– imports ETS object file. It will be necessary to set correct data types for some imported objects. Existing objects will not be overwritten. Objects with the same name are considered duplicates and might not be imported

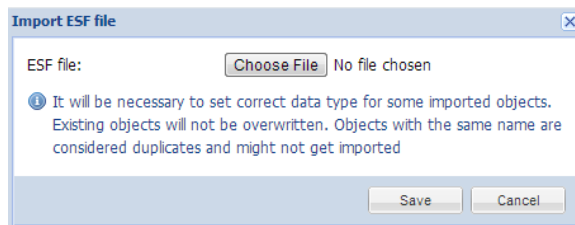


Import neighbours – import list of objects from network LM devices

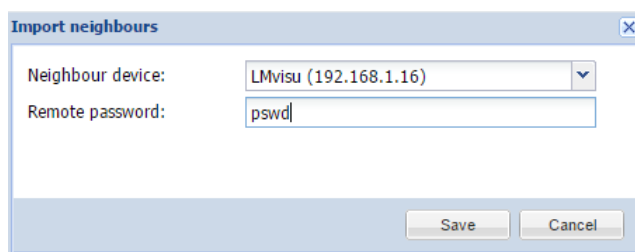


Reset / clean-up – delete all objects from the Logic Machine, they disappear from visualization aswell

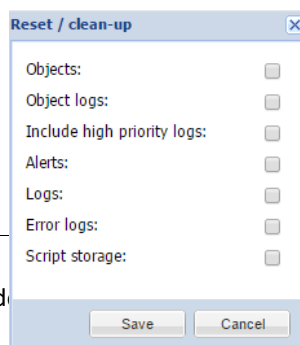


Factory reset– delete all configuration and return to factory defaults

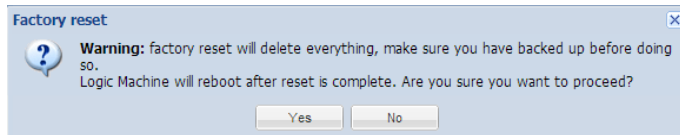

Date and time – data and time settings

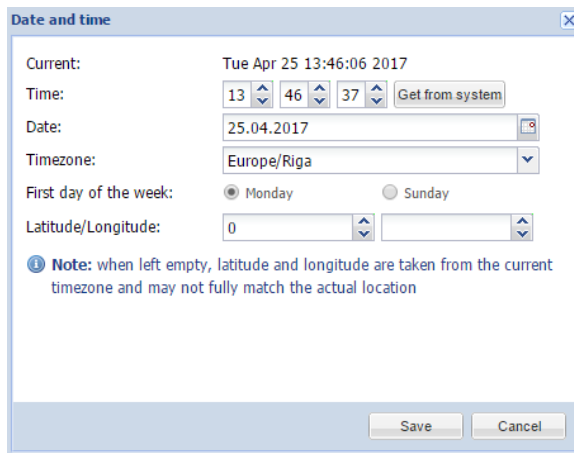


Install updates – install LogicMachine update file *.lmu. LogicMachine will reboot after successful update

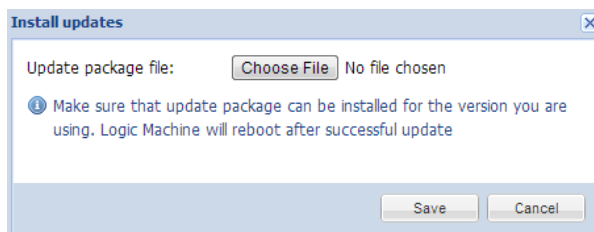

Backup – backup all objects, logs, scripts, visualization.

Restore– restore configuration from backup

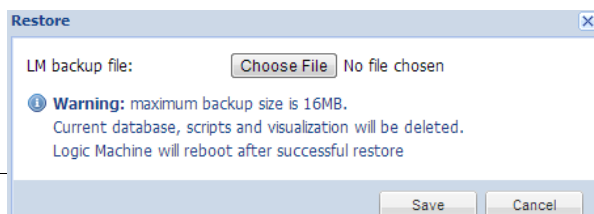

General Configuration – system general settings

General configuration

Interface language: English

Automatic address range start: 1/1/1

Discover new objects: Yes, bus sniffer enabled

Object log size: 1000

Default log policy: Log only selected objects

Alert log size: 200

Log size: 200

Error log size: 200

Save object values in storage: ☐

Enable Block editor: ☐

Code editor tab size: 2

Warning: excessive object logging degrades performance

Save Cancel

- **Interface language** – interface language
- **Automatic address range start** – start group address when using automatic addressing in scripts, IO settings and other
- **Discover new objects**– either KNX object sniffer is enabled. If yes, once triggered all new objects will appear automatically in the Objects list
- **Object log size** – max count of object logs
- **Default log policy**– either to log status change for all objects or only for checked objects
- **Alert log size** – max count of alerts logged
- **Log size** – max count of logs
- **Error log size** – max count of errors logged
- **Enable block editor** – either to enable scripting block editor
- **Save object values in storage** – save object values in REDIS database to access from apps
- **Code editor tab size** – specify tab size to be used in the scripting editor

Note! If log size is changed to a smaller value, excess logs will be deleted on next auto clean-up (every 10 minutes)

Note! Log policy only affects new objects, current per-object log settings are kept unchanged

Warning! Excessive object logging degrades LogicMachine performance. Please follow this example to store logs on local FTP or automatically export to external FTP server: <http://openrb.com/example-export-last-hour-csv-object-log-file-to-external-ftp-server-from-lm2/>

Vis. Configuration – visualization specific settings


The screenshot shows a 'Vis. configuration' dialog box with the following settings:

- Usermode sidebar: Show as overlay (auto-hide)
- Usermode view: Center plans, enable auto-sizing
- Usermode page transition: No transition
- Usermode auto-size upscaling: ☐
- Usermode background color: [Color picker]
- Usermode background image: [Image picker]
- Custom font: [Font picker]
- Use dark theme: ☐
- Enable swipe gesture: ☐
- Disable object click animation: ☐
- Dim inactive visualization after: [Spinners] minutes
- Dimming level: 80 %
- Show alerts in Usermode: ☐


Buttons: Save, Cancel

- **Usermode sidebar** [*Show docked, Show as overlay (auto-hide), Hide (fullscreen mode)*] – visibility of sidebar when in Usermode Visualization
- **Usermode view** [*Align plans to top left, no size limit; Center plans, limit size; Center plans, enable auto-sizing; Center horizontally, auto-size width*] – defines the look of Usermode visualization
- **Usermode page transition** [*Flip X; Flip Y; Shrink; Expand; Slide up; Slide down, Slide left; Slide right; Slide up big; Slide down big; Slide left big; Slide right big*] – transition when changing plans in visualization
- **Usermode auto-size upscaling** – enable this to scale the visualization automatically on each display device. Please note to use SVG format images and icons so the quality is not affected by upscaling
- **Usermode background color** – background color in usermode visualization
- **Usermode background image** – specific image for usermode visualization
- **Custom font** – select custom font to use in visualization

- **Use dark theme** – check to enable dark theme in both usermode and touch visualizations
- **Enable swipe gesture** – check to enable swipe gesture to move across plans from your touch device
- **Disable object click animation** – disable object click animation
- **Dim inactive visualization after** – define time in minutes after which the screen will be dimmed where visualization is opened
- **Dim level** – dim level for the display
- **Show alerts in Usermode** – once new Alerts is triggered it will pop-up in User mode visualization

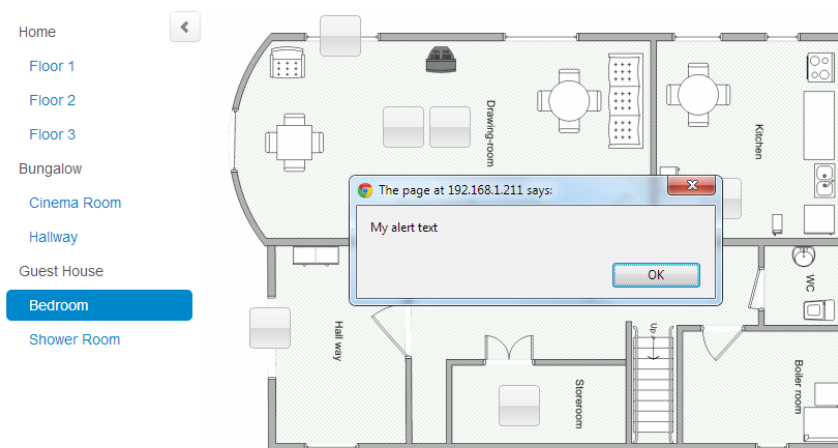


System – by clicking on the arrow near System button, *KNX Connection*, *User Access*, *Remote Services* settings can be access. By clicking on the *System* button, network configuration window opens in new browser's tab.

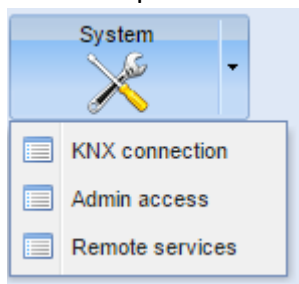

6.12. User access

User access management is located in *User access* tab.

User access settings

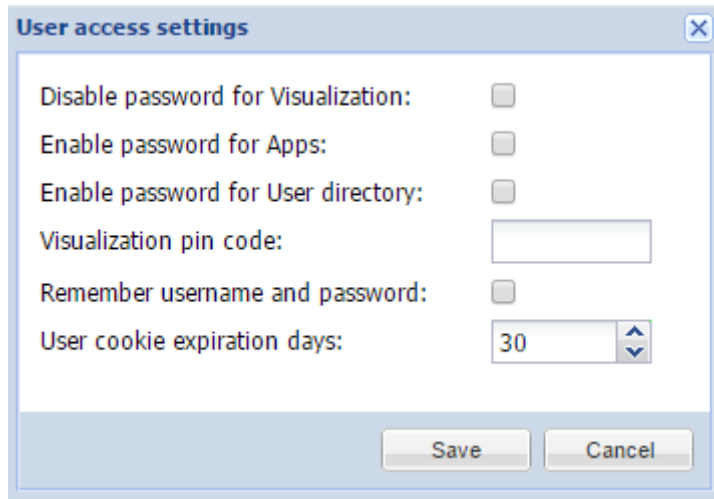

- ***Disable password for Visualization*** – disable password access for visualization
- ***Enable password for Apps*** – enable password to enter the initial Apps screen of LogicMachine (when entering <http://IP> in the web-browser)
- ***Enable password for User directory*** – enable password access for User directory
- ***Visualization PIN code*** – global PIN code visualization
- ***Remember username and password*** – remember user login credentials after entered once for specified time interval
- ***User cookie expiration days*** – user cookie expiration days

User directory



You can upload files which are accessible through the main web server via FTP. In *System config* --> *Services* --> *FTP server* you have to enable the FTP server and set password for apps user. Then you can upload files into user directory which can then be accessed at <http://IP/user>. Password authentication for this directory can be enabled/disabled in *Logic Machine* --> *User access* --> *User access settings*.

Adding users

The screenshot shows a 'User' configuration window with the following fields and values:

Field	Value
Name	Edgars
Login	edgars
Password	
Repeat password	
Visualization access	Partial
Schedulers access	Partial
Trends access	Partial

- **Name** – name of the user
- **Login** – login name
- **Password** – password
- **Repeat password** – repeat password
- **Visualization access [None, Partial, Full]** – type of Visualization access
- **Schedulers access [None, Partial, Full]** – type of Schedulers access
- **Trends access [None, Partial, Full]** – type of Trends access
 - None* – access is limited
 - Partial* – access is granted for specific visualization floors, schedulers and trends
 - Full* – full access

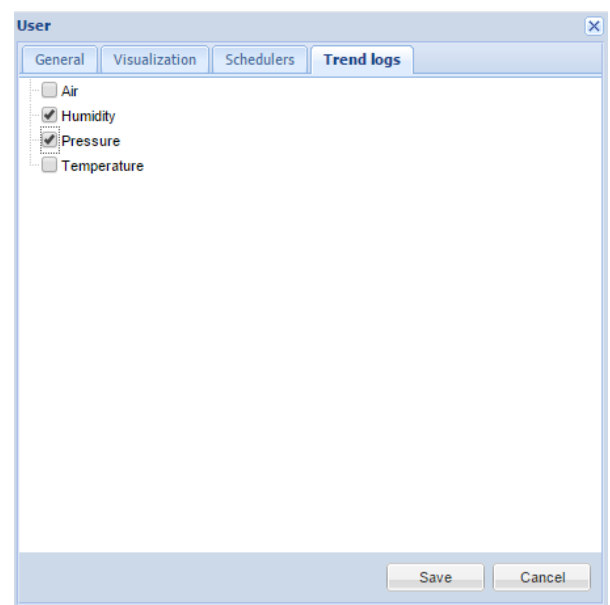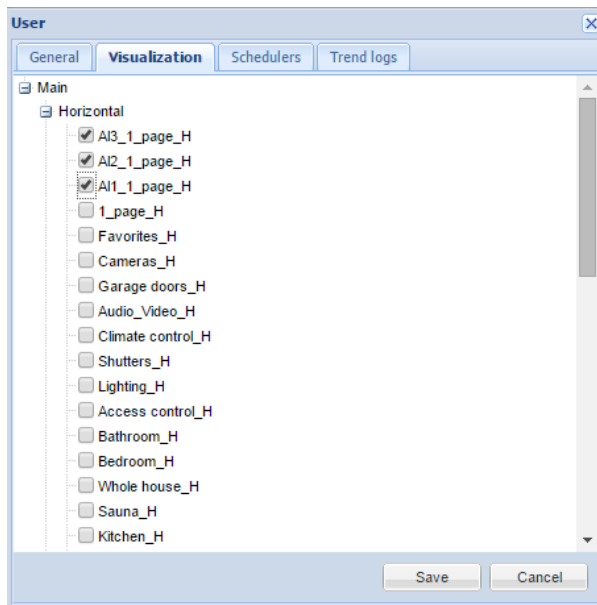

Access logs

Shows a list of access logs

6.13. Alerts


In *Alert* tab a list of alert messages defined with **alert** function in scripts is located. The messages are stored on the compact flash. Information on system start and KNX connection status messages are also automatically displayed in this window.

Alert time	Message
01.01.1970 10:20:42	read error
01.01.1970 10:20:22	read error
01.01.1970 10:20:02	read error
01.01.1970 10:12:58	read error

Page 1 of 93

Displaying alerts 1 - 25 of 2317

 On the communication panel you can jump by pages and reload the page.



Example


```

1. temperature = 25.3
2.
3. if temperature > 24 then
4. -- resulting message: 'Temperature levels are too high: 25.3'
5. alert('Temperature level is too high: %.1f', temperature)
6. end

```


6.14. Error log

Error messages from scripts are displayed in *Error log* tab.

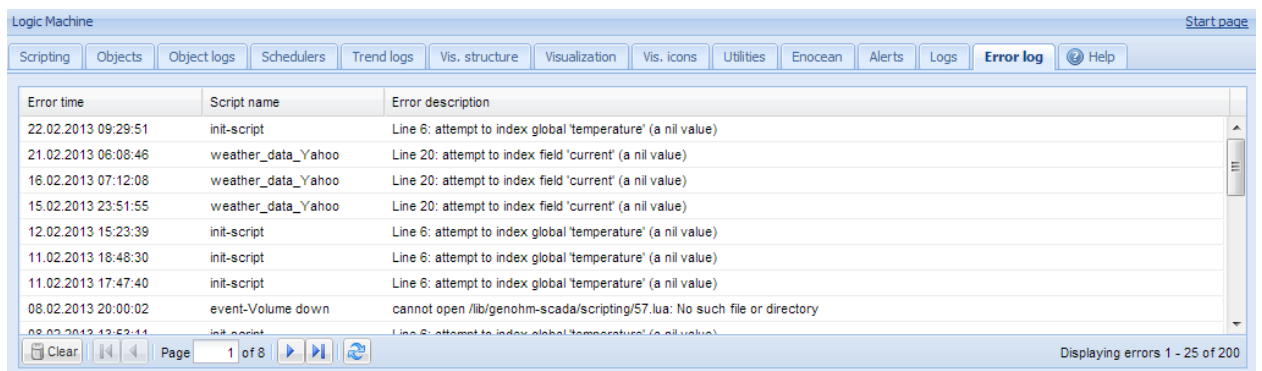


6.15. Logs

Logs can be used for scripting code debugging. The log messages appear defined by *log* function.

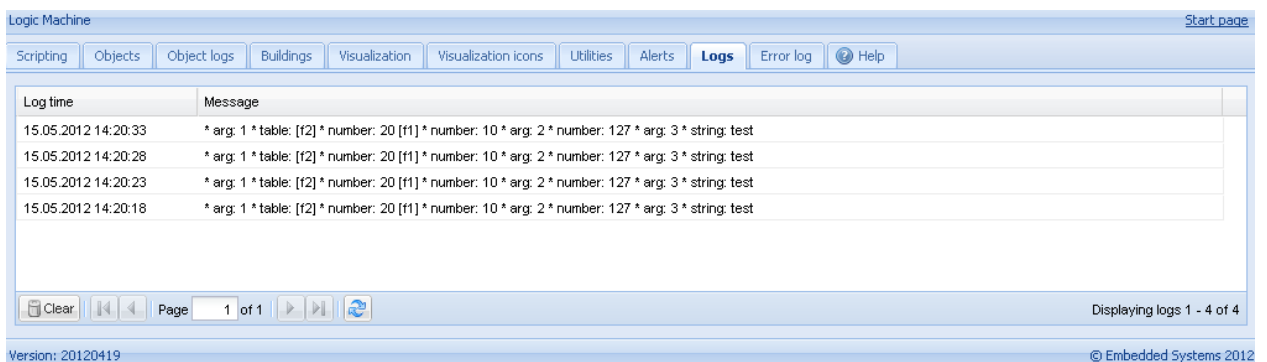

7. User mode visualization

User mode visualization contains created visualization maps. A password and users to access specific visualization maps can be created in *Logic Machine* --> *User access*

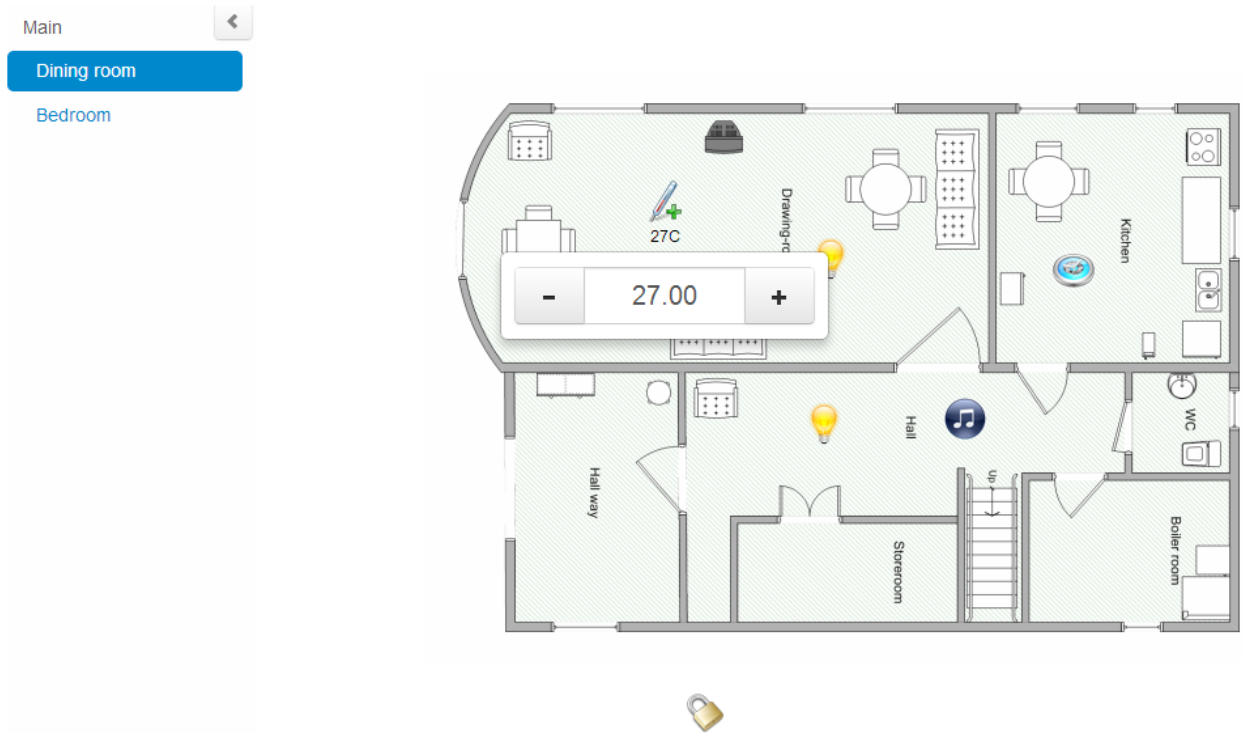

7.1. Custom design Usermode visualization


Through Custom CSS styles it is possible to create different type of visualization maps. Custom CSS can be done in *Vis. Graphics* → *Edit custom CSS* tab. For more information of CSS examples please see our user forum: <http://forum.logicmachine.net/>



8. Touch visualization

Touch visualization is designed for iPhone/iPod/iPad/Android touch screen devices. All objects which are added in *Logic Machine* configuration by default are visible in touch visualization (if there is no *Hide in touch* option enabled).

The main window is Building view where you can choose which Floor from which Building to control. Once you choose the floor, all objects which are assigned to it, are listed and can be controlled.

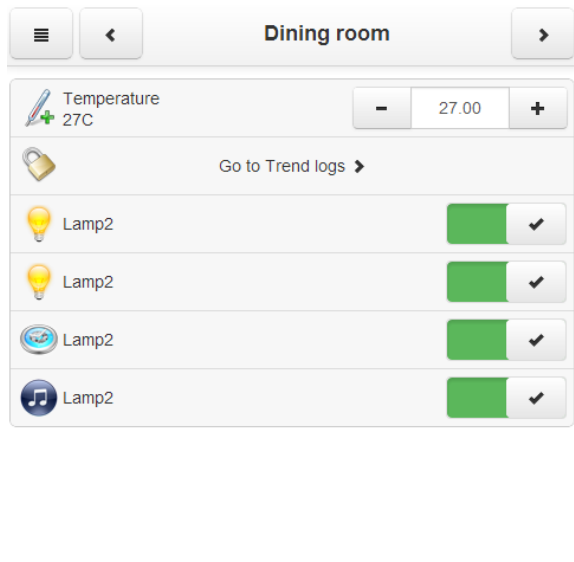


Launching visualization on touch device (iPad in this case)

- Make sure your iPad is connected wirelessly to the LogicMachine (either through separate access point or directly to Logic Machine's USB WiFi adapter).
- In the browser enter Logic Machine's IP (default 192.168.0.10).
- Click on the Touch Visualization icon.
- Save the application as permanent/shortcut in your iPad

9. System configuration


System configuration allows managing router functionality on KNX/EIB LogicMachine as well as do access control management, upgrade firmware, see network and system status and others.

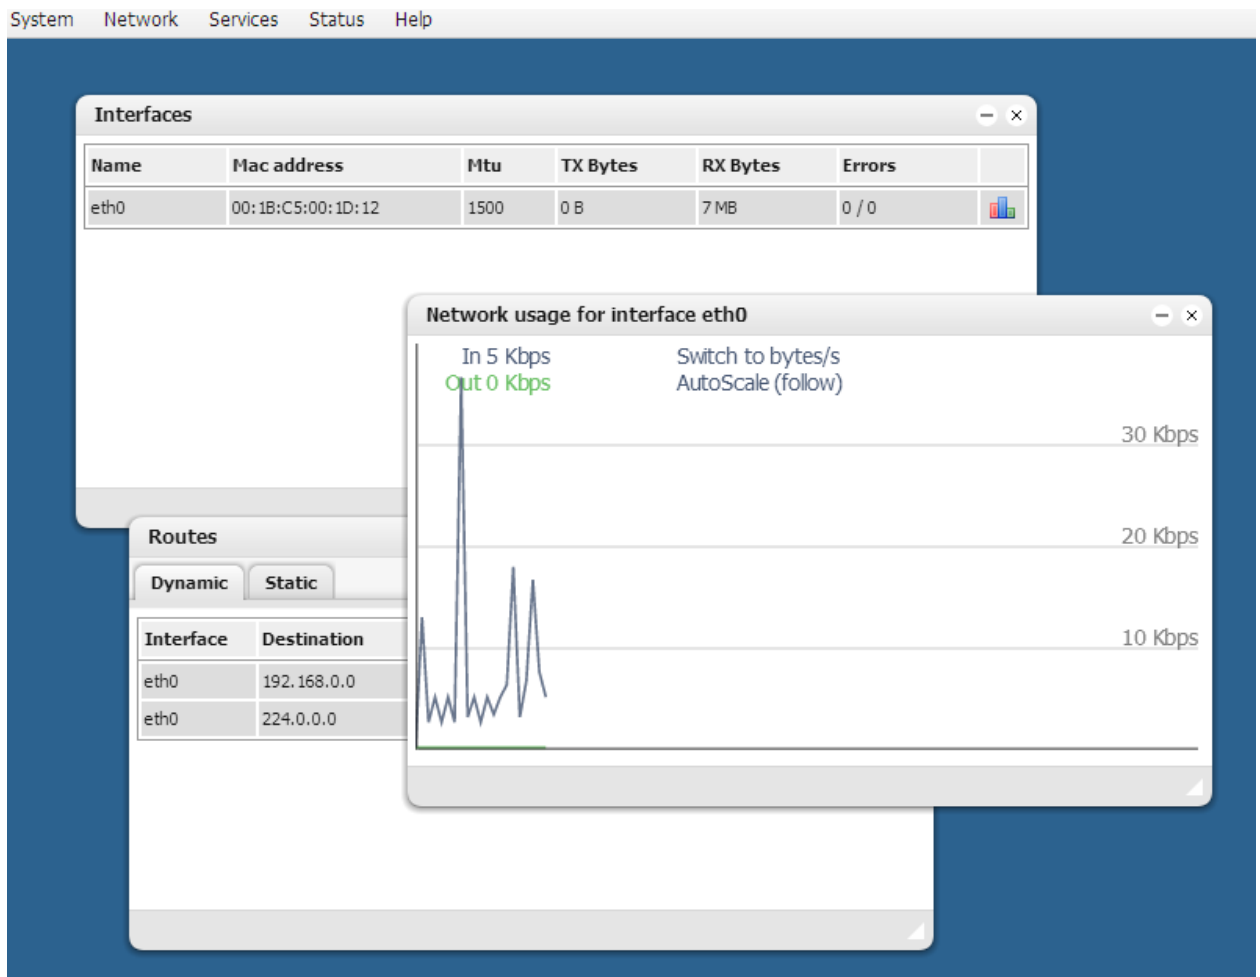

Login	Password
admin	admin

9.1. Hostname


Hostname can be change in *System* → *Hostname*. This name will appear when searching for the device through Zeroconf or Discovery applications.

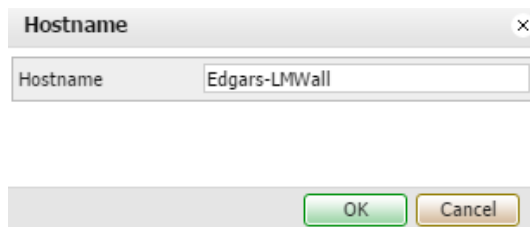

A small dialog box titled "Hostname" with a close button (X) in the top right corner. It contains a single text input field labeled "Hostname" with the text "Edgars-LMWall" entered. At the bottom, there are two buttons: "OK" (green) and "Cancel" (yellow).

9.2. Changing Admin password


The admin password configuration window is located in *System* → *Admin access*.

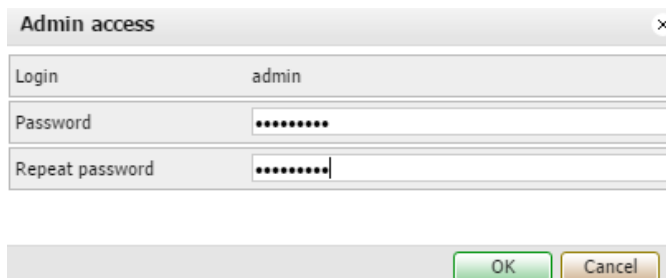

A dialog box titled "Admin access" with a close button (X) in the top right corner. It contains three input fields: "Login" with the text "admin", "Password" with masked characters "*****", and "Repeat password" with masked characters "*****". At the bottom, there are two buttons: "OK" (green) and "Cancel" (yellow).

9.3. Packages

System → *Packages* shows the packages installed in the system. You can add new packaged by pressing on +

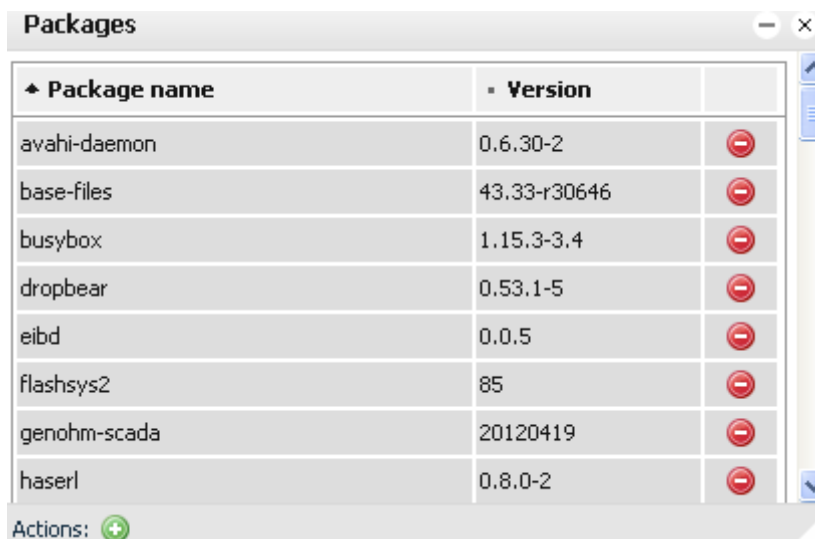


A window titled "Packages" with a close button (X) in the top right corner. It contains a table with two columns: "Package name" and "Version". The table lists several installed packages. To the right of each row is a red minus button. At the bottom left, there is an "Actions:" label followed by a green plus button. On the right side of the table, there are blue navigation buttons: up, down, and a list icon.

Package name	Version
avahi-daemon	0.6.30-2
base-files	43.33-r30646
busybox	1.15.3-3.4
dropbear	0.53.1-5
eibd	0.0.5
flashsys2	85
genohm-scada	20120419
haserl	0.8.0-2

9.4. Upgrade firmware

System → *Upgrade* firmware is used to do a full upgrade of the system (both OS part as well as LogicMachine part).

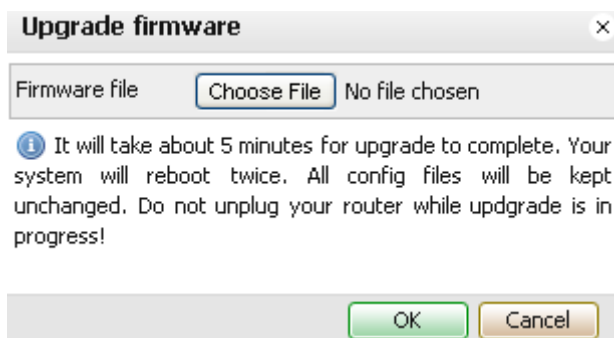

9.5. Reboot Logic Machine

You can restart the LogicMachine by executing *System* → *Reboot* command.

9.6. Shutdown Logic Machine

You can shutdown the LogicMachine by executing *System* → *Shutdown* command. It is advisable to shutdown the system before plug out the power, because the database is saved safely.

9.7. Interface configuration

Ethernet interface is listed in the first tab. There are possibilities to disable/enable or to take a look at the traffic flow graph using special icons on the right side.

Interfaces						
Name	Mac address	Mtu	TX Bytes	RX Bytes	Errors	
eth0	00:1B:C5:00:1D:12	1500	0 B	7 MB	0 / 0	

By clicking on the interface you get to the configuration.


Interface eth0	
Protocol	Static IP
IP address	192.168.1.13
Network mask	255.255.255.0
Gateway IP	192.168.1.100
DNS server 1	8.8.8.8
DNS server 2	
MTU	

OK Cancel

- **Protocol**– specific protocol used for addressing
 - Static IP** – static IP address. By default 192.168.0.10
 - DHCP** – use DHCP protocol to get IP configuration.
 - Current IP**– the IP address got from DHCP server. This field appears only if the IP address is given otherwise it's hidden.
- **Network mask** – network mask. By default 255.255.255.0 (/24)
- **Gateway IP** – gateway IP address
- **DNS server** – DNS server IP address
- **MTU**– maximum transmission unit, the largest size of the packet which could be passed in the communication protocol. By default 1500

Ethernet interface data throughput graph

On the main window of the Ethernets tab, if you click on the  button, a new window is opened. It draws a real-time graph of the traffic flow passing the interface (both In and Out). There is a possibility to switch the units of measurement – bytes/s or bytes/s.

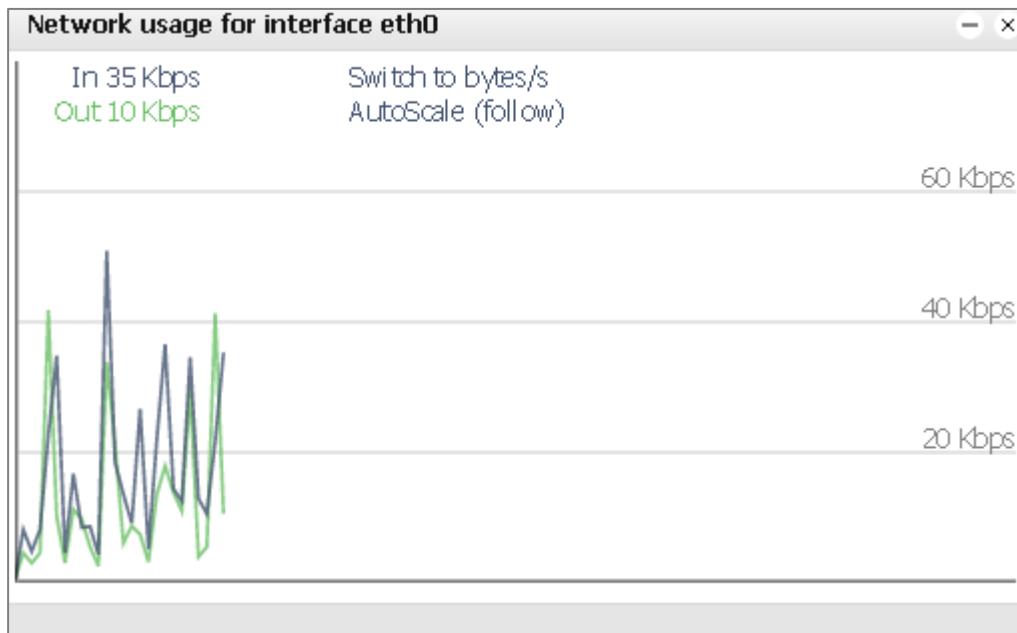

9.8. KNX connection

KNX specific configuration is located in *Network* → *KNX connection* window.

General tab

The "KNX connection" window has three tabs: "General", "IP > TP filter", and "TP > IP filter". The "General" tab is active. It contains the following configuration fields:

- Mode: TP-UART (dropdown menu)
- ACK all group telegrams: ☐
- KNX address: 15.15.255 (text field)
- KNX IP features: ☒
- Multicast IP: 224.0.23.12 (text field)
- Multicast TTL: 1 (text field)
- Maximum telegrams in queue: 100 (text field)
- TOS priority level (0 = no priority): 0 (dropdown menu)
- Encryption key: (empty text field)
- Enable only secure communication: ☐

Below the fields is an information icon (i) and a text block:

Setting Encryption key will enable encryption of routing telegrams. Reception of normal telegrams will still work. Tunneling and non-secure routing is disabled if only secure communication is enabled. All devices must have the same date/time set otherwise encrypted telegrams will be rejected.

At the bottom right are "OK" and "Cancel" buttons.

- **Mode** [*TP-UART / EIBnet IP Tunneling / EIBnet IP Tunneling(NAT mode) / EIBnet IP Routing*] – KNX connection mode. LogicMachine5 has TPUART interface by default built-in. **Note!** If there is no KNX TP connected to the device, it will automatically offer to switch to KNXnet/IP mode.
- **ACK all group telegrams** – acknowledge receipt of telegram to all group communication
- **KNX address** – KNX physical address of the device
- **KNX IP features** – Use this device with KNX IP features e.g. for KNX device configuration from ETS using LogicMachine
- **Multicast IP** – multicast IP address
- **Multicast TTL** – Time to live for multicast telegram in seconds
- **Maximum telegrams in queue** – count of maximum telegrams in the queue
- **TOS priority level (0=no priority)** – type of service in the telegram. See more here: https://en.wikipedia.org/wiki/Type_of_service
- **Encryption key** – key for secure IP communication along LogicMachines. Setting Encryption key will enable encryption of routing telegrams. Reception of normal telegrams will still work. Tunneling and non-secure routing is disabled if only secure communication is enabled. All devices must have the same date/time set otherwise encrypted telegrams will be rejected.
- **Enable only secure communication** – define either only encrypted communication is accepted

IP > TP filter

Filtering table for telegrams going from IP network to KNX TP1 is located in this submenu.

KNX connection

General

IP > TP filter

TP > IP filter

Apply filter to tunneling

SRC policy

No filter

Ind. address list

One address/range per line. Use * (e.g. 1.1.*) to filter all addresses in the given line.

DST group policy

No filter

Group address list

1/1/1-1/1/2

One address/range per line. Use * (e.g. 1/1/*) to filter all addresses in the given line.

Note: KNX IP features are required for filter to work.

Filtering lists are updated at once, changing policies requires restart.


OK

Cancel

- **Apply filter to tunneling** – either to apply filter policy to telegrams in tunneling mode. If ETS is used it is recommended to turn this feature off.
- **SRC policy** [No filter / Accept selected individual addresses / Drop selected individual addresses]– policy to apply to the list of source addresses
- **Ind. address list** – list of individual addresses. One address/range per line. Use * (e.g. 1.1.*) to filter all addresses in the given line.
- **DST group policy**[No filter / Accept selected group addresses / Drop selected group addresses]– policy to apply to the list of destination group addresses
- **Group address list** – list of group addresses. One address/range per line. Use * (e.g. 1/1/*) to filter all addresses in the given line.

Note! KNX IP features should be on for filter to work. Filtering lists are updated at once, changing policies requires restart.


Note that group address list can be filled automatically by checking necessary group addresses in *LogicMachine* → *Objects* list

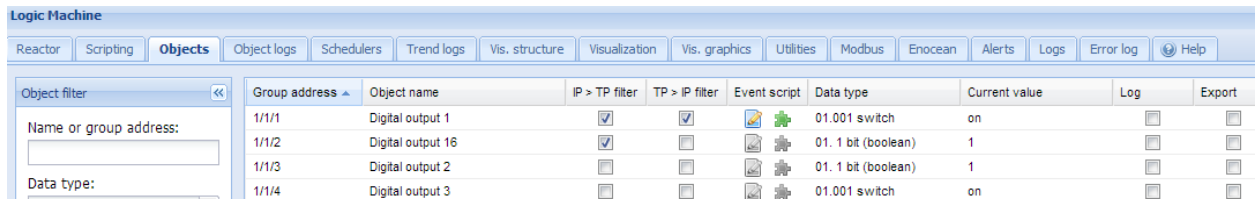

Object filter	Group address	Object name	IP > TP filter	TP > IP filter	Event script	Data type	Current value	Log	Export
Name or group address:	1/1/1	Digital output 1	☒	☒		01.001 switch	on	☐	☐
	1/1/2	Digital output 16	☒	☐		01. 1 bit (boolean)	1	☐	☐
	1/1/3	Digital output 2	☐	☐		01. 1 bit (boolean)	1	☐	☐
Data type:	1/1/4	Digital output 3	☐	☐		01.001 switch	on	☐	☐

TP > IP filter

Filtering table for telegrams going from KNX TP1 to IP network is located in this submenu.

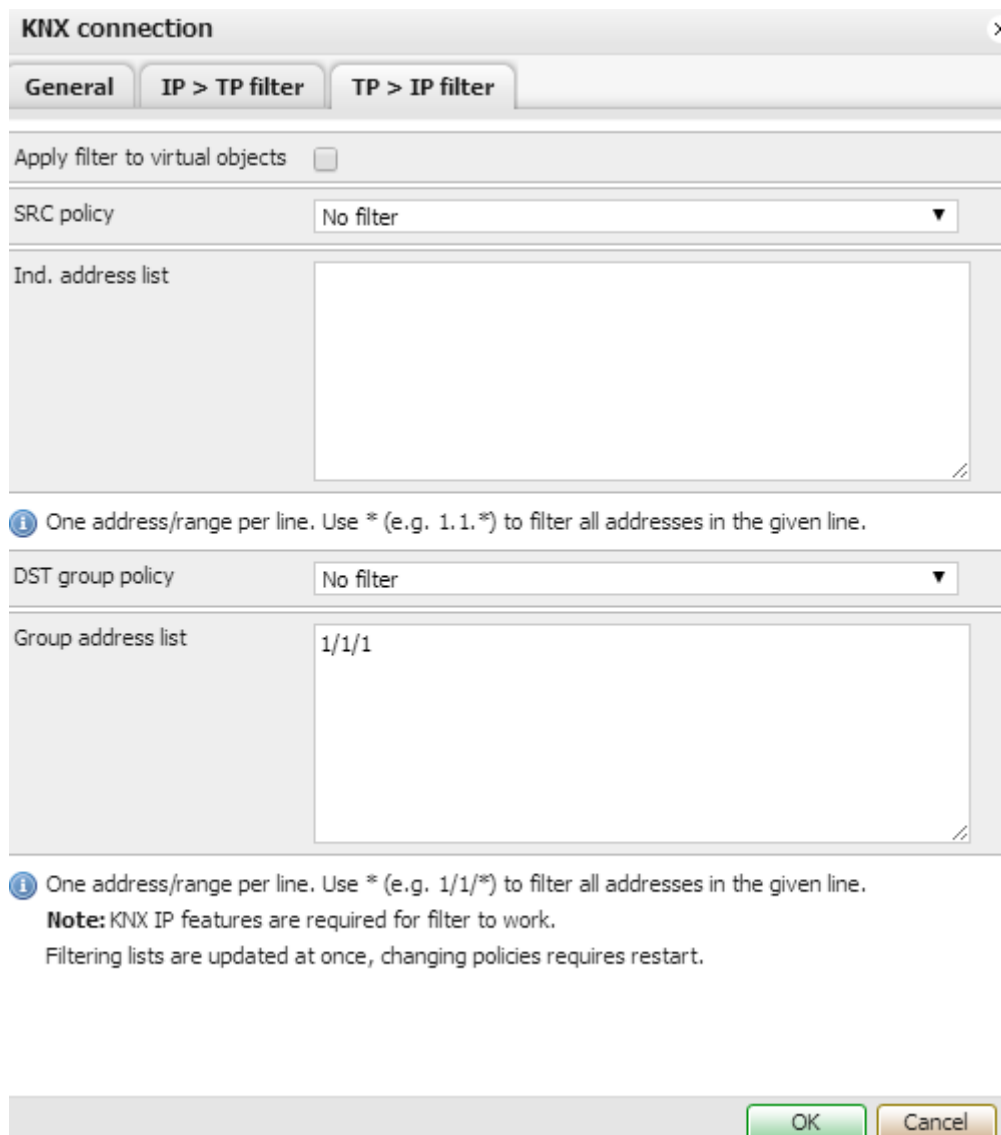

KNX connection

General | **IP > TP filter** | TP > IP filter

Apply filter to virtual objects ☐

SRC policy: No filter

Ind. address list

DST group policy: No filter

Group address list: 1/1/1

*One address/range per line. Use * (e.g. 1.1.*) to filter all addresses in the given line.*

Note: KNX IP features are required for filter to work.
Filtering lists are updated at once, changing policies requires restart.


OK Cancel

- **Apply filter to virtual objects** – either to apply filter policy to objects added in Objects tab as virtual objects without attraction to bus
- **SRC policy** [No filter / Accept selected individual addresses / Drop selected individual addresses]– policy to apply to the list of source individual addresses
- **Ind. address list** – list of individual addresses. One address/range per line. Use * (e.g. 1.1.*) to filter all addresses in the given line.
- **DST group policy** [No filter / Accept selected group addresses / Drop selected group addresses]– policy to apply to the list of destination group addresses
- **Group address list** – list of group addresses. One address/range per line. Use * (e.g. 1/1/*) to filter all addresses in the given line.

Note! KNX IP features should be on for filter to work. Filtering lists are updated at once, changing policies requires restart.

9.9. KNX statistics

KNX related statistics can be found in *Network* → *KNX statistics* menu.

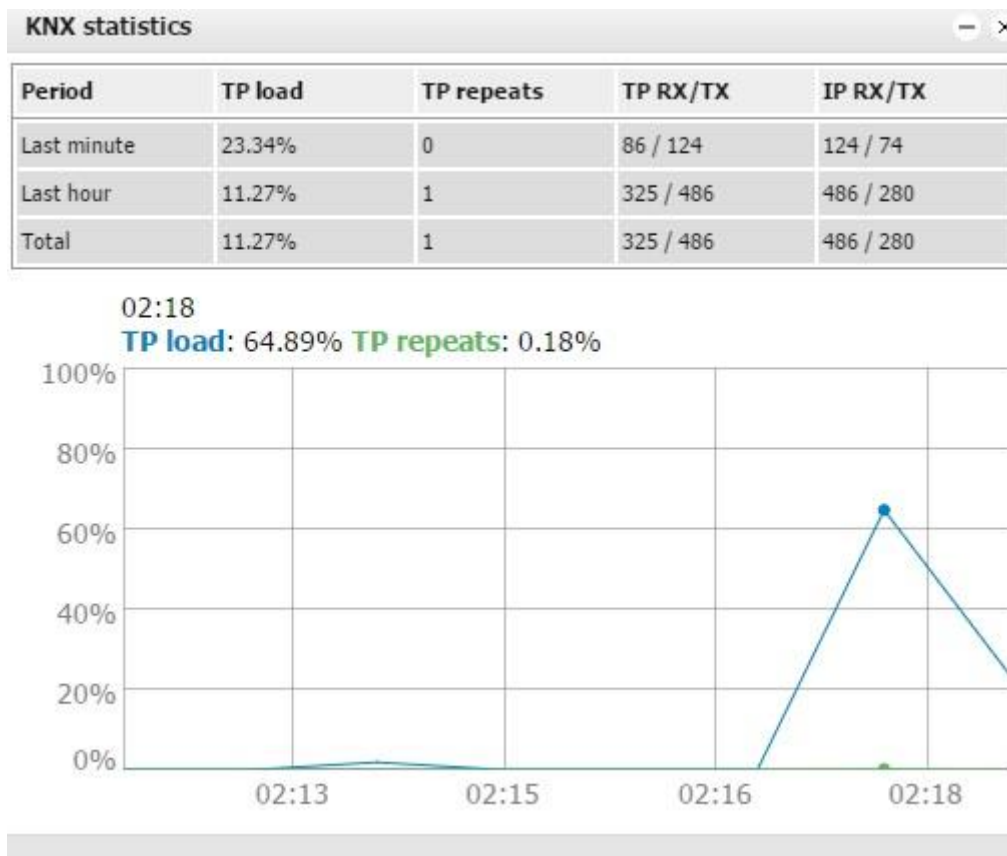

9.10. BACnet settings

BACnet server specific configuration can be done in *Network* → *BACnet Settings*.

Server enabled	☐
Device ID	127001
Password	mybacpwd
Object priority	16
Add group address to object name	☐
Port	47808
BBMD IP	
BBMD port	
BBMD lease time (seconds)	

OK Cancel

Server enabled – specify if BACnet server is enabled or not

Device ID – device ID in BACnet network

Password – device password

Object priority – object priority

Add group address to object name – add automatically the address to object name


Port – port number

BBMD IP – BACnet router IP. When router IP and port are set, LM will act as a foreign device and will attempt to register with BACnet router.

BBMD port – BACnet router port. When router IP and port are set, LM will act as a foreign device and will attempt to register with BACnet router

BBMD lease time (seconds) – registration resend interval

To make KNX/EIB objects BACnet readable/writable, mark necessary objects in LogicMachine as “Export object”. Binary objects will appear as Binary Values, other numeric values will appear as Analog Values. Other types are not currently supported. KNX bus write changes priority array value at configured object priority index

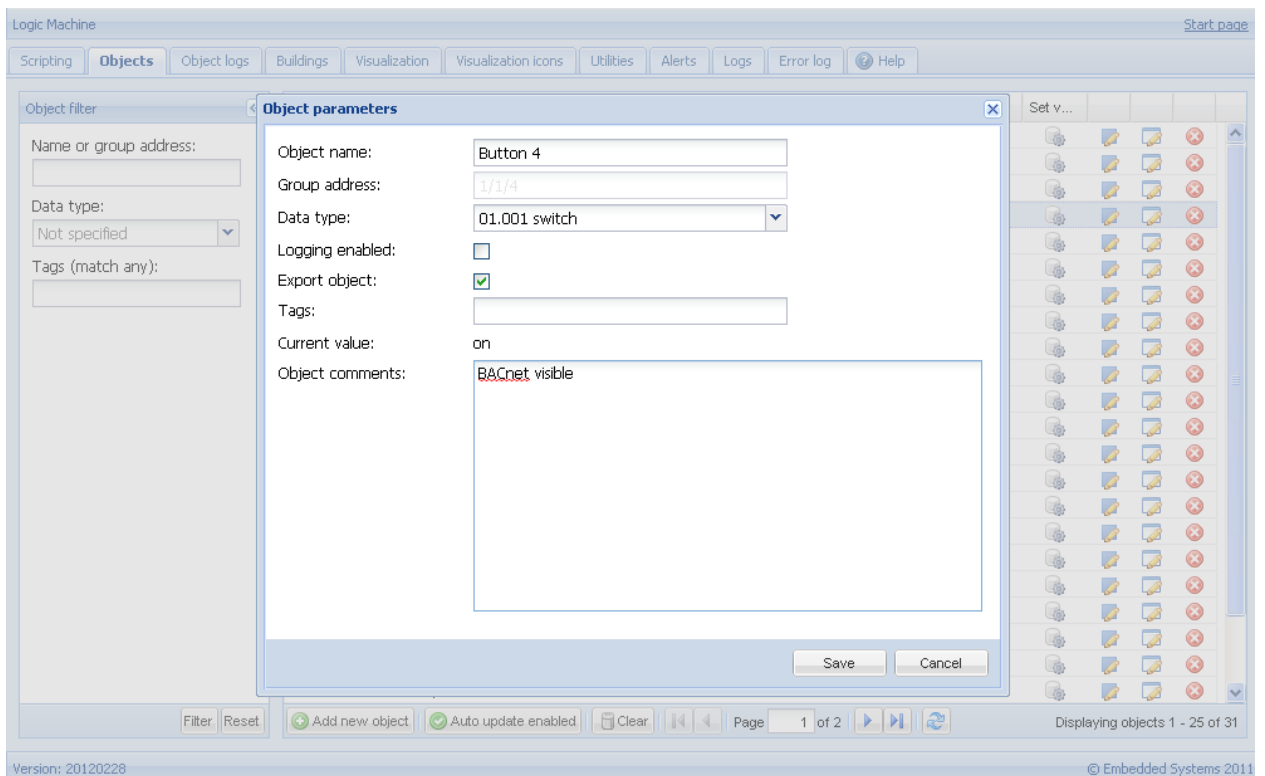

9.11. BACnet objects

In *Network* → *BACnet objects* you can see marked objects on LogicMachine which are sent to BACnet network.

BACnet objects

— ×

Device name: LogicMachine_222

Device ID: 222

Object priority: 16


Port: 47808

Download CSV

Type	Instance	Device name	Current value
2 (AV)	6500	PassivPlus 1 (3.1.100)	29
2 (AV)	6501	PassivPlus 2 (3.1.101)	29

9.12. HTTP server

In case additional www ports are needed to run the web-server on, use *Network* → *HTTP server* menu. Default HTTP port is 80, default HTTPS port is 443.

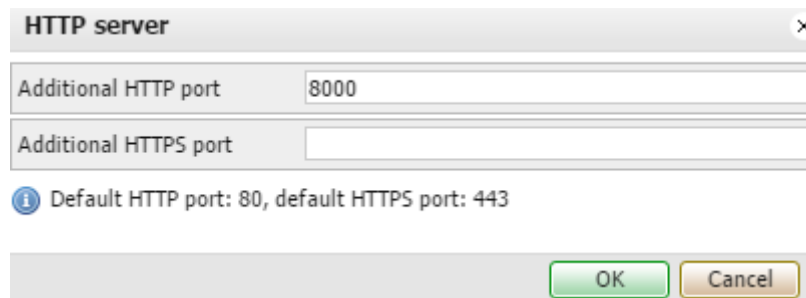


The screenshot shows a dialog box titled "HTTP server" with a close button (X) in the top right corner. It contains two input fields: "Additional HTTP port" with the value "8000" and "Additional HTTPS port" which is empty. Below these fields is an information icon (i) followed by the text "Default HTTP port: 80, default HTTPS port: 443". At the bottom right are "OK" and "Cancel" buttons.

9.13. NTP client/server

Client status when enabled LM obtaining data from up to four selected servers.

Local server status when enabled LM can serve as local NPT server for other LMs or other devices.

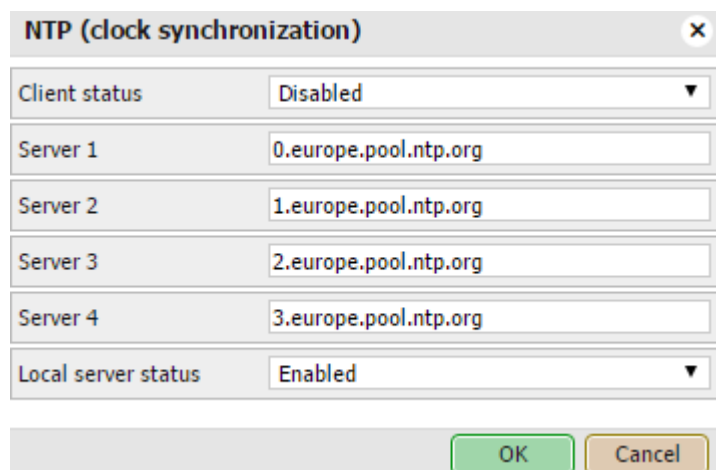


The screenshot shows a dialog box titled "NTP (clock synchronization)" with a close button (X) in the top right corner. It contains several configuration options: "Client status" set to "Disabled", "Server 1" set to "0.europe.pool.ntp.org", "Server 2" set to "1.europe.pool.ntp.org", "Server 3" set to "2.europe.pool.ntp.org", "Server 4" set to "3.europe.pool.ntp.org", and "Local server status" set to "Enabled". At the bottom right are "OK" and "Cancel" buttons.

9.14. HTTP SSL certificate

SSL Certificates are small data files that digitally bind a cryptographic key to a device's details. When installed on a web server, it activates the padlock and the https protocol and allows secure connections from a web server to a browser.

There is amount of online SSL certificate providers some SSL certificates are free some are paid.

- **Upload new private key/certificate** – for upload existing RSA key/SSL certificate
- **Generate new private key/certificate** – generate RSA private key/SSL certificate from one already installed.

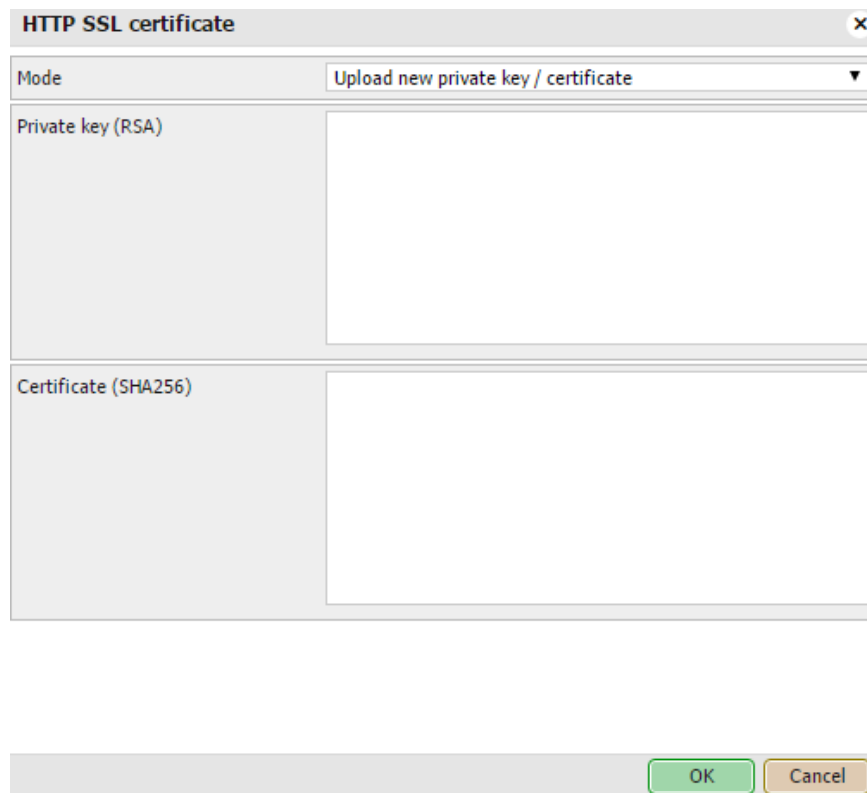

The screenshot shows a window titled "HTTP SSL certificate". Inside the window, there is a "Mode" dropdown menu with the selected option "Upload new private key / certificate". Below this, there are two large text input fields. The first field is labeled "Private key (RSA)" and the second field is labeled "Certificate (SHA256)". At the bottom right of the window, there are two buttons: "OK" and "Cancel".

9.15. FTP server

You can enable access to FTP server of LogicMachine by enabling this service in *Service* → *FTP Server*.

FTP server

Server status: Enabled

Port: 21

Username: ftp

Password:

Username: apps

Password:

External IP:

Passive mode min port:


Passive mode max port:

i Leave password blank to keep it unchanged. External IP and passive mode ports must be set when you want to access FTP behind NAT. Make sure both FTP port and passive mode port range are forwarded on your router.

OK Cancel

- **Server status** – define either FTP server is enabled or disabled
- **Port** – port of the service
- **Username** – login name, *ftp*
- **Password** – password for user *ftp*, length 4-20 symbols
- **Username** – login name to user directory <http://IP/user>, *apps* user. You can enable or disable password authorization for this directory in *Logic Machine* → *User access* → *User access settings*
- **Password** – password for user *apps*, length 4-20 symbols
- **Passive mode min port** – FTP passive mode minimum port
- **Passive mode max port** – FTP passive mode maximum port

9.16. Remote services

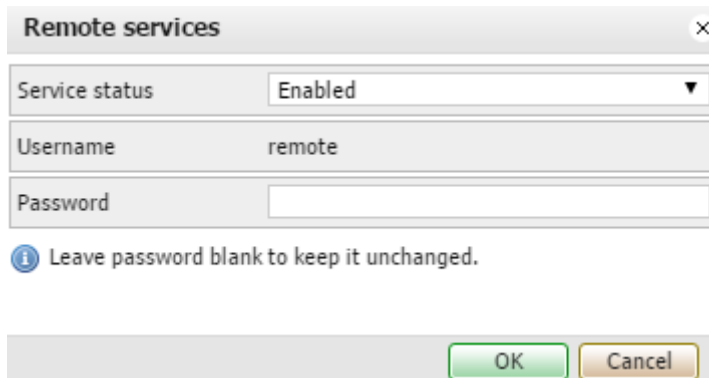

- **Service status** – define either remote services are enabled or disabled
- **Username** – user name
- **Password** – password

URL

Change the IP and password according to your LM settings

<http://remote:remote@192.168.0.10/scada-remote?m=rss&r=alerts>

Request parameters

m set the return value format

- **json**
- **xml**
- **rss** only for alerts and errors

r requested function name

- **alerts** newest 50 alerts

Return values:

- **alert** alert text
- **time** alert time (UNIX timestamp)
- **date** alert time (RFC date)

- **errors** newest 50 errors

Return values:

- `error` error text
- `script` error script name
- `time` error time (UNIX timestamp)
- `date` error time (RFC date)

- `objects` list of objects marked for export, ordered by update time

Return values:

- `address` object address (e.g. "1/1/1")
- `name` object name (e.g. "My object")
- `data` decoded object value (e.g. 42 or "01.01.2012")
- `datatype` object datatype (e.g. 1 or 5.001)
- `time` object update time (UNIX timestamp)
- `date` object update time (RFC date)
- `comment` object comment (e.g. "Second floor entry lights")
- `tags` optional array of object tags (e.g. "Light", "Second floor")

- `grp` execute one of grp functions

Parameters:

- `fn` function name, *required*
 - `getvalue` returns current object value if found
 - `find` return object info
 - `write` send KNX bus group write telegram
 - `response` send KNX bus group response telegram
 - `read` send KNX bus group read telegram
 - `update` update local LM object value without KNX bus group write
- `alias` group address or name, *required*
- `value` new value to write, *required* for write / response / update, except for time and date datatypes

Parameters for `time` datatype:

- `day` number (0-7), day of the week, *optional*
- `hour` number (0-23)

- `minute` number (0-59)
- `second` number (0-59)

Parameters for `date` datatype:

- `day` number (1-31)
- `month` number (1-12)
- `year` number (1990-2089)
- `datatype` *optional* for write / response / update, data type is taken from the **database** if not specified

Possible values:

<code>bool</code>	<code>bit2</code>	<code>bit4</code>	<code>char</code>	<code>uint8</code>	<code>int8</code>	<code>uint16</code>	<code>int16</code>	<code>float16</code>
<code>time</code>	<code>date</code>	<code>uint32</code>	<code>int32</code>	<code>float32</code>	<code>access</code>	<code>string</code>		

Examples

Write value of `50` to `1/1/1`

<http://remote:remote@192.168.0.10/scada-remote?m=json&r=grp&fn=write&alias=1/1/1&value=50>

Write boolean value to `1/1/2`, you can use `true` or `false`, as well as `1` or `0`


<http://remote:remote@192.168.0.10/scada-remote?m=json&r=grp&fn=write&alias=1/1/2&value=true>

Explicit datatype setting to `scale`, send `50` to `1/1/1`

<http://remote:remote@192.168.0.10/scada-remote?m=json&r=grp&fn=write&alias=1/1/1&value=50&datatype=scale>


9.17. System monitoring

System monitoring is used to monitor system processes, hardware. In case of failure, the system will be rebooted or specific task restarted.

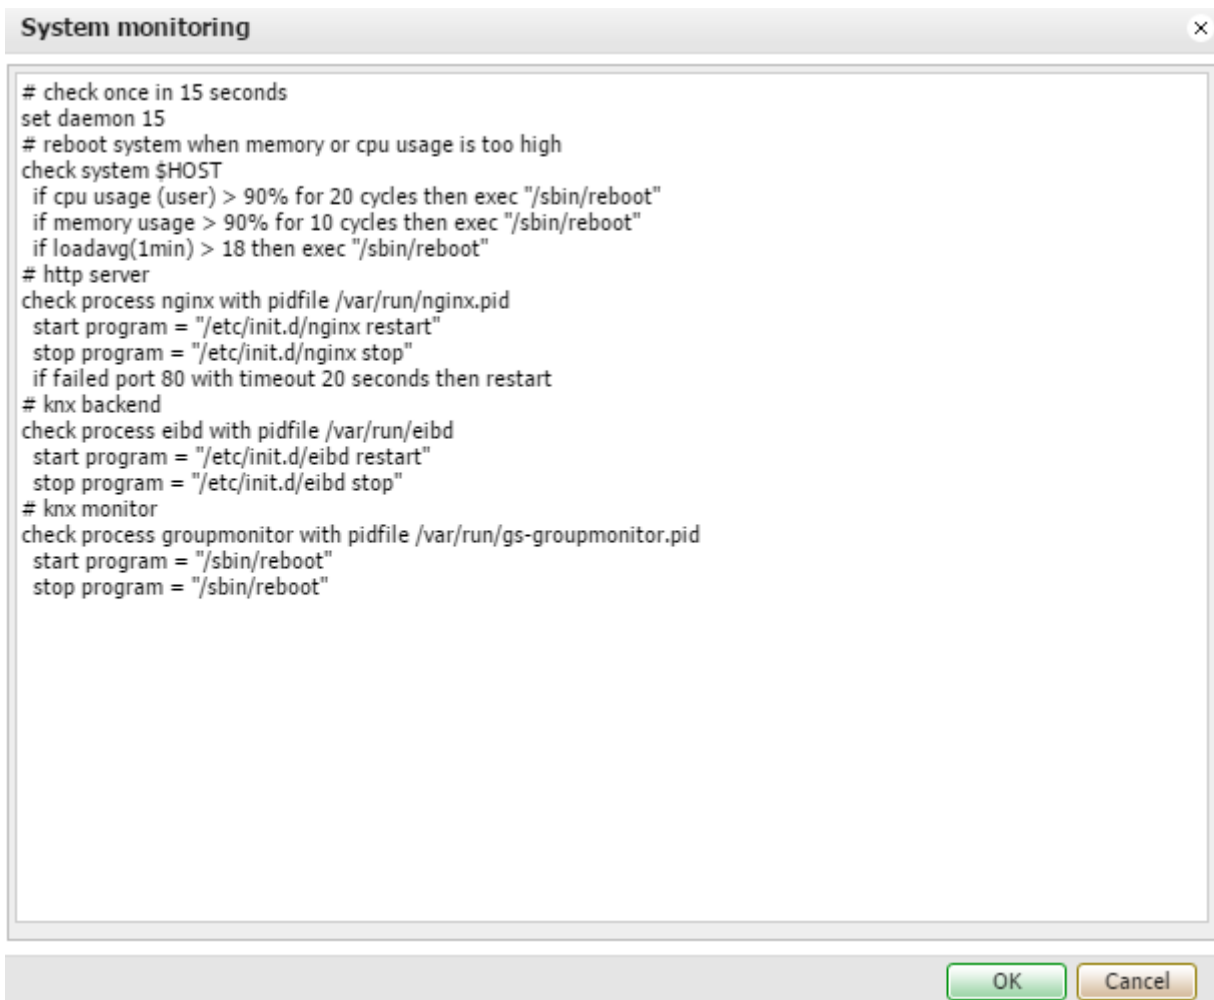

9.18. Remote diagnostics

Remote diagnostics should be enabled only when there is remote Embedded Systems support necessary for the device. It enables SSH access to the device.

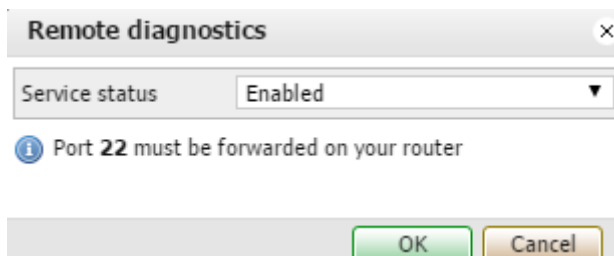

- **Service status** – define either remote SSH access is enabled or disabled.

9.19. NTP client

NTP servers can be specified in *Service* → *NTP client* window.

NTP client (clock synchronization)

Server 1

0.europe.pool.ntp.org

Server 2

1.europe.pool.ntp.org

Server 3

2.europe.pool.ntp.org

Server 4

3.europe.pool.ntp.org


OK

Cancel

9.20. System status


General system status with CPU usage, Memory usage, Partition, Serial ports information can be seen in *Status* → *System status* window.

System status	
GeneralMemory usagePartitionsSerial ports	
Parameter	Value
CPU model	ARM926EJ-S rev 5 (v5l)
CPU BogoMips	227.12
Linux kernel version	3.18.24
System uptime	2d 2h 0m
Load averages	0.01 0.03 0.05

 

9.21. Network utilities

Ping and *Traceroute* utilities are located in *Status* → *Network utilities* window. Both IP address and DNS names are accepted.

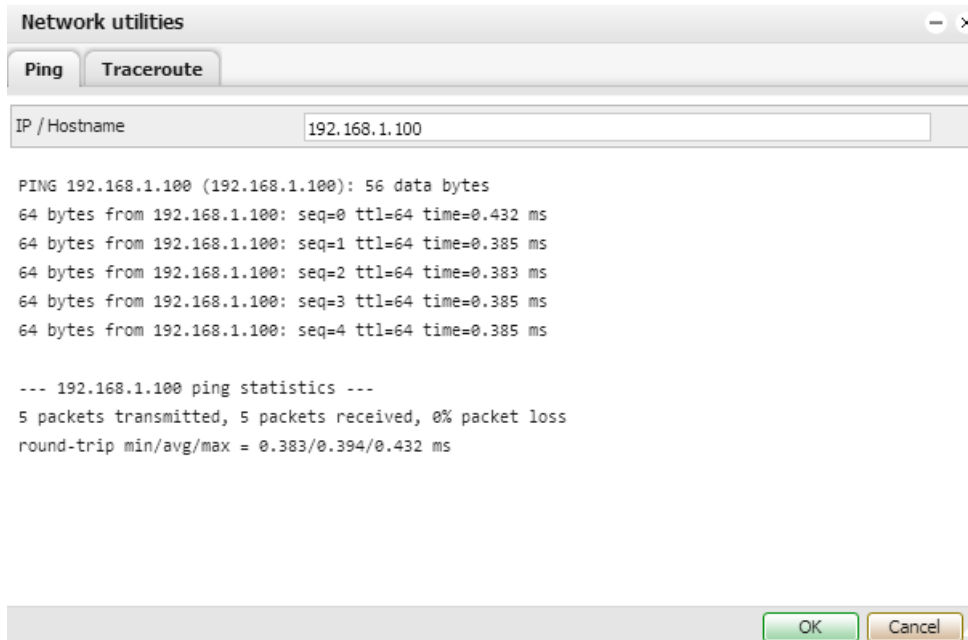


9.22. System log

Operating system log is available in *Status* → *System log*.



9.23. Running processes

System running processes can be seen in *Status* → *Running processes* window.

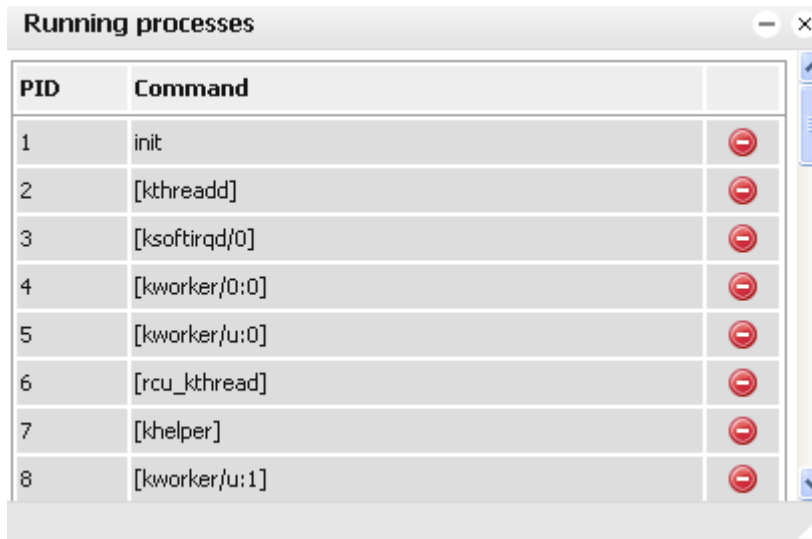

The screenshot shows a window titled "Running processes" with a table of system processes. The table has three columns: "PID", "Command", and a third column with red minus icons. The processes listed are:

PID	Command	
1	init	⊖
2	[kthreadd]	⊖
3	[ksoftirqd/0]	⊖
4	[kworker/0:0]	⊖
5	[kworker/u:0]	⊖
6	[rcu_kthread]	⊖
7	[khelper]	⊖
8	[kworker/u:1]	⊖

10. User mode schedulers

User mode schedulers contains user-friendly interface for end-user to manage scheduler tasks, for example, specify thermostat values depending of the day of the week, time and holidays.

10.1. Events

Each scheduler is mapped to specific group address in administration panel (*see section 1.4 of this manual*).

The screenshot displays the 'Outdoor lamp' scheduler interface. On the left, a sidebar contains a blue button labeled 'Outdoor lamp' and two links, 'AC' and 'Holidays'. The main area shows the scheduler's status as 'active' for the period '1 January - 31 December', with an 'Edit' button. Below this is a table of events:

Value	Run at
Light off	12:00 Tu-Fr
Light off	13:00 Sa-Su Holiday

On the right, the 'Add event' dialog is open. It includes a checkbox for 'Event is active', a 'Run at' section with time and day selectors (showing 12:00 and Tu-Fr), a 'Value' dropdown menu set to 'Light on', and 'Save' and 'Cancel' buttons at the bottom.

When adding the new task for specific scheduler you can specify day of the week, start time, value to send to the object.

10.2. Holidays

In *Holidays* special days are specified which are then used adding new events.

The screenshot shows a web interface titled "Holidays". On the left is a sidebar with a menu containing "Outdoor lamp", "AC", and "Holidays" (which is highlighted in blue). The main area contains a table with two columns: "Name" and "Date".

Name	Date
New Year	31 December 2013
New holiday	24 October


At the top right of the table area is a green button labeled "Add holiday". To the right of each row in the table are two buttons: "Edit" (with a pencil icon) and "Delete" (with an 'x' icon).

Click on *Add new holiday* button to specify a holiday.


This screenshot shows the same "Holidays" interface, but with the "Add holiday" modal open on the right side. The modal has a "Name" field with the text "New holiday" and a "Date" section. The date section includes a calendar for "October 2013". The calendar shows days from 1 to 31, with the 15th highlighted in blue. Below the calendar is a checkbox labeled "Recurring every year" which is currently unchecked. At the bottom of the modal are "Save" and "Cancel" buttons.

11. Trend logs

Trend logs are end user interface for trends (*defined in administrator interface in section 1.5*).

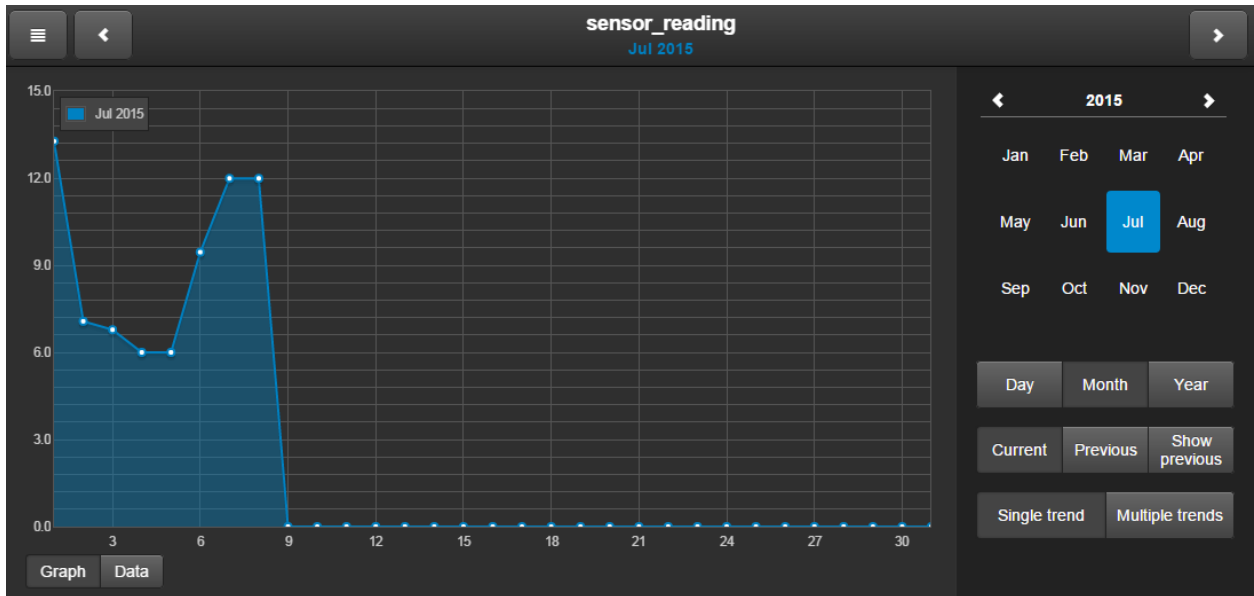


By clicking on the menu button  you can change to different trends where each is mapped to a specific KNX group address.

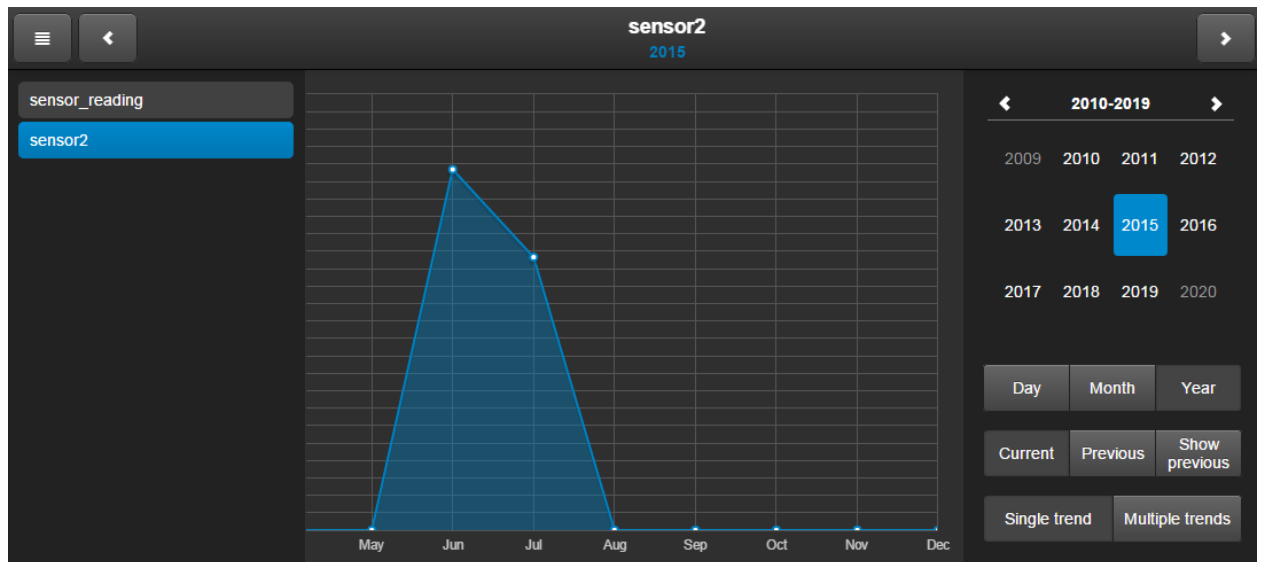


- **Day** – Trend with Day view
- **Month** – Trend with Month view
- **Year** – Trend with year view
- **Current** – Current trend is drawn in blue, you can choose either to show Day, Month or Year view


- **Previous** – previous time period, you can choose either to show Day, Month or Year view
- **Show previous** – when enabled a yellow trend line appears showing *Previous* trend above *Current* trend

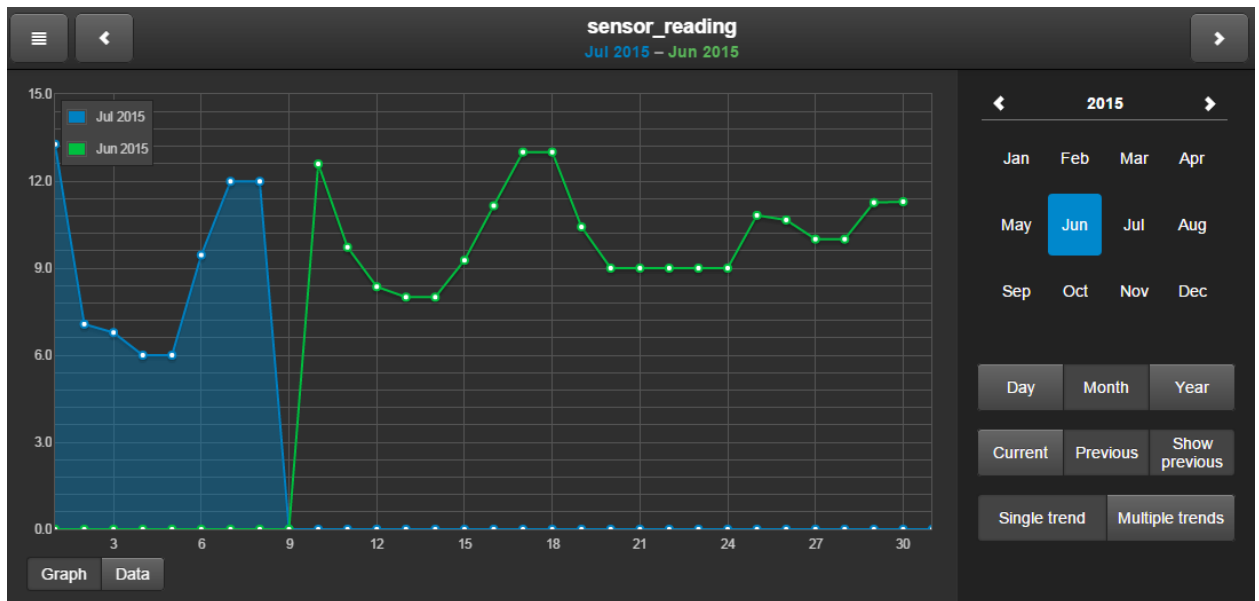


- **Single trend** – view single trend
- **Multiple trends** – view multiple trends. When this mode is chosen, you can select several object on the left side to be shown

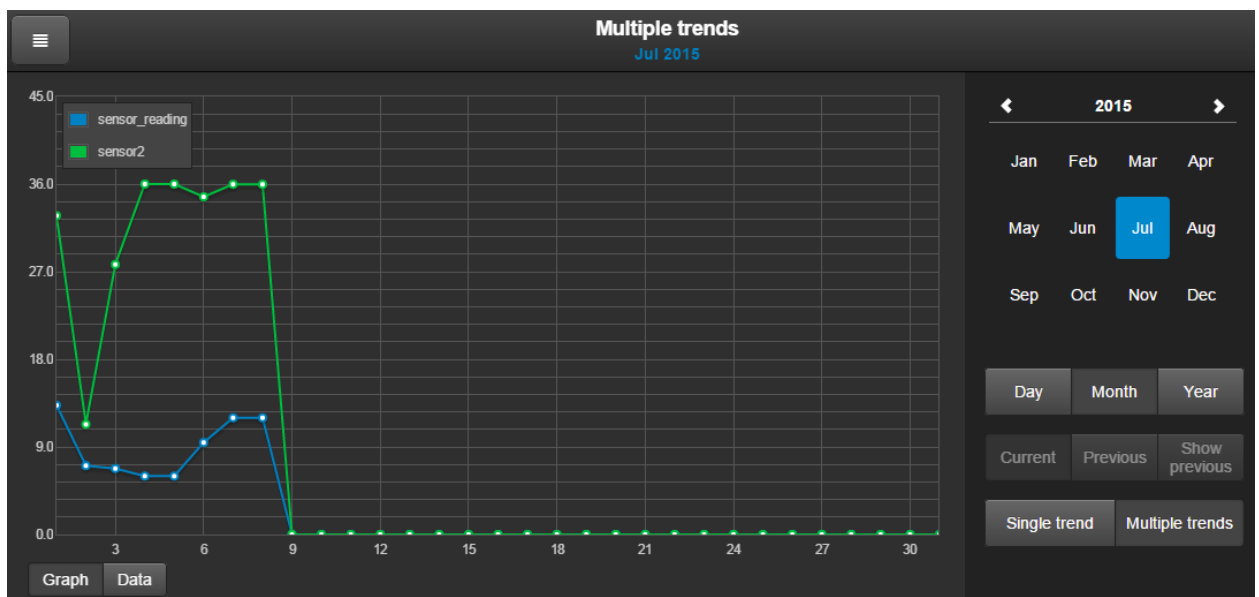

There is an automatic secondary axis – for two trends with different units / scales.

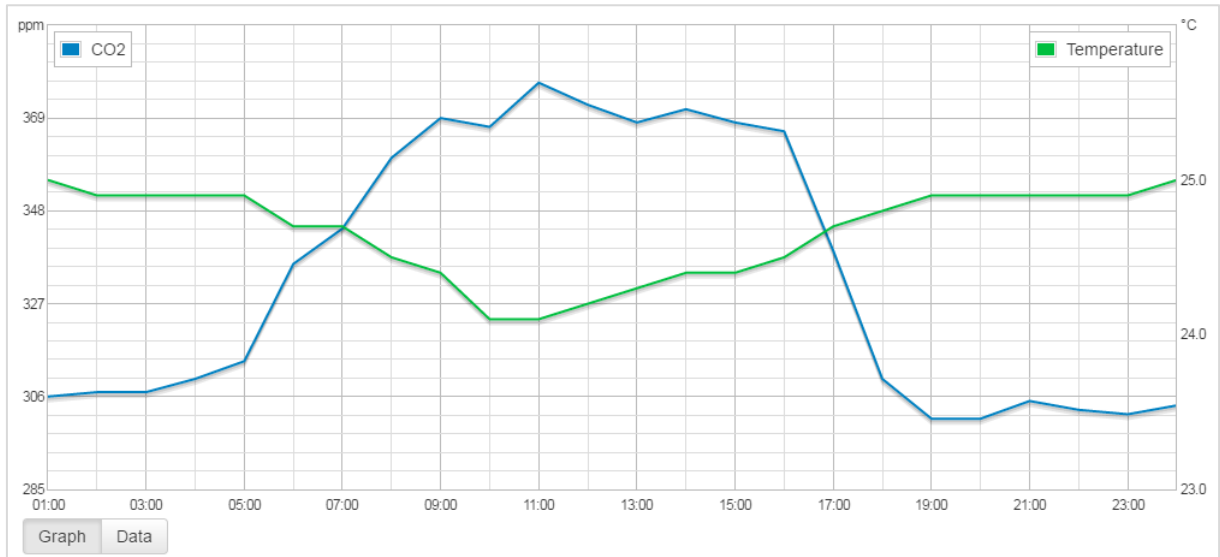


By clicking on *Data* button, data points will be shown in a way of table which can be later exported as CSV file.

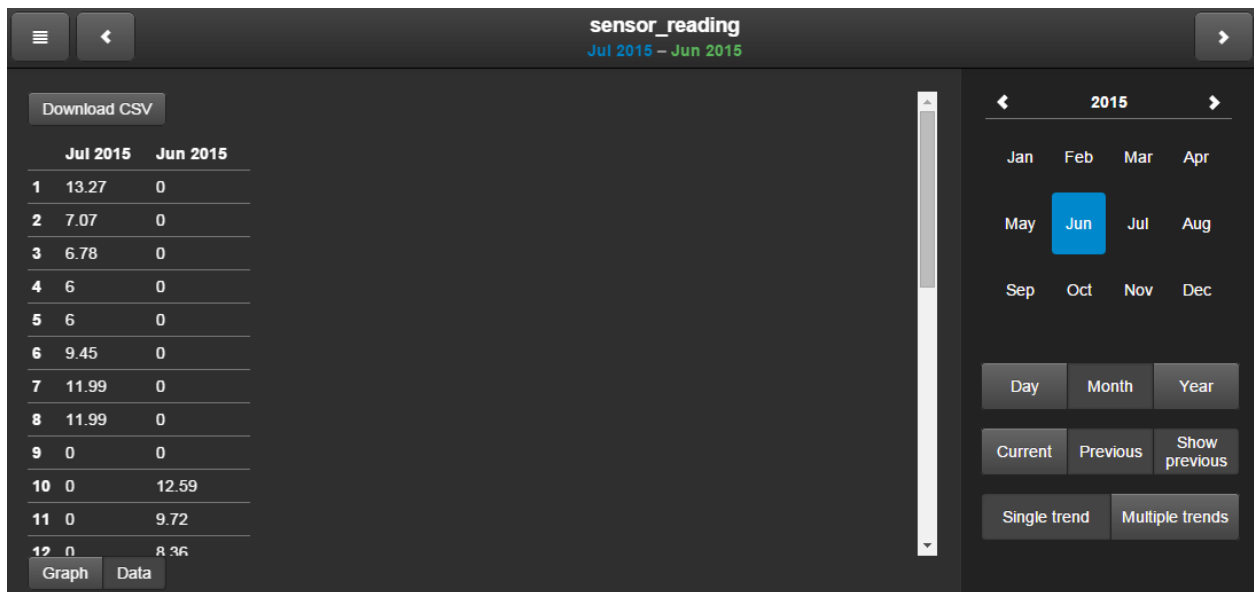

12. Modbus RTU/TCP interconnection with LM

Modbus RTU is supported over RS-485 ports. Modbus TCP is supported over Ethernet port. Modbus communication is done either from visual Modbus mapper (only 1 RS485 interface can be defined through visual mapper. If you need to configure another RS-485, use scripting) for Modbus Master or through scripts for Modbus Slave.

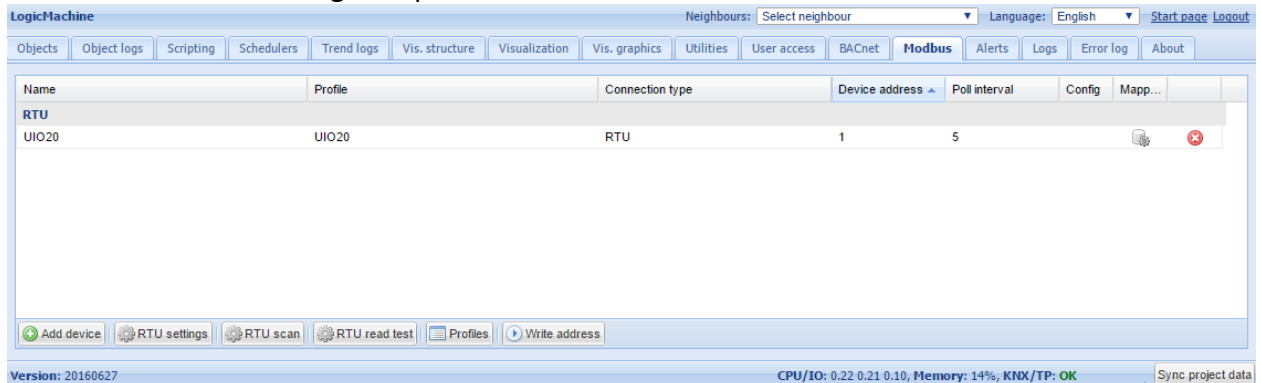

Modbus Master – user graphical mapper interface in Modbus tab

Modbus Slave – to use LM as Modbus Slave, disable Modbus RTU in Modbus→RTU settings, and use scripts for the communication

12.1. Modbus device profile

First thing you should do is to define Modbus device profile – it is a *.json file with the following structure e.g. a fragment from UIO20 device by Embedded Systems:

```
{
  "manufacturer": "Embedded Systems",
  "description": "Universal 16+4 I/O module",
  "mapping": [
    { "name": "Output 1", "bus_datatype": "bool", "type": "coil", "address": 0, "writable": 1 },
    { "name": "Input 1", "bus_datatype": "float16", "type": "inputregister", "address": 0, "value_multiplier": 0.001, "units": "V" }
  ]
}
```

Name – Object name, e.g. Output 2 (String, Required)

Bus_datatype - KNX object data type, key from [dt](#) table, e.g. float32 (String/Number, Required)

Type – Modbus register type, possible values: [coil](#) [discreteinput](#) [register](#) [inputregister](#) (String, Required)

Address – Register address (0-based) (Number, Required)

Writable - Set to [true](#) to enable writing to register if [type](#) is either [coil](#) or [register](#) (Boolean)

Datatype – Modbus value data type. If set, conversion will be done automatically.

Possible values: [uint16](#) [int16](#) [float16](#) [uint32](#) [int32](#) [float32](#) [uint64](#) [int64](#) [quad10k](#) [s10k](#) (String)

Value_delta – New value is sent when the difference between previously sent value and current value is larger than delta. Defaults to 0 (send after each read) (Number)

Value_multiplier – Multiply resulting value by the specified number, $value = value_base + value * value_multiplier$ (Number)

Value_bitmask – Bit mask to apply, shifting is done automatically based on least significant 1 found in the mask (Number)

Value_nan – Array of 16-bit integers. If specified and read operation returns the same array no further processing of value is done (Array)

Value_conv – Apply one of built-in conversion functions (String, Internal)

Value_custom – Name of a built-in enumeration or a list of [key -> value](#) mapping, resulting value will be 0 if key is not found (String/Object)

Internal – Not visible to user when set to [true](#), should be used for [scale](#) registers (Boolean)

Units – KNX object units/suffix (String)


Address_scale – Address of register containing value scale, $value = value * 10 ^ scale$ (Number)

Read_count – Number of register to read at once (for devices that only support reading of a specific block of registers) (Number)

Read_swap – Swap register order during conversion (endianness) (Boolean)

Read_offset – Position of first register of data from the block of registers (0-based) (Number)


When the Modbus device profile file is created, upload it by clicking on *Profiles* button.

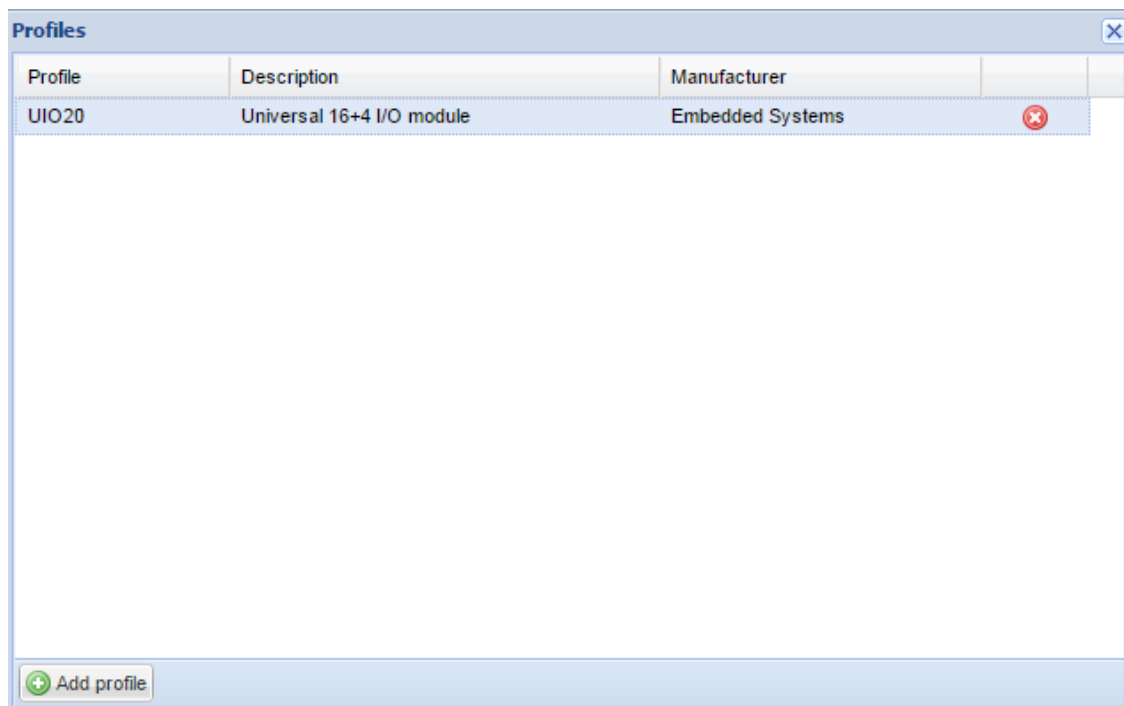

12.2. Reading ModBus RTU coil / register from the interface

As creating new Modbus profiles is not the most user-friendly task, we have added a new feature that allows reading any Modbus coil or register straight from the user interface. This should help users to find correct settings and addresses before creating new profiles. For now it only works with RTU connection, TCP is planned to be implemented later.


By pressing RTU read test button you get the following options:

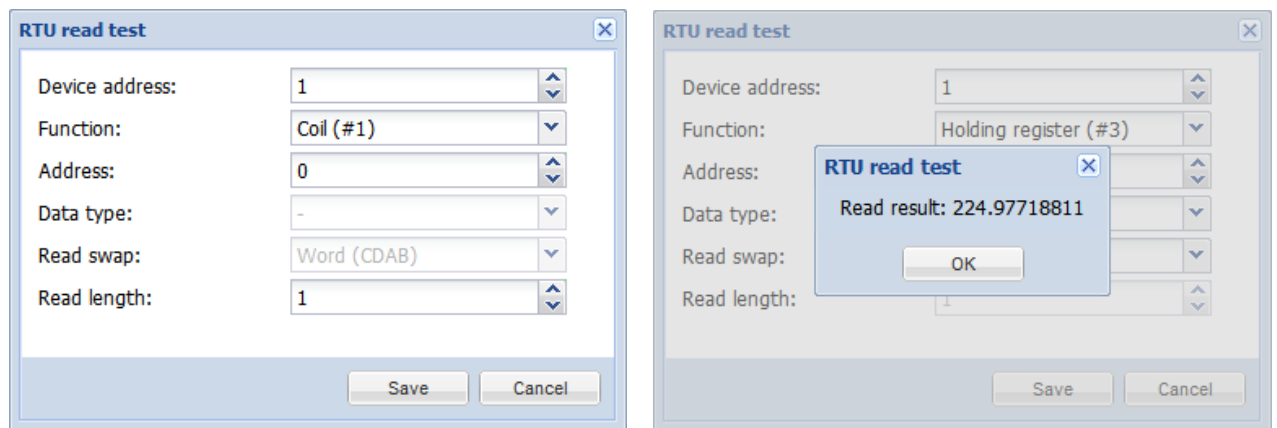

- **Device address** – ModBus device address
- **Function (Coil, Discrete input, Holding register, Input register)** – ModBus function
- **Address** – address where data is located
- **Data type** – data type, can be chosen only for registers
- **Read swap (None (ABCD); Word (CDAB); Byte (BADC); Byte and word (DCBA))** – read data swapped in chosen way
- **Read length** – read length of registers/coils


12.3. RTU Scan

Scan RS-485 ports for connected ModBus RTU devices. Only devices that are not already present and have a valid profile will be added. Operation will finish once the whole range has been scanned or 30 seconds have elapsed

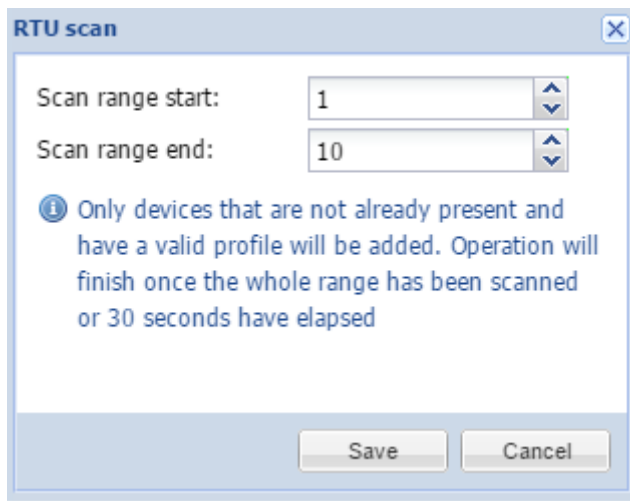

- **Scan range start** – start ModBus device address
- **Scan range end** – end ModBus device address


12.4. RTU settings

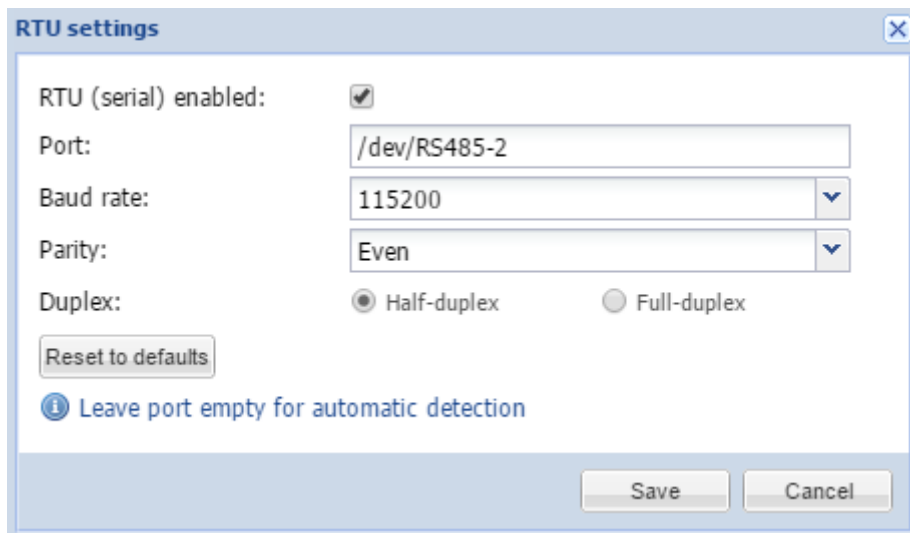

- **RTU (serial) enabled** – defines either Modbus RTU is enabled
- **Port (/dev/RS485-1; /dev/RS485-2)** – specify the port to communicate or leave blank for automatic detection.
- **Baud rate (1200 .. 500000)** – baud rate
- **Parity (None 1 stop bit; Odd, Even, None 2 stop bits)** – parity
- **Duplex** – define either half or full duplex communication

12.5. Adding Modbus device

Once profiles are added, add Modbus device by clicking *Add device* button.

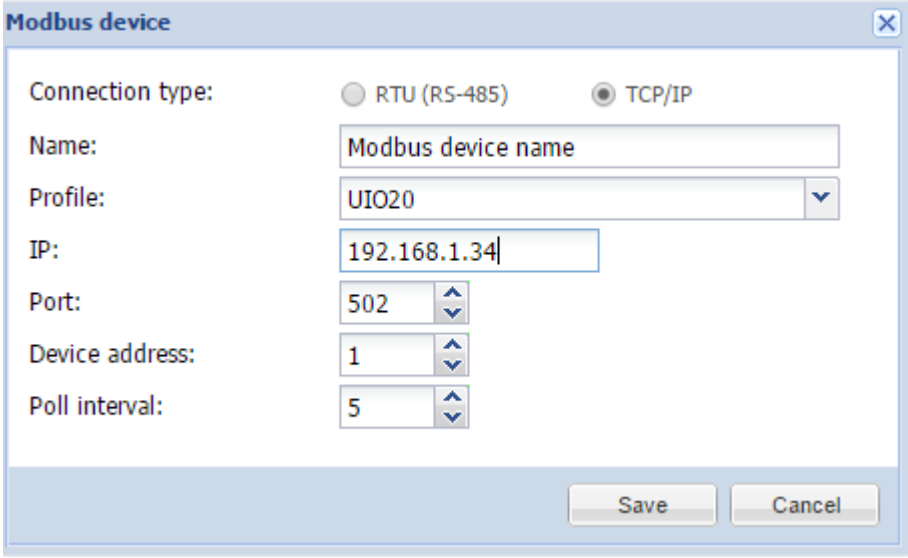


The 'Modbus device' dialog box contains the following fields and controls:

- Connection type:** Radio buttons for 'RTU (RS-485)' and 'TCP/IP'. 'TCP/IP' is selected.
- Name:** Text input field containing 'Modbus device name'.
- Profile:** Dropdown menu showing 'UIO20'.
- IP:** Text input field containing '192.168.1.34'.
- Port:** Spin box set to '502'.
- Device address:** Spin box set to '1'.
- Poll interval:** Spin box set to '5'.
- Buttons:** 'Save' and 'Cancel' buttons at the bottom right.

- **Connection type** – define either it is Modbus RTU or Modbus TCP connection
- **Name** – name of the device
- **Profile** – profile of the device
- **Device address** – device address
- **Poll interval (seconds)** – interval to poll the device
- **IP** – IP address of the device in case Modbus TCP is used
- **Port** – Communication port of the device in case Modbus TCP is used


Once the device is added, you can do mapping to KNX addresses by clicking on  icon. First, you see a list of all objects on the Modbus device.

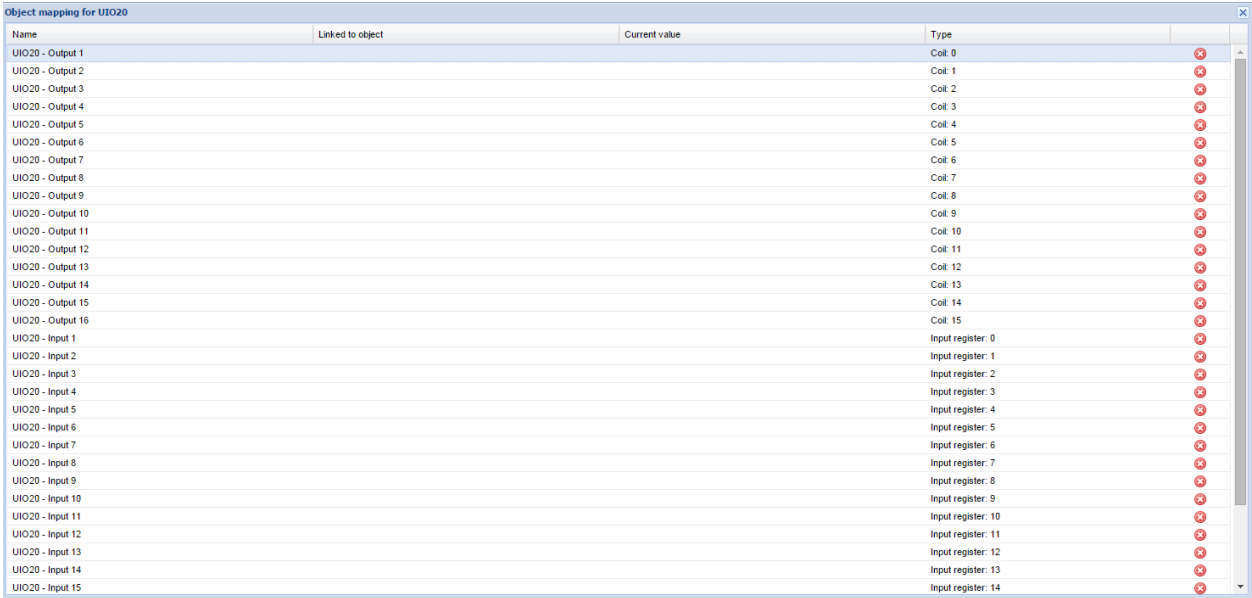

The 'Object mapping for UIO20' window displays a table of objects available on the Modbus device:

Name	Linked to object	Current value	Type
UIO20 - Output 1			Coil: 0
UIO20 - Output 2			Coil: 1
UIO20 - Output 3			Coil: 2
UIO20 - Output 4			Coil: 3
UIO20 - Output 5			Coil: 4
UIO20 - Output 6			Coil: 5
UIO20 - Output 7			Coil: 6
UIO20 - Output 8			Coil: 7
UIO20 - Output 9			Coil: 8
UIO20 - Output 10			Coil: 9
UIO20 - Output 11			Coil: 10
UIO20 - Output 12			Coil: 11
UIO20 - Output 13			Coil: 12
UIO20 - Output 14			Coil: 13
UIO20 - Output 15			Coil: 14
UIO20 - Output 16			Coil: 15
UIO20 - Input 1			Input register: 0
UIO20 - Input 2			Input register: 1
UIO20 - Input 3			Input register: 2
UIO20 - Input 4			Input register: 3
UIO20 - Input 5			Input register: 4
UIO20 - Input 6			Input register: 5
UIO20 - Input 7			Input register: 6
UIO20 - Input 8			Input register: 7
UIO20 - Input 9			Input register: 8
UIO20 - Input 10			Input register: 9
UIO20 - Input 11			Input register: 10
UIO20 - Input 12			Input register: 11
UIO20 - Input 13			Input register: 12
UIO20 - Input 14			Input register: 13
UIO20 - Input 15			Input register: 14


Click on specific object to do mapping.

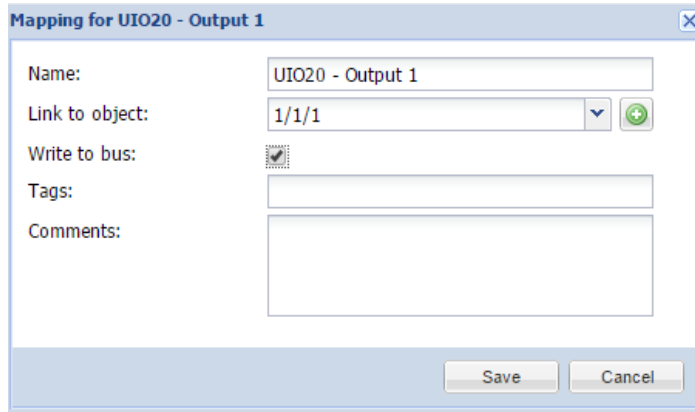

The dialog box titled "Mapping for UIO20 - Output 1" contains the following fields and controls:

- Name:** A text box containing "UIO20 - Output 1".
- Link to object:** A dropdown menu showing "1/1/1" and a green plus icon to the right.
- Write to bus:** A checkbox that is currently checked.
- Tags:** An empty text box.
- Comments:** A larger empty text box.
- Buttons:** "Save" and "Cancel" buttons at the bottom right.

12.6. Program address for UIO20 Modbus device

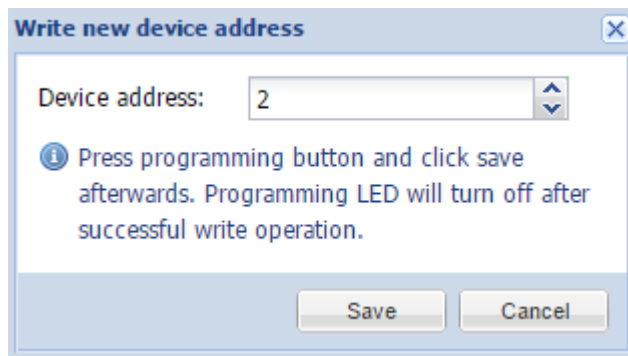

The dialog box titled "Write new device address" contains the following fields and controls:

- Device address:** A spinner box with the value "2".
- Information:** A message icon followed by the text: "Press programming button and click save afterwards. Programming LED will turn off after successful write operation."
- Buttons:** "Save" and "Cancel" buttons at the bottom right.

There is a separate Write address button to program address for UIO20 device. Press programming button and click save afterwards. Programming LED will turn off after successful write operation.

Once script is added, you can add the code in the Script Editor. There are lots of predefined code blocks in the Helpers.

12.7. Modbus Slave examples

Add the following code to *Common functions*

```
1. -- modbus proxy
2. mbproxy = {
3.   -- supported function list
4.   functions = {
5.     'readdo',
6.     'readcoils',
7.     'readdi',
8.     'readdiscreteinputs',
```

```

9. 'readao',
10. 'readregisters',
11. 'readai',
12. 'readinputregisters',
13. 'writebits',
14. 'writemultiplebits',
15. 'writeregisters',
16. 'writemultipleregisters',
17. 'reportslaveid',
18. 'getcoils',
19. 'getdiscreteinputs',
20. 'getinputregisters',
21. 'getregisters',
22. 'setcoils',
23. 'setdiscreteinputs',
24. 'setinputregisters',
25. 'setregisters',
26. },
27. -- new connecton init
28.   new =function()
29.   require('rpc')
30.   local mb =setmetatable({}, { __index = mbproxy })
31.
32.   mb.slaveid =0
33.   mb.rpc = rpc.client('127.0.0.1', 28002, 'mbproxy')
34.
35.   for _, fn in ipairs(mbproxy.functions)do
36.     mb[ fn ]=function(self, ...)
37.       return mb:request(fn, ...)
38.     end
39.   end
40.
41.   return mb
42. end
43. }
44.
45. -- set local slave id
46. function mbproxy:setslave(slaveid)
47.   self.slaveid = slaveid
48. end
49.
50. -- send rpc request for a specifc function
51. function mbproxy:request(fn, ...)
52.   local res, err = self.rpc:request({
53.     fn = fn,
54.     params ={ ... },

```



```

55.     slaveid = self.slaveid or 0,
56. })
57.
58. -- request error
59. if err then
60. return nil, err
61. -- request ok
62. else
63. -- reply with an error
64. if res[ 1 ]==nil then
65. return nil, res[2]
66. -- normal reply
67. else
68. return unpack(res)
69. end
70. end
71. end

```

Handler (resident script with 0 delay) configuration

1. *mb:open()*

Open Modbus TCP connection

2. *mb:setslave(10)*

set slave device id

3. *mb:setmapping(10, 10, 10, 10)*

set number coils, discrete inputs, holding registers and input registers

4. *mb:setwritecoilcb(function(coil, value)...*

callback function which is executed for each coil write

5. *mb:setwriteregistercb(function(coil, value)...*

callback function which is executed for each register write

Handler script example

```

1.  -- modbus init
2.  if not mb then
3.    require('luamodbus')
4.    mb = luamodbus.tcp()
5.    mb:open()
6.
7.    -- init slave storage for coils, discrete inputs, holding registers and input registers

```

```

8.     mb:setmapping(10, 10, 10, 10)
9.
10.    -- coil write callback
11.    mb:setwritecoilcb(function(coil, value)
12.    if coil == 0 then
13.        grp.write('1/1/1', value, dt.bool)
14.    else
15.        alert('coil: %d = %s', coil, tostring(value))
16.    end
17.    end)
18.
19.    -- register write callback
20.    mb:setwriteregistercb(function(register, value)
21.    if register == 0 then
22.        -- send value limited to 0..100
23.        grp.write('4/1/5', math.min(100, value), dt.scale)
24.    else
25.        alert('register: %d = %d', register, value)
26.    end
27.    end
28.    end
29.
30.    -- server part init
31.    if not server then
32.    require('rpc')
33.
34.    -- incoming data handler
35.    local handler = function(request)
36.    local fn, res
37.
38.        fn =tostring(request.fn)
39.
40.    if not mb[ fn ]then
41.    return{nil, 'unknown function ' .. fn }
42.    end
43.
44.    if type(request.params)=='table' then
45.    table.insert(request.params, 1, mb)
46.        res ={ mb[ fn ](unpack(request.params))}
47.    else
48.        res ={ mb[ fn ](mb)}
49.    end
50.
51.    return res
52.    end
53.

```

```

54.     server = rpc.server('127.0.0.1', 28002, 'mbproxy', handler, 0.01)
55.     end
56.
57.     mb:handleslave()
58.     server:step()

```

Example: event script which changes modbus slave coil (address 0)

Must be mapped to a group address with binary value.

```

1. value = event.getvalue()
2. mb = mbproxy.new()
3. mb:setcoils(0, value)

```

Example: event script which changes modbus slave register (address 5)

Must be mapped to a group address with scaling (0..100) value

```

1. value = event.getvalue()
2. mb = mbproxy.new()
3. mb:setregisters(5, value)

```

LM interconnection with PLC over Modbus TCP

sleep time = 0. It only supports binary objects as coils and 1-byte / 2-byte integer objects as registers. Number of coils and registers is not limited, object mapping can be set by filling coils, registers and regdt tables.

```

1. if not mb then
2.     require('genohm-scada.eibdgm')
3.     require('luamodbus')
4.
5.     -- list of coil mapping, starting from 0
6.     coils = { '1/1/1', '1/1/2' }
7.
8.     -- list of register mapping, starting from 0
9.     registers = { '2/2/2', '3/3/3' }
10.
11.    -- list of register data types, element count must match registers table
12.    regdt = { dt.int8, dt.uint16 }
13.
14.    -- knx group write callback
15.    function knxgroupwrite(event)
16.        local value
17.

```

```

18.  -- try to find matching coil
19.  for id, addr in ipairs(coils) do
20.      if event.dst == addr then
21.          value = knxdatatype.decode(event.datahex, dt.bool)
22.          mb:setcoils(id - 1, value)
23.      end
24.  end
25.
26.  -- try to find matching register
27.  for id, addr in ipairs(registers) do
28.      if event.dst == addr then
29.          value = knxdatatype.decode(event.datahex, regdt[ id ])
30.          mb:setregisters(id - 1, value)
31.      end
32.  end
33. end
34.
35. -- coil write callback
36. function mbwritecoils(coil, value)
37.     local addr = coils[ coil + 1 ]
38.     if addr then
39.         grp.write(addr, value, dt.bool)
40.     end
41. end
42.
43. -- register write callback
44. function mbwriteregisters(register, value)
45.     local addr = registers[ register + 1 ]
46.     if addr then
47.         grp.write(addr, value, regdt[ register + 1 ])
48.     end
49. end
50.
51. -- knx group monitor, handles group writes
52. knxclient = eibdgm:new({ timeout = 0.1 })
53. knxclient:sethandler('groupwrite', knxgroupwrite)
54.
55. -- modbus slave, listen on all interfaces and default port 502
56. mb = luamodbus.tcp()
57. mb:open('0.0.0.0', 502)
58.
59. -- setting slave id is optional
60. -- mb:setslave(1)
61.
62. mb:setreceivetimeout(0.1)
63. mb:setmapping(#coils, 0, #registers, 0)
64.

```

```

65.  -- init coils
66.  for id, addr in ipairs(coils) do
67.      value = grp.getvalue(addr)
68.      mb:setcoils(id - 1, value)
69.  end
70.
71.  -- init registers
72.  for id, addr in ipairs(registers) do
73.      value = grp.getvalue(addr)
74.      mb:setregisters(id - 1, value)
75.  end
76.
77.  -- set callbacks for coil and register write
78.  mb:setwritecoilcb(mbwritecoils)
79.  mb:setwriteregistercb(mbwriteregisters)
80. end
81.
82. -- handle modbus and knx
83. mb:handleslave()
84. knxclient:step()

```

Example usage (TCP / master mode):

```

require('luamodbus')

mb = luamodbus.tcp()
mb:open('192.168.0.1', 5000)
mb:connect()

-- verbose output and select slave number 10
mb:setdebug(true)
mb:setslave(10)

-- read input from reg 1 to 5, get slave-specific data
mb:readinputregisters(1, 4)
mb:reportslaveid()

-- close serial connection
mb:close()

```

Example usage (RTU / master mode):

```

require('luamodbus')
mb = luamodbus.rtu()

-- open serial connection (half duplex)
mb:open('/dev/ttyS2', 38400, 'E', 8, 1, 'H')
mb:connect()

-- verbose output and select slave number 10
mb:setdebug(io.write)

```

```

mb:setslave(10)

-- read input from reg 1 to 5, get slave-specific data
mb:readinputregisters(1, 4)
mb:reportslaveid()

-- close serial connection
mb:close()

```

Read/write examples

```

-- multiple coil read
coil1, coil2, coil3 = mb:readcoils(10, 3)

```

```

-- multiple coil read to table
coils = { mb:readcoils(0, 3) }

```

Note: coil1 or coils[1] will be nil on error

```

-- multiple write
coil1 = true
coil2 = false
coil3 = false

```

```

mb:writebits(10, coil1, coil2, coil3)

```

```

-- multiple write from table
coils = { true, false, false }
mb:writebits(10, unpack(coils))

```

Core functions:

```

luamodbus.rtu()
  Creates new Modbus RTU object

```

```

luamodbus.tcp()
  Creates new Modbus TCP object

```

Modbus object functions:

Core functions:

```

mb:open(port, [baudrate = 9600, [parity = 'N', [databits = 8, [stopbits = 2]]]])
  RTU mode - opens the serial port. (parity: 'N' - none, 'E' - even, 'O' - odd; databits: 7 or
  8; stopbits: 1 or 2)

```

```

mb:open(ip, [port = 502])
  TCP mode - prepares connection to the specified IP and port (optional)

```

```

mb:connect()
  opens serial or network connection

```

```

mb:close()
  closes an open connection

```

```

mb:flush()
  flushes any unsent data

```

Slave functions:

`mb:receive()`
receives data from master with 1 minute timeout
returns data as a binary string on success and nil, error description on error

`mb:setmapping(coils, inputs, holding_regs, input_regs)`
creates memory mapping for the registers with size specified for each type

`mb:handleslave()`
waits for an incoming indication from master and sends a reply when necessary

`mb:getcoils(start, count)`
`mb:getdiscreteinputs(start, count)`
`mb:getinputregisters(start, count)`
`mb:getregisters(start, count)`
gets one or many register/coil values from mapping from the start address
returns all values on success and nil, error description on error, exception code if applicable

`mb:setcoils(start, v1, [v2, [v3, ...]])`
`mb:setdiscreteinputs(start, v1, [v2, [v3, ...]])`
`mb:setinputregisters(start, v1, [v2, [v3, ...]])`
`mb:setregisters(start, v1, [v2, [v3, ...]])`
sets values to register/coil mapping from the start address
returns true on success and nil, error description on error, exception code if applicable

`mb:setwritecoilcb(fn)`
`mb:setwriteregistercb(fn)`
sets a callback function for coil/register write event
callback should accept two parameters - coil/register address and value (boolean or number)
for multiple writes callback is executed for each coil/register separately
use nil to remove a callback

Master functions:

`mb:setslave(slaveid)`
sets slave id to read/write data from/to

`mb:readcoils(start, count) [01]`
`mb:readdiscreteinputs(start, count) [02]`
`mb:readregisters(start, count) [03]`
`mb:readinputregisters(start, count) [04]`
reads one or many registers/coils from the start address
returns all values on success and nil, error description on error

`mb:writebits(start, v1, [v2, [v3, ...]]) [05]`
`mb:writeregisters(start, v1, [v2, [v3, ...]]) [06]`
writes values to registers/coils from the start address
single write will be used when only one value is supplied, multiple write otherwise
returns all of values written on success and nil, error description on error

`mb:readregistervalue(address, datatype, [reverse])`
`mb:readinputregistervalue(address, datatype, [reverse])`
reads encoded register(s) value based on the specified datatype:
"int16" - signed 2-byte (1 register) integer
"float16" - 2-byte floating point (KNX format, used in some HVAC units)
"int32" - signed 4-byte (2 registers) integer
"uint32" - unsigned 4-byte (2 registers) integer

"float32" - 4-byte (2 registers) floating point (IEEE 754)
"int64" - signed 8-byte (4 registers) integer
"uint64" - unsigned 8-byte (4 registers) integer
optionally, it's possible to reverse register order by setting "reverse" to true
returns decoded value on success and nil, error description on error

`mb:reportslaveid()`
reads slave internal data
returns values on success and nil, error description on error

Timeout interval between two consecutive bytes of the same message

`mb:getbytetimeout()`
`mb:setbytetimeout(timeout)`

Timeout interval used to wait for a response:

`mb:getresponsetimeout()`
`mb:setresponsetimeout(timeout)`

Timeout interval used to for an incoming indication from master (slave mode only):

`mb:getreceivetimeout()`
`mb:setreceivetimeout(timeout)`

Misc functions:

`mb:setrecovery(recovery)`
enables / disables auto reconnect on error

`mb:setdebug(debug)`
enables / disables protocol debug output

`mb:getheaderlength()`
returns header length for the protocol in use

13. BACnet IP interconnection with LM

13.1. BACnet server mode: transparent data transfer to BACnet network

BACnet server specific configuration can be done in *Sys Config* → *Network* → *BACnet Settings*.

List all BACnet Interoperability Building Blocks (BIBBs) Supported

Data Sharing	ReadProperty-B	DS-RP-B
	ReadPropertyMultiple-B	DS-RPM-B
	WriteProperty-B	DS-WP-B
	COV-B	DS-COV-B
Device and Network Management	Dynamic Device Binding-B	DM-DDB-B
	Dynamic Object Binding-B	DM-DOB-B
	DeviceCommunicationsControl-B	DM-DCC-B
	TimeSynchronization-B	DM-TS-B
	UTCTimeSynchronization-B	DM-UTC-B
	ReinitializeDevice-B	DM-RD-B

BACnet Object Types Supported

- Device
- Analog Value
- Binary Value


Data Link Layer Options

- Media: BACnet IP
- Option: Register as a Foreign Device

BACnet settings	
Server enabled	☒
Device ID	222
Password	mybacpwd
Object priority	16
Port	47808
BBMD IP	
BBMD port	
BBMD lease time (seconds)	

- **Server enabled** – specify if BACnet server is enabled or not
- **Device ID** – device ID in BACnet network
- **Password** – device password
- **Object priority** – object priority
- **Port** – port number
- **BBMD IP** – BACnet router IP. When router IP and port are set, LM will act as a foreign device and will attempt to register with BACnet router.
- **BBMD port** – BACnet router port. When router IP and port are set, LM will act as a foreign device and will attempt to register with BACnet router
- **BBMD lease time (seconds)** – registration resend interval

To make KNX/EIB objects BACnet readable/writable, mark necessary objects in LogicMachine as “Export object”. Binary objects will appear as Binary Values, other numeric values will appear as Analog Values. Other types are not currently supported. KNX bus write changes priority array value at configured object priority index

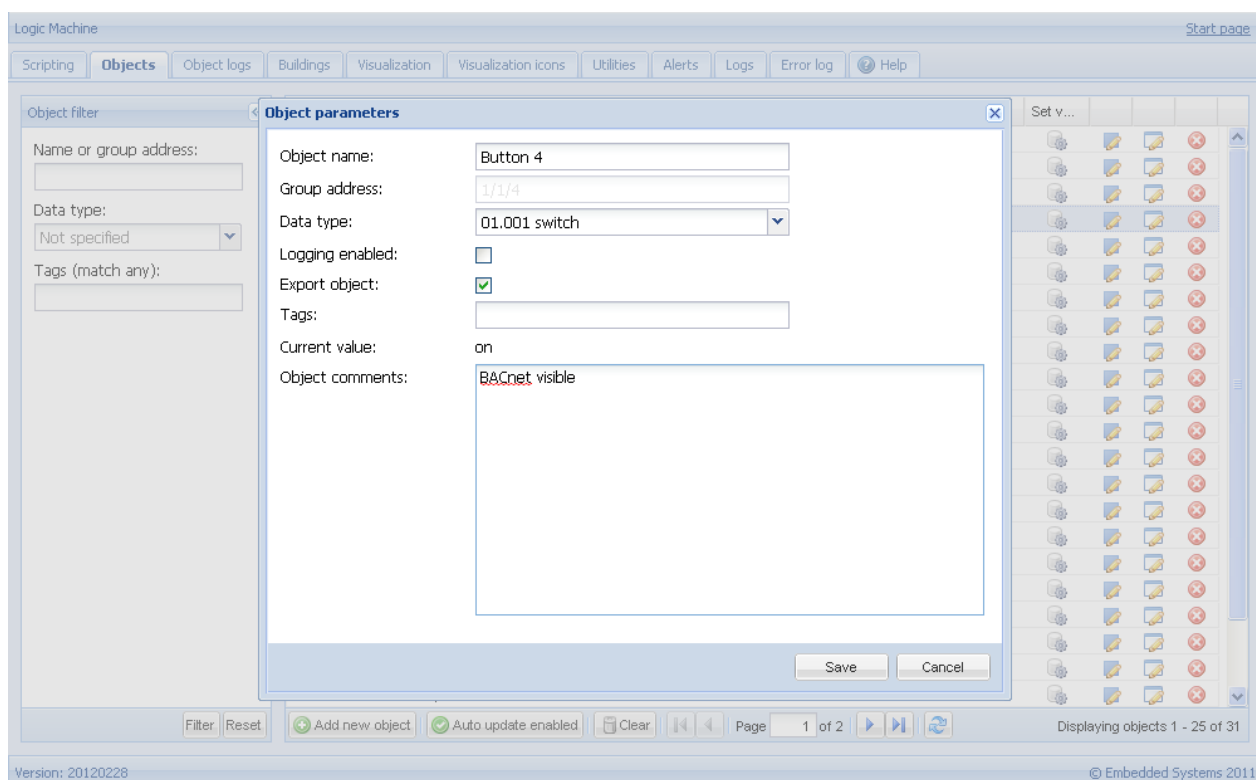

In *System Configuration* → *Network* → *BACnet objects* you can see marked objects on LogicMachine which are sent to BACnet network.

BACnet objects

Device name: LogicMachine_222

Device ID: 222

Object priority: 16


Port: 47808

Download CSV

Type	Instance	Device name	Current value
2 (AV)	6500	PassivPluss 1 (3.1.100)	29
2 (AV)	6501	PassivPluss 2 (3.1.101)	29

13.2. BACnet client mode

Normally this mode is used to interconnect LogicMachine, for example, with VRV systems over BACnet IP protocol. The settings are available in BACnet tab.

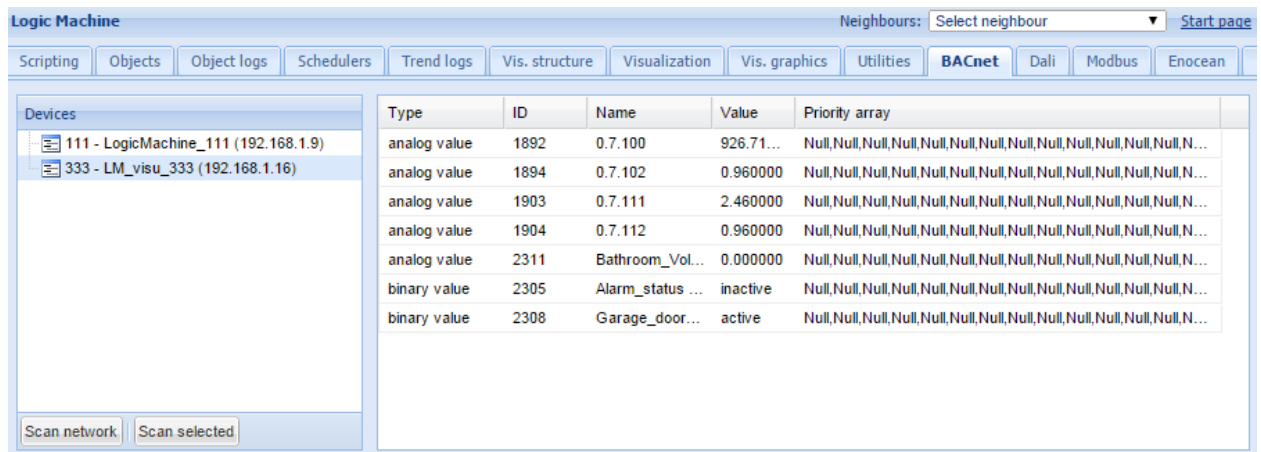

By clicking on *Scan Network* button you can see a list of BACnet server devices on the network. With *Scan Selected* you can rescan specific BACnet server for respective objects.

Mapping to KNX objects currently is done over scripting.

Before using any BACnet function, you must include the library:

```
require('bacnet')
```

Read current value of binary or analog object:

```
bacnet.readvalue(device_id, object_type, object_id)
```

Read binary object:

```
value = bacnet.readvalue(127001, 'binary value', 2305)
```

Read analog object:

```
value = bacnet.readvalue(127001, 'analog value', 2306)
```

Write new value to binary or analog object priority array:

```
bacnet.write = function(device_id, object_type, object_id, value, priority)
```

Value can be nil, boolean, number or a numeric string

Priority parameter is optional, lowest priority is used by default

Set binary object value:

```
bacnet.write(127001, 'binary value', 2305, true)
```

Set analog object value:

```
bacnet.write(127001, 'analog value', 2306, 22.5)
```

Set binary object value at priority 12:

```
bacnet.write(127001, 'binary value', 2305, true, 12)
```

Set analog object value at priority 10:


bacnet.write(127001, 'analog value', 2306, 22.5, 10)

Clear binary object value at priority 12:


bacnet.write(127001, 'binary value', 2305, nil, 12)

14. DALI configuration

LogicMachine5 Reactor GSM support DALI over RS485 gateway. We recommend to connect no more than 32 ballasts to one DALI line.

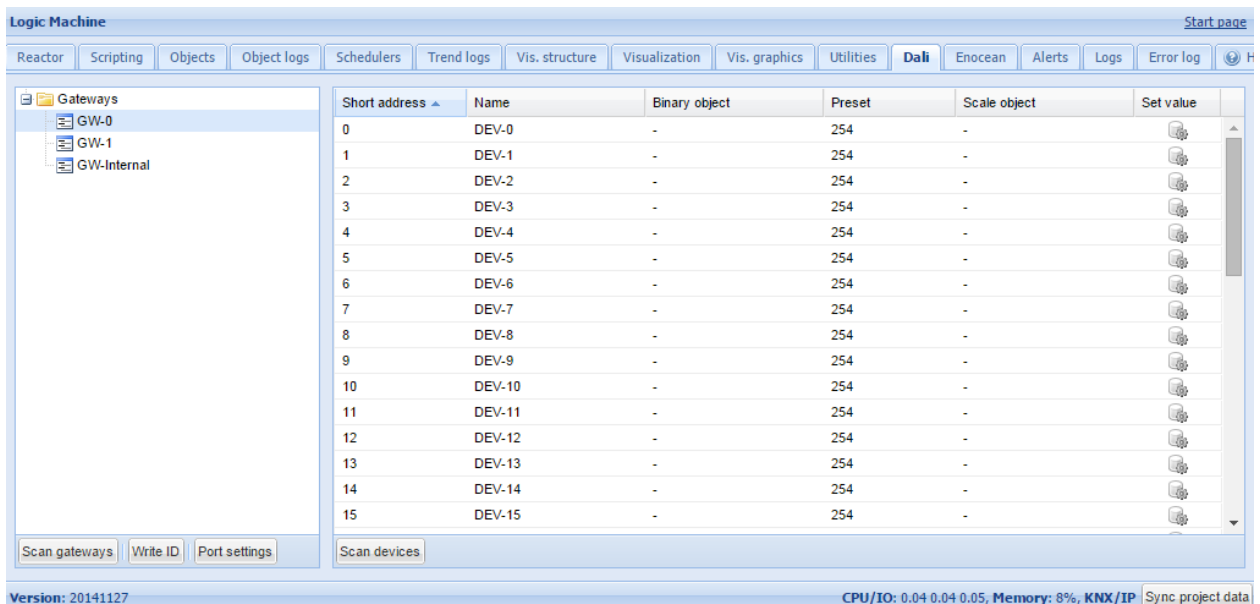

- **Scan gateways** - scans for currently connected gateways, address mapping for missing devices is deleted automatically
- **Write ID** - allows setting a unique address for each gateway
- **Scan devices** - scans for currently connected DALI devices to the selected gateway. There is one of 4 options to choose from.

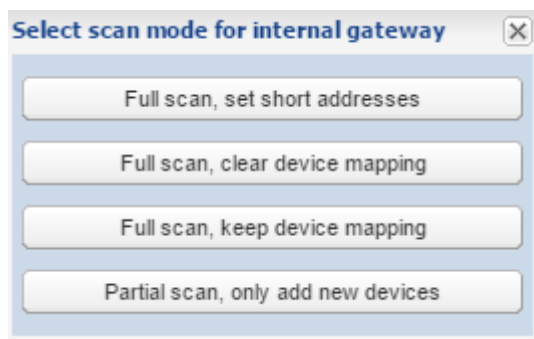

Full scan, set short addresses - scans for currently connected DALI devices to the selected gateway, assigns short address automatically starting from 0,1,2,...


Full scan, clear device mapping - scans for currently connected DALI devices to the selected gateway without assigning short addresses, clear KNX grp address mapping to devices

Full scan, keep device mapping - scans for currently connected DALI devices to the

selected gateway without assigning short addresses, keeps device mapping to KNX grp addresses

Partial scan, only add new devices - scans for newly added DALI devices to the selected gateway without assigning short addresses. Missing devices are not removed from the list

- **Port settings** – serial port name if there are external DALI-RS-485 interfaces connected

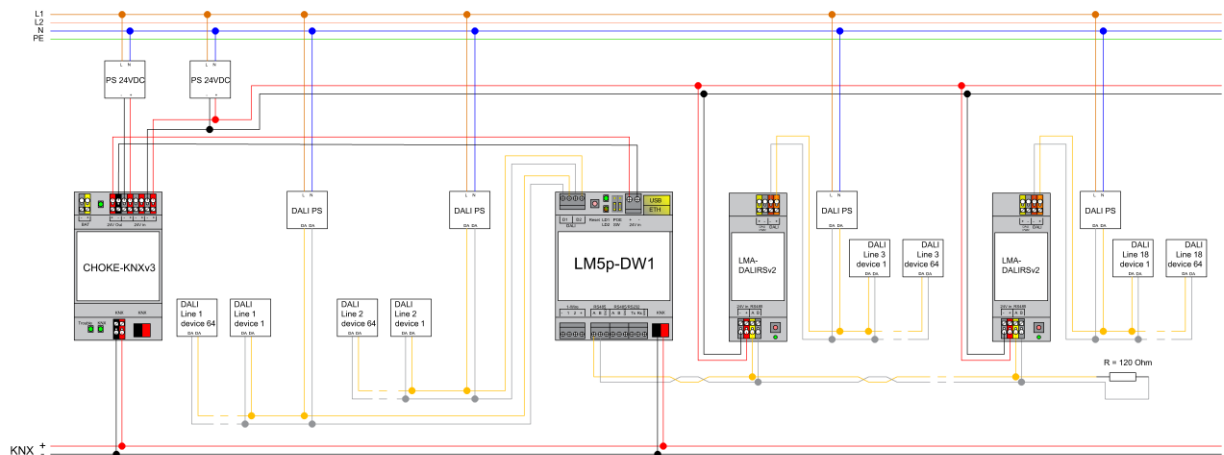

Note! Make sure Modbus RTU is not enabled for the same RS-485 if you are using external DALI RS485 gateways connected to LM's RS-485 port.

Note! Make sure you have series connection for all DALI gateways.

Note! In case you have long RS-485 lines between LM and DALI gateway, make sure to use 120 Ohm termination resistors on LM and on the farthest DALI gateway.

Note! Make sure GND are connected (if you use separate power supplies for LM and DALI gw)

Make sure you define Port name in **Port settings** when using RS485 DALI gateway. If you use Reactor with 1 x RS485, the port name will be '/dev/RS485'. If you use LM4, the port name is either '/dev/RS485-1', '/dev/RS485-2' or '/dev/RS485-3'.


Then write for each external RS-485/DALI gateway its unique ID. This is done by pressing programming button on RS485/DALI gateway and pushing **Write ID** on LM.

Then you should press **Scan gateways** button on LM. Your programmed gateway should appear.

For each DALI device, you can set a custom name and map to binary on/off and scale object. This allows communication with DALI devices from KNX bus and visualization without any additional scripts.

14.1. DALI object mapping

Once DALI objects are scanned, you can click on corresponding object and perform the configuration.

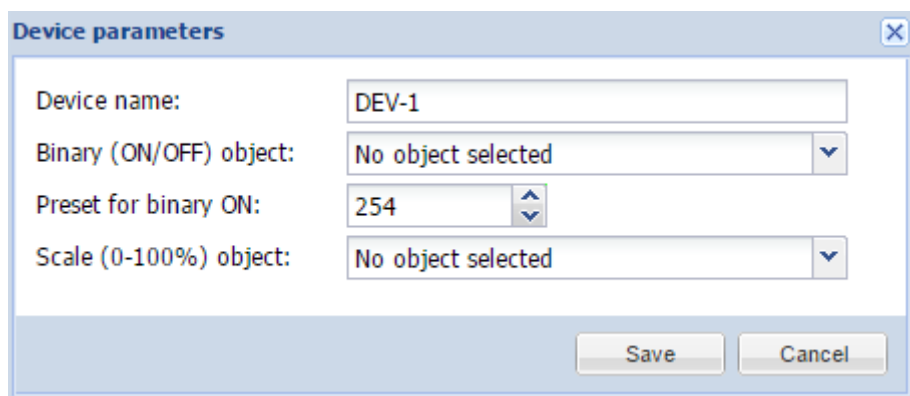

- **Device name** – name of the DALI device
- **Binary (ON/OFF) object** – map to KNX binary object
- **Preset for binary ON** – preset on binary ON
- **Scale (0-100%) object** – map to KNX scale object

You can set up specific value by clicking on this icon 

14.2. Access DALI bus from scripts

If you want to access DALI devices from other scripts, you can use **dalicmd** function.

```
res, err = dalicmd(gwid, cmd, params)
```

Parameters

- **gwid** (*number/string*) gateway id: gateway number or **internal** or **internal2** when internal DALI exists
- **cmd** (*string*) command to send, refer to command table for possible values
- **params** (*table*) command parameters

Params (Lua table):

- **addrtype** (*string*) address type, only required for addressable commands, possible values: **short** **group** **broadcast**
- **address** (*number*) short or group address
- **value** (*number*) additional value to send

3 addressing modes are supported

- **broadcast** all slaves should react: `{ addrtype = 'broadcast' }`
- **short** only one slave having a unique short address should react: `{ addrtype = 'short', address = SLAVE_ID }`
- **group** several slaves belonging to a group should react: `{ addrtype = 'group', address = GROUP_ID }`

Command types

If command is addressable, it's possible to provide address type and address in **params** table.

If command expects a reply it must be addressed so only one slave can reply, otherwise a collision will happen. In case of success, reply is a binary string, usually consisting of a single byte. You can convert it to number like this:

```
-- query status of slave with short address 5 on the internal DALI bus
res, err = dalicmd('internal', 'querystatus', { addrtype = 'short', address = 5 })
-- read ok
```

```

if res then
    status = res:byte()
end

```

If command has a value range, params table must have a value field which is an integer in the specified range. For example, `arc` command accepts a value from 0 to 254:

```

-- set level to 42 for all slave on the internal DALI bus
dalicmd('internal', 'arc', { addrtype = 'broadcast', value = 42 })

```

Setting DTR

For commands where DTR is needed prior to executing command, use `setdtr` command to set the value:

```

-- set dtr for ballast 5 to 200
dalicmd('internal', 'setdtr', { addrtype = 'short', address = 5, value = 200 })

```

Example

Change address of DALI ballast with current address 5. 1byte object need to be added, event-based script looks as follows:

```

value = event.getvalue()
value=value*2+1

require('user.dali')
dalicmd('internal', 'setdtr', { addrtype = 'short', address = 5, value = value })
dalicmd('internal', 'storeshortaddress', { addrtype = 'short', address = 5})

```

Example (use gateway with id 1, switch all ballasts off, set ballast with short address 5 to full on)

```

require('user.dali')

dalicmd(1, 'arc', { addrtype = 'broadcast', value = 0 })
dalicmd(1, 'arc', { addrtype = 'short', address = 5, value = 254 })

```

Example (set maximum value for ballast 5 to value 200; the ballast is connected on internal DALI gateway on LogicMachine)

```
require('user.dali')

dalicmd('internal', 'setdtr', { addrtype = 'short', address = 5, value = 200 })
dalicmd('internal', 'storemax', { addrtype = 'short', address = 5 })
```

Example (log all ballast short addresses which are connected to internal DALI gateway)

```
require('user.dali')

res, err = dalicmd('internal', 'queryshortaddr', { addrtype = 'broadcast' })
if res then
    log(res:byte())
else
    log(err)
end
```

Example (add 4 DALI short addressed to one group with nr. 7)

```
require('user.dali')

dalicmd('internal', 'addtogroup', { addrtype = 'short', address = 1, value = 7 })
dalicmd('internal', 'addtogroup', { addrtype = 'short', address = 2, value = 7 })
dalicmd('internal', 'addtogroup', { addrtype = 'short', address = 3, value = 7 })
dalicmd('internal', 'addtogroup', { addrtype = 'short', address = 4, value = 7 })
```

Setting group 7 to a certain value (event-based script, object type 1 byte 0..100%):

```
require('user.dali')

value = event.getvalue()
value = math.floor(value * 2.54)
dalicmd('internal', 'arc', { addrtype = 'group', address = 7, value = value })
```

Example (functions for calling and saving scenes, can be used not only for DALI)

First, you have to define each scene via a Lua table where each item is a table with two items: group address and value. Each scene has a unique id which can be a number or a string.

callscene(id) sets all objects in given scene to their specified value. First it looks for a saved scene in storage and uses default values if storage is empty.

savescene(id) gets current values of all objects from given scene and saves the whole scene in storage.

```
scenes = {}
scenes[1] = {
    { '15/1/1', 50 },
    { '15/1/2', 75 },
    { '15/1/3', 90 },
}

function callscene(id)
    local key, scene
    key = 'scene_' .. id
    scene = storage.get(key, scenes[ id ])
    if type(scene) ~= 'table' then
        alert('Scene ' .. id .. ' not found')
        return
    end
    for _, item in ipairs(scene) do
        grp.write(item[ 1 ], item[ 2 ])
    end
end

function savescene(id)
    local key, scene
    scene = scenes[ id ]
    if type(scene) ~= 'table' then
        alert('Scene ' .. id .. ' not found')
        return
    end
end
```

```

end

for i, item in ipairs(scene) do
    scene[ i ][ 2 ] = grp.getvalue(item[ 1 ])
end

key = 'scene_' .. id

storage.set(key, scene)

end

```

Example (Binary dimmer for DALI lamps to be able dim DALI lamp from physical pushbutton)

1) Add *bindimmer* function to Common functions

```

function bindimmer(up, down, out, event)

    local main, rev, step, val, new, delay

    step = 10 -- in %

    delay = 0.5 -- in seconds

    -- ignore "stop" command

    val = tonumber(event.datahex, 16)

    if val == 0 then

        return

    end

    -- up, normal mode

    if event.dst == up then

        main, rev = up, down

        -- down, reverse step

    elseif event.dst == down then

        main, rev = down, up

        step = -step

        -- invalid object

    else

        return

    end

end

```

```

-- current output object value
val = grp.getvalue(out) or 0
while true do
    -- main object in "stop" state
    if not grp.getvalue(main) then
        return
    end

    -- reverse object in "start" state
    if grp.getvalue(rev) then
        return
    end

    -- get new value
    new = math.min(100, val + step)
    new = math.max(0, new)

    -- no change, stop
    if new == val then
        return
    end

    -- write new value
    val = new
    grp.write(out, new, dt.scale)

    -- wait for next run
    os.sleep(delay)
end
end

```

2) Create 3 objects:

1/1/1 - binary (dim up)

1/1/2 - binary (dim down)

1/1/3 - 1-byte scale (output)

3) Create an event script for each binary object:

```
bindimmer('1/1/1', '1/1/2', '1/1/3', event)
```

- 4) You can tune *step* and *delay* variables in *bindimmer* function to adjust dimming speed.

DALI commands

Command	Description	Addressable	Reply	Value
arc	direct arc power control	+		0..254
off	turn off	+		
up	turn on	+		
down	down	+		
stepup	step up	+		
stepdown	step down	+		
recallmin	recall max level	+		
recallmax	recall min level	+		
stepdownoff	step down and off	+		
stepupon	on and step up	+		
gotoscene	go to scene			0..15
reset	reset	+		
storeactual	store actual level in the dtr	+		
storemax	store the dtr as max level	+		
storemin	store the dtr as min level	+		
storesystemfailure	store the dtr as system failure level	+		
storepoweron	store the dtr as power on level	+		
storefadetime	store the dtr as fade time	+		
storefaderate	store the dtr as fade rate	+		
storescene	store the dtr as scene	+		0..15
removescene	remove from scene	+		0..15
addtogroup	add to group	+		0..15
removefromgroup	remove from group	+		0..15
storeshortaddress	store dtr as short address	+		
querystatus	query status	+	+	
queryballast	query ballast	+	+	
querylampfailure	query lamp failure	+	+	
querylamppoweron	query lamp power on	+	+	
querylimiterror	query limit error	+	+	
queryresetstate	query reset state	+	+	
querymissingshort	query missing short address	+	+	
queryversion	query version number	+	+	

querydtr	query content dtr	+	+	
querydevicetype	query device type	+	+	
queryphysicalmin	query physical minimum level	+	+	
querypowerfailure	query power failure	+	+	
queryactual	query actual level	+	+	
querymax	query max level	+	+	
querymin	query min level	+	+	
querypoweron	query power on level	+	+	
querysystemfailure	query system failure level	+	+	
queryfadetimerate	query fade time / fade rate	+	+	
queryscene	query scene level (scenes 0-15)	+	+	0..15
querygroupslow	query groups 0-7	+	+	
querygroupshigh	query groups 8-15	+	+	
queryrandomaddrh	query random address (h)	+	+	
queryrandomaddrm	query random address (m)	+	+	
queryrandomaddrl	query random address (l)	+	+	
terminate	terminate			
setdtr	set data transfer register (dtr)			0..255
initialise	initialise			
randomise	randomise			
compare	compare		+	
withdraw	withdraw			
searchaddrh	set search address (h)			0..255
searchaddrm	set search address (m)			0..255
searchaddrl	set search address (l)			0..255
programshortaddr	program short address			0..63
verifyshortaddr	verify short address		+	0..63
queryshortaddr	query short address		+	
physicalselection	physical selection			
enabledevicetype	enable device type x			0..255

15. 1-Wire configuration

LM5 Power (LM5p-DW1) has two 1-wire interfaces built-in. 1-wire is a bus technology which is built based on client-server topology and allowing to connect up to 100 devices to one controller. It is either 2-wire or 3-wire bus installation. In case of 2-wire system, a parasitic powering is used directly from the bus, normally up to 20 devices can work in this way. In case of bigger amount of 1-wire sensors, you can use LogicMachine 5V DC output to power 1-wire devices.




Advantages of 1-wire over KNX:

- No need in ETS
- Very cost-effective
- You can use the same wiring as KNX does and connect all standard sensors


Advantages of 1-wire over resistive sensors:

- Substantial savings on equipment
- Easier connection diagram allows to reduce the complexity of laying wiring
- Extension possibility: connection of additional sensors without changing basic wiring
- Ability of remote monitoring of sensors (open circuit, short circuit etc.)
- No need to take into account the resistance of conductors like in the circuit with resistive sensors

1-wire connection diagrams:

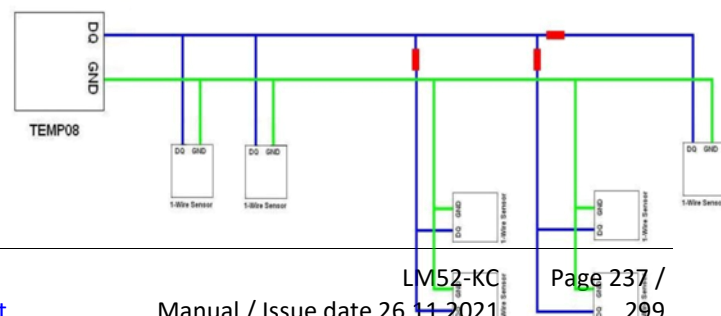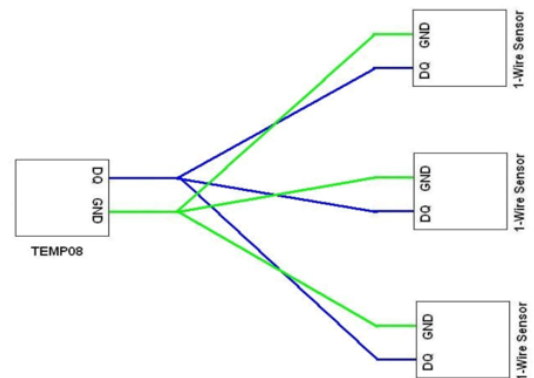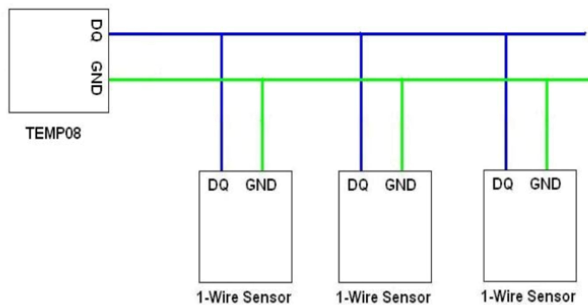

Once 1-wire sensors are connected to the 1-wire interface of LogicMachine5

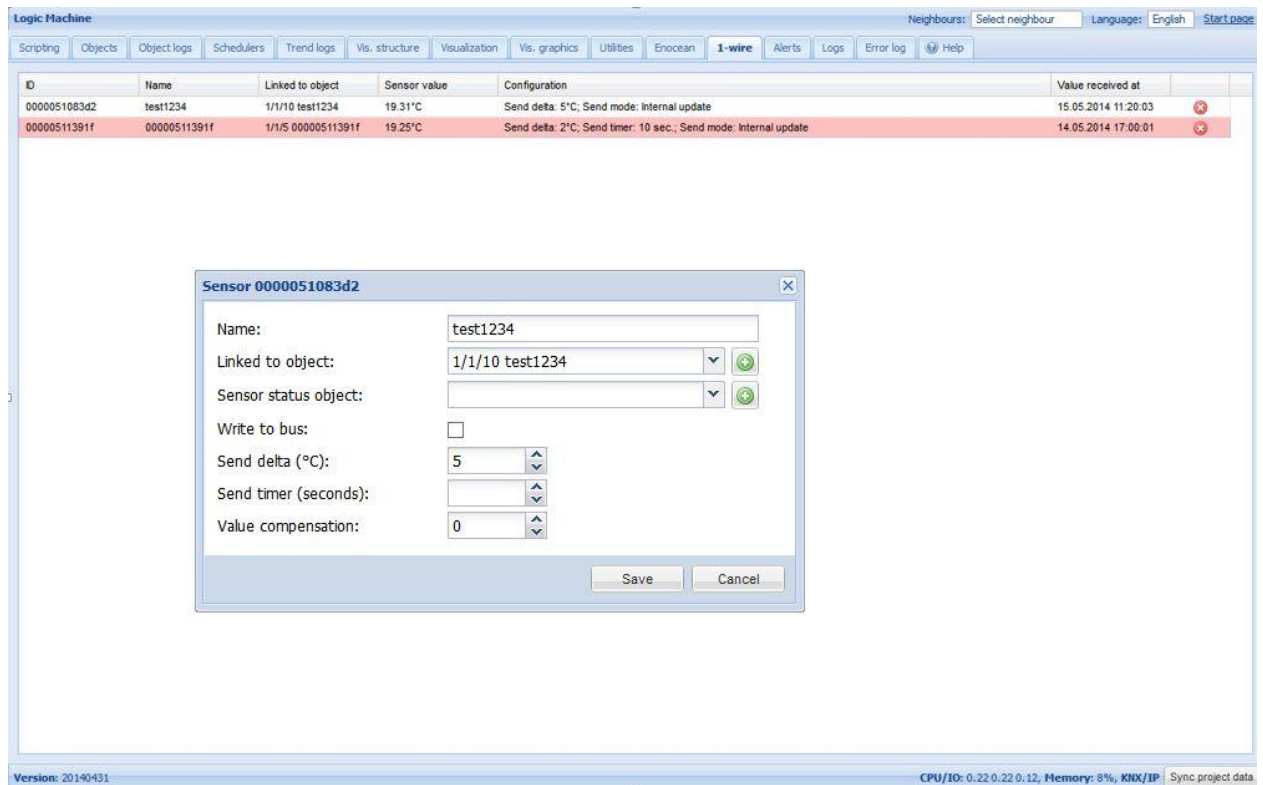

- **Name** – name of the 1wire device
- **Linked to object** – mapped KNX object
- **Sensor status object** – mapped KNX status object
- **Write to bus** – define either to write telegram in KNX bus on read value
- **Send delta** – define either to send delta of temperature sensor
- **Send timer (seconds)** – define interval in which send the measurement
- **Value compensation** – compensate value of the reading of temperature

1-wire PUZZLE - 2 Universal Digital Inputs / Outputs

With PUZZLE you can interconnect regular binary sensors with 1-wire fieldbus or use the device as digital output to control relays/contactors. By pairing the PUZZLE with LogicMachine Ambient, you can finish the installation in very cost-effective way. Up to 64 PUZZLE can be connected to one 1-wire port of LogicMachine and all objects can be then managed from any of KNX, Modbus, BACnet etc. devices.





Note! Max 1-wire network length is 100 m, you need 3-wires: +5V, 1-Wire, GND. It can take up to 0.5 seconds for each sensor reading. We recommend to connect up to 30 sensors.

Further, in the latest firmware of LogicMachine there are features like increased polling time of 1-wire objects, implemented keepalive object which indicates of error if there was lost connection with at least one of 1-wire device. Also in the configuration menu on LogicMachine you can see pre-configured 1-wire devices and newly found ones in separate lists.

16. DMX interconnection with LM

DMX protocol support is realized upon RS485 serial port.

DMX function

Add the following user library in *Scripting* → *User libraries*.

```
local luadm =  
require('luadm')  
  
module('DMX', package.seeall)  
local DMX = {}  
-- default params  
local defaults = {  
    -- storage key  
    skey = 'dmx_line_1',  
    -- RS-485 port  
    port = '/dev/RS485',  
    -- number of calls per second  
    resolution = 20,  
    -- total number of channels to use  
    channels = 3,  
    -- transition time in seconds, does not include DMX transfer time  
    transition = 2,  
}  
-- value setter  
function set(chan, val, key)  
    key = key or defaults.skey  
    chan = tonumber(chan) or 0  
    val = tonumber(val) or -1  
    -- validate channel number and value  
    if chan >= 1 and chan <= 512 and val >= 0 and val <= 255 then  
        storage.exec('lset', key, chan - 1, val)  
    end  
end  
-- value getter  
function get(chan, key)  
    local res, val  
    key = key or defaults.skey  
    chan = tonumber(chan) or 0  
    -- validate channel number and value  
    if chan >= 1 and chan <= 512 then  
        res = storage.exec('lrange', key, chan - 1, chan - 1)  
        if type(res) == 'table' then  
            val = tonumber(res[ 1 ])  
        end  
    end  
end
```

```

        end
    end
    return val
end
-- DMX init, returns new DMX object
function init(params)
    local n, k, v, _
    -- create metatable and set user parameters
    n = setmetatable({}, { __index = DMX })
    n.params = params or {}
    _, n.conn = pcall(require('redis').connect)
    -- merge parameters that are set by user
    for k, v in pairs(defaults) do
        if n.params[ k ] == nil then
            n.params[ k ] = v
        end
    end
    n:reset()
    return n
end
function DMX:reset()
    local err, chan, params
    params = self.params
    self.dm, err = luadm.open(params.port)
    -- error while opening
    if err then
        os.sleep(1)
        error(err)
    end
    -- set channel count
    self.dm:setcount(params.channels)
    -- number of transaction ticks
    self.ticks = math.max(1, params.transition * params.resolution)
    -- calculate sleep time
    self.sleep = 1 / params.resolution
    -- reset channel map
    self.channels = {}
    -- empty channel value map
    self.conn:ltrim(params.skey, 1, 0)
    -- fill channel map
    for chan = 1, params.channels do
        self.channels[ chan ] = { current = 0, target = 0, ticks = 0 }
        -- turn off by default
        self.conn:lpush(params.skey, 0)
        self.dm:setchannel(chan, 0)
    end
end

```

```

        end
    end
    -- get new values
    function DMX:getvalues()
        local max, channels, ticks, values, val
        max = self.params.channels
        channels = self.channels
        ticks = self.ticks
        values = self.conn:lrangle(self.params.skey, 0, max - 1) or {}
        -- check for new values for each channel
        for chan = 1, max do
            val = tonumber(values[ chan ]) or 0
            -- target value differs, set transacion
            if val ~= channels[ chan ].target then
                channels[ chan ].target = val
                channels[ chan ].delta = (channels[ chan ].target - channels[ chan
            ].current) / ticks
                channels[ chan ].ticks = ticks
            end
        end
    end
    -- main loop handler
    function DMX:run()
        self:getvalues()
        -- transition loop
        for i = 1, self.params.resolution do
            self:step()
            self.dm:send()
            os.sleep(self.sleep)
        end
    end
    -- single transition step
    function DMX:step()
        local chan, channels, t
        channels = self.channels
        -- transition for each channel
        for chan = 1, self.params.channels do
            t = channels[ chan ].ticks
            -- transition is active
            if t > 0 then
                t = t - 1
                channels[ chan ].current = channels[ chan ].target - channels[ chan
            ].delta * t
                channels[ chan ].ticks = t
                self.dm:setchannel(chan, channels[ chan ].current)
            end
        end
    end
end

```

end
end
end

DMX handler script

Add the following resident script with sleep interval = 0, adjust port and channel as needed

```
1. if not dmxhandler then
2.   require('user.dmx')
3.   dmxhandler = DMX.init({
4.     port = '/dev/RS485', -- RS-485 port name
5.     channels = 8, -- number of DMX channels to use
6.     transition = 2, -- soft transition time in seconds
7.   })
8. end
9.
10. dmxhandler:run()
```

Setter (used in other scripts)

```
DMX.set(channel, value)
```

Mark DMX objects

Create objects with DMX tag, where last part of group address is DMX address (starting from 1). Create event script mapped to DMX tag.

```
1. require('user.dmx')
2. -- get ID as group address last part (x/y/ID)
3. id = tonumber(event.dst:split('/')[3])
4. -- get event value (1 byte scaling)
5. value = event.getvalue()
6. -- convert from [0..100] to [0..255]
7. value = math.floor(value * 2.55)
8. -- set channel ID value
9. DMX.set(id, value)
```

Predefined scene example

The following example should be placed inside a resident script. Sleep time defines scene keep time (at least 1 second).

```
1. if not scenes then
2.   -- 3 channel scene
3.   scenes = {
4.     { 255, 0, 0 },
5.     { 0, 255, 0 },
6.     { 0, 0, 255 },
7.     { 255, 255, 0 },
8.     { 0, 255, 255 },
```



```

9.      { 255, 0, 255 },
10.      { 255, 255, 255 },
11.  }
12.
13.      current = 1
14.  end
15.
16.  -- set current scene values
17.  scene = scenes[ current ]
18.  for i, v in ipairs(scene) do
19.      DMX.set(i, v)
20.  end
21.
22.  -- switch to next scene
23.  current = current + 1
24.  if current > #scenes then
25.      current = 1
26.  end

```

Random scene example

The following example should be placed inside a resident script. Sleep time defines scene keep time (at least 1 second).

```

1. -- number of steps to use, e.g. 3 steps = { 0, 127, 255 }
2. steps = 5
3. -- number of channels to set
4. channels = 3
5. -- first channel number
6. offset = 1
7.
8. for i = offset, channels do
9.     v = math.random(0, (steps - 1)) * 255 / (steps - 1)
10.     DMX.set(i, math.floor(v))
11. end

```

17. EnOcean transmitter configuration

LogicMachine5 Reactor GSM supports EnOcean through USB gateway which is based on product USB 300 (OEM), delivered by EnOcean organization as OEM product to 3rd parties. Note that different frequencies are used for EnOcean (based on geographical region). Be careful and select the proper USB gateway for your location.


EnOcean frequencies:

- 868 MHz – Europe
- 902 MHz – USA / Canada
- 928 MHz – Japan
- 2.4 GHz – Worldwide usage

USB gateway is a small USB stick which connects PC's, consumer devices, DSL boxes and other USB master devices to EnOcean based radio products. It is equipped with a TCM 310 transceiver gateway module. It provides bidirectional EnOcean radio and bidirectional serial interface via USB. Radio messages are sent and received via an externally connected USB host.

17.1. EnOcean interfaces

EnOcean interface Base address can be found in *EnOcean* → *Interfaces* tab.

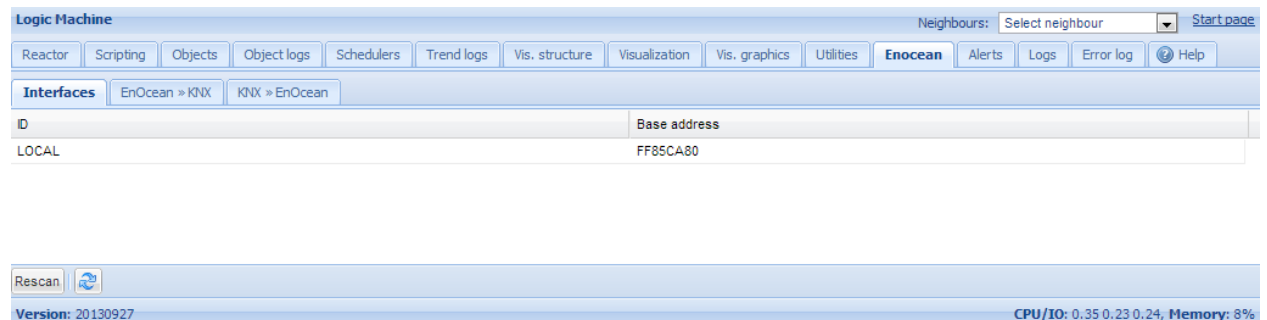


The screenshot shows the Logic Machine software interface. The top navigation bar includes tabs for Reactor, Scripting, Objects, Object logs, Schedulers, Trend logs, Vis. structure, Visualization, Vis. graphics, Utilities, **EnOcean**, Alerts, Logs, Error log, and Help. The **EnOcean** tab is active, and the **Interfaces** sub-tab is selected. Below the sub-tabs, a table lists the interfaces:

ID	Base address
LOCAL	FF85CA80

At the bottom of the interface, there is a 'Rescan' button and a status bar showing 'Version: 20130927' and 'CPU/IO: 0.35 0.23 0.24, Memory: 8%'.

17.2. EnOcean to KNX mapping

All telegrams received from EnOcean devices appears in *EnOcean* → *KNX* section.

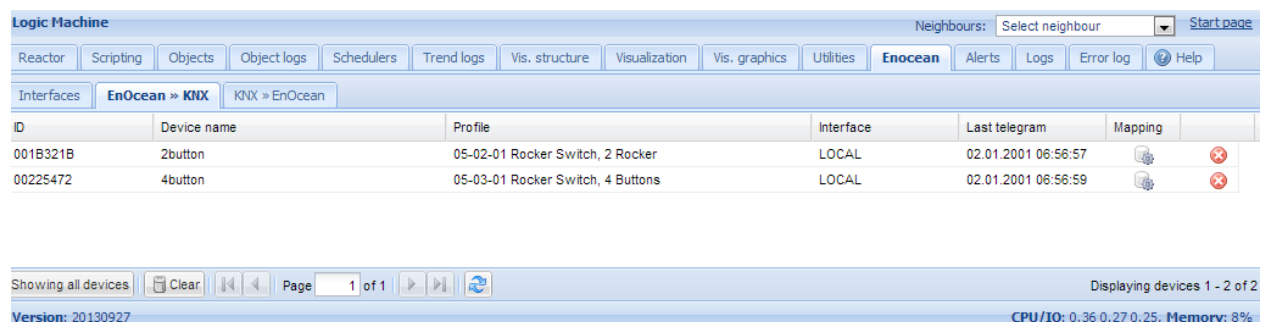


The screenshot shows the Logic Machine software interface with the **EnOcean** tab active and the **KNX** sub-tab selected. Below the sub-tabs, a table lists the mapped devices:


ID	Device name	Profile	Interface	Last telegram	Mapping
001B321B	2button	05-02-01 Rocker Switch, 2 Rocker	LOCAL	02.01.2001 06:56:57	 
00225472	4button	05-03-01 Rocker Switch, 4 Buttons	LOCAL	02.01.2001 06:56:59	 

At the bottom, there is a 'Showing all devices' section with a 'Clear' button and pagination controls. The status bar shows 'Version: 20130927' and 'CPU/IO: 0.36 0.27 0.25, Memory: 8%'.


Once some specific device has to be mapped to KNX, the corresponding row has to be clicked and profile has to be chosen. There are all main profiles predefined in the list.

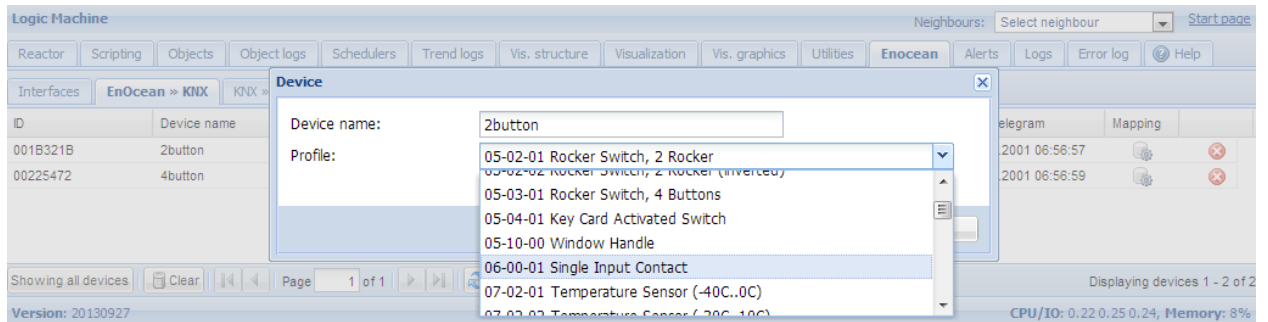


Once the device profile is set, you can map functionality of the specific device to KNX group addresses by clicking on *Mapping* icon.

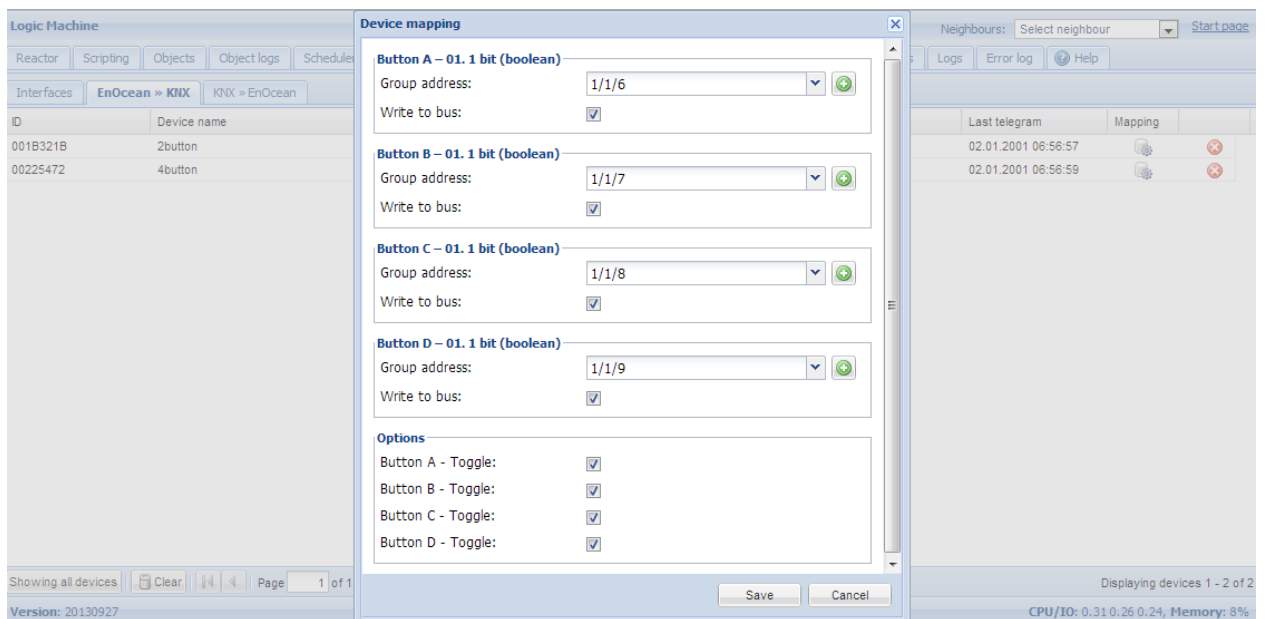

When EnOcean gateway received telegram from specific device, the respective row gets light green.

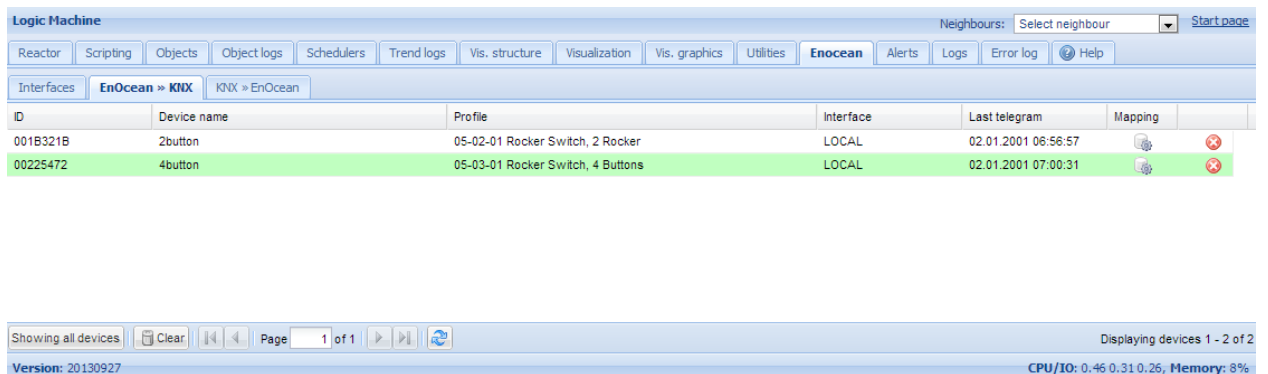


Respective KNX group addresses get updated with the new values.

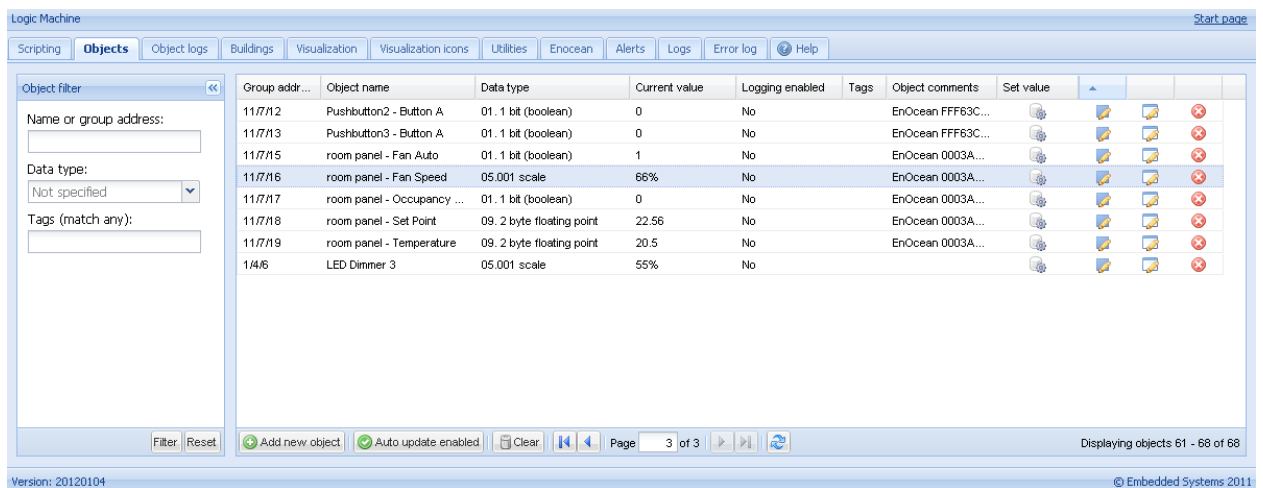


17.3. KNX to EnOcean mapping

You should click on Add new device button to add EnOcean device which will be communicated from specific KNX object.

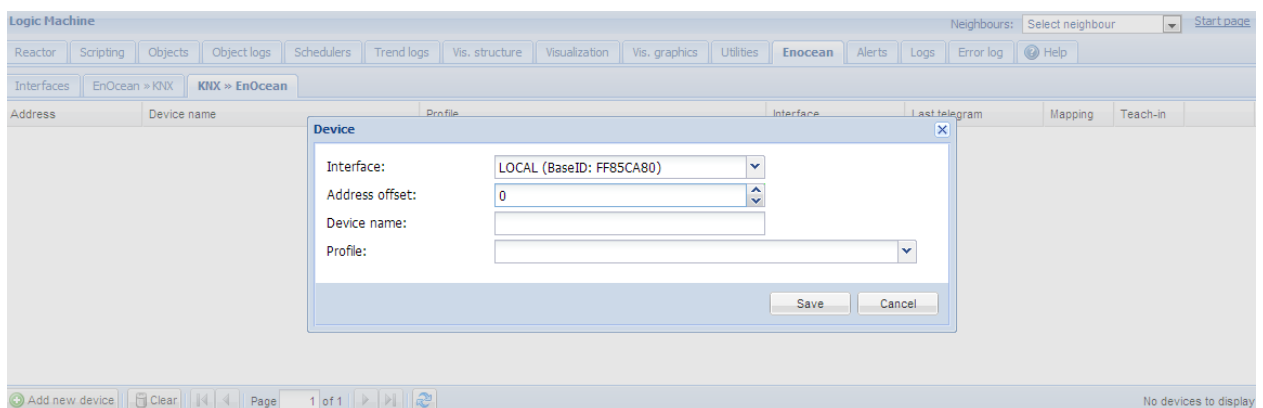


Once the device is added, you should pair it with specific device in EnOcean network, press Tech-in button.

Note! EnOcean device should be set in learning mode in order to pair it successfully.

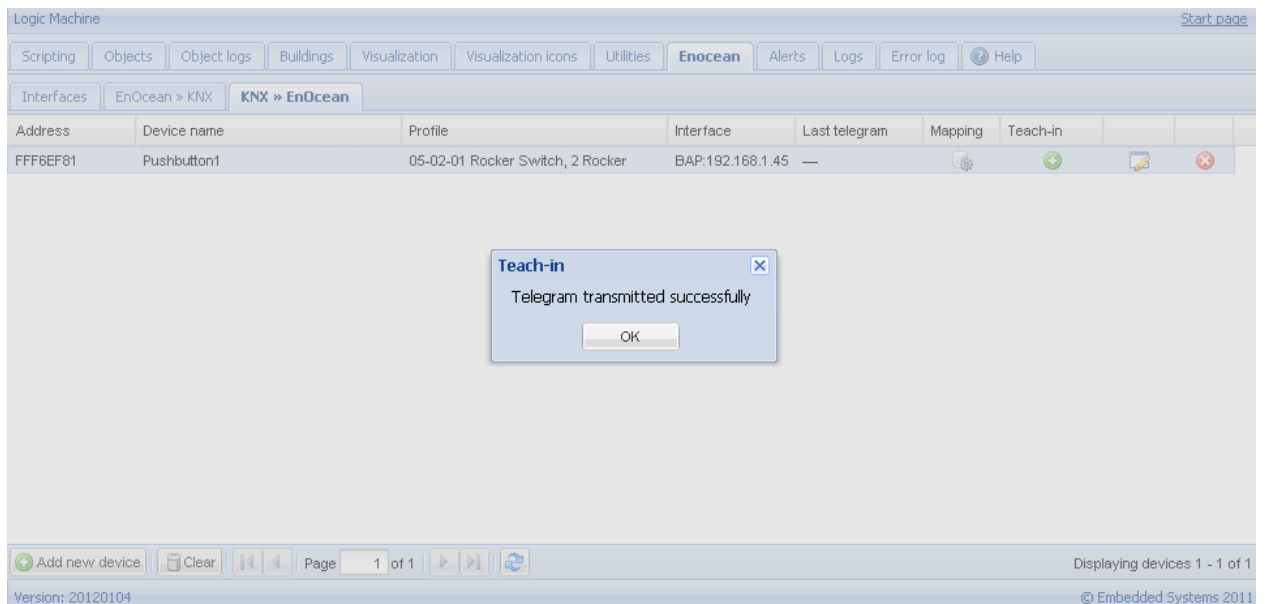

Further this device can be mapped with specific KNX addresses. When KNX object value will be updated, the telegram will be sent to respective EnOcean device.

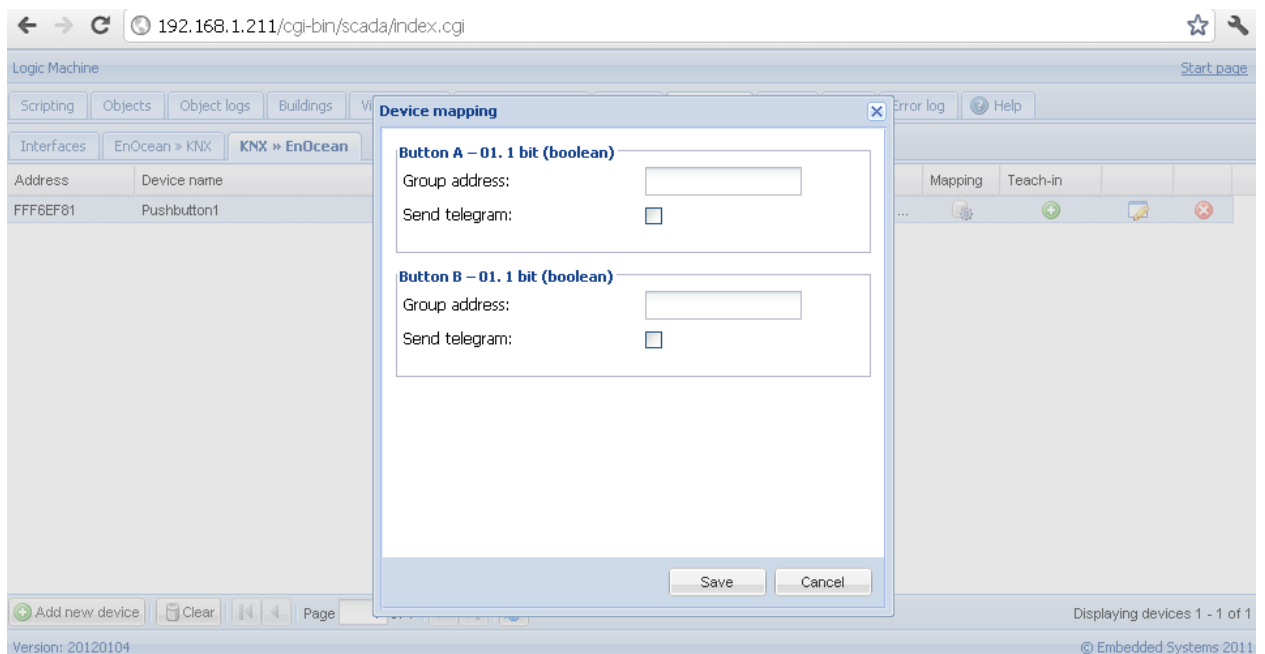

17.4. Mapping to EnOcean profiles out of the supported list

In case you don't find a profile of your EnOcean device in the list of profiles, you can use RAW format. For example here below is step by step guide for Eltako FUD61NPN-230V wireless switch integration.

- a) First of all turn on confirmation signal on the actuator: top rotary switch to CLR, LED flashes, during 10 seconds turn bottom rotary switch all the way to the left 3 times, LED light is on for 2 seconds.
- b) create one object with 4-byte unsigned integer data type and another with 1-byte scaled. 4-byte object should be mapped to KNX → EnOcean object with 4-byte RAW profile.
- c) Add the following script to the 1-byte scaled object (just for initial teach command)

```

b3 = 0xE0
b2 = 0x47
b1 = 0xFF
b0 = 0x00

a3 = bit.lshift(b3, 24)
a2 = bit.lshift(b2, 16)
a1 = bit.lshift(b1, 8)

res = bit.bor(a3,a2,a1,b0)

grp.update('1/1/5', res, dt.uint32)

```

- d) Put the actuator into learning mode: turn bottom rotary to EC1, upper rotary to LRN
- e) Set an object value for 1-byte scaled object (0-100) to teach in. (The actuator should stop flashing)
- f) Turn back actuator to desired functionality
- g) Add the following script to 1-byte scaled object (to be able to control the actuator)

```

-- dimming
b3 = 0x02
-- dimmer value [0..100]
b2 = event.getvalue()
-- ramp time in seconds
b1 = 1
-- data telegram, absolute value, store final
b0 = 9

a3 = bit.lshift(b3, 24)
a2 = bit.lshift(b2, 16)
a1 = bit.lshift(b1, 8)

res = bit.bor(a3,a2,a1,b0)

grp.update('1/1/5', res, dt.uint32)

```

- h) The dimmer can now be controlled through the 1-byte scaled object

If you need to read the values from the actuator as a 1-byte scaled object:

- a) In EnOcean >> KNX tab find the actuator (that should send confirmation signals if step 1 above was followed)

- b) Set profile as "RAW 4-bytes, split"
- c) Map Data Byte 2 to an object.
- d) Create a new object as "5.001 scale" (in the example 1/1/6)
- e) Add the following script to the Data Byte 2 object created in point 3:

```
value = event.getvalue()

res = (value/100)*255

grp.write('1/1/6', res, dt.uint8)
```

17.5. Supported EnOcean profiles

ID	Profile name	ID	Profile name
00-00-00	RAW 4-bytes	A5-04-01	Temperature & Humidity Sensor (0C..40C, 0%..100%)
00-00-01	RAW 4-bytes, split	A5-04-02	Temperature & Humidity Sensor (-20C..60C, 0%..100%, Battery)
F6-01-01	Rocker Switch, 1 Rocker	A5-06-01	Light Sensor (300lx..60000lx)
F6-01-02	Rocker Switch, 1 Rocker (inverted)	A5-06-02	Light Sensor (0lx..1024lx)
F6-01-03	Rocker Switch, 1 Rocker (separate)	A5-06-03	Light Sensor (0lx..100lx, 300lx..30000lx)
F6-02-01	Rocker Switch, 2 Rocker	A5-07-01	Occupancy Sensor
F6-02-02	Rocker Switch, 2 Rocker (inverted)	A5-08-01	Light Sensor 0lx to 510lx, Temperature 0°C to +51°C and Occupancy
F6-03-01	Rocker Switch, 4 Buttons	A5-08-02	Light Sensor 0lx to 1020lx, Temperature 0°C to +51°C and Occupancy
F6-04-01	Key Card Activated Switch	A5-08-03	Light Sensor 0lx to 1530lx, Temperature -30°C to +50°C and Occupancy
F6-10-00	Window Handle	A5-09-04	Humidity, CO2, Temperature Sensor
D5-00-01	Single Input Contact	A5-10-01	Temperature Sensor; Set Point, Fan Speed and Occupancy Control
A5-02-01	Temperature Sensor (-40C..0C)	A5-10-02	Temperature Sensor; Set Point, Fan Speed and Day/Night Control
A5-02-02	Temperature Sensor (-30C..10C)	A5-10-03	Temperature Sensor; Set Point Control
A5-02-03	Temperature Sensor (-20C..20C)	A5-10-04	Temperature Sensor; Set Point and Fan Speed Control
A5-02-04	Temperature Sensor (-10C..30C)	A5-10-05	Temperature Sensor; Set Point and Occupancy Control
A5-02-05	Temperature Sensor (0C..40C)	A5-10-06	Temperature Sensor; Set Point and Day/Night Control
A5-02-06	Temperature Sensor (10C..50C)	A5-10-07	Temperature Sensor; Set Point and Fan Speed Control
A5-02-07	Temperature Sensor (20C..60C)	A5-10-08	Temperature Sensor; Fan Speed Control
A5-02-08	Temperature Sensor (30C..70C)	A5-10-09	Temperature Sensor; Fan Speed and Day/Night Control
A5-02-09	Temperature Sensor (40C..80C)	A5-10-0A	Temperature Sensor; Set Point and Single Input Contact
A5-02-0A	Temperature Sensor (50C..90C)	A5-10-0B	Temperature Sensor and Single Input Contact
A5-02-0B	Temperature Sensor (60C..100C)	A5-10-0C	Temperature Sensor and Occupancy Control
A5-02-10	Temperature Sensor (-60C..20C)	A5-10-0D	Temperature Sensor and Day/Night Control
A5-02-11	Temperature Sensor (-50C..30C)	A5-10-10	Temperature and Humidity Sensor; Set Point and Occupancy Control
A5-02-12	Temperature Sensor (-40C..40C)	A5-10-11	Temperature and Humidity Sensor; Set Point and Day/Night Control
A5-02-13	Temperature Sensor (-30C..50C)	A5-10-12	Temperature and Humidity Sensor; Set Point Control
A5-02-14	Temperature Sensor (-20C..60C)	A5-10-13	Temperature and Humidity Sensor; Occupancy Control
A5-02-15	Temperature Sensor (-10C..70C)	A5-10-14	Temperature and Humidity Sensor; Day/Night Control
A5-02-16	Temperature Sensor (0C..80C)	A5-20-10	Generic HVAC interface
A5-02-17	Temperature Sensor (10C..90C)	A5-30-01	Single Input Contact, Battery Monitor
A5-02-18	Temperature Sensor (20C..100C)	A5-30-02	Single Input Contact
A5-02-19	Temperature Sensor (30C..110C)	A5-38-08-02	Dimmer
A5-02-1A	Temperature Sensor (40C..120C)		
A5-02-1B	Temperature Sensor (50C..130C)		

18. 3G/GSM configuration

LogicMachine5 Reactor GSM has built in 3G modem. LogicMachine has also a regular 3G modem driver built-in (Huawei and other vendor supported).

In *System configuration* go to *Network* → *3G/PPP connection*.

Fill required fields depending on your 3G operator settings, apply settings.

3G/PPP connection

Current IP: 10.94.211.136

Service status: Enabled

APN (access point): internet.lmt.lv

PIN code:

Dial number:

Username:

Password:

DNS server 1: 8.8.8.8

DNS server 2:

Information: Ethernet gateway must not be set, otherwise 3G connection will not work.
At least one static DNS server must be set.

OK Cancel

Current IP – current IP address receive from APN

Service status – enable or disable 3G modem

APN (access point) – access point address

PIN code –PIN code of the SIM card

Dial number – dialing number if any

Username – username if any

Password - password

DNS server 1 – DNS server address 1

DNS server 2 – DNS server address 2

If you want to use 3G modem for sending/ receiving SMS, you need to add SMS handler program – a resident script with sleep interval 0.

Note! Change white list telephone numbers and SIM card's PIN code in the below script.

```
1.-- init
2.ifnot modem then
3.-- allowed numbers, SMS message from other number will be ignored
4. numbers ={'1234567890', '0123456789'}
```

```

5.-- replace 0000 with SIM pin number, or remove the line below if PIN check is disabled
6.pincode='0000'
7.-- modem communication port, ttyUSB2 for Huawei E173
8.  comport ='ttyUSB2'
9.-- open serial port
10.  modem =AT:init('/dev/' .. comport)
11.-- command parser
12.  parser =function(cmd, sender)
13.local find, pos, name, mode, offset, value, jvalue, obj
14.cmd=cmd:trim()
15.    mode =cmd:sub(1, 1):upper()
16.if mode == 'W' or mode == 'R' then
17.cmd=cmd:sub(3):trim()
18.-- parse object name/address
19.    find =cmd:sub(1, 1)==' ' and ' ' or ' '
20.    offset = find == ' ' and 1 or 0
21.-- pad with space when in read mode
22.if mode == 'R' and find == ' ' then
23.cmd=cmd .. ' '
24.end
25.-- find name
26.pos=cmd:find(find, 1 + offset, true)
27.-- name end not found, stop
28.if not pos then
29.return false
30.end
31.-- get name part
32.    name =cmd:sub(1 + offset, pos - offset):trim()
33.if mode == 'W' then
34.    value =cmd:sub(pos + offset):trim()
35.if not value then
36.return false
37.end
38.-- try decoding value
39.jvalue=json.pdecode(value)
40.    value =jvalue ~=nil and jvalue or value
41.-- send to bus
42.grp.write(name, value)
43.-- read request
44.else
45.obj=grp.find(name)
46.-- send read request and wait for update
47.if obj then
48.obj:read()
49.os.sleep(1)
50.-- read new value
51.    value =grp.getvalue(name)

```

```

52. -- got value, send response
53. if value ~= nil then
54. jvalue=json.pencode(value)
55. if obj.name then
56.         name =string.format('%s (%s)', obj.name, obj.address)
57. end
58. cmd=string.format('Value of %s is %s', name, jvalue)
59. modem:sendsms(sender, cmd)
60. end
61. end
62. end
63. end
64. end
65. -- incoming sms handler
66. handler =function(sms)
67.     alert('incoming sms from %s (%s)', sms.sender, sms.data)
68. -- sms from known number, call parser
69. if table.contains(numbers, sms.sender) then
70.     parser(sms.data, sms.sender)
71. end
72. end
73. -- set sms handler
74. modem:setsmshandler(handler)
75. -- send pin if set
76. if pincode then
77. modem:send('AT+CPIN=' .. pincode)
78. end
79. -- set to pdu mode
80. modem:send('AT+CMGF=0')
81. -- enable sms notifications
82. modem:send('AT+CNMI=1,1,0,0,0')
83. alert('SMS handler started')
84. end
85. modem:run()

```

Command syntax:

- a. Write to bus:
W ALIAS VALUE
- b. Read from bus:
R ALIAS

On read request, script will reply with SMS message containing current value of selected object.

ALIAS can be:

- a. Group address (e.g. 1/1/1)

b. Name (e.g. Obj1). If name contains spaces then it must be escaped using double quotes (e.g. "Room Temperature")

NOTE:

- a. Object data type and name must be set in Objects tab. Otherwise script won't be able to read and write to object.
- b. Only ASCII symbols are accepted in the message.

18.1. Examples

Binary write (send the following SMS to switch kitchen lights on):

```
W 1/1/1 true
```

Scaling write (send the following SMS to set value 67% for red LED):

```
W LED1Red 67
```

Temperature (floating point) write (send the following SMS to make setpoint in the living room to 22.5 degrees):

```
W "Room Setpoint" 22.5
```

Read (send the following SMS to read the security panel value:

```
R 2/1/1
```

18.2. Send SMS messages to specific SIM numbers after group-read or group-write is triggered

Task: Assume we have an Event-based script which triggers a program once group-read or group-write is triggered for address 1/1/1. We want to send SMS to numbers 23335555 and 23335556 with 1/1/1 actual status.

```
1.require('socket')
2.
3.client =socket.udp()
4.
5.-- in the message field the number where SMS has to be send should be specified at the
   beginning
6.localmsg='23335555 1/1/1 changes its value to: ' .. tonumber(event.datahex)
7.client:sendto(msg, '127.0.0.1', 12535)
8.
9.msg='23335556 1/1/1 changes its value to: ' .. tonumber(event.datahex)
10.client:sendto(msg, '127.0.0.1', 12535)
```

18.3. Send SMS messages without 3G modem

How to send event SMS to mobile phone from LogicMachine through Twilio service, without external 3G adapter?

You can use Twilio service which offers free of charge SMS in the test period and messaging at \$0.01 for regular usage. The only disadvantage is it will use your standard Internet connection to send messages to Twilio servers (not via GSM as with 3G adapters).

Twilio account

You can get ID and Token needed for the below example by registering on Twilio. Make sure you enter a verified SIM number list / recipients in your account. Or please contact us for ready example with our account data.

Function

Add the following function in *Scripting* → *Common functions*

```
1. function sms(id, token, from, to, body)
2.     local escape = require('socket.url').escape
3.     local request = require('ssl.https').request
4.     local url = string.format('https://%s:%s@api.twilio.com/2010-04-01/Accounts/%s/Messages.json', id, token, id)
5.     local body = string.format('From=%s&To=%s&Body=%s', escape(from), escape(to), escape(body))
6.
7.     return request(url, body)
8. end
```

Event-based script

Add event-based program for specific object, like 1/1/2 in this example

```
1. value = event.getvalue()
2.
3. from_nr = '+37112345679' -- put sender SIM nr here
4. to_nr = '+37112345678' -- put receipient SIM nr here
5. id_nr = 'ACe56f5' -- put your ID here
6. token_nr = '598c6ff' -- put your token here
7.
8. sms(id_nr, token_nr, from_nr, to_nr, 'The value for 1/1/2 has changed to'..tostring(value))
```

19. Communication with RS232/RS485 serial ports

The following are the naming of Serial ports for different versions of Logic Machine.

LM4		Reactor, LM5		Reactor V2	
GND		GND		GND	
RS485 A	RS485-1	RS485 A	RS485-1	RS485 A	RS485
RS485 B		RS485 B		RS485 B	
GND		GND			
RS485 A	RS485-2	RS485 A	RS485-2		
RS485 B		RS485 B			
GND					
RS485 A	RS485-3				
RS485 B					

Reactor V3		LM5L, LM5-RIO, LM5-RIOE, LM5- RD, LM5-RDE, LM5- GSM	
GND		RS485 A	RS485-1
RS485 A	RS485	RS485 B	
RS485 B		GND	RS485-2
		RS485 A	
		RS485 B	RS232
		GND	
		TX	
		RX	
		GND	

Note! LM5 series devices have 1 definitive serial port RS-485 and other one can work either as RS-485 or RS-232. The one will work which is most recently opened.

If the following command is used, you activate RS-485 second port:

```
port = serial.open('/dev/RS485-2', { baudrate = 115200, parity = 'even', duplex = 'half' })
```

If the following command is used, you activate RS-232 port:

```
port = serial.open('/dev/RS232', { baudrate = 9600, parity = 'even', duplex = 'full' })
```

Functions

Include library before calling serial functions:

```
require('serial')
```

Opens given port, returns: port handle, or, in case of error, nil plus error message

```
port, err = serial.open(device, params)
```

Parameters:

- **device** port device name, required
- **params** parameters table, optional, (defaults are in bold):
 - **baudrate** 300, 600, 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200, 230400
 - **parity** "none", "even", "odd"
 - **databits** 5, 6, 7, 8
 - **stopbits** 1, 2
 - **duplex** "full", "half" (Note: "half" is required for RS-485)

Reads the specified number of bytes, execution is blocked until read is complete

```
res, err = port:read(bytes)
```

Parameters:

- **bytes** number of bytes to read

Reads until timeout occurs or the specified number of bytes is received, whichever happens first.

Returns data plus number of bytes read, or, in case of error, nil plus error message.

```
res, err = port:read(bytes, timeout)
```

Parameters:

- **bytes** number of bytes to read
- **timeout** maximum time to wait for read to complete, minimum value and timer resolution is 0.1 seconds

Flushes any read/unsent bytes

```
port:flush()
```

Closes serial port, no other port functions may be called afterwards

```
port:close()
```


Examples

Write to port

```
port:write('test data')
```

Blocking read (script will block until 10 characters are read)

```
data=port:read(10)
```

Timeout read (script will wait for 10 characters for 20 seconds)

```
data=port:read(10, 20)
```

Close serial port

```
port:close()
```

Resident script, RS-485 echo test

```
-- open port on first call
if not port then
  require('serial')
  port = serial.open('/dev/RS485-1', { baudrate = 9600, parity = 'even', duplex = 'half' })
  port:flush()
end

-- port ready
if port then
  -- read one byte
  char = port:read(1, 1)
  -- send back if read succeeded
  if char then
    port:write(char)
  end
end
```

HEX to RS-485 example

```
require('serial')
port = serial.open('/dev/RS485-1', {
  baudrate = 4800,
  parity = 'none',
  duplex = 'half'
})
```

```
cmd = string.char(0xAB, 0xF1, 0xFF, 0xFF, 0xFF, 0xFF, 0xBE, 0xD1, 0x01, 0xFE, 0xFF, 0xFF,
0x0A, 0x24)
cmd = 'ABF1FFFFFFFFBED101FEFFFF0A24'
```

```
port:write(cmd)
```

Check which **cmd** works for you, as it can be either hex-encoded readable data or hex representation of binary data. You might also need to change the parity config

<http://openrb.com/docs/serial.htm>

20. Bluetooth 4.0 integration

Bluetooth can be integrated over USB-Bluetooth adapter.

Some of supported Bluetooth 4.0 USB adapters:


- Broadcom BCM20702A0
- Trust 18187
- Belkin F8T065bf
- Plugable USB Bluetooth 4.0
- Laird BT820

Configuration of Bluetooth is located in *LogicMachine* → *BLE* tab.

A support for any BLE device can be added if a communication protocol will be provided and will not change in the future software release of BLE device.


Profiles

List of supported BLE devices can be found by clicking *Profiles* button. To add a new profile, you have to upload *.lua profile file by clicking on *Add profile* button.

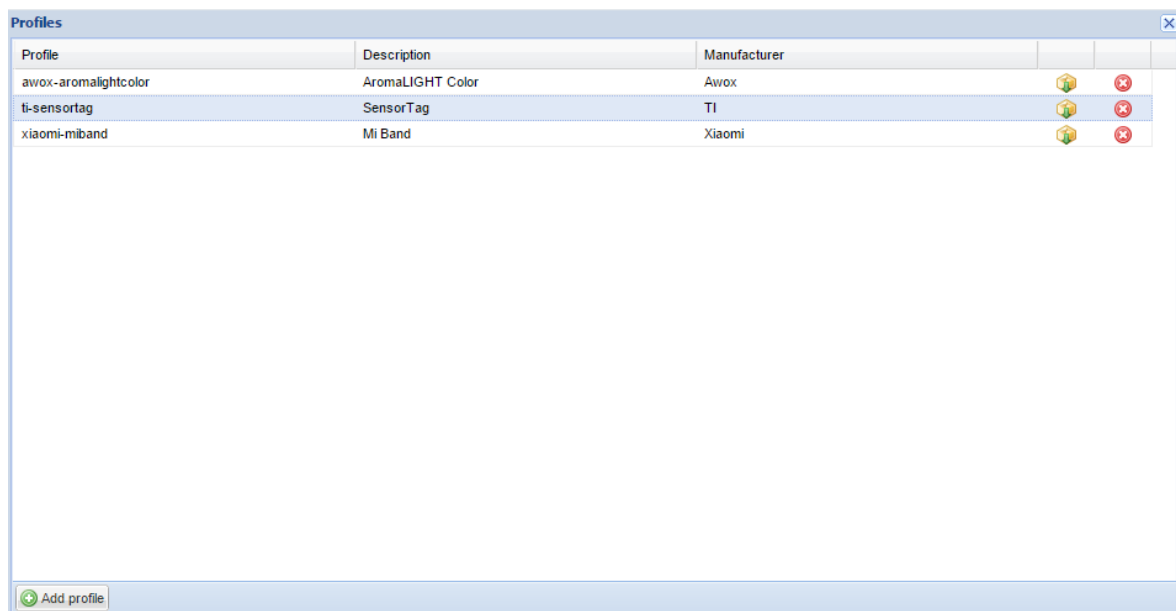


Mapping functionality to KNX group addresses


Once BLE device is seen by LogicMachine Ambient, it will automatically appear in the list.

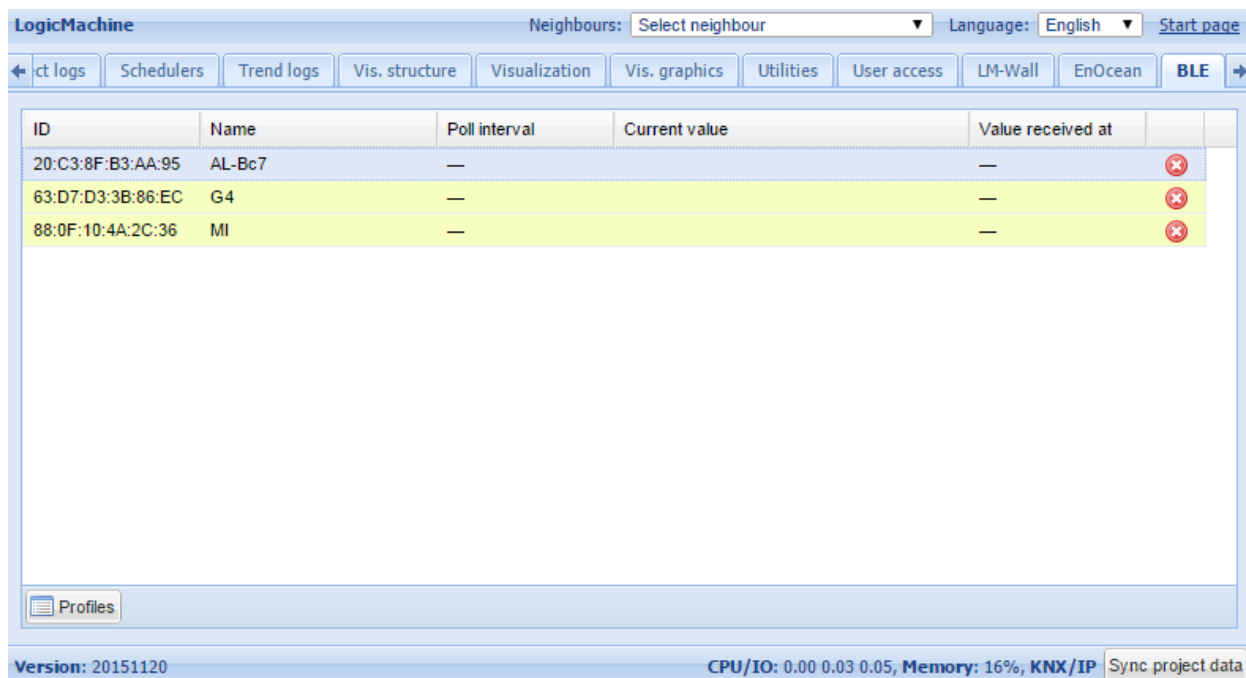

By clicking on specific device, you can map its functionality to KNX group addresses. For AWOX AromLight Color BLE lamp, you can map LED color object to KNX.

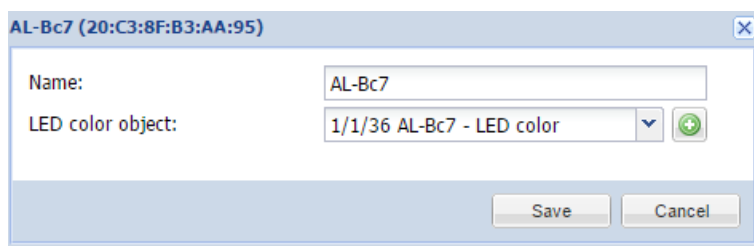

There are following mapping objects for Xiaomi Mi Band wearable – device present object, steps counter, battery level, vibrate the band.

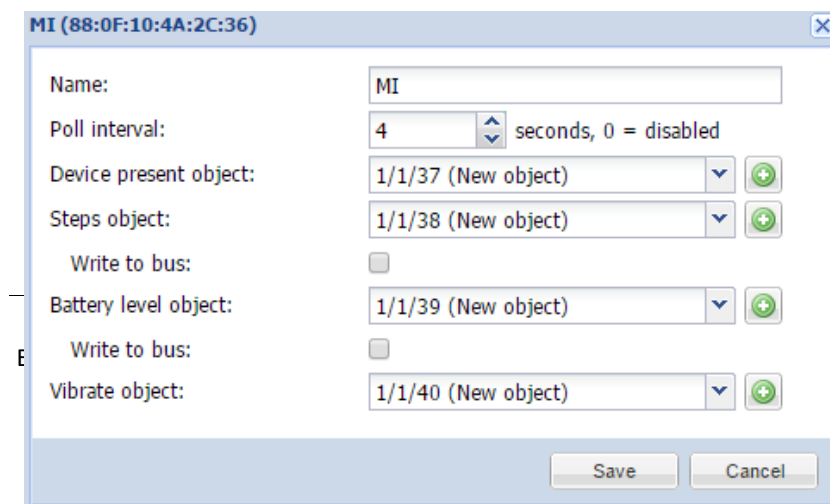

Example

Alpha MIO BLE watch has heart-rate as one of objects. This event-based script will switch on ventilation if the heart-rate is >80 and switch off if its lower

```
21. value = event.getvalue()
22. if value > 80 then
23.     grp.write('2/2/2', true)
24. else
25.     grp.write('2/2/2', false)
26. end
```

21. SIP server on LogicMachine

Task: How to pair SIP door entry systems with building automation project? In LogicMachine we have built SIP registrar which can send SIP requests to final SIP clients. For example, one can install Linphone SIP client app on touch devices which are used for visualization control. Upon SIP request from door entry system, LogicMachine will forward the request to the respective SIP client / recipient. On this client's device a new window will appear with options to answer or reject the call. When the call is answered, you will see video and audio from the door entry system. When the call is finished, Linphone app will go to the background.

SIP package installation on LM:

Add the following Resident script, 60 sec sleep time, run once:

```
os.execute('opkg --force-depends install http://dl.openrb.com/pkg/kamailio/terminfo_5.7-5_mxs.ipk')
os.execute('opkg --force-depends install http://dl.openrb.com/pkg/kamailio/libncurses_5.7-5_mxs.ipk')
os.execute('opkg --force-depends install http://dl.openrb.com/pkg/kamailio/libreadline_5.2-2_mxs.ipk')
os.execute('opkg --force-depends install http://dl.openrb.com/pkg/kamailio/kamailio3_3.3.7-1_mxs.ipk')
os.execute('opkg --force-depends install http://dl.openrb.com/pkg/kamailio/kamailio3-mod-maxfwd_3.3.7-1_mxs.ipk')
os.execute('opkg --force-depends install http://dl.openrb.com/pkg/kamailio/kamailio3-mod-registrar_3.3.7-1_mxs.ipk')
os.execute('opkg --force-depends install http://dl.openrb.com/pkg/kamailio/kamailio3-mod-rr_3.3.7-1_mxs.ipk')
os.execute('opkg --force-depends install http://dl.openrb.com/pkg/kamailio/kamailio3-mod-sl_3.3.7-1_mxs.ipk')
os.execute('opkg --force-depends install http://dl.openrb.com/pkg/kamailio/kamailio3-mod-tm_3.3.7-1_mxs.ipk')
os.execute('opkg --force-depends install http://dl.openrb.com/pkg/kamailio/kamailio3-mod-usrloc_3.3.7-1_mxs.ipk')

os.execute('/etc/init.d/kamailio enable')
os.execute('/etc/init.d/kamailio start')
```

Check if LM has Internet access

Check that IP, gateway, subnet, DNS are set correctly set.

Interface eth0

Protocol

Static IP

IP address

192.168.1.16

Network mask

255.255.255.0

Gateway IP

192.168.1.100

DNS server 1

8.8.8.8

DNS server 2

Mtu

OK

Cancel

SIP client application

You can use for example Linphone as your SIP client. You have to enter IP of LogicMachine in its settings.

iPad

11:47

76 %

Settings

About

SIP ACCOUNT

Run assistant

User name 2

Password

Domain 192.168.1.16

Proxy

Transport UDP >

Outbound proxy OFF

AVPF OFF

SETTINGS

Enable video ON

Audio >

Video >

Call >

Network >

Advanced >

History

Contacts


Chat

Settings

22. Object value export via XML

Make KNX objects XML readable

In the *Objects* tab click on the objects which you want to receive the current value by XML request. Check the Export object

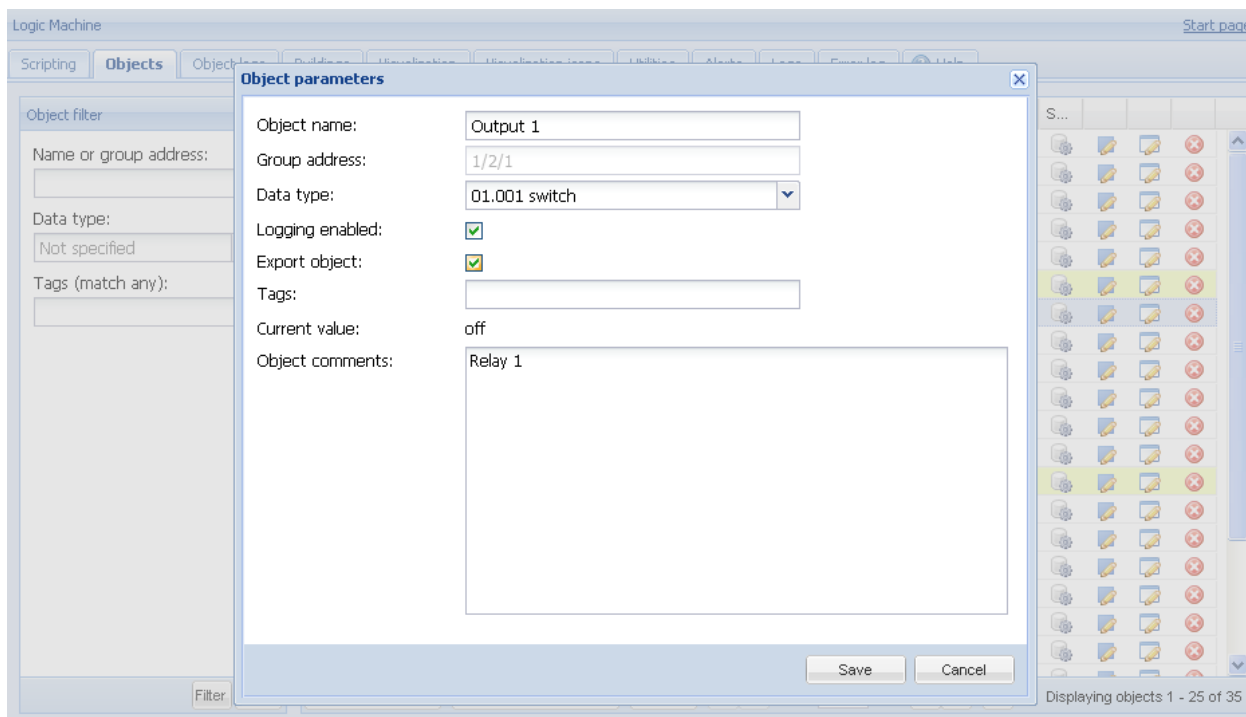

XML request from external PC

The XML request looks like this:

<http://remote:remote@192.168.1.211/cgi-bin/scada-remote/request.cgi?m=xml&r=objects>

Parameters:

- **address** – object address (e.g. “1/1/1”)
- **name** – object name (e.g. “My object”)
- **data** – decoded object value (e.g. 42 or “01.01.2012”)
- **datatype** – object datatype (e.g. 1 or 5.001) – standard KNX data types
- **time** – object update time (UNIX timestamp)
- **date** – object update time (RFC date)
- **comment** – object comment (e.g. “Second floor entry lights”)
- **tags** – optional array of object tags (e.g. “Light”, “Second floor”)

Note! To get list of objects that have been updated after specific time you can pass an optional “updatetime” parameter (UNIX timestamp format)



Login, Password for remote XML request

Login and password can be changed in *Network Configuration* → *System* → *GUI Login* → *Admin/Remote* tab.

The screenshot shows a 'GUI login' dialog box with two tabs: 'Admin / Remote' and 'Visualization'. The 'Admin / Remote' tab is active. It contains two login sections. The first section is for the 'admin' user, with fields for 'Login' (containing 'admin'), 'Password' (masked with dots), and 'Repeat password' (masked with dots). Below these fields is an information icon and the text 'Admin user has access to Logic Machine and Network Configuration interfaces'. The second section is for the 'remote' user, with fields for 'Login' (containing 'remote'), 'Password' (empty), and 'Repeat password' (empty). At the bottom of the dialog are 'OK' and 'Cancel' buttons.

23. Alerts, Errors values

In similar way also Alerts and Errors can be read by XML requests.

Alerts XML request:


<http://remote:remote@192.168.0.10/cgi-bin/scada-remote/request.cgi?m=xml&r=alerts>

Errors XML request:

<http://remote:remote@192.168.0.10/cgi-bin/scada-remote/request.cgi?m=xml&r=errors>


24. Read Alerts RSS feeds from LogicMachine

It is possible to read Alerts and Errors messages by remote RSS readers.

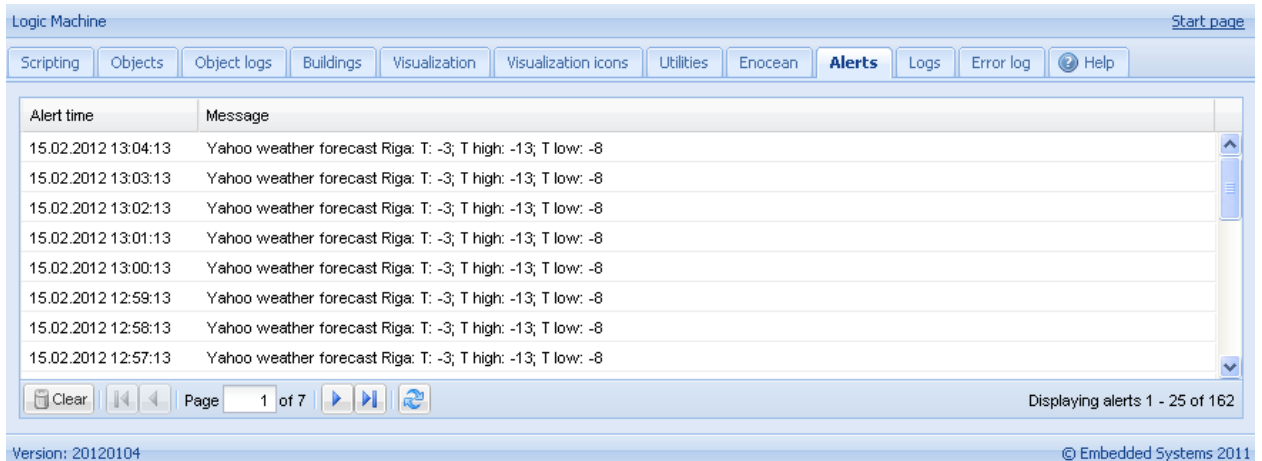

Add new RSS feed in the RSS reader

- Use the following URL:
- <http://remote:remote@192.168.1.211/cgi-bin/scada-remote/request.cgi?m=rss&r=alerts>
- 50 latest alerts will be shown
- *alert time* will be shown in *UNIX timestamp*, *alert date* will be shown as *RFC date*

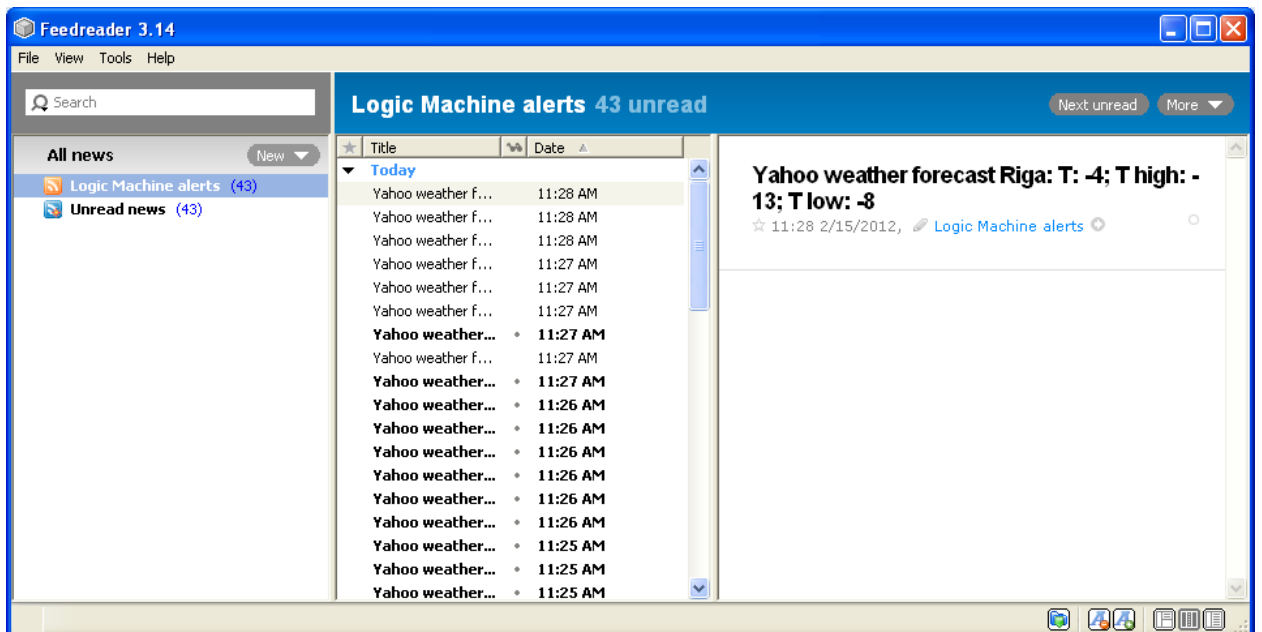

Error tab content by RSS

RSS can be used to read Error tab content as well. In this case the URL would look like:

<http://remote:remote@192.168.1.211/cgi-bin/scada-remote/request.cgi?m=rss&r=errors>

Login, Password for remote RSS requests

Login and password can be changed in *System Configuration* → *System* → *User access* → *Admin/Remote* tab.

The screenshot shows a 'User access' dialog box with two tabs: 'Admin / Remote' and 'Visualization'. The 'Admin / Remote' tab is active. It contains two user entries. The first entry is for the 'admin' user, with a login field containing 'admin', a password field containing '.....', and a repeat password field containing '.....'. The second entry is for the 'remote' user, with a login field containing 'remote', a password field containing '.....', and a repeat password field containing '.....'. At the bottom of the dialog are 'OK' and 'Cancel' buttons.

25. Cloud solution

This example shows how to control/monitor specific objects (KNX, ModBus, BACnet, EnOcean, DALI, DMX512, BLE, etc.) on LogicMachine from Android device located anywhere on the internet.


Some notes:

- LM can be located in LAN with local IP, no public IP is required, no VPNs, no NAT is required on the router
- You can specify which specific objects can be controlled from the cloud (not the whole installation with sensitive objects e.g. security). These objects are synced with cloud server via secure MQTT connection, almost in real-time
- This solution uses a native Android app to access cloud

- 1) Install the latest firmware in LogicMachine: <http://openrb.com/firmwares/>
- 2) On LM's main screen click on Admin icon, login with **admin** password



- 3) Click on + icon to access app store

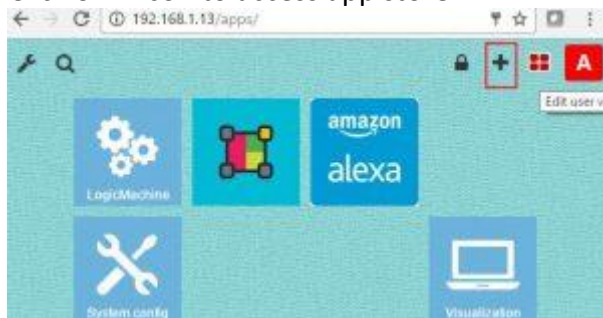


- 4) Click on *Menu* -> *Install from file* and choose mcloud.ipk (unarchived from [mcloud.zip](http://openrb.com/wp-content/uploads/2017/02/mcloud.zip): <http://openrb.com/wp-content/uploads/2017/02/mcloud.zip>). **Note! In the future this**


cloud solution will be included in preinstalled version of Mosaic.



- 5) Reboot LM in *System config* -> *System* -> *Reboot*
- 6) In LM main screen you might see several versions of Mosaic (v1, v2, Cloud). After cloud app tests are finished, we will add cloud functionality in the regular Mosaic app which is located in app store.
- 7) Click on the newly installed Mosaic editor icon

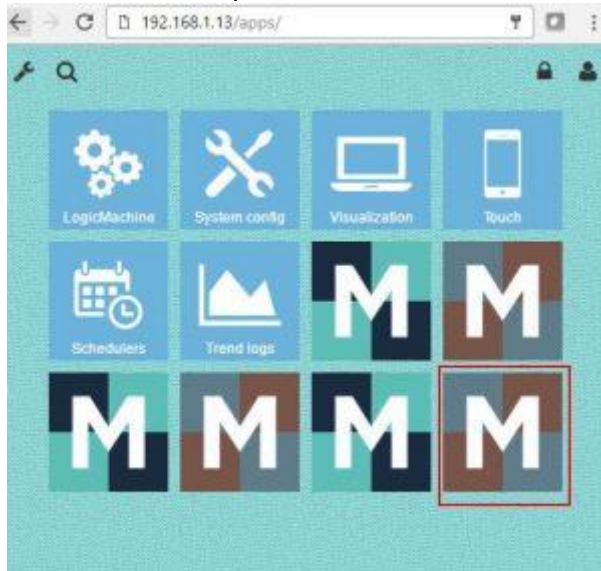

- 8) Click on the Cloud in the menu

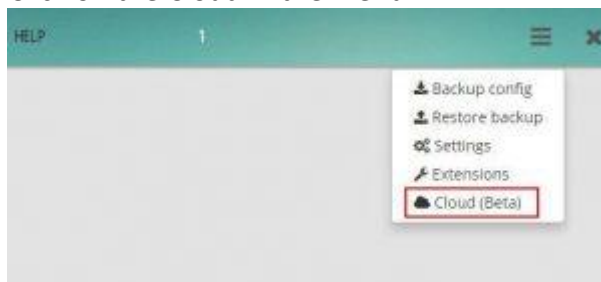


- 9) You will see the following screen. Click on **Register New User**, use email address as username and password minimum 8 symbols. Save



- 10) Then click on **Sign In**, and login with registered user. You can set LM name which you will use to find the device on the cloud dashboard (there is possibility to assign several devices to one user account. You will be able to choose the LM to control from cloud

dashboard)

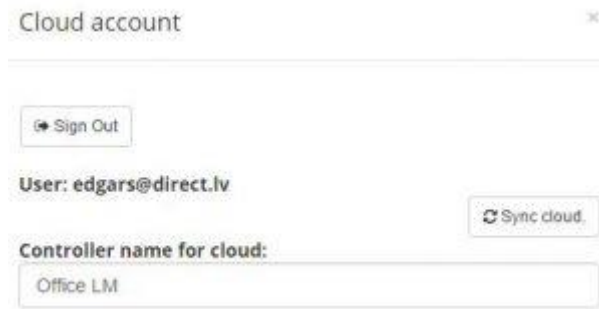

11) **Sync Cloud** button will synchronize with cloud all Mosaic elements including objects, widgets etc. After each change in Mosaic configuration (grp addresses, new widgets etc.), you need to click Sync Cloud button.

12) Create cloud visualization by adding widgets and defining group addresses. You can create several Rooms and when in room, you click on Add New Widget button. After this is done, click Sync. Cloud button



13) Unarchive [android-debug.zip](http://openrb.com/wp-content/uploads/2017/02/android-debug.zip) (<http://openrb.com/wp-content/uploads/2017/02/android-debug.zip>) and transfer the android-debug.apk to your mobile Android device, install (later will be for iOS too)

14) Open installed LogicMachine app on mobile device




15) You can find all LMs which are in your network, choose any and you are connecting directly to it (regular local way). If you click on the cloud you will get to the cloud main

screen with Mosaic visualization which you created for cloud usage




16) Then authorize with your login/password

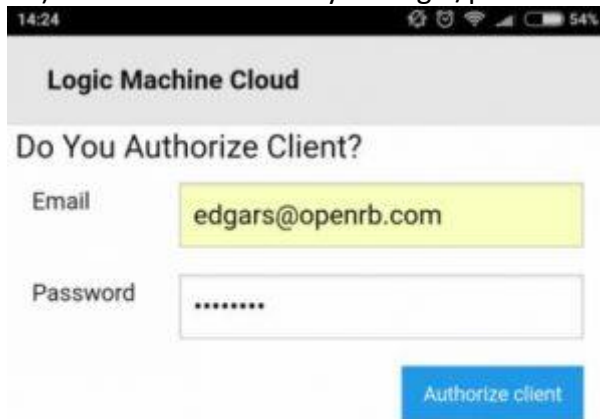


17) Cloud first screen looks like this. In the future we will add some more cloud specific applications. Click on Mosaic icon which will bring you to your created LogicMachine Mosaic interface



18) Cloud interface of your LogicMachine

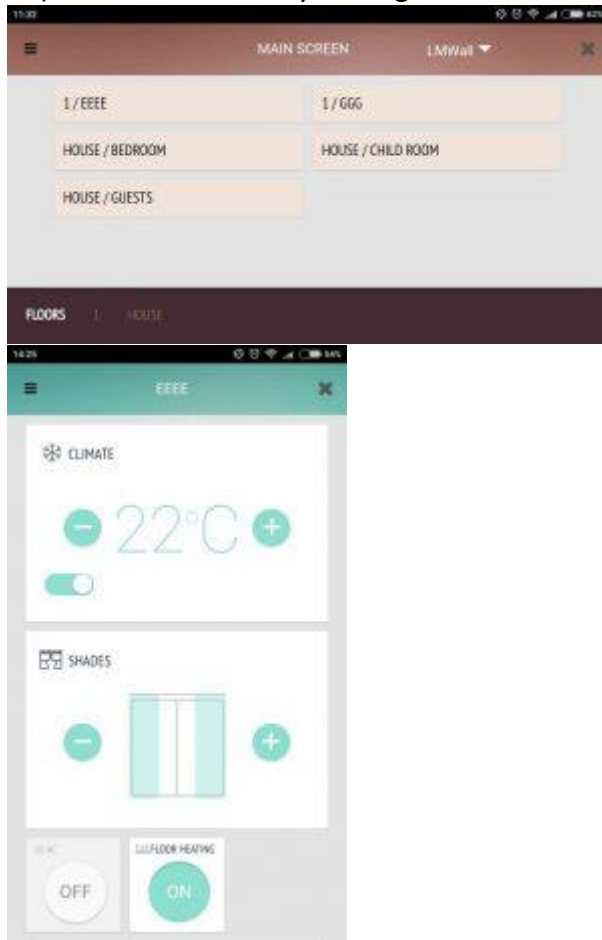

19) You can switch to other LogicMachine mapped to your account by choosing it in drop-down list on the top

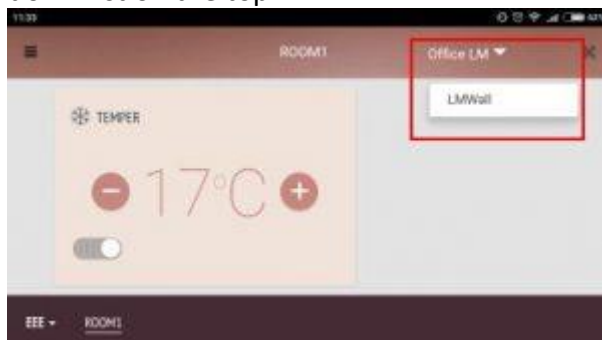

20) You can also login to cloud from web browser in link: <https://cloud.logicmachine.net> and access your LogicMachine from any place in the world.



21) We are working also on IP camera stream possibility through Cloud

22) You can check Mosaic20 custom-widgets instructions.ZIP (http://openrb.com/wp-content/uploads/2017/02/Mosaic20_custom-widgets_instructions.zip) file which contains manual how to install widget extensions and several Widget examples. Mosaic widgets eng.PDF (http://openrb.com/wp-content/uploads/2017/02/Mosaic_widgets_eng.pdf) contains manual on how to create your own Widgets.

23. Please see instructions for adding custom themes / CSS (http://openrb.com/wp-content/uploads/2017/03/Mosaic_custom_theme_CSS.pdf) for your Mosaic visualization. Download sample theme here (<http://openrb.com/wp-content/uploads/2017/03/theme.tar.gz>).

26. USB2.0 port specification

USB 2.0 characteristics:

- USB 2.0 provides a bandwidth of 480 Mbit/s, corresponding to an effective image data rate of 40 MB/s.
- Integrated voltage supply (5 VDC) for devices in the 4-pole cable. Devices complying with the USB specification may consume a total of 500 mA from the bus. Devices with a power of up to 2.5 W can therefore be supplied via the bus.
- USB cable must only be 4.5 m long at the maximum
- Data transmission is possible in both directions

Application Example:

USB interface can be used for extending memory capacity via attaching USB flash drive.

Configuration Commands

io.readfile (file)

Read whole file at once. Returns file contents as a string on success or nil on error.


io.writefile (file, data)

Writes given data to a file. Data can be either a value convertible to string or a table of such values. When data is a table, then each table item is terminated by a new line character. Return Boolean as write result when file can be open for writing or nil when file cannot be accessed.

USB flash drive supports FAT, FAT32 and NTFS file system. Maximum size of Flash drive is 32GB

27. CANx configuration

CANx app on LogicMachine allows to configure, monitor CANx protocol based devices. CANx app is available in LogicMachine application store.

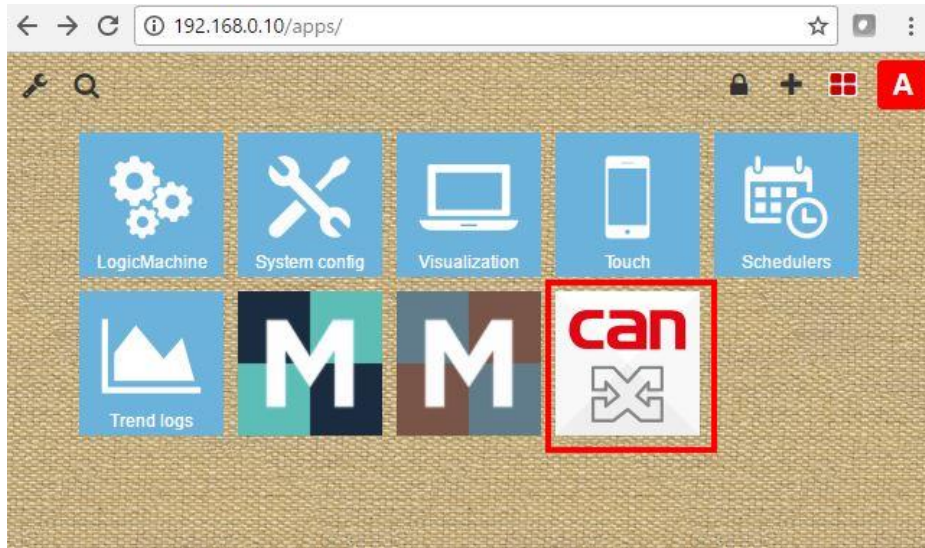

27.1. Scanning CAN FT line

If there are already devices connected in online mode, go to **Line Scan** tab, specify **Line range** (or leave default) and click on  magnifier icon

Groups Devices Locations Connection helper **Line scan** Device scan Reports Monitor Notes Tools ▾

Line range: 0. 0. New line 0. 0. New line 

Filter devices: All Prog Error

Address	Name	Type	HW-SW ID	State	
0.12		UIO16	00 00 00 01 / 01	-	  
0.6	8R (8 Relay outputs)	8R (8 Relay outputs)	00 00 00 03 / 01	-	  
0.4	UIO16	UIO16	00 00 00 01 / 01	-	  
0.3	UIO16	UIO16	00 00 00 01 / 01	-	  
0.2	UIO16 Name 1	UIO16	00 00 00 01 / 01	Prog	  

Once devices are found, the scanning process can be cancelled with  icon.

Address – physical address of the device

Name – name of the device. Can be changed in **Devices** tab.

Type – type of the device (profile)

HW-SW ID – hardware ID and software ID

State – Defines either the device is in Programming state or not (the programming button is pressed)

	add the device to Devices for further project configuration
	Scan and show device configuration (Device scan)
	Flash device LED

27.2. Device scan

Device scan shows all objects of the specific device.

Groups
Devices
Locations
Connection helper
Line scan
Device scan
Reports
Monitor
Notes
Tools

Line
0. 0. New line
Node
6

Filter state
All
OK
Error
Filter mode
All
Enabled
Disabled

ID	State	Type / Name	Data type	Value	Mode	Flags	Groups	Write config
1	✓	A Relay 1	1 bit (bool)	1	Normal - On after power-up	F T R W	0 / 20	
2	✓	A Relay 2	1 bit (bool)		Normal - Off after power-up	F T R W	0 / 20	
3	✓	A Relay 3	1 bit (bool)		Inverse - On after power-up	F T R W	0 / 20	
4	✓	A Relay 4	1 bit (bool)		Inverse - Off after power-up	F T R W	0 / 20	
5	✓	A Relay 5	1 bit (bool)		Disabled	F T R W	0 / 20	
6	✓	A Relay 6	1 bit (bool)		Disabled	F T R W	0 / 20	
7	✓	A Relay 7	1 bit (bool)		Disabled	F T R W	0 / 20	
8	✓	A Relay 8	1 bit (bool)		Disabled	F T R W	0 / 20	
9	✓	S Relay status 1	1 bit (bool)		Disabled	F T R W	0 / 20	
10	✓	S Relay status 2	1 bit (bool)		Disabled	F T R W	0 / 20	
11	✓	S Relay status 3	1 bit (bool)		Disabled	F T R W	0 / 20	
12	✓	S Relay status 4	1 bit (bool)		Disabled	F T R W	0 / 20	

ID – ID number of the object

State – internal state of the device, defines is there are not mistakes with the device

Type / Name – Name of the object

Data type – data type of the object

Value – current value of the object

Mode – mode of the object

Relay / Output modes:

Disabled

Normal, off after power-up

Inverse, off after power-up

Normal, on after power-up

Inverse, on after power-ups

Relay status modes:

Disabled

Normal

Inverse

Input modes:

Switch on/off

Switch off/on (inverse)

Switch Toggle

Button Toggle (optional long press)

Button On (optional long press)

Button Off (optional long press)

Button Start/Stop

Button Stop/Start (inverse)

Input Long Press modes:

Long press Toggle

Long press On

Long press Off

Flags

F – Filter. Defines if the device can filter telegrams (for CAN-CAN Routers)


T – Transmit. Defines if the device can initiate communication

R – Read. Defines if the read command is allowed to the device

W – Write. Defines if the write command is allowed to the device

Groups – number of groups associated with a particular object

	Configure device object mode, flags and group addresses
	Set device object value

 Once some change is done  button gets active. By finishing all changes and clicking on this button, all updated configuration is written to a respective device.

27.3. Group address configuration

Group addresses can be configured either in object configuration settings or directly in **Groups** tab.

Address	Name	Datatype	Tags	Properties
0/0/1	UIO16 Name 1 - Input 1	0.1. 1 bit (boolean)	lightsGroup	L E P R
0/0/2	Connection helper group	0.1. 1 bit (boolean)	lightsGroup	L E P R
0/0/3	lights kitchen	0.1. 1 bit (boolean)		L E P R
0/0/7	Output 1	0.1. 1 bit (boolean)		L E P R
31/7/252	Output status 14	0.1. 1 bit (boolean)		L E P R
31/7/253	Output status 14	0.1. 1 bit (boolean)		L E P R

Address – group address

Name – group name

Datatype – group data type

Tags – tags for a specific group

Properties – properties of group

L – Log each group change

E – Export. Used to map this group automatically

to KNX group (**Objects** tab in LogicMachine)

P – Post process. Execute a script on group address change

R – Read on initialization (device start)

Location – location of the object/group

	List devices that use this group address
	Read/write group address value
	Edit group address
	Delete group address

Group address: 0/0/1

Name: UIO16 Name 1 - Input 1

Datatype: 0.1. 1 bit (boolean)

Tags: lightsGroup

Location: Office Demo / Floor 1 / Room 101

Properties: L Log, E Export, P Post-process, R Read on init


Comments:

Save Cancel



Importing group addresses from ETS project file



button allows to import KNX project file.

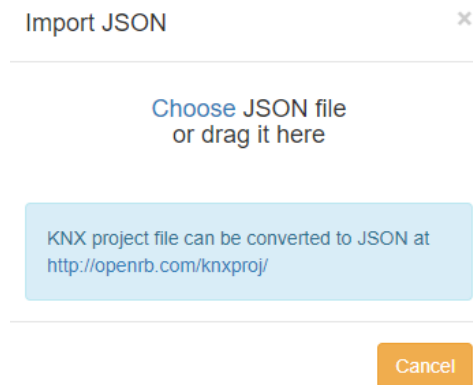

 Prior to importing, ETS project file need to be converted to JSON file using this online utility

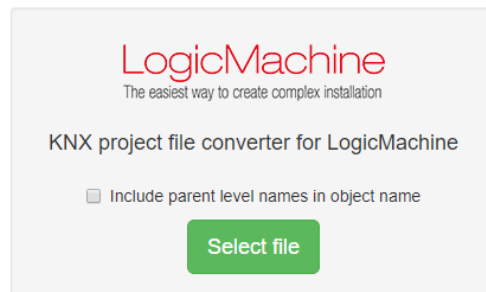

27.4. Device configuration

Devices section is used to configure canX devices. The configuration can be done even if the device is not yet physically connected to the line (offline mode).

The screenshot shows the 'Devices' section of the software. At the top, there are tabs: Groups, Devices (selected), Locations, Connection helper, Line scan, Device scan, Reports, Monitor, Notes, and Tools. Below the tabs are search and filter fields for Name, Device type, Tags, and Location. The main area contains a table with the following data:

Address	Name	Device type	Tags
0.2	UIO16 Name 1	UIO16 (Binary inputs/outputs)	input
0.3	UIO16	UIO16 (Binary inputs/outputs)	
0.4	UIO16	UIO16 (Binary inputs/outputs)	
0.6	8R (8 Relay outputs)	8R (8 Relay outputs)	actuator
0.7	8R (8 Relay outputs)	8R (8 Relay outputs)	
0.10	UIO16	UIO16 (Binary inputs/outputs)	
0.11	UIO16	UIO16 (Binary inputs/outputs)	

Each row in the table has a set of action icons on the right: a blue circle with a dot, a blue square with a plus, a green magnifying glass, a blue download arrow, a blue gear, a green pencil, and an orange X.

Address – physical address of the device

Name – name of the device

Device type – device type / profile

Tags – tags associated with the device

	Check if device is online on the bus
	Duplicate device configuration
	Scan and show device configuration
	Write configuration to the device
	Configure device parameters
	Edit device base configuration
	Delete device

When clicking on a specific entry, device settings appear.

Edit device

Line

0. 0. New line

Node

4

Name

UIO16

Device type

UIO16

More info

Profile mode

Binary inputs/outputs

Tags

input

Location

Office Demo

Block write (skip device during full project write)

Comments

Save

Cancel

Line [0..15] – Line ID
Node [1..255] – Node ID
Name – Name of the device
Device type – automatically detected device type
Profile mode – software profile mode for the device. There are several profiles possible for one type e.g. for UIO16 – Binary input/outputs, binary outputs, binary inputs. This makes easier and faster configuration by limiting count of objects
Tags – associated tags with this device
Location – location of the device
Block write – skip device during full project write

When clicking on Parameters icon , objects settings appear. Depending on the software profile chosen, you see respective control option for each channel.

8R 8 channel relay module:

8R (8 Relay outputs) (0.7)



All Enabled Disabled

Port 1
Port 2
Port 3
Port 4
Port 5
Port 6
Port 7
Port 8

Relay 1 Relay status 1

Relay 1

Normal - On after power-up

Flags

F

T

R

W

Group addresses Add 1 bit (boolean)

X 0/0/4 Relay 1

X 0/0/5 8R (8 Relay outputs) - Relay 1

X 0/0/8 Relay 1

X 0/0/9 Relay 1

UIO16 16 channel universal input/output module:

UIO16 (0.11)



All Enabled Disabled

Port 1
Port 2
Port 3
Port 4
Port 5
Port 6
Port 7
Port 8
Port 9
Port 10
Port 11
Port 12
Port 13
Port 14
Port 15
Port 16

Output 1 Output status 1 Input 1

Input 1

Switch - Toggle

Flags

F

T

R

W

Send inverse of the current value when switched On or Off

Group addresses Add 1 bit (boolean)

X 0/0/11 UIO16 - Input 1

When the changes are done for the device, it is marked in yellow.

Groups Devices Locations Connection helper Line scan Device scan Reports Monitor Notes Tools

Name Device type Tags All tags Any tag Location Exact Incl. sub

- All types - - All locations -

Write project Add

Address	Name	Device type	Tags
0.2	UIO16 Name 1	UIO16 (Binary inputs/outputs)	input
0.3	UIO16	UIO16 (Binary inputs/outputs)	
0.4	UIO16	UIO16 (Binary inputs/outputs)	
0.6	8R (8 Relay outputs)	8R (8 Relay outputs)	actuator
0.7	8R (8 Relay outputs)	8R (8 Relay outputs)	
0.10	UIO16	UIO16 (Binary inputs)	
0.11	UIO16	UIO16 (Binary inputs/outputs)	

Press this button  to upload new settings to all modified / all devices.

Select write mode

Device list

Whole project

Matching current filter

Device status

Only modified

All devices

Write

Cancel

27.5. Locations

Project structure can be defined in **Locations** tab.

Groups Devices Locations Connection helper Line scan Device scan Reports Monitor Notes Tools ▾					⊞ ? ✕	
Name	Comments	Devices	Groups		⊞ Add	
Office Demo		0 / 2	0 / 3		⊞ ⊞ ⊞ ✕	
└ Floor 1		0 / 2	0 / 3		⊞ ⊞ ⊞ ✕	
└ Room 101		2 / 2	2 / 2		⊞ ⊞ ⊞ ✕	
└ Room 102		0 / 0	1 / 1		⊞ ⊞ ⊞ ✕	
└ Room 103		0 / 0	0 / 0		⊞ ⊞ ⊞ ✕	
└ Floor 2		0 / 0	0 / 0		⊞ ⊞ ⊞ ✕	
└ Room 201		0 / 0	0 / 0		⊞ ⊞ ⊞ ✕	
└ Room 202		0 / 0	0 / 0		⊞ ⊞ ⊞ ✕	
└ Room 203		0 / 0	0 / 0		⊞ ⊞ ⊞ ✕	

Name – name of the location

Devices – devices associated with a particular location. First number indicates count of specific device in a particular room. Second - total count of devices.

Groups – group addresses associated with a particular location. First number indicates count of specific groups in a particular room. Second - total count of groups.

⊞	Add new sub-location
⊞	Duplicate location, including devices and group addresses
✎	Edit location
✕	Delete location and all sub-locations

By clicking on  button, you will add a new location

Add new location ✕

Parent location
Office Demo ▾

Name
Floor 2

Comments

Parent location – choose parent location

Name – name of the new location

Save

Cancel

27.6. Reports

Reports section lists all devices in the project indicating which devices are located in which line, how many group addresses are associated with a particular device, how much space it is required in the cabinet.

Groups

Devices

Locations

Connection helper

Line scan

Device scan

Reports

Monitor

Notes

Tools ▾

📄

?

✕

Report for project Office Demo

🖨️ Print

Address	Name	Device type	Group associations	Width (units)
0. New line				
0.2	UIO16 Name 1	UIO16 (Binary inputs/outputs)	2	3
0.3	UIO16	UIO16 (Binary inputs/outputs)	6	3
0.4	UIO16	UIO16 (Binary inputs/outputs)	1	3
0.6	8R (8 Relay outputs)	8R (8 Relay outputs)	0	4
0.7	8R (8 Relay outputs)	8R (8 Relay outputs)	5	4
0.10	UIO16	UIO16 (Binary inputs)	0	3
0.11	UIO16	UIO16 (Binary inputs/outputs)	0	3
Line total (7 devices)			14	23
Project total (7 devices)			14	23

27.7. Monitoring the fieldbus line

In **Monitor** tab you can see the activity on the bus line, send read/write requests to specific device / group / object.

Time – time of telegram received
Type (RX/TX; Object/Device/Group/Control) – type of telegram
Address – group or physical device address the telegram was received to/from
Name – name of the device
Command – command received
Data – data received

Send a command to a bus line
Choose command type and other parameters and click on green arrow to send request

Command types

Object
ObjectValueRead - Request of Value for Object

ObjectValueResponse (1..8 bytes) – Response for ObjectValueRead command, return Value for given Object

ObjectValueWrite (1..8 bytes) – Write Value to given Object

ObjectInfoRead - Read request for EEPROM address, with address as parameter for command

ObjectInfoResponse (1 byte) - Response for ReadEEProm, return Value for given EEPROM address

ObjectConfigWrite (1 byte) - Write EEPROM addr. = object id (response with ResponseObjectEepromConfig msg. if success)

GAListAdd (4 bytes) – Add the group address to list for given object

GAListDel (4 bytes) - Delete given GA from list for Object, GA as parameter for delete command

GAListClear - Delete full list of group addresses connected to the given object

ObjectCmdResponse - ..

GAListRead (1 byte) - Counter of batch GA as parameter (1 for first 2 addr., 2 for second 2 addr. ..)

GAListResponse (8 bytes) - Response for GetListGA command, return 2 group adr. connected to object (2 x 4bytes)

Device

DeviceInfoRead – Read Hardware ID and Software ID for given device, device status and device Objects Quantity

DeviceInfoResponse (8 bytes) – Response for ..., return ObjQty (byte), status (byte), 5 bytes for HW id and 1 byte for SW id

DeviceAddrRequest (8 bytes) - Request for address for this device (current Line ID and Node ID) with HW+SFT id as message DATA

DeviceAddrWrite - Return: **Line ID** (d[1]), **Node ID** (d[0]) and **Master Code** for device 6 bytes (d[2] - d[7])

DeviceConfigRead (2 bytes) – EEPROM read command for given Address (2 bytes DATA)

DeviceConfigResponse (8 bytes) – Return 8 byte of data from EEPROM for given start address

DeviceConfigWrite (8 bytes) – Write 6 bytes of data with 2 bytes address

DeviceConfigWriteResponse (1 byte) – 1 if write is successful of 0 if failed

DeviceModeSet – set device mode

DeviceModeResponse – ...

DeviceLedOn – Switch the device green LED to **ON** state

DeviceLedOff – Switch the device green LED to **OFF** state

DevicePing – Ping request to device with given Line ID and Node ID

DevicePong – Response on Ping request with CAN FT bus TX and RX errors and maximum q-ty of GAs per Object

Group

GroupValueRead – Request of Value for given Group address

GroupValueResponse (1..8 bytes) – Response for GroupValueResponse command, return Value for given Group address

GroupValueWrite (1..8 bytes) – Write Value to given Group address

Control

DirectMsgOn (8 bytes) – Switch on direct communication with code (master_code = Fx(code))

DirectMsgOff (8 bytes) – Switch off direct communication with code (master_code = Fx(code))

SecureGAOn (8 bytes) – Switch to Secure GA mode with code (master_code = Fx(code))

SecureGAOff (8 bytes) – Switch Off Secure GA mode with code (master_code = Fx(code))

27.8. Write device / physical address

To write device another physical address, go to **Tools** → **Write device address**. Choose Line and Node number and click **Write**. Then click and release programming button on the device. The Write window will close once the new address is written.

Write device address

Line

0. 0. New line

Node

1

Programming button on the device must be pressed **after** Write button is clicked

Write

Cancel

27.9. See current physical address of the device

To see currently flashed physical address, go to **Monitor** tab, start monitor. Then shortly press programming button on the device, you will see current physical **Address**.

Groups

Devices

Locations

Connection helper

Line scan

Device scan

Reports

Monitor

Notes

Tools

Command type

Object

Command

ObjectValueRead

Line

0. 0. New line

Node

1

Object

1

Data (HEX, space-separated)

Filter messages

All

Individual

Group

Filter direction

All

RX

TX

Name or address

Stop monitor

Export CSV

Clear

#	Time	Type	Address	Name	Command	Data
1	09:59:00.870	RX Device	4.4.0		DeviceAddrRequest	02 03

27.10. Project configuration

General project settings are available in **Tools → Project configuration**.

Project configuration

Project name

Office Demo

Master code

92 D5 A9 CB

Up to 4 HEX characters, separated by space

Recommended action: click  to generate new random code

Master code is written to devices together with physical address. It must be set only once per project. Changing master code requires physical device reset via programming button.

Semantic dictionary support

☒ Use tag dictionary from Project Haystack [More info](#)

Save

Cancel

Project name – name of the project

Master code – master code is written to devices together with physical address. It must be set only once per project. Changing master code requires physical device reset via programming button. Master code is a protection for the installer from possibility to read or program canX devices by other parties. If it is necessary to block full access to the canX device, it is necessary to disable direct communication / messages in **Tools → Disable direct communication** or through **Monitor**.

Semantic dictionary support – define either tag dictionary is used from Project Haystack: <https://project-haystack.org/> Project Haystack is an open source initiative to streamline working with data from the Internet of Things. Haystack standardize semantic data models and web services with the goal of making it easier to unlock value from the vast quantity of data being generated by the smart devices that permeate our homes, buildings, factories, and cities.

27.11. New device profiles

To add new canX device profiles to your canX app, go to **Tools → Upload device profile**

Upload profile ✕

Choose device profile
or drag it here

Cancel

27.12. Find device if you have several of them in the line

In Line Scan when scanning, you can click on programming button of the device and the respective field will be set to green color

Devices

Group addresses

Line scan

Device scan

Write address

Monitor

Notes

Tools

?

✕

Line range

0

0

Q

Filter devices

All

Prog

Error

Address	Name	Type / HW-SW ID	State
0.3	UIO16 (Binary input/output)	UIO16 (Binary input/output)	Prog

27.13. Connection helper

Connection helper allows easing making connection between unused input and output objects.

Add new group address ✕

Groups

Devices

Locations

Connection helper

Line scan

Device scan

Reports

Monitor

Notes

Tools

?

✕

Group address

0/0/19

First unused address is selected automatically

Name

Kitchen light

Datatype

0.1. 1 bit (boolean)

Tags

Q No tags set

Location

Office Demo / Floor 1 / Room 101

Log

Export

Post-process

Read on init

Comments

Datatype

- All datatypes -

Tags

All tags

Any tag

Location

Exact

Incl. sub

Show objects

Unconnected

Actuators

☒ 8R (8 Relay outputs) - Relay 2

☐ 8R (8 Relay outputs) - Relay 3

☐ 8R (8 Relay outputs) - Relay 4

Sensors

☐ UIO16 - Input 2

☒ UIO16 - Input 3

Once the Save Connection button is clicked, a new group address window is opened

Address – group address

Name – group name

Datatype – group data type

Save

Cancel

© 2021

www.logicmachine.net

LM52-KC

Page 297 /

Manual / Issue date 26.11.2021

299

Tags – tags for a specific group

Properties – properties of group

L – Log each group change

E – Export. Used to map this group automatically to KNX group (**Objects** tab in LogicMachine)

P – Post process. Execute a script on group address change

R – Read on initialization (device start)


Location – location of the object/group

27.14. Reset the device

Press programming button for ~3 sec and release when the device blinks red twice. Wait while green LED will blink once. Preferably is to restart the power as well after this is done.

27.15. Accessing canX objects from LogicMachine scripts

To use canX configuration from LogicMachine scripts use scripting

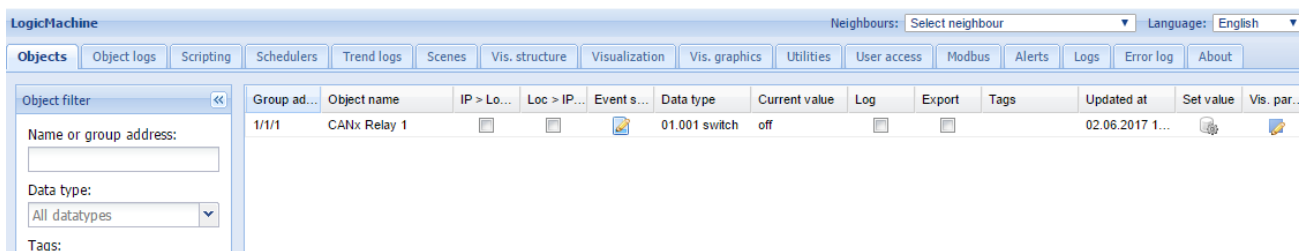

Control via script via grp address:

```
can = require('canx')
can.sendrequest({
  data = event.getvalue(),
  command = can.cmds.group.valuwrite,
  groupaddress = 1,
})
```

Control via physical address:

Change lineid / nodeid to match your relay device settings.

```
can.sendrequest({  
    lineid = 0,  
    nodeid = 1,  
    objectid = 1,  
    command = can.cmds.object.valuewrite,  
    data = grp.getvalue(),  
})
```

28. Other examples

Different examples, 3rd party protocol integration and other useful applications can be found here:

<http://openrb.com/all-examples/>

<http://forum.logicmachine.net/>