


Embedded Systems SIA, VAT No LV40003411103
47. Katolu str., Riga, LV 1003, LATVIA
Phone: +371 67648888, fax: +371 67205036, e-mail: sales@openrb.com

Insert SIM card

- 1) Open front cover of the enclosure with help of screwdriver (by pushing to yourself the side edge of base cover)

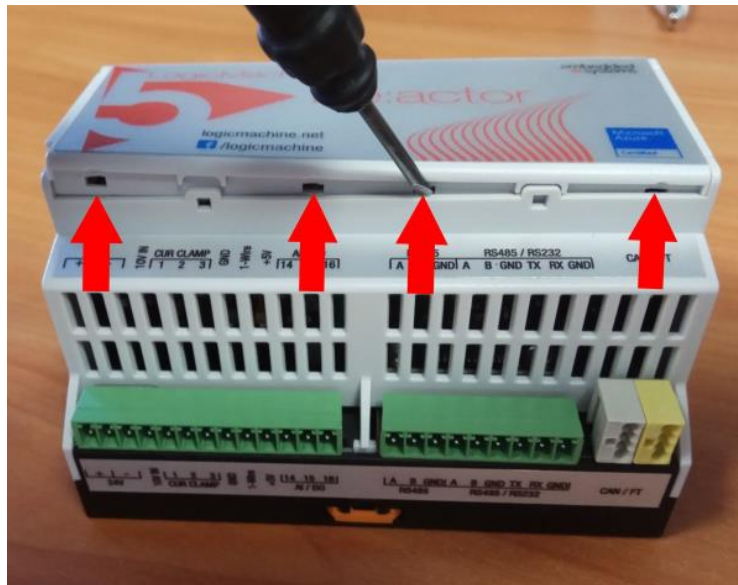

- 2) Open MicroSIM holder by moving down the top part and lifting up



Embedded Systems SIA, VAT No LV40003411103
47. Katolu str., Riga, LV 1003, LATVIA
Phone: +371 67648888, fax: +371 67205036, e-mail: sales@openrb.com



3) Insert SIM card and close the holder. Close the front cover



Embedded Systems SIA, VAT No LV40003411103
47. Katolu str., Riga, LV 1003, LATVIA
Phone: +371 67648888, fax: +371 67205036, e-mail: sales@openrb.com

4) Connect LTE antenna



Embedded Systems SIA, VAT No LV40003411103
47. Katolu str., Riga, LV 1003, LATVIA
Phone: +371 67648888, fax: +371 67205036, e-mail: sales@openrb.com

Setting up LTE modem

In *System configuration* go to *Network* → *3G/PPP connection*.
Fill required fields depending on your 3G operator settings, apply settings.

The screenshot shows a configuration window titled "3G/PPP connection" with a close button (X) in the top right corner. The window contains several input fields and a dropdown menu:

- Current IP: 10.94.211.136
- Service status: Enabled (dropdown menu)
- APN (access point): internet.lmt.lv
- PIN code: (empty text box)
- Dial number: (empty text box)
- Username: (empty text box)
- Password: (empty text box)
- DNS server 1: 8.8.8.8
- DNS server 2: (empty text box)

Below the input fields, there is an information icon (i) and a warning message: "Ethernet gateway must not be set, otherwise 3G connection will not work. At least one static DNS server must be set." At the bottom of the window, there are two buttons: "OK" and "Cancel".

Sending / receiving SMS from LogicMachine5

Please follow instructions in this example:
<https://forum.logicmachine.net/showthread.php?tid=68&pid=240#pid240>