





Embedded Systems SIA, VAT No LV40003411103 47. Katolu str., Riga, LV 1003, LATVIA

Phone: +371 67648888, fax: +371 67205036, e-mail: sales@openrb.com

## LogicMachine5 Reactor IO EnOcean

LogicMachine (LM) is your easiest way to program complex logic in KNX/EIB, Modbus, BACnet, EnOcean and other networks. LM will enable you to efficiently customize building automation processes, easily delivering unlimited flexibility benefit to end users in a cost-effective way.

**LM5-RIOE** is an embedded platform with integrated Ethernet, USB, KNX/EIB, Serial interfaces, EnOcean transceiver and I/O ports. LM allows to use it as cross-standard gateway, logic engine, visualization



platform, IP Router. Scripting templates provides user-friendly, flexible configuration interface and integration with cloud/web services, 3<sup>rd</sup> party devices. Via applying custom scripts LM can simultaneously act as thermostat, security panel, lighting controller, etc. LogicMachine application store and external app development possibility allows to extend device functionality and adjust to a specific market segment.

**LM5-RIOE** is preinstalled with EnOcean 868MHz transceiver and antenna.

**LM5-RIOE** is optionally available with 3x more powerful CPU than all previous LogicMachine versions.

ENG - Data sheet Issue date 17.10.2016

## **Application**

- Logical functions
- WEB SCADA visualization for PC and touch-devices
- cross-standard gateway
- integration with third party devices over USB, RS485 serial port, Ethernet AV, IR, HVAC
- Data logger with trends
- **KNX IP Router**
- Presence monitoring
- Lighting regulation
- Universal controller (lighting, shutter etc.)
- Health/activity monitoring
- Internet-of-Things
- Cloud server/client



































































#### Types of product

LogicMachine5 Reactor IO EnOcean LM5-RIOE LogicMachine5 Reactor IO EnOcean Power LM5p-RIOE

### Standards and norms compliance

EMC: EN61000-6-1 EN61000-6-3

PCT Certificate

**Technical data:** 

Power supply: 24V DC on terminal connectors or

24V DC Passive Power-over-Ethernet

Power consummation: 1.3W

Interface: KNX/EIB TP1 1

EnOcean 868MH with

Antenna 1
10BaseT/100BaseTX 1
RS-485 1
RS-485/RS-232 1
(switchable in software –

full-duplex=RS232, half-duplex=RS485)

USB2.0 1

Binary input/Digital output 16 (Configurable). 380 mA

continues current on output. Optoislated from KNX/EIB bus. Additional 24V power source is

supported.

Binary inputs 8

Connections: KNX bus: Bus Connection Terminal

0.8mm2

Power supply: Screw, 1.5mm2
Serial: Screw, 1.5mm2
I/O: Screw, 1.5mm2

Operating elements LED 1 – CPU load

1 - Activity

Enclosure: Material: Polyamide

Color: Gray

Dimensions: 61(W)x90(H)x108(L) mm

Usage temperature: 0C ... +45C Storage temperature: -15C ... +55C

Weight: 150g Warranty: 2 years

Relative Humidity: 10...95 % without condensation



The installation and assembly of electrical equipment may only be performed by skilled electrician. The devices must not be used in any relation with equipment that supports, directly or indirectly, human health or life or with application that can result danger of people, animals or real value

## Mounting advice

The devices are supplied in operational status. The cables connections included can be clamped to the housing if required.

#### **Electrical connection**

The devices are constructed for the operation of protective low voltage (SELV). Grounding of device is not needed. When switching the power supply on or off, power surges must be avoided.

#### **Terminal connection schemes**

Note! In first batch of LM5 devices, the 24V DC clamp powering ports are placed vice versa rather than showed on diagrams!

## **Powering over Ethernet**

LM5 supports two powering modes:


- regular powering over screw terminals (Jumpers up or down)



passive PoE powering over 24V DC (Jumpers down)



Please note that there are two PoE types of PoE switches/adapters – passive and active (802.3af). In passive mode 4 Ethernet cable wires are used for data and 4 are used for power. In active PoE mode data and power goes together.

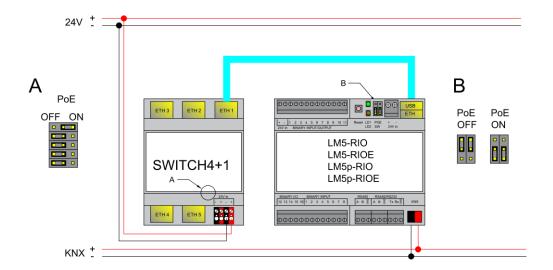

## Passive PoE switch


# Passive PoE adapters








# KNX connection / Powering over 24V terminals

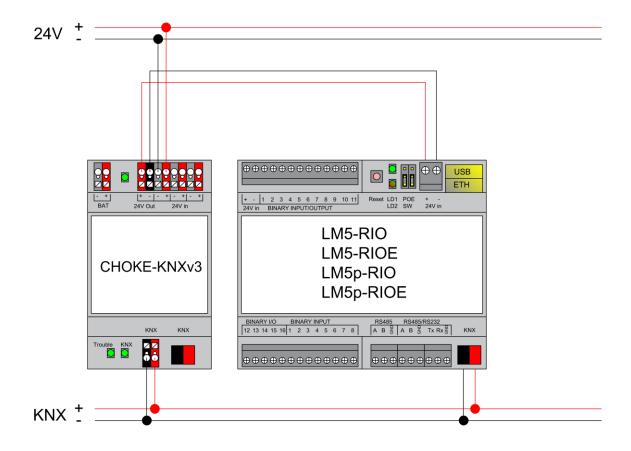

#### **RS-485** connection

There can be used max two RS-485 on LM5 Lite. First one is definitive, second one is software switchable – either it works as RS-485 or as RS-232 :


- If it is set up as full-duplex it will operate as RS-232 and respective TX/RX/GND screw terminals should be used
- If it is set up as half-duplex (\*) it will operate as RS-485 and respective A/B/GND screw terminals should be used

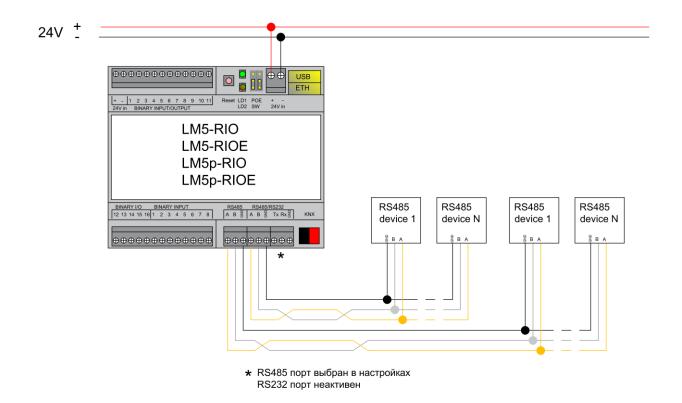

<sup>\*</sup>RS-485 is chosen in this case, RS-232 is not activated


# RS-485/RS-232 connection

If second serial port is set as full-duplex in LogicMachine configuration, it will operate as RS-232 and respective TX/RX/GND screw terminals should be used.

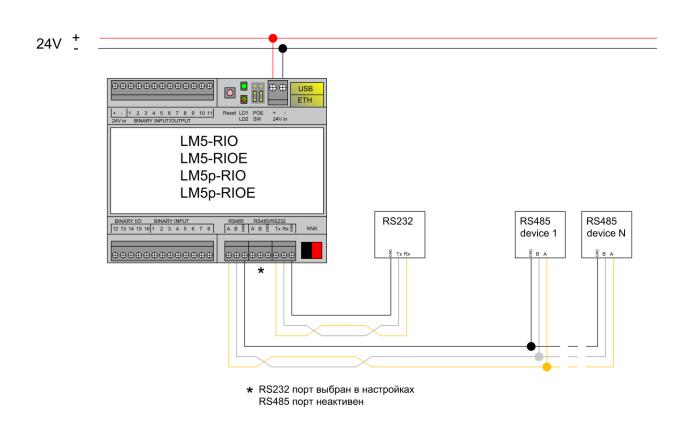


<sup>\*</sup>RS-232 is chosen in this case, RS-485 is not activated

# Digital output (e.g. relay/contactor)

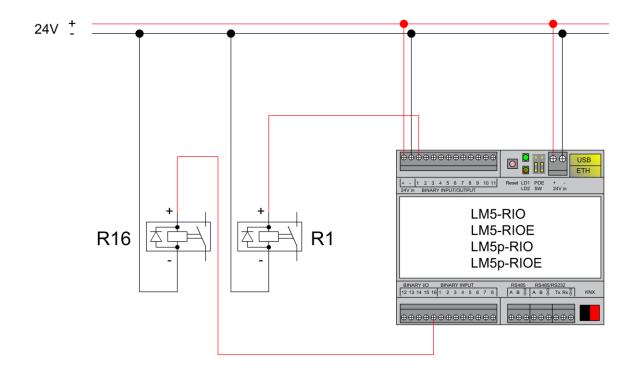

# Digital input (e.g. pushbutton)

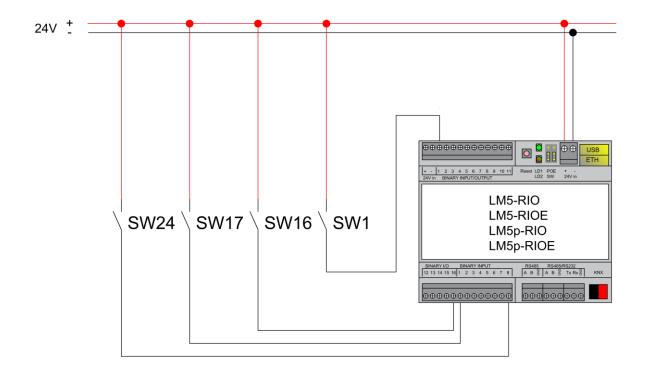

## Quick startup guide

- 1) Mounting the device on DIN rail
- 2) Connect the KNX bus cable
- 3) Connect 24V power supply to the device (either through separate 24V crew terminals or through Passive 24V DC Power-Over-Ethernet)
- 4) Connect Ethernet/LAN cable coming from the PC/switch

## **Default IP configuration**

Login name	admin
Password	admin
IP address	192.168.0.10
Network mask	255.255.255.0

#### **Reset device**

You can either reboot the device by pressing RESET button or reset the configuration to factory defaults:

- Press and hold for <10 sec reboot the device
- Press and hold for >10 sec reset networking with IP to factory default
- Press and hold for >10 sec and again press and hold for >10 sec full reset of configuration to factory defaults