

LogicMachine Ambient

Product Manual



November, 2021

Technical Support:
support@openrb.com

Copyright

Copyright © 2021 Embedded Systems SIA. All Rights Reserved.

Notice

Embedded Systems SIA., reserves the right to modify the information contained herein as necessary. Embedded Systems SIA assumes no responsibility for any errors which may appear in this document. Information in this document is provided solely to enable system and software implementers to use KNX/EIB LogicMachine product.

Trademarks

LogicMachine is a trademark of Embedded Systems SIA. All other names and trademarks are the property of their respective owners and are hereby acknowledged.

Introduction

LM Ambient is an ecodesigned wall-mounted controller with gesture control that transforms the device into smart push-button. Temperature, humidity, barometer, air quality and light sensors measure and control environment around you. Ambient lighting can work as LED lamp or notifiicator.

LM Ambient consists of sensor platform, visualization server, cross-standard gateway, scenarios and logic engine. It supports KNXnet/IP, Modbus TCP and BACnet. It also has built-in bi-directional EnOcean, Bluetooth 4.0 Low Energy interfaces.

LM Ambient provides ecosystem for IoT including pairing with wearable electronics, platform for custom applications and external development possibilities

Technical support

Any faulty devices should be returned to Embedded Systems.

If there are any further technical questions concerning the product please contact our support, available Mon-Fri 9:00 – 17:00 GMT +02:00. Please write to support@openrb.com.

Firmware updates are available at www.openrb.com



Caution Security advice

The installation and assembly of electrical equipment may only be performed by skilled electrician. The devices must not be used in any relation with equipment that supports, directly or indirectly, human health or life or with application that can result danger of people, animals or real value

Mounting advice

The devices are supplied in operational status. The cables connections included can be clamped to the housing if required.

Electrical connection

The devices are constructed for the operation of protective low voltage (SELV). Grounding of device is not needed. When switching the power supply on or off, power surges must be avoided.

Contents

| | |
|--|-----------|
| 1. DEVICE SPECIFICATION | 7 |
| 2. CONNECTION SCHEMES | 11 |
| 3. QUICK STARTUP GUIDE | 11 |
| 3.1. MOUNTING | 11 |
| 3.2. DEFAULT LOGIN PARAMETERS | 12 |
| 3.3. FACTORY DEFAULT | 12 |
| 3.4. IP SETTINGS | 12 |
| 3.5. DISCOVER LOGICMACHINE IP ADDRESS | 14 |
| 3.6. GESTURE CONTROL, AMBIENT LIGHT SENSOR | 17 |
| 3.7. SENSORS CONFIGURATION | 20 |
| 3.8. LED CONFIGURATION | 25 |
| 3.9. MOSAIC APPLICATION | 26 |
| 3.10. STANDARDS SUPPORTED | 30 |
| 3.11. FIRMWARE UPGRADE | 31 |
| 3.12. KNX AND FILTERING TABLE SETTINGS | 32 |
| 3.13. QUICK GUIDE - CREATE VISUALIZATION FOR IPAD/PC | 37 |
| 4. GRAPHICAL USER INTERFACE LOGIN..... | 46 |
| 4.1. Show/hide apps | 47 |
| 4.2. Customize background / Language..... | 48 |
| 4.3. Find applications | 49 |
| 4.4. Unlock the screen for sorting order..... | 50 |
| 4.5. Adding/removing apps – app administration..... | 50 |
| 5. APPLICATION DEVELOPMENT | 54 |
| 6. LOGICMACHINE CONFIGURATION | 65 |
| 6.1. SCRIPTING | 66 |
| 6.1.1. Block programming | 66 |
| 6.1.2. Block functions | 68 |
| 6.1.3. Adding a new script | 71 |
| 6.1.4. Event-based scripting | 74 |
| 6.1.5. Resident scripting | 74 |
| 6.1.6. Scheduled scripting..... | 74 |
| 6.1.7. Script editor | 76 |
| 6.1.8. Object functions..... | 77 |
| 6.1.9. Returned object functions, group communication functions..... | 78 |
| 6.1.10. Group communication functions..... | 79 |
| 6.1.11. Object function examples..... | 79 |
| 6.1.12. Data type functions, data types | 80 |
| 6.1.13. Data types | 80 |
| 6.1.14. Data storage function | 81 |
| 6.1.15. Alert function | 82 |
| 6.1.16. Log function | 83 |
| 6.1.17. Scheduled scripting date/time format | 83 |
| 6.1.18. Time function | 83 |
| 6.1.19. Data Serialization | 84 |
| 6.1.20. String functions | 84 |
| 6.1.21. Input and output functions | 88 |
| 6.1.22. Script control functions..... | 89 |
| 6.1.23. JSON library..... | 90 |
| 6.1.24. Conversion | 90 |
| 6.1.25. Bit operators | 91 |
| 6.1.26. Input and Output Facilities | 91 |
| 6.1.27. Mathematical functions..... | 92 |
| 6.1.28. Table manipulations | 95 |
| 6.1.29. Operating system facilities..... | 95 |
| 6.1.30. Extended function library | 98 |

| | | |
|-----------|--|------------|
| 6.1.31. | User libraries..... | 99 |
| 6.1.32. | Common functions | 100 |
| 6.1.33. | Start-up (init) script | 100 |
| 6.1.34. | Tools | 101 |
| 6.2. | OBJECTS..... | 103 |
| 6.2.1. | Object parameters | 103 |
| 6.2.2. | RGB group object | 104 |
| 6.2.3. | Object visualization parameters | 106 |
| 6.2.4. | Change the object state..... | 110 |
| 6.2.6. | Object control bar | 110 |
| 6.2.7. | Filter objects..... | 112 |
| 6.3. | OBJECT LOGS | 112 |
| 6.3.1. | Export logs..... | 114 |
| 6.4. | SCHEDULERS..... | 117 |
| 6.4.1. | Add new scheduler..... | 117 |
| 6.4.2. | Scheduler events | 117 |
| 6.4.3. | Scheduler holidays..... | 118 |
| 6.5. | TREND LOGS..... | 119 |
| 6.5.1. | Add new trend log..... | 119 |
| 6.5.2. | Trend logs functions | 120 |
| 6.6. | VISUALIZATION STRUCTURE | 121 |
| 6.6.1. | Levels / Plans..... | 121 |
| 6.6.2. | Layouts / Widgets..... | 124 |
| 6.7. | VISUALIZATION..... | 128 |
| 6.7.1. | Plan editor..... | 128 |
| 6.7.2. | Object | 129 |
| 6.7.3. | Link..... | 131 |
| 6.7.4. | Text Label..... | 132 |
| 6.7.5. | Image..... | 133 |
| 6.7.6. | Frame | 133 |
| 6.7.7. | Gauge | 135 |
| 6.7.8. | Camera | 135 |
| 6.7.9. | Graph..... | 137 |
| 6.8. | VIS.GRAPHICS | 139 |
| 6.9. | UTILITIES | 141 |
| 6.10. | USER ACCESS | 145 |
| 6.11. | ALERTS | 148 |
| 6.12. | ERROR LOG | 149 |
| 6.13. | LOGS | 149 |
| 6.14. | HELP | 150 |
| 7. | USER MODE VISUALIZATION | 151 |
| 7.1. | CUSTOM DESIGN USERMODE VISUALIZATION | 152 |
| 8. | TOUCH VISUALIZATION | 153 |
| 9. | SYSTEM CONFIGURATION | 154 |
| 9.1. | HOSTNAME..... | 154 |
| 9.2. | CHANGING ADMIN PASSWORD | 155 |
| 9.3. | PACKAGES..... | 155 |
| 9.4. | UPGRADE FIRMWARE | 155 |
| 9.5. | REBOOT LOGIC MACHINE | 156 |
| 9.6. | SHUTDOWN LOGIC MACHINE..... | 156 |
| 9.7. | INTERFACE CONFIGURATION | 156 |
| 9.8. | ROUTING TABLE | 159 |
| 9.9. | ARP TABLE..... | 159 |
| 9.10. | KNX CONNECTION..... | 160 |
| 9.11. | KNX STATISTICS..... | 164 |
| 9.12. | BACNET SETTINGS..... | 164 |
| 9.13. | BACNET OBJECTS | 166 |
| 9.14. | HTTP SERVER..... | 167 |

| | | |
|------------|---|------------|
| 9.15. | FTP SERVER | 167 |
| 9.16. | REMOTE SERVICES | 168 |
| 9.17. | SYSTEM MONITORING | 170 |
| 9.18. | REMOTE DIAGNOSTICS | 171 |
| 9.19. | NTP CLIENT | 171 |
| 9.20. | SYSTEM STATUS | 172 |
| 9.21. | NETWORK UTILITIES | 173 |
| 9.22. | SYSTEM LOG | 173 |
| 9.23. | RUNNING PROCESSES | 174 |
| 10. | USER MODE SCHEDULERS | 175 |
| 10.1. | EVENTS | 175 |
| 10.2. | HOLIDAYS | 176 |
| 11. | TREND LOGS | 177 |
| 12. | MODBUS RTU/TCP INTERCONNECTION WITH LM | 179 |
| 12.1. | MODBUS DEVICE PROFILE | 179 |
| 12.2. | ADDING MODBUS DEVICE | 181 |
| 12.3. | PROGRAM ADDRESS FOR UIO20 MODBUS DEVICE | 182 |
| 12.4. | MODBUS SLAVE EXAMPLES | 183 |
| 13. | BACNET IP INTERCONNECTION WITH LM4 | 187 |
| 13.1. | BACNET SERVER MODE: TRANSPARENT DATA TRANSFER TO BACNET NETWORK | 187 |
| 13.2. | BACNET CLIENT MODE | 188 |
| 14. | 1-WIRE CONFIGURATION | 191 |
| 15. | ENOCEAN INTERCONNECTION WITH LOGICMACHINE | 194 |
| 15.1. | ENOCEAN TO KNX MAPPING | 194 |
| 15.2. | KNX TO ENOCEAN MAPPING | 196 |
| 15.3. | MAPPING TO ENOCEAN PROFILES OUT OF THE SUPPORTED LIST | 197 |
| 16. | 3G MODEM CONNECTION WITH LM AMBIENT | 199 |
| 17. | BLUETOOTH 4.0 INTEGRATION | 205 |
| 18. | SIP SERVER ON LOGICMACHINE | 208 |
| 19. | OBJECT VALUE EXPORT VIA XML | 210 |
| 20. | READ ALERTS RSS FEEDS FROM LOGICMACHINE | 213 |
| 21. | SENDING EMAIL FROM LOGICMACHINE | 215 |

1. Device specification

Application

- Infrastructure device
- Gateway
- Presence monitoring
- Smart thermostat
- Gesture push-button
- Ambient light
- Sound / light / wearable notification center
- HVAC
- Universal controller (lighting, shutters etc.)
- Health / activity monitoring
- Security
- Application server
- Internet-of-Things / Cloud integration

Types of product

| | |
|--|--------|
| LogicMachine Ambient with Air Quality / VOC sensor | LMWN02 |
| LogicMachine Ambient with General Air Quality sensor | LMWN00 |
| LogicMachine Ambient EnOcean with Air Quality / VOC sensor | LMWE02 |
| LogicMachine Ambient EnOcean with General Air Quality sensor | LMWE00 |

Standards and norms compliance

| | |
|------|----------------------------|
| EMC: | EN61000-6-1 EN61000-6-3 |
| PCT | Certificate |

Technical data:

| | | |
|--------------------|---|--------------------|
| Power supply: | 24V DC Passive Power over Ethernet or from power supply | |
| Power consumption: | 2 W | |
| Interfaces: | 10BaseT/100BaseTX | 1 with PoE support |
| | USB2.0 | 1 |
| | EnOcean 868MHz | 1 (LMWE02, LMWE00) |


| | | |
|--------------------|-----------------------------|--|
| | Bluetooth 3.0 and 4.0 | 1 |
| | Reset push button | 1 |
| | Buzzer | 1 |
| | RGB LED light | 1 |
| | LED locator (blue) | 1 |
| | Gesture control sensor | 1 |
| | Humidity sensor | 1 |
| | Temperature sensor | 1 |
| | Air quality / VOC | 1 (LMWN02, LMWE02) |
| | General air quality | 1 (LMWN00, LMWE00) |
| | Barometer | 1 |
| | Ambient light sensor | 1 |
| | InfraRed blaster (optional) | 1 |
| Connections: | KNXnet/IP: | Ethernet |
| | Modbus TCP | Ethernet |
| | BACnet IP | Ethernet |
| | Power supply: | Ethernet or Cage Clamp |
| Target gases: | General air quality | hydrogen, ethanol, methane, CO etc. |
| | Air quality / VOC | ammonia, H2S, ethanol, toluene and VOCs like acetone, ethanol, isoprene, CO2, methane, hydrogen, alcohols, esters, limonene etc. |
| Operating elements | LED | 1 – CPU load 1 – Activity / Indication |
| Enclosure: | Material: | Wooden |
| | Basic wood types: | Zebrano Radial Oak Tangential Black Lacquer White Lacquer |
| | Custom wood types: | Beech Macassar Ebony Nut Europe Nut America Oak Radial Palisander Schizandra Red Lacquer |
| | Dimensions: | 107(W)x107(H)x22(L) mm |

| | |
|----------------------|--------------------------------|
| Usage temperature: | 0C ... +45C |
| Storage temperature: | -15C ... +55C |
| Weight: | 250g |
| Warranty: | 2 years |
| Relative Humidity: | 10...93 % without condensation |

LogicMachine Ambient kit contains:


- 1 x LM Ambient with an ecodesign wooden enclosure
- 1 x 1.5 m Ethernet cable
- 2 x wall screws Ø 3.5 mm, length 30 mm
- 2 x nylon plugs Ø 3.5 – 6 mm, length 30 mm
- 1 x 24V DC power supply with PoE (optional)

2. Connection schemes

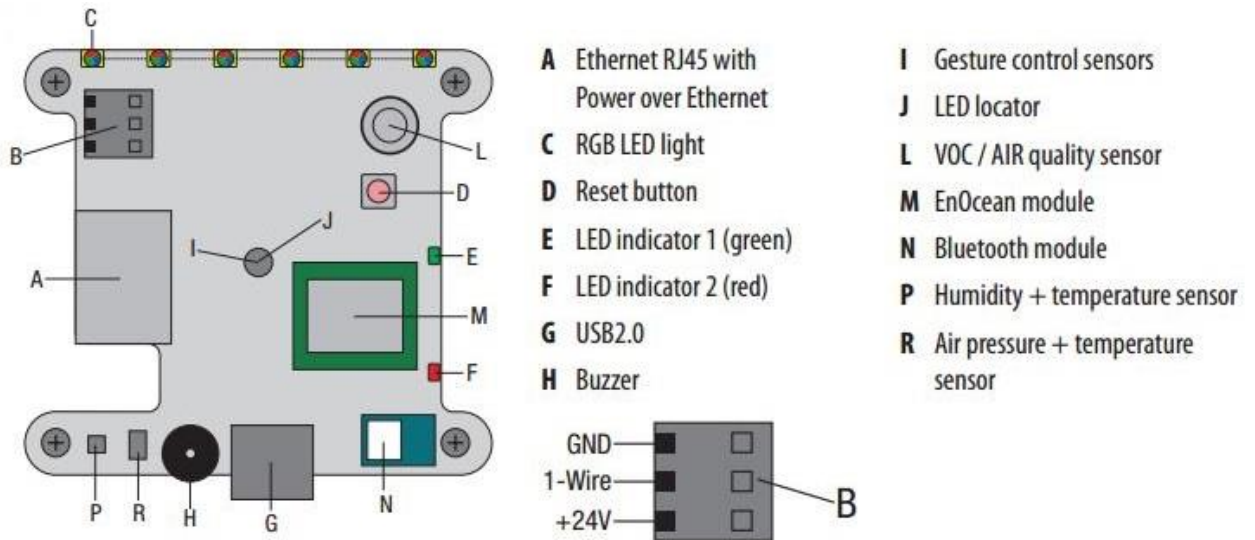

3. Quick startup guide

3.1. Mounting

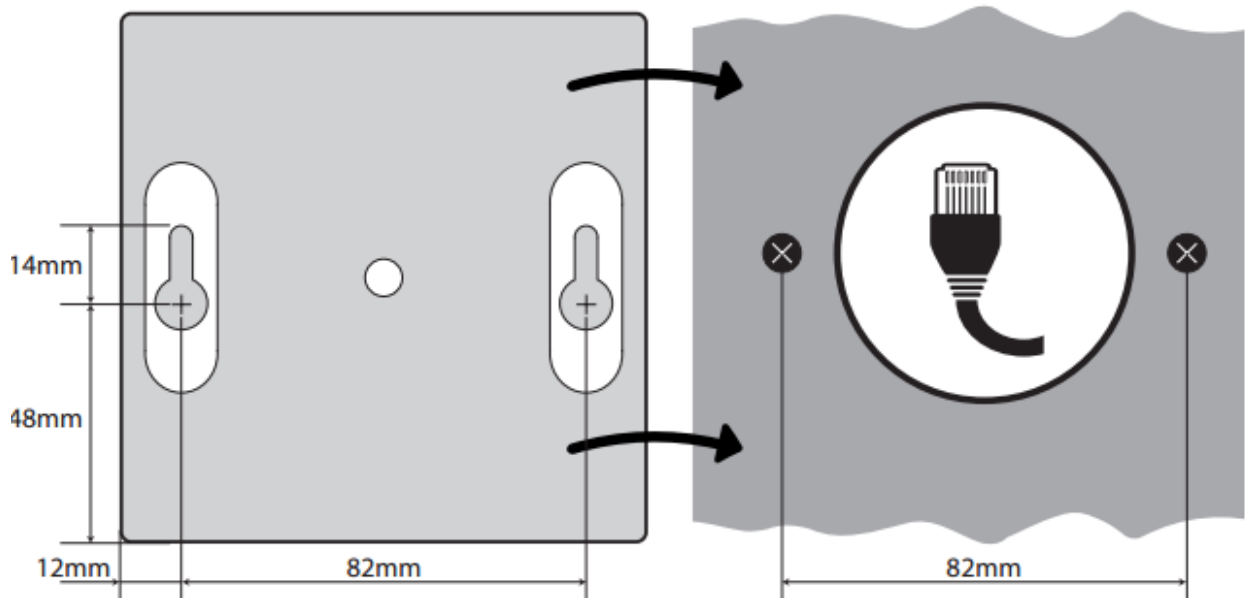

1. Drill two holes in the wall. The distance between holes is 82 mm.
2. Insert nylon plugs in the wall, then insert screws
3. Prepare Ethernet cable to be connected. We recommend to use a regular wall-mounting box.

4. Attach Ethernet/PoE cable to the device (either from EMBS Ethernet Switch outputs or from **passive PoE adapter with 12-24V DC output!**). If you use a regular 24V DC power supply, connect it accordingly to power input clamps
5. Place the device on the wall

3.2. Default login parameters

| | |
|--------------|---------------|
| Login name | admin |
| Password | admin |
| IP address | 192.168.0.10 |
| Network mask | 255.255.255.0 |

The device can be accessed by opening web browser (Chrome, Firefox, Safari are supported) and entering IP of the device [HTTP://IP](http://IP)

Secure access to the device is available via [HTTPS://IP:Port](https://IP:Port)

3.3. Factory default

You can either reboot the device by pressing RESET button or reset the configuration to factory defaults:

- *Press and hold for <10 sec* – reboot the device
- *Press and hold for >10 sec* – reset networking with IP to factory default
- *Press and hold for >10 sec and again press and hold for >10 sec* – full reset of configuration to factory defaults

For more info please see here: <http://openrb.com/discover-ip-of-logic-machine-or-streaming-player/>

3.4. IP settings

In *System configuration* → *Network* → *Interfaces* window click on the specific interface to change the IP settings.

| Interface eth0 | |
|----------------|---------------|
| Protocol | Static IP |
| IP address | 192.168.1.12 |
| Network mask | 255.255.255.0 |
| Gateway IP | 192.168.1.100 |
| DNS server 1 | 8.8.8.8 |
| DNS server 2 | 8.8.4.4 |
| MTU | |

OK Cancel

- **Protocol**– specific protocol used for addressing
 - **Static IP** – static IP address. By default 192.168.0.10
 - **DHCP** – use DHCP protocol to get IP configuration.
 - **Current IP**– the IP address got from DHCP server. This field appears only if the IP address is given otherwise it's hidden.
- **Network mask** – network mask. By default 255.255.255.0 (/24)
- **Gateway IP** – gateway IP address
- **DNS server** – DNS server IP address
- **MTU**– maximum transmission unit, the largest size of the packet which could be passed in the communication protocol. By default 1500

When changes are done, the following icon appears in the top-right corner. This should be applied changes to take effect.




3.5. Discover LogicMachine IP address

LM has built-in zeroconf utility by default, so using the following applications you can find out the IP:

- Windows PC – *ServiceBrowser*
- Linux PC – *Avahi*
- Android – *ZeroConf Browser*
- iOS – *Discovery*


Windows PC

Easiest way is by using the utility **ServiceBrowser** which can be downloaded here:
<http://marknelson.us/2011/10/25/dns-service-discovery-on-windows/>

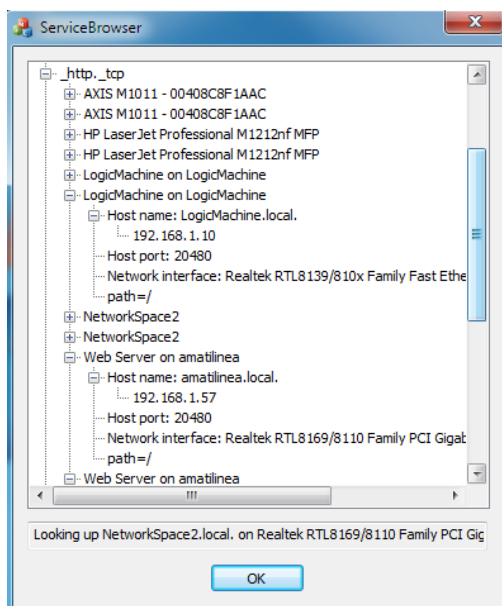

Linux PC

The utility called **Avahi**, can be downloaded here:
www.avahi.org

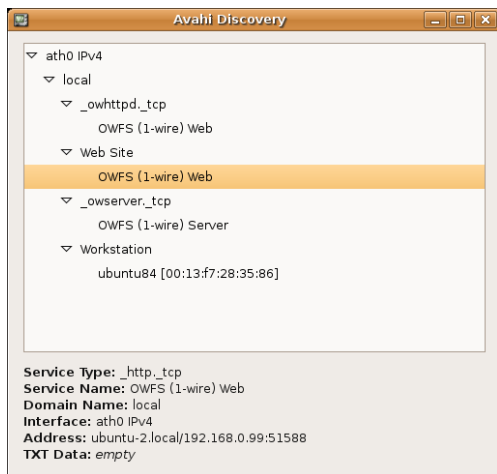

Android

The freely available app called **ZeroConf Browser**, can be downloaded in *Play Store*:

<https://play.google.com/store/apps/details?id=com.grokkt.android.bonjour&hl=en>



iOS/Mac OS

The freely available app called **Discovery**, can be downloaded in *App Store*:

<https://itunes.apple.com/en/app/discovery-bonjour-browser/id305441017?mt=8>





For iPad install the iPhone/iPod version of the utility.




3.6. Gesture control, Ambient light sensor

For now LM Ambient can act either as gesture controller or used for ambient light detection. Further both modes could be used together.

Main configuration is located in *LM-Wall* tab, under *Gesture/Light sensor config* button

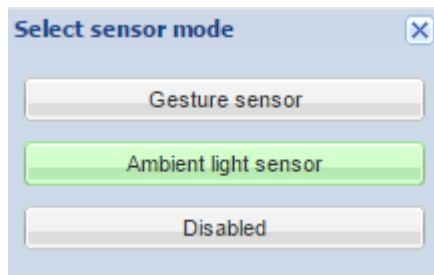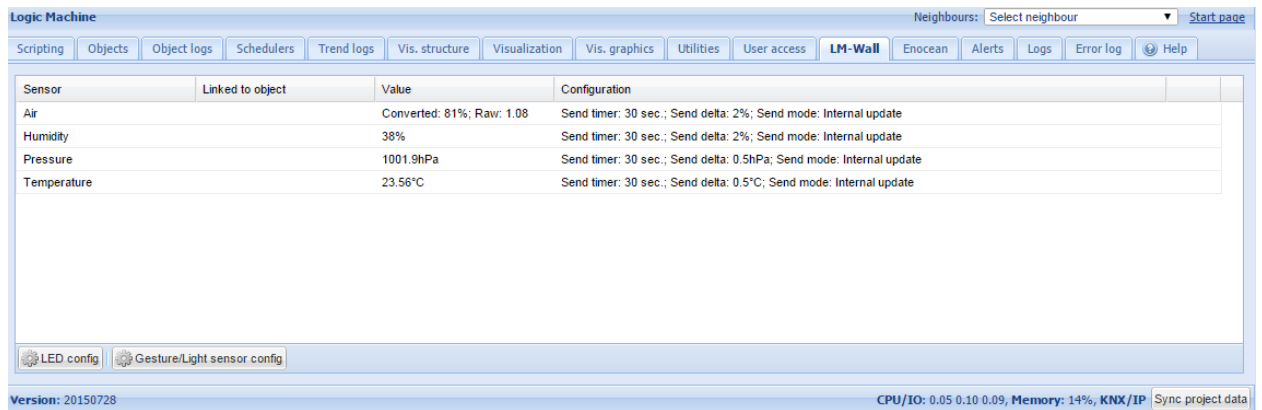


Gesture sensor mode

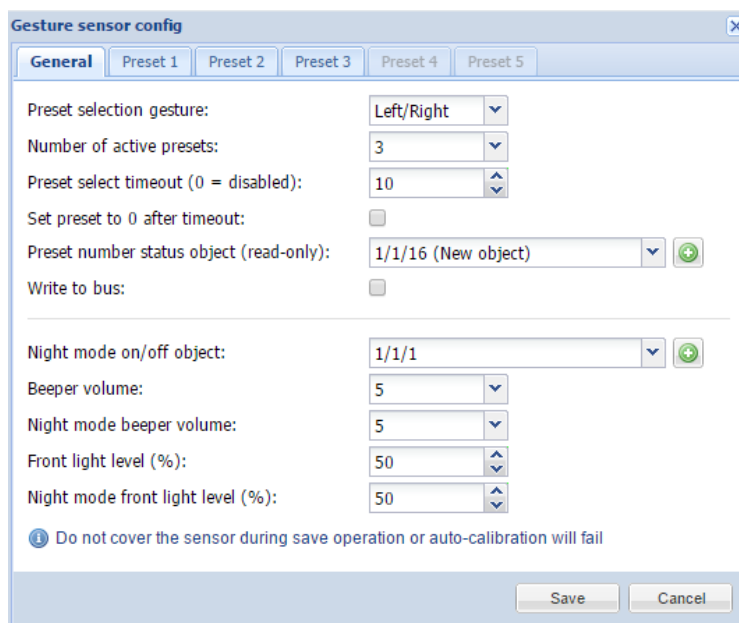

- **Preset selection gesture** – defines how gestures are scanned – either *Left/Right* or *Up/Down* movement

- **Number of active presets [1..5]** – number of active presets
- **Preset select timeout (0= disabled) [0..60]** – defines how long the chosen preset will be active for operation (once timeout is reached RGB light will go off)
- **Set preset to 0 after timeout** – once timeout is reached, define either to jump to first preset when you activate gesture control next time
- **Preset number status object (read-only)** – KNX grp address defining status of current preset number
- **Write to bus** – defines either to send KNX telegram
- **Night mode on/off object** – KNX grp address defining night mode
- **Beeper volume** – volume of the beeper
- **Night mode beeper volume** – volume of the beeper when the night mode is activated
- **Front light level (%)** – front blue light level in %
- **Night mode front light level (%)** – front light level in % when the night mode is activated

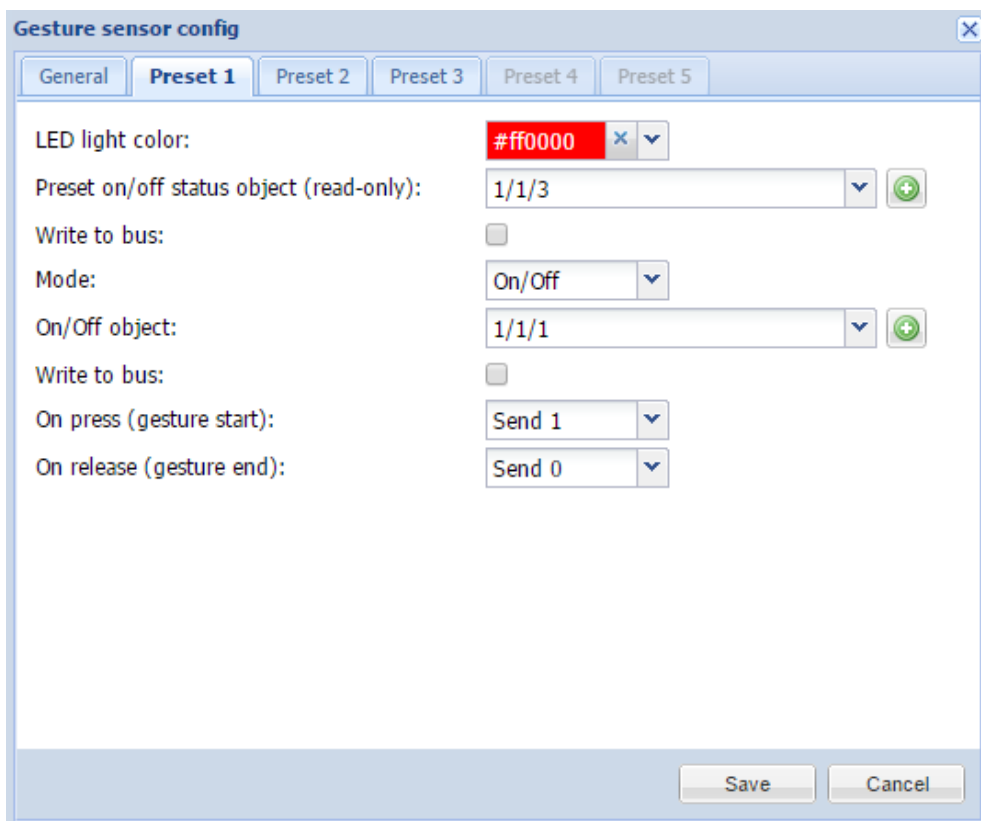

- **LED light color** – LED light color
- **Preset on/off status object (read-only)** – preset on/off status object
- **Write to bus** – defines either KNX telegram is sent to the bus
- **Mode [ON/Off, Short/Long, Step dimmer]** – mode of the preset
- **On/Off object** – grp address of On/Off object
- **On preset (gesture start)** – in case of On/Off mode, an action to perform on ON state
- **On release (gesture end)** – in case of On/Off mode, an action to perform on OFF state

- **Short press object** – in case of Short/Long mode, a grp address on short press
- **Long press object** – in case of Short/Long mode, a grp address on long press
- **On short press [Send 0, Send 1, Toggle]** – action to perform on short press
- **On long press (>2 seconds) [Send 0, Send 1, Toggle, Start/Stop, Stop/Start]** – action to perform on long press
- **Step dimmer object** – in case of Step dimmer mode, a grp address of step dimmer
- **Dimmer step (%)** – dimmer step in %
- **On preset (%)** – Value to set if Binary On command has been received

Note! Do not cover the sensor during save operation or auto-calibration will fail

Ambient light sensor mode

Ambient light sensor config

Sensor gain: 1x

Ambient light level object: 1/1/4 Ambient light level

Write to bus: ☒

Send delta (%): 5

Send timer (seconds): 0

RGB light levels object:

Write to bus: ☒

Send delta (%): 5

Send timer (seconds): 0

Save Cancel

- **Sensor gain** – amplification of sensor. If the device is used in darker place, increase this parameter. If the device is used in brighter place, decrease this parameter
- **Ambient light level object** – KNX object to map to
- **Write to bus** – defines either to send KNX telegram
- **Send delta (%)** – send value if the sensor reading changes by specified delta
- **Send timer (seconds)** – value send interval
- **RGB light level object** – color spectrum value to detect type of light in the room (e.g. sunrise)


3.7. Sensors configuration

Air quality

There are two types of sensors for air quality possible:

General air quality sensor: hydrogen, ethanol, methane, CO etc.

Air quality / VOC sensor: ammonia, H2S, ethanol, toluene and different VOCs (Acetone, Ethanol, Isoprene, CO2, Methane, Hydrogen, Alcohols, Esters, Limonene etc.) etc.

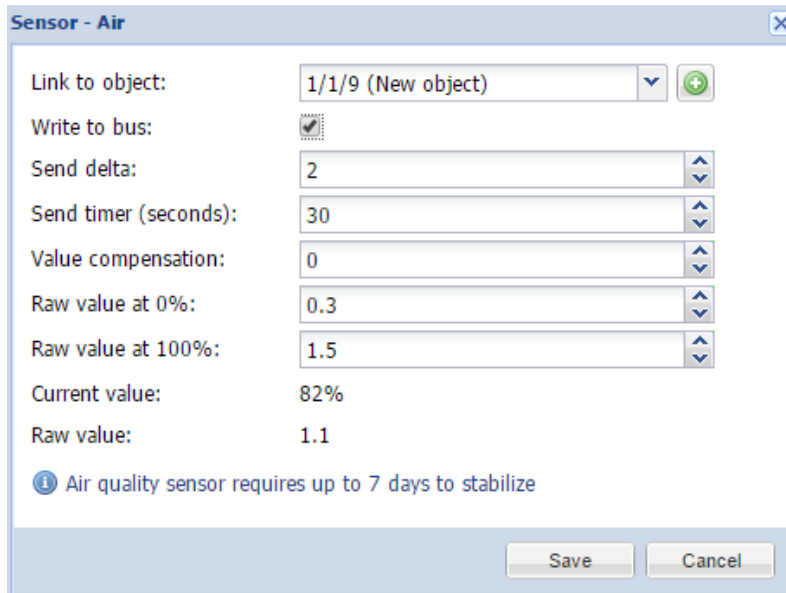

- **Link to object** – map to KNX object
- **Write to bus** – defines either to send KNX telegram
- **Send delta** – send value if the sensor reading changes by specified delta
- **Send timer (seconds)** – send the value after specific time interval
- **Value compensation** – value compensation for the reading
- **Raw value at 0%** - raw value of air quality sensor for 0% (worst) air quality
- **Raw value at 100%** - raw value of air quality sensor for 100% (best) air quality
- **Current value** – current sensor reading. The higher the value the better the reading, so 100% is the best air quality
- **Raw value** – current raw value

Note! Air quality sensor requires up to 7 days to stabilize its reading

VOCs are chemicals that contain carbon and can be emitted as gases at room temperature. Table below shows some typical indoor contaminants and their sources. VOCs evaporate from substances, such as cleaning products, adhesives, paints, dry-cleaning fluids and wood preservatives. VOCs are also emitted from humans and animals in their breath, sweat and directly from their skin. In fact, the majority of VOCs in an indoor space are generated by humans.

LogicMachine Wall is able to measure these VOCs, and that is why the VOC sensor is as good an indicator of occupancy as a CO2 sensor.

| Contamination Source | Emission Source | VOC |
|----------------------|--------------------------------------|--|
| Human Being | Breath | Acetone, Ethanol, Isoprene, CO2 |
| | Skin Respiration & Perspiration | Nonanal, Decanal, alpha-Pinene |
| | Flatulence | Methane, Hydrogen |
| | Cosmetics | Limonene, Eucalyptol |
| Consumer Products | Household Supplies | Alcohols, Esters, Limonene |
| Office Equipment | Printers, Copiers, Computers | Benzene, Styrene, Phonole |
| Combustion | Engines, Appliances, Smoke | Unburnt Hydrocarbons, CO, CO2 |
| Building Materials | Paints, Adhesives, Solvents, Carpets | Formaldehyde, Alkanes, Alcohols, Aldehydes, Ketones, Siloxanes |
| Furniture | Poly Vinyl Chloride (PVC) | Toluene, Xylene, Decane |

VOCs are known to cause eye, nose and throat irritations, headache, drowsiness, dizziness, nausea, difficulty concentrating and fatigue. The importance of detecting the presence of VOCs in indoor air goes beyond these immediate health concerns. People judge the quality of the air not just by how it feels (temperature and humidity), but also by how it smells. Unfortunately, offensive odors in offices, kitchens, gymnasiums and restrooms have no impact on CO2 levels. A fish sandwich left in a desk drawer over a weekend may not be life threatening, but may smell like it by Monday. These obnoxious odors reduce everyone's productivity until the odor is eliminated. A single person entering or passing through a space may deteriorate the air quality due to heavy amounts of aftershave lotion, cologne, perfume, hand soap, laundry detergent residue, fabric softeners or residual cigarette smoke. In these cases a CO2 sensor will not correct the problem.

Humidity

- **Link to object** – map to KNX object
- **Write to bus** – defines either to send KNX telegram
- **Send delta** – send value if the sensor reading changes by specified delta
- **Send timer (seconds)** – send the value after specific time interval
- **Value compensation** – value compensation for the reading
- **Current value** – current sensor reading

Pressure

- **Link to object** – map to KNX object
- **Write to bus** – defines either to send KNX telegram
- **Send delta** – send value if the sensor reading changes by specified delta
- **Send timer (seconds)** – send the value after specific time interval

- ***Value compensation*** – value compensation for the reading
- ***Current value*** – current sensor reading

Temperature

Sensor - Temperature

Link to object: 1/1/9 (New object) +

Write to bus: ☒

Send delta: 0.5

Send timer (seconds): 30

Value compensation: 0

Current value: 24.39°C


i Temperature sensor requires extra calibration depending on device placement. Allow at least one hour for device internal temperature to stabilize before applying compensation

Save Cancel

- **Link to object** – map to KNX object
- **Write to bus** – defines either to send KNX telegram
- **Send delta** – send value if the sensor reading changes by specified delta
- **Send timer (seconds)** – send the value after specific time interval
- **Value compensation** – value compensation for the reading
- **Current value** – current value of sensor reading

3.8. LED configuration

LED configuration is located under *LED config* button in *LogicMachine* → *LM-Wall*.

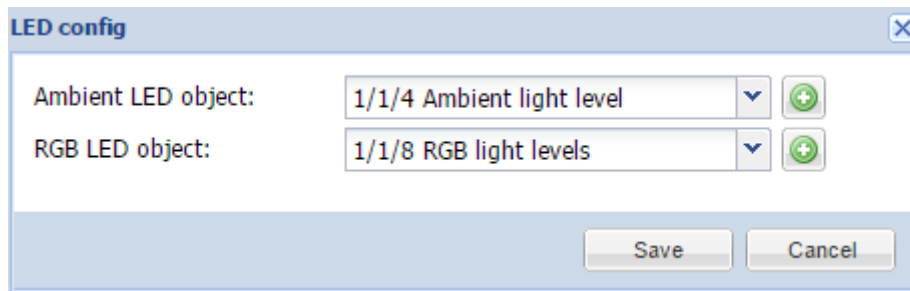A screenshot of the 'LED config' dialog box. It has a title bar with a close button. Inside, there are two rows. The first row is 'Ambient LED object:' followed by a dropdown menu showing '1/1/4 Ambient light level' and a green plus button. The second row is 'RGB LED object:' followed by a dropdown menu showing '1/1/8 RGB light levels' and a green plus button. At the bottom right, there are 'Save' and 'Cancel' buttons.

- **Ambient LED object** – KNX group address for front LED. It can be used e.g. for locating the device / gesture control spot in dark rooms
- **RGB LED object** – KNX group address for back RGB LED. It can be used for ambient lighting, notifications, informative purpose when used together with gesture sensor.



3.9. MOSAIC application

Mosaic app is the fastest way to create a nice visualization for your installation.


Getting started.

1. Open the controller's web interface by typing it's IP address in your web browser.
2. Click on Mosaic Editor Mode icon. You will see the constructor interface with clear template.
3. Once you've entered the Editor Mode you are ready to construct a visualization.
4. When you have made visualization, enter Client




Client mode Home screen


This is a first screen that you will see after opening Mosaic application. First page consists of Notification, Room and Control Type areas. You can browse the objects either by rooms or by functions.

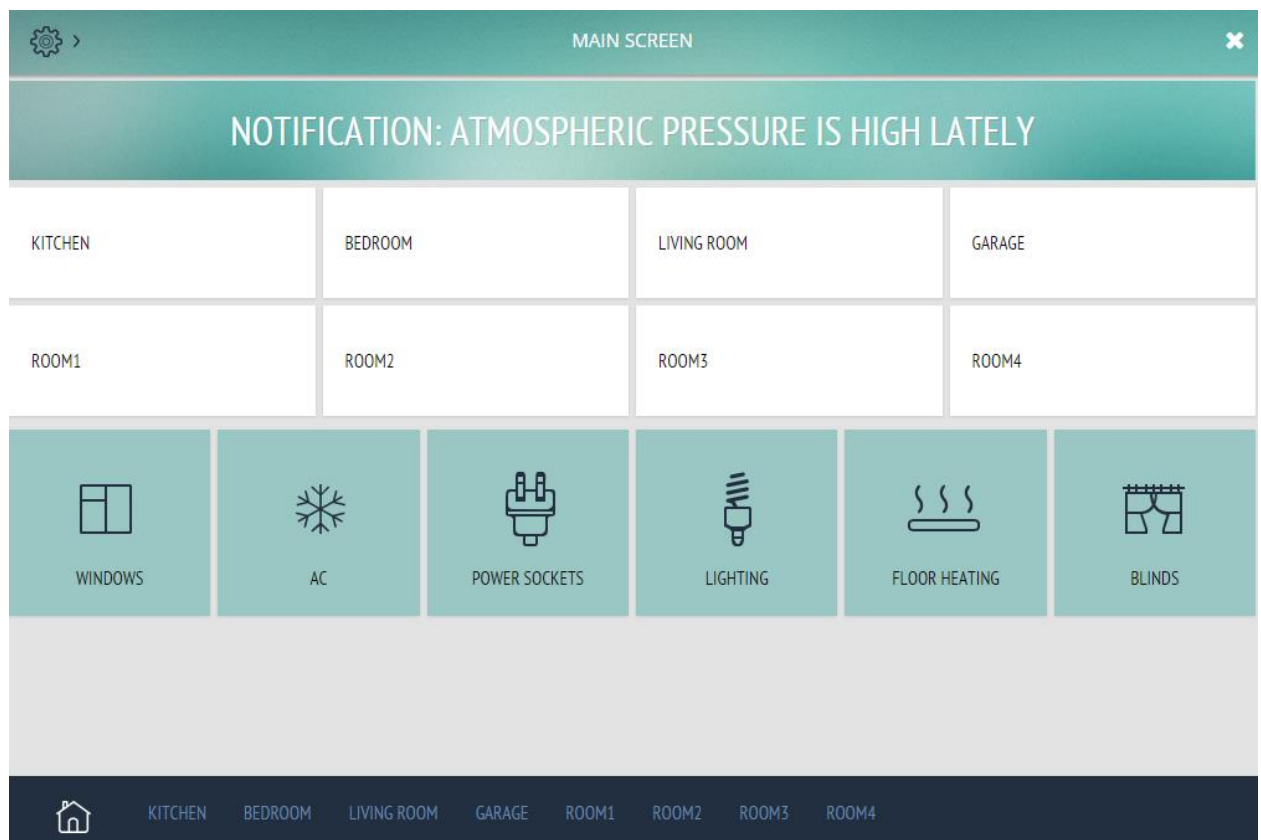

For example, entering one of room, you see the following view

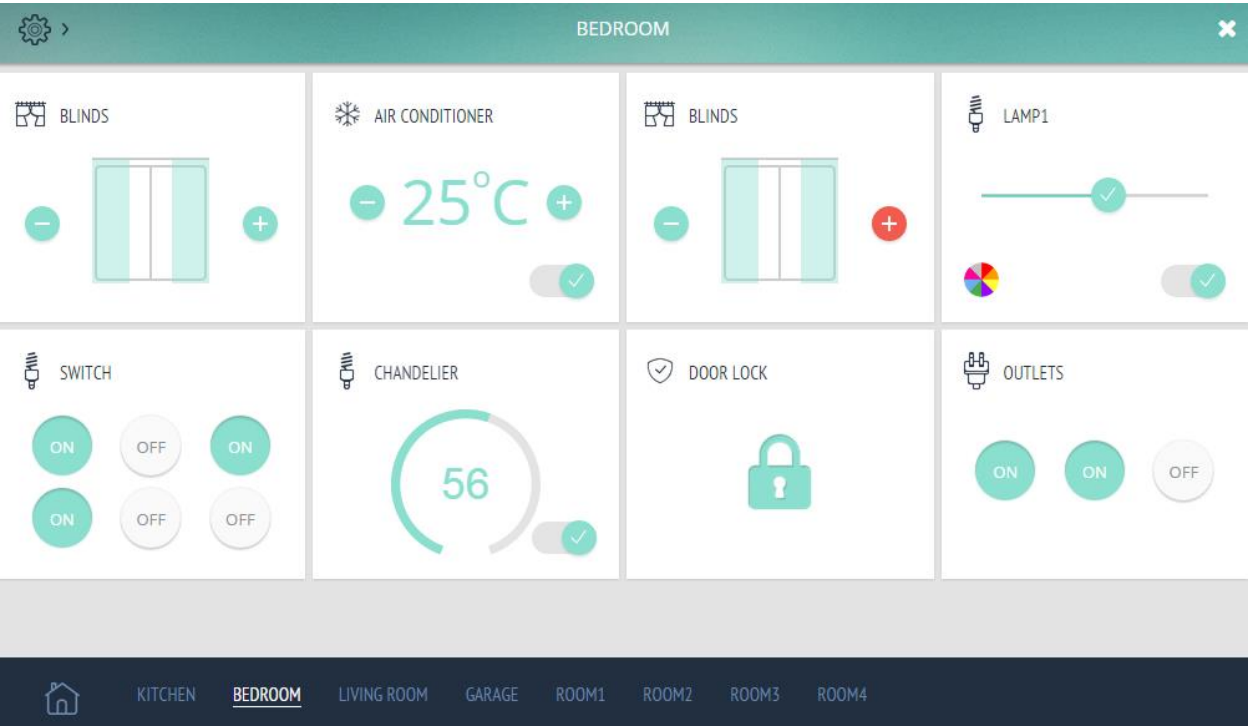

There are also Control Type shortcuts on the left side by clicking on Settings button

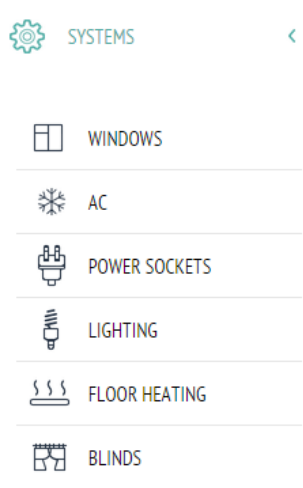

THEME: DEFAULT, RED, BLACK


In Settings you can also change skin of the visualization

Advanced visualization with more widgets is planned to be available for fixed monthly developers fee.




Building structure / Editor Mode

On the bottom panel you can set up your building structure by adding new rooms onto it. This panel is also designed to navigation by rooms for end-users. Just click on *Add new room*, then type a title for it and press "enter". This will take you to the screen of the new room. Now you can start to fill it with widgets. If you want to rename or delete a room just right-click on it's title and select the option you want.



Widgets

To add new widget on the home or room screen just click to *Add new widget* at the top right corner to open the widgets panel. Once you opened the widget panel choose a widget you want to add and click on it - it will appear on the screen. A popup window with widget's properties opens automatically at the same moment.

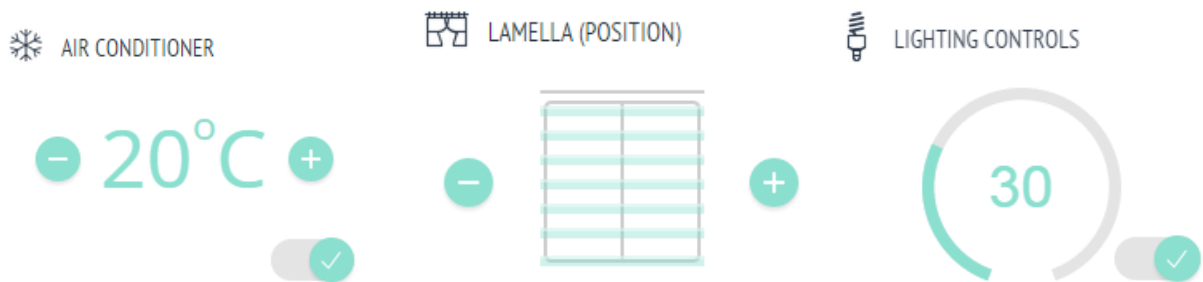


Now you can set a title for this widget and link KNX objects to widget's controls. After you've set up a widget click on the "Add this widget" button. Well done, the widget on the screen. Right-click on it to see/edit it's properties or delete the widget.

Lighting Controls
✕

| | |
|-----------------------|--|
| Title: | <input style="width: 90%;" type="text" value="central lamp"/> |
| On/Off Object: | <input style="width: 90%;" type="text" value="0/0/1"/> |
| On/Off Status Object: | <input style="width: 90%;" type="text" value="0/1/1"/> |
| Dimmer Object: | <input style="width: 90%;" type="text" value="1/1/11 (light1-1)"/> |
| Dimmer Status Object: | <input style="width: 90%;" type="text" value="0/1/2"/> |
| Color Object: | <input style="width: 90%;" type="text" value="1/1/12 (light1-2)"/> |
| Color Status Object: | <input style="width: 90%;" type="text" value="1/1/12 (light1-2)"/> |

Notifications

There is a special Messages field in Client mode where you can send specific notifications or alerts. Use storage name *mosaic-message* to write notifications.

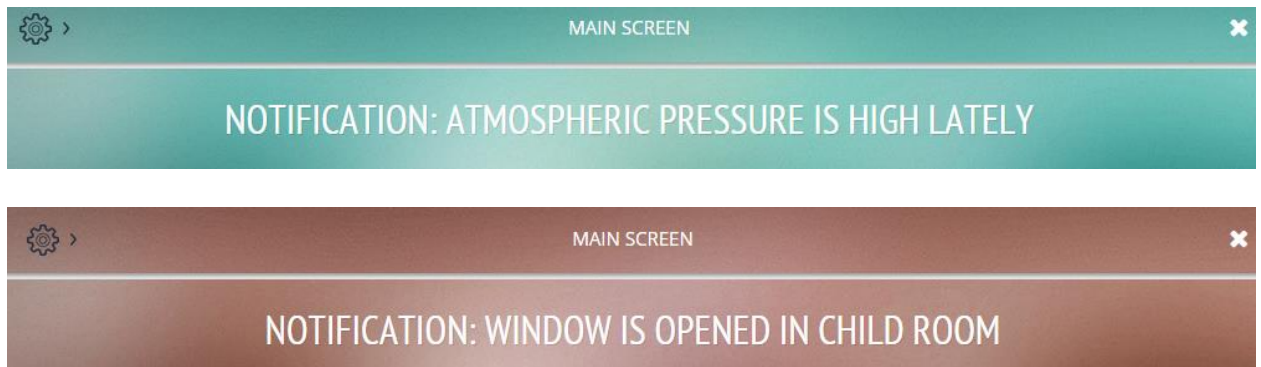

3.10. Standards supported

- KNXnet/IP
- Modbus TCP, Client/Server
- BACnet IP, Client/Server
- Bluetooth 3.0 and 4.0
- EnOcean 868MHz
- GSM (through USB) for sending SMS notifications and controlling the installation by receiving SMS commands.
- 1-Wire
- AllJoyn
- SMTP/E mail, SSL
- SIP
- XML (export object values, alerts or errors; integration with Fidelio)
- RSS (read Error or Alert tab content)
- JSON, XMPP
- MQTT
- REDIS
- etc.

The system is made so that each of the standards can be used with each other, so LogicMachine can act as BACnet to Modbus gateway or Modbus to GSM etc.


3.11. Firmware upgrade

Note! Before each upgrade please backup your visualization, scripts and object in *Logic Machine* → *Tools* → *Backup*.


Note! After each upgrade, we strongly recommend to clean your browser cache.

Use web browser to perform upgrade of the software of Logic Machine. Firmwares are available in a form of images and could be downloaded from support page of www.openrb.com.

Complete system upgrade can be done in *System Configuration* → *System* → *Upgrade firmware*

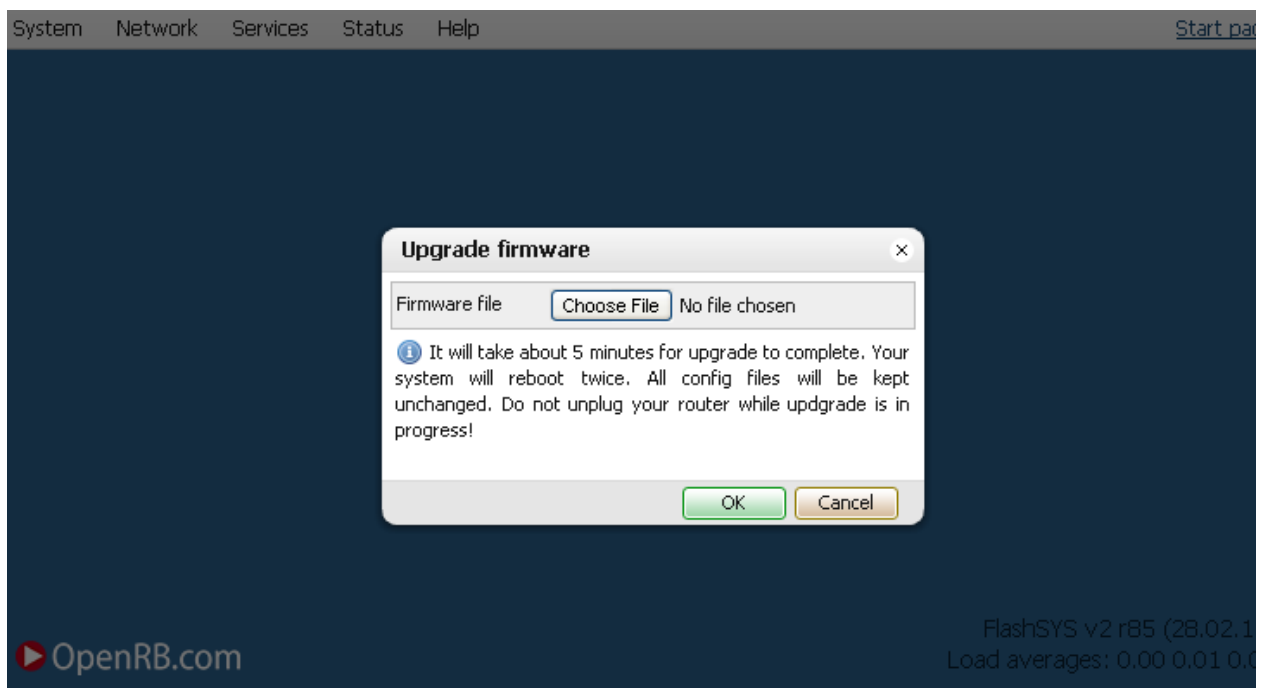

LogicMachine visualization upgrade or patch installation can be done in *Utilities* tab and press on *Install updates* icon. After *.LMU file is chosen from the corresponding location press *Save* button. The device will be rebooted after 5 seconds and new firmware will be installed.

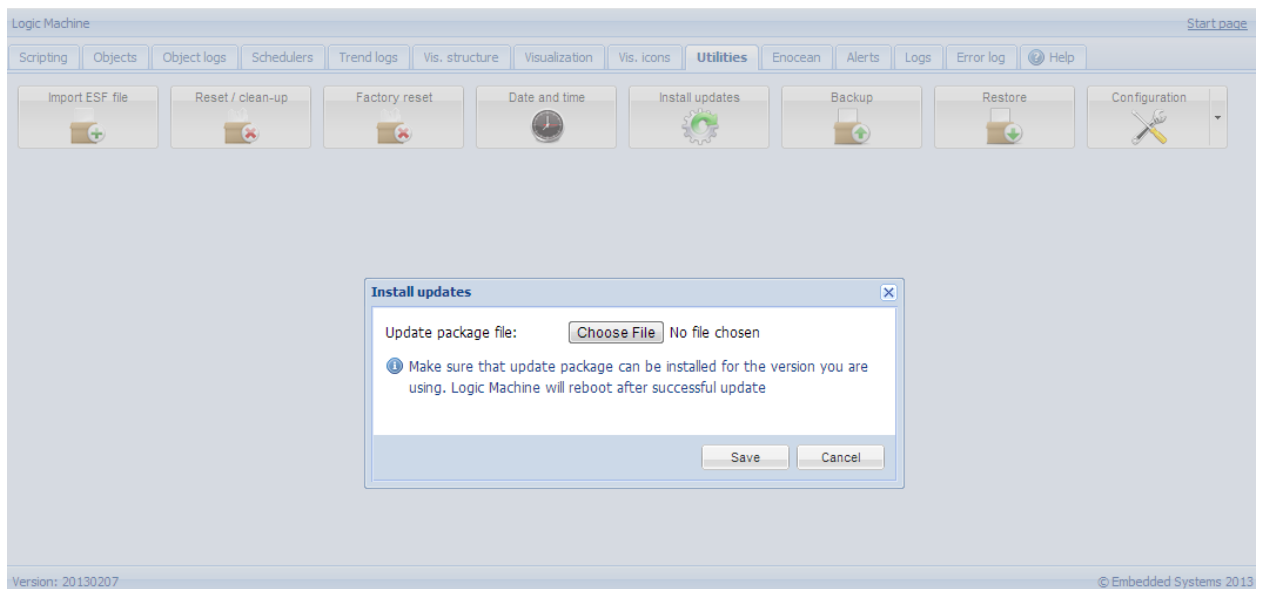

3.12. KNX and Filtering table settings

KNX specific configuration is located in *System configuration* → *Network* → *KNX connection* window.

KNX connection

General IP > TP filter TP > IP filter

Mode EIBnet/IP Routing

KNX address 15.15.2455

KNX IP features ☒

Multicast IP 224.0.23.12

Multicast TTL 1

Maximum telegrams in queue 100

OK Cancel

General tab

- **Mode** [*EIBnet IP Tunneling / EIBnet IP Tunneling(NAT mode) / EIBnet IP Routing*] – KNX connection mode. LogicMachine Ambient has KNX IP support, by default it is set to EIBnet IP Routing
- **KNX address** – KNX physical address of the device
- **KNX IP features** – Use this device with KNX IP features e.g. for KNXnet/IP network configuration
- **Multicast IP** – multicast IP address
- **Multicast TTL** – Time to live for multicast telegram in seconds
- **Maximum telegrams in queue** – count of maximum telegrams in the queue

IP > TP filter

Filtering table for telegrams going from IP network to KNX TP1 is located in this submenu.

KNX connection [X]

General | **IP > TP filter** | **TP > IP filter**

Apply filter to tunneling ☐

SRC policy: No filter ▼

Ind. address list

i One address/range per line. Use * (e.g. 1.1.*) to filter all addresses in the given line.

DST group policy: No filter ▼

Group address list: 1/1/1-1/1/2


i One address/range per line. Use * (e.g. 1/1/*) to filter all addresses in the given line.
Note: KNX IP features are required for filter to work.
 Filtering lists are updated at once, changing policies requires restart.

OK Cancel

- **Apply filter to tunneling** – either to apply filter policy to telegrams in tunneling mode. If ETS is used it is recommended to turn this feature off.
- **SRC policy** [No filter / Accept selected individual addresses / Drop selected individual addresses]– policy to apply to the list of source addresses
- **Ind. address list** – list of individual addresses. One address/range per line. Use * (e.g. 1.1.*) to filter all addresses in the given line.
- **DST group policy**[No filter / Accept selected group addresses / Drop selected group addresses]– policy to apply to the list of destination group addresses
- **Group address list** – list of group addresses. One address/range per line. Use * (e.g. 1/1/*) to filter all addresses in the given line.

Note! KNX IP features should be on for filter to work. Filtering lists are updated at once, changing policies requires restart.


Note that group address list can be filled automatically by checking necessary group addresses in *LogicMachine* → *Objects* list

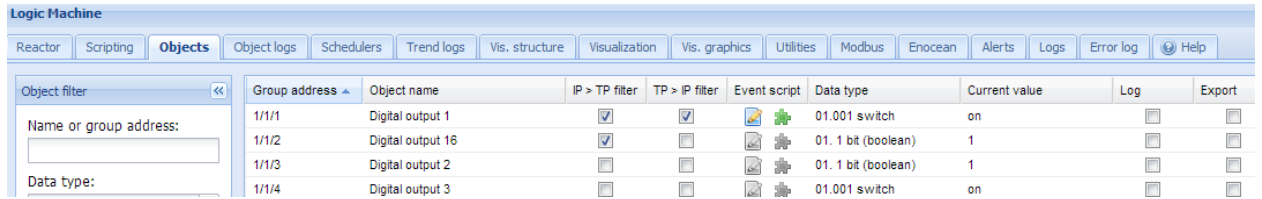

| Object filter | Group address | Object name | IP > TP filter | TP > IP filter | Event script | Data type | Current value | Log | Export |
|------------------------|---------------|-------------------|-------------------------------------|-------------------------------------|--------------|---------------------|---------------|--------------------------|--------------------------|
| Name or group address: | 1/1/1 | Digital output 1 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | | 01.001 switch | on | <input type="checkbox"/> | <input type="checkbox"/> |
| | 1/1/2 | Digital output 16 | <input checked="" type="checkbox"/> | <input type="checkbox"/> | | 01. 1 bit (boolean) | 1 | <input type="checkbox"/> | <input type="checkbox"/> |
| | 1/1/3 | Digital output 2 | <input type="checkbox"/> | <input type="checkbox"/> | | 01. 1 bit (boolean) | 1 | <input type="checkbox"/> | <input type="checkbox"/> |
| Data type: | 1/1/4 | Digital output 3 | <input type="checkbox"/> | <input type="checkbox"/> | | 01.001 switch | on | <input type="checkbox"/> | <input type="checkbox"/> |

TP > IP filter

Filtering table for telegrams going from KNX TP1 to IP network is located in this submenu.

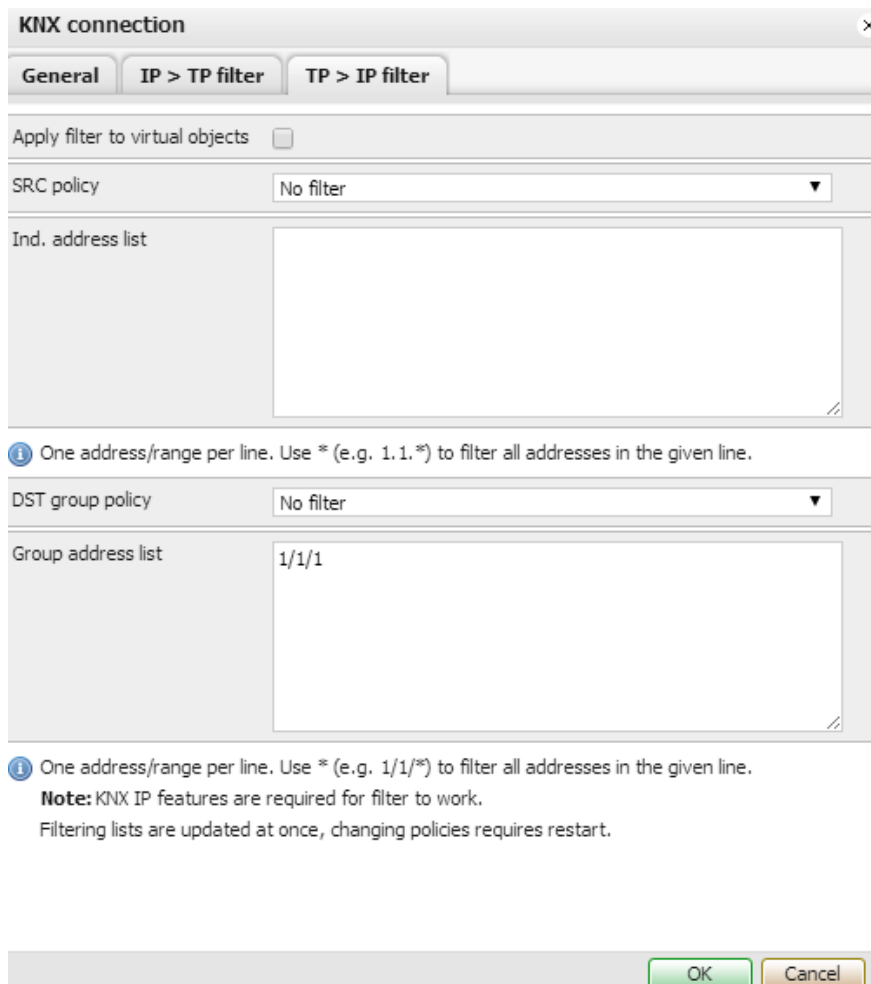

KNX connection

General | **IP > TP filter** | TP > IP filter

Apply filter to virtual objects ☐

SRC policy: No filter

Ind. address list

One address/range per line. Use * (e.g. 1.1.*) to filter all addresses in the given line.

DST group policy: No filter

Group address list: 1/1/1

One address/range per line. Use * (e.g. 1/1/*) to filter all addresses in the given line.

Note: KNX IP features are required for filter to work.
Filtering lists are updated at once, changing policies requires restart.

OK Cancel

- **Apply filter to virtual objects** – either to apply filter policy to objects added in Objects tab as virtual objects without attraction to bus
- **SRC policy** [No filter / Accept selected individual addresses / Drop selected individual addresses]– policy to apply to the list of source individual addresses


- **Ind. address list** – list of individual addresses. One address/range per line. Use * (e.g. 1.1.*) to filter all addresses in the given line.
- **DST group policy** [*No filter / Accept selected group addresses / Drop selected group addresses*]- policy to apply to the list of destination group addresses
- **Group address list** – list of group addresses. One address/range per line. Use * (e.g. 1/1/*) to filter all addresses in the given line.

Note! *KNX IP features* should be on for filter to work. Filtering lists are updated at once, changing policies requires restart.


3.13. Quick guide - create visualization for iPad/PC

1. Import objects

Fastest way is to import *.ESF file from ETS in *Logic Machine* → *Utilities* → *Import ESF file*.

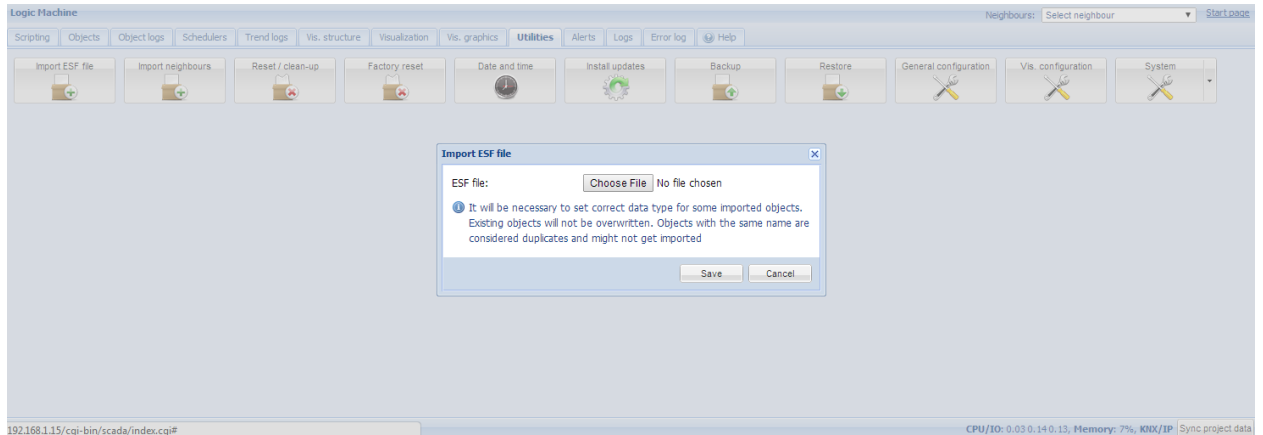


Or connect LM to the bus and it will detect objects automatically (in yellow) in *Objects* tab once they are activated. Objects can be added manually as well.

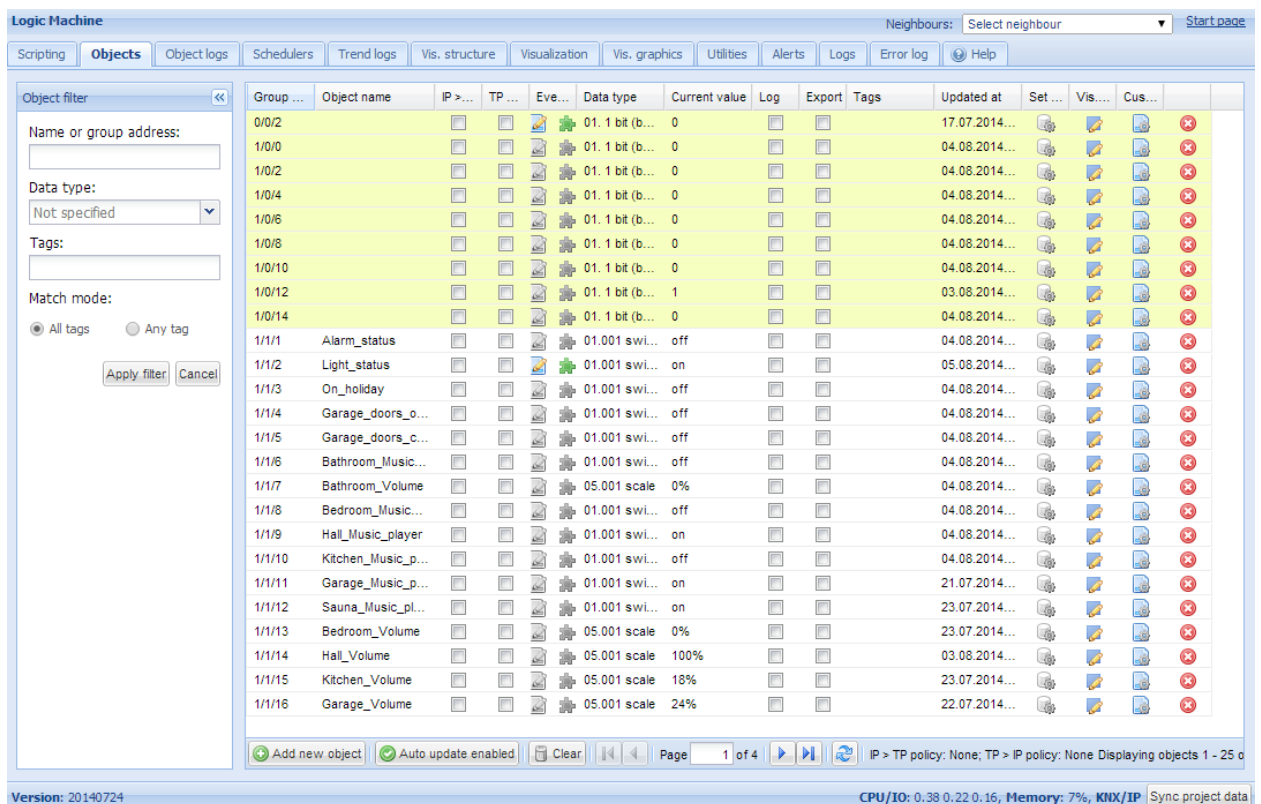


2. Prepare graphics

Either in Adobe Illustrator or any ready images can be used. In this example we use professionally created designs in Illustrator in SVG form (so we can do scaling depending of the screen size and not losing the quality)


- a) basic background which can be changed by necessity

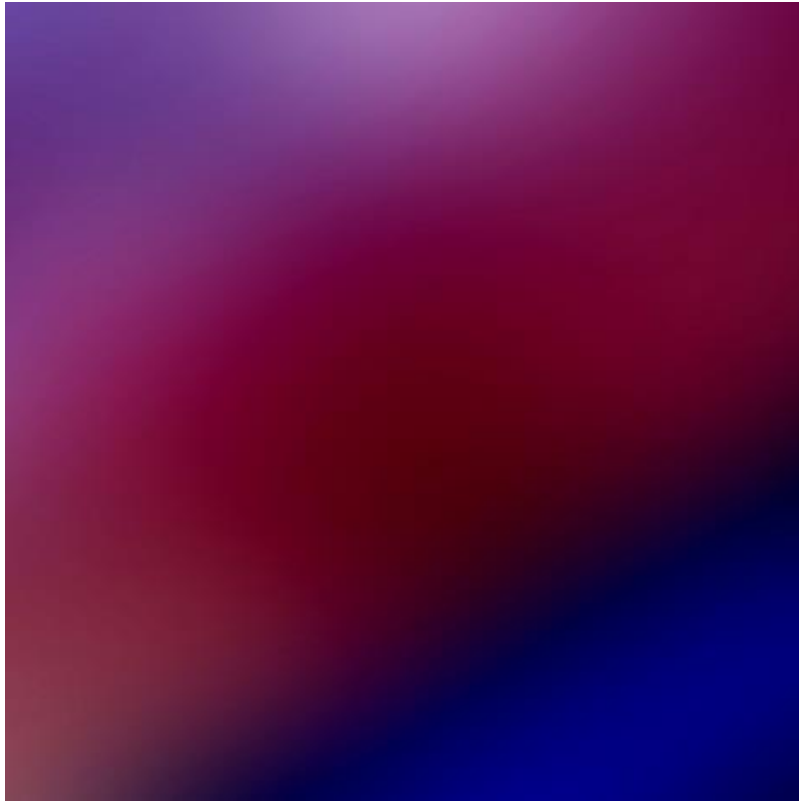


b) foreground which will stay unchanged

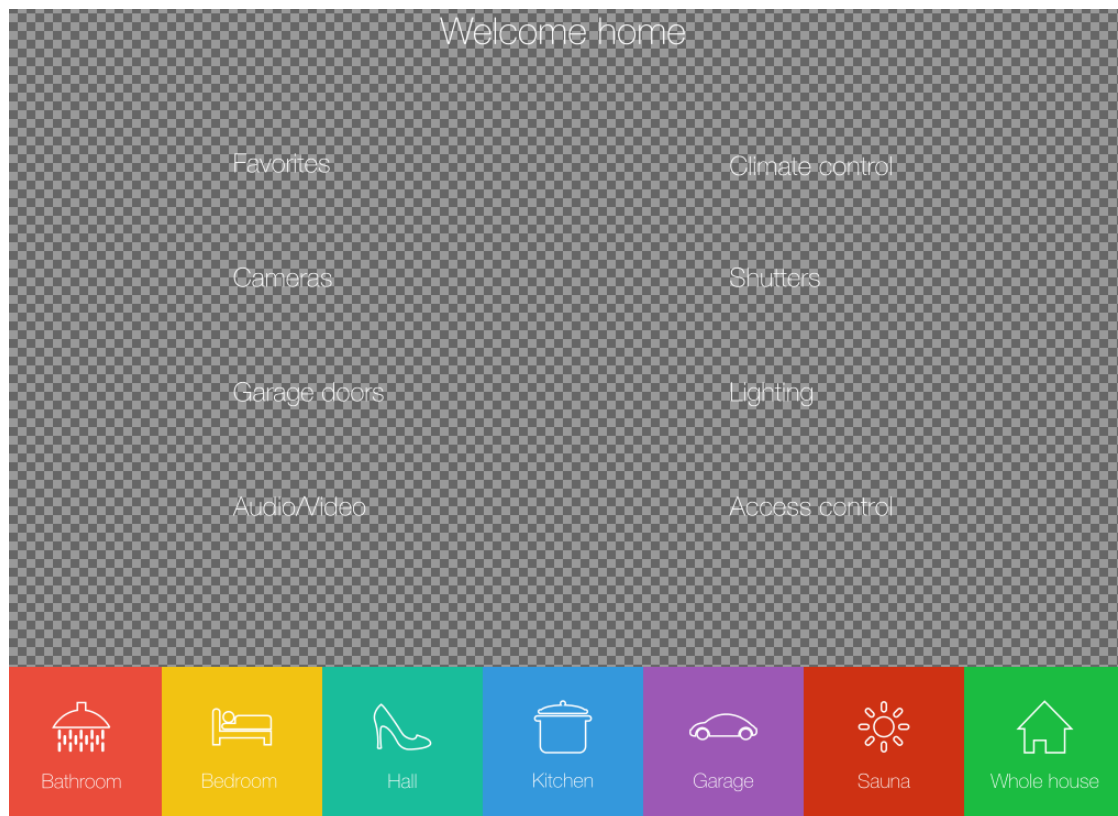


Add both files in *Logic Machine* → *Vis. Graphics* → *Images/Backgrounds*

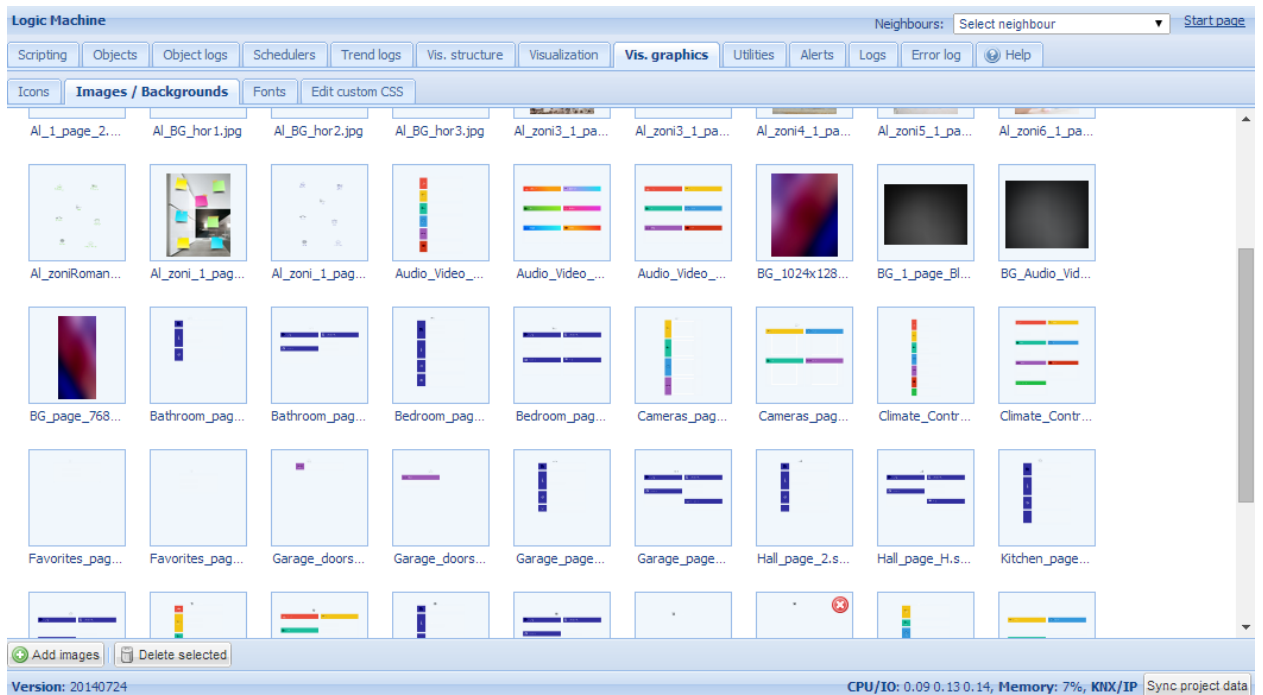


Prepare set of icons (preferably in SVG form) and add them in *Logic Machine* → *Vis. Graphics* → *Icons*. Or you can use icons predefined in LogicMachine by default.

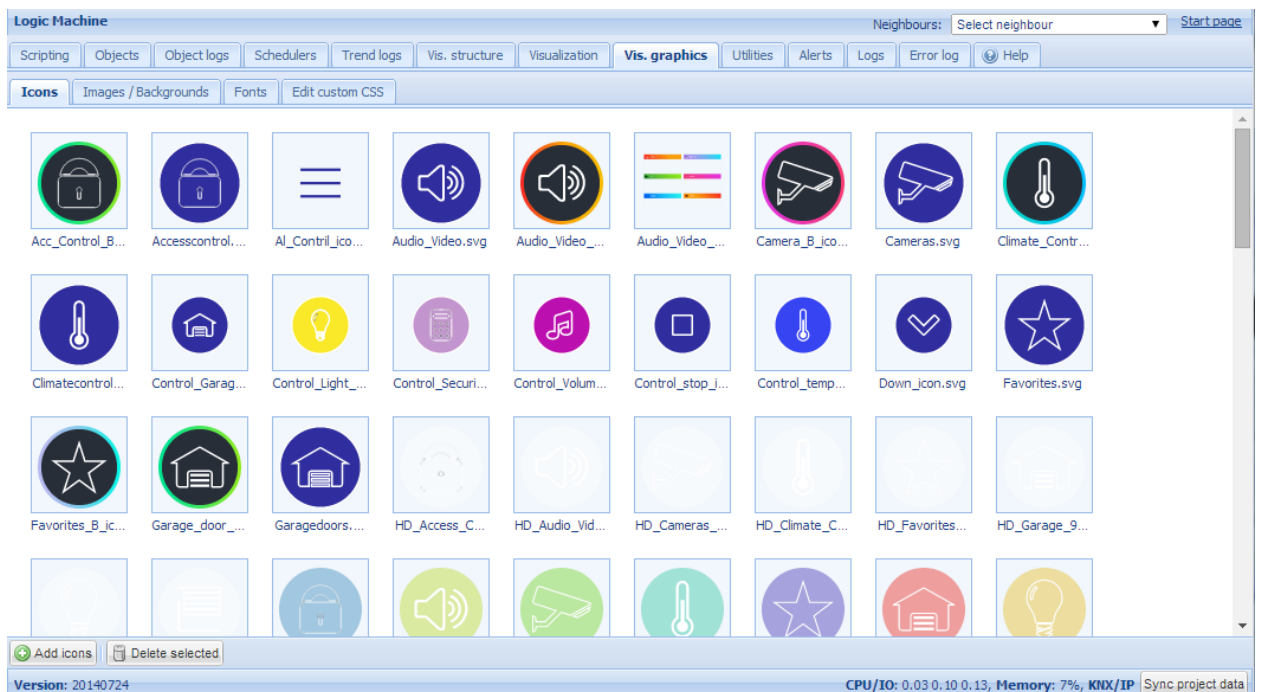



Create “floor” structure and add objects to the map

In *Logic Machine* → *Vis.structure* menu the structure of the visualization is defined and visualization backgrounds are uploaded. Use icon to add  floor.

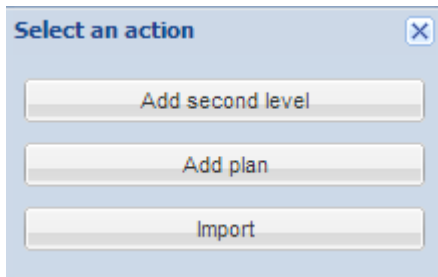


In this example we will create a new floor named “1_page_H” and “Bathroom_H”. First Floor will be a dashboard with link to other rooms and functions. Choose screen resolution for which you are creating this visualization, choose first and second background images from the ones added before.

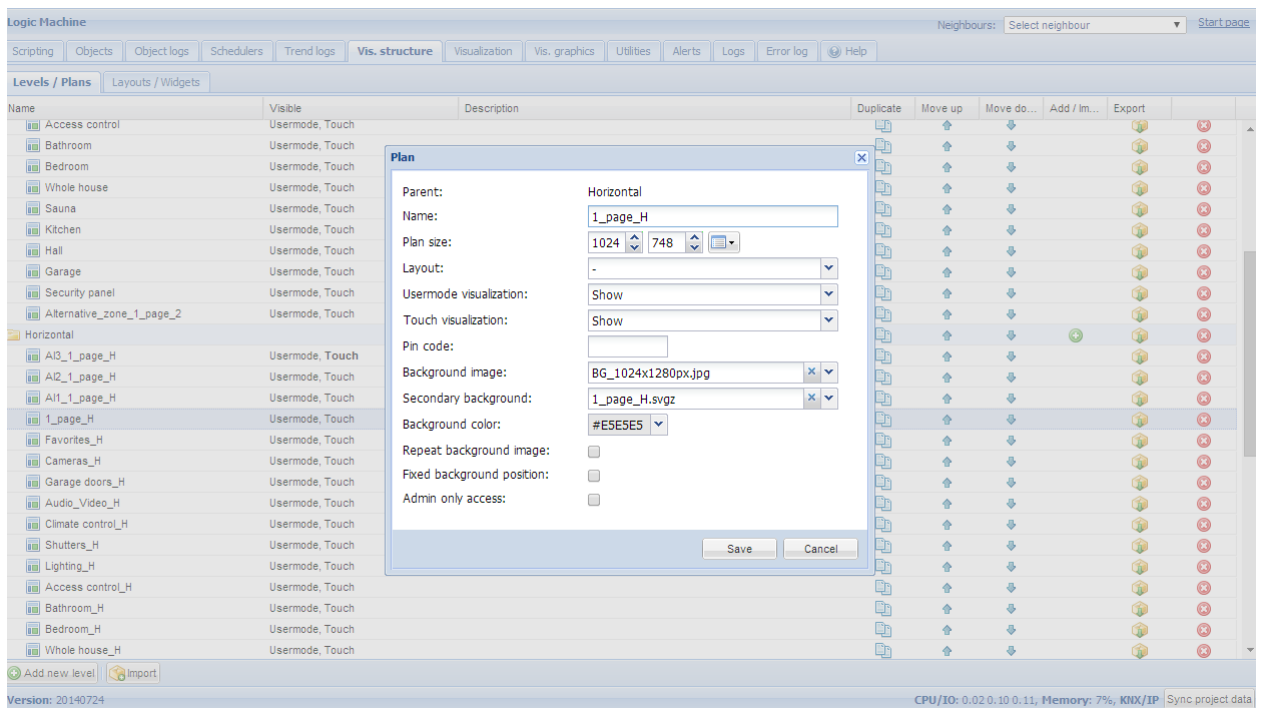

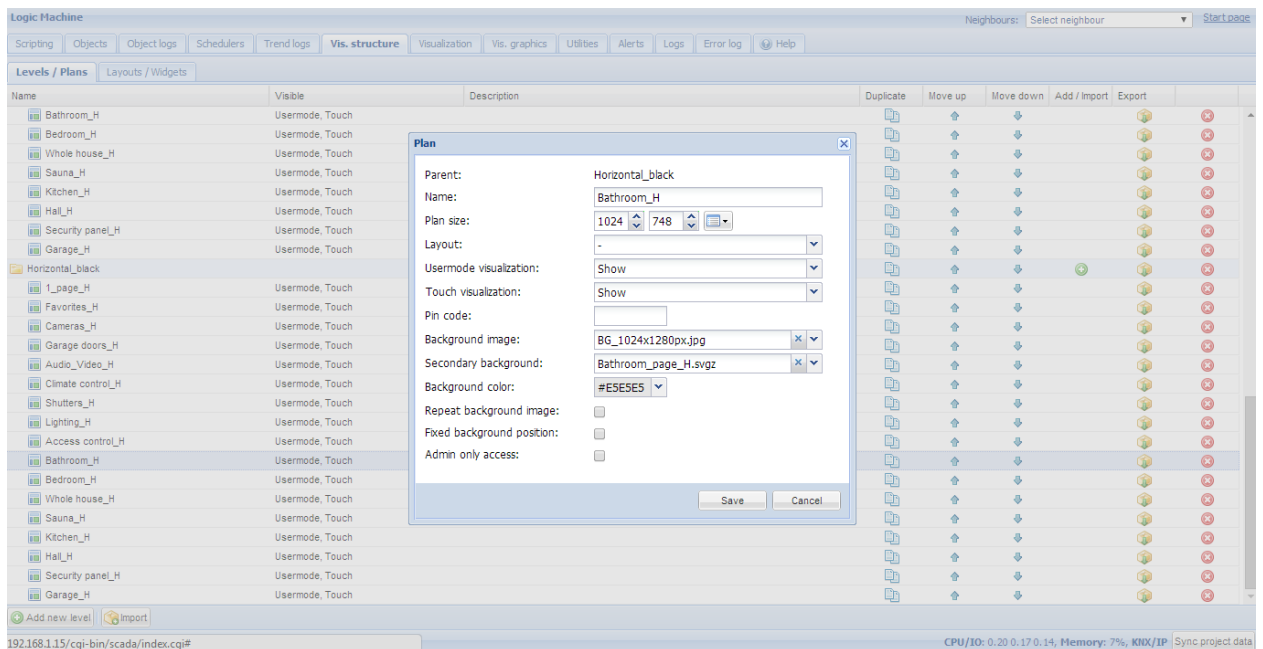


Add objects to newly created visualization map

After the building and floor structure is defined, it is visualized in *Visualization* tab. Controlled and monitored objects can be added and managed in this section. Both side bars can be minimized by pressing on left/right arrow icon making the map more visible especially on small displays.

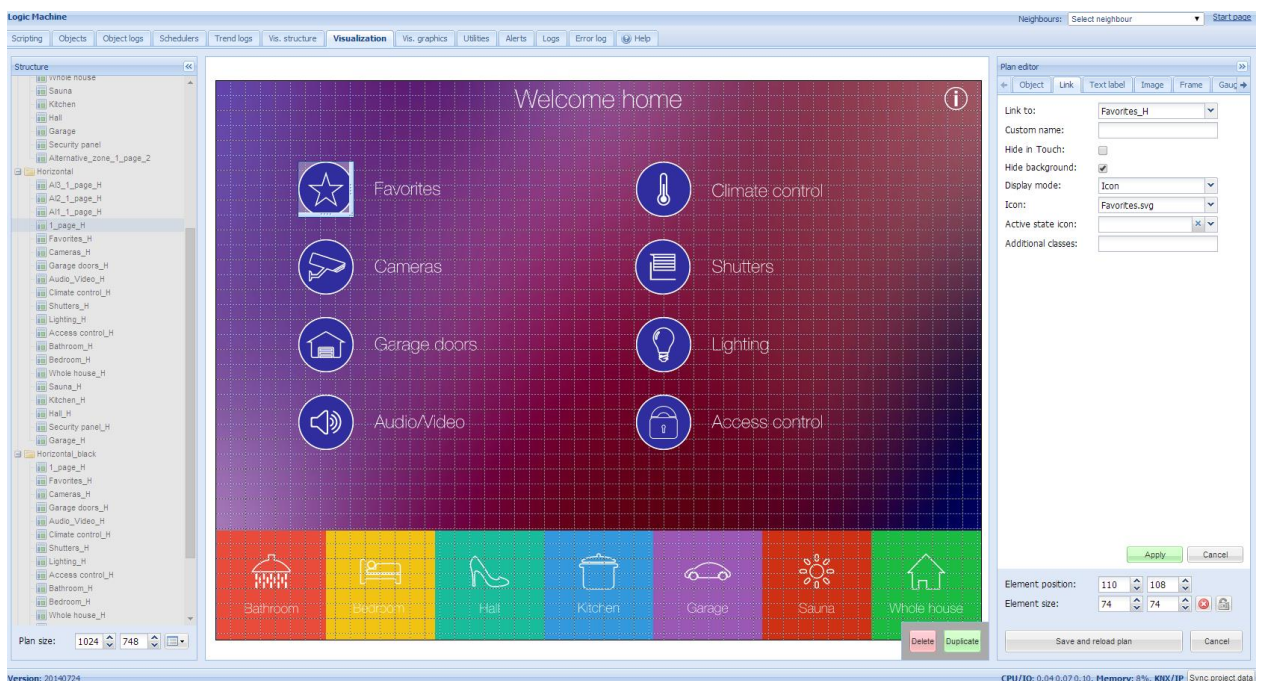


Objects can be added to the map by clicking on *Unlock current floor plan for editing* button. In this example we are creating first page of visualization which will link to other Floors with specific object control. Add link by clicking on Link tab, choosing specific icon, scale it and place in desired location.

This example's secondary background already contains icons on it, so what is needed, is to add transparent image in *Vis.graphics* and add this image on top of every icon.

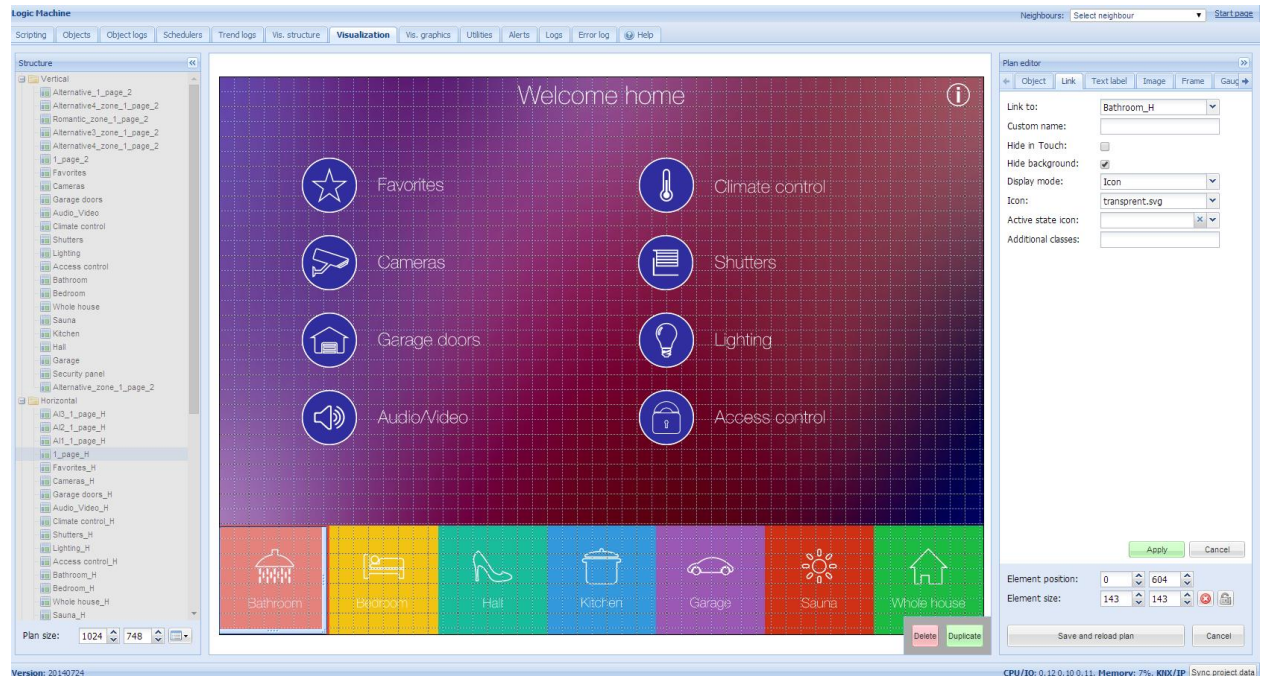

When all links are defined, press *Save and reload floor plan* button.


In same way fill the Bedroom plan with object parameters in Object tab.

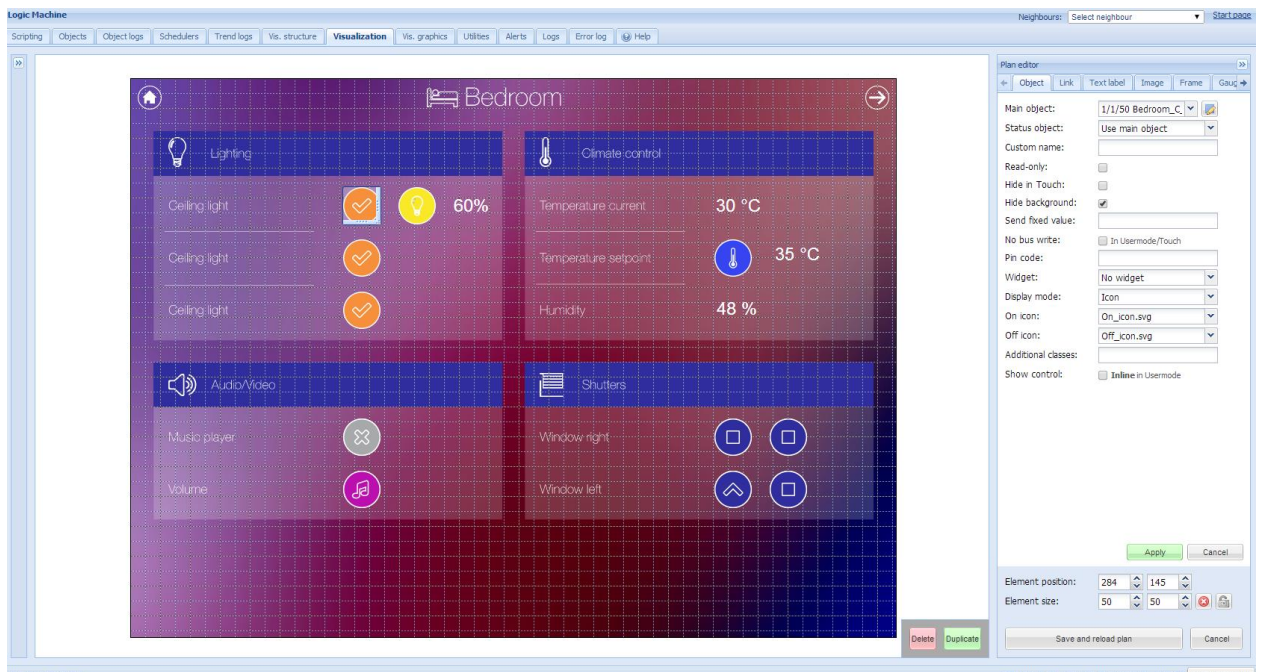


Launching visualization on touch device (iPad in this case)

- Make sure your iPad is connected wirelessly to the Logic Machine
- In the browser enter Logic Machine's IP (default 192.168.0.10).
- Click on the User *mode visualization*

- Save the application as permanent/shortcut in your iPad

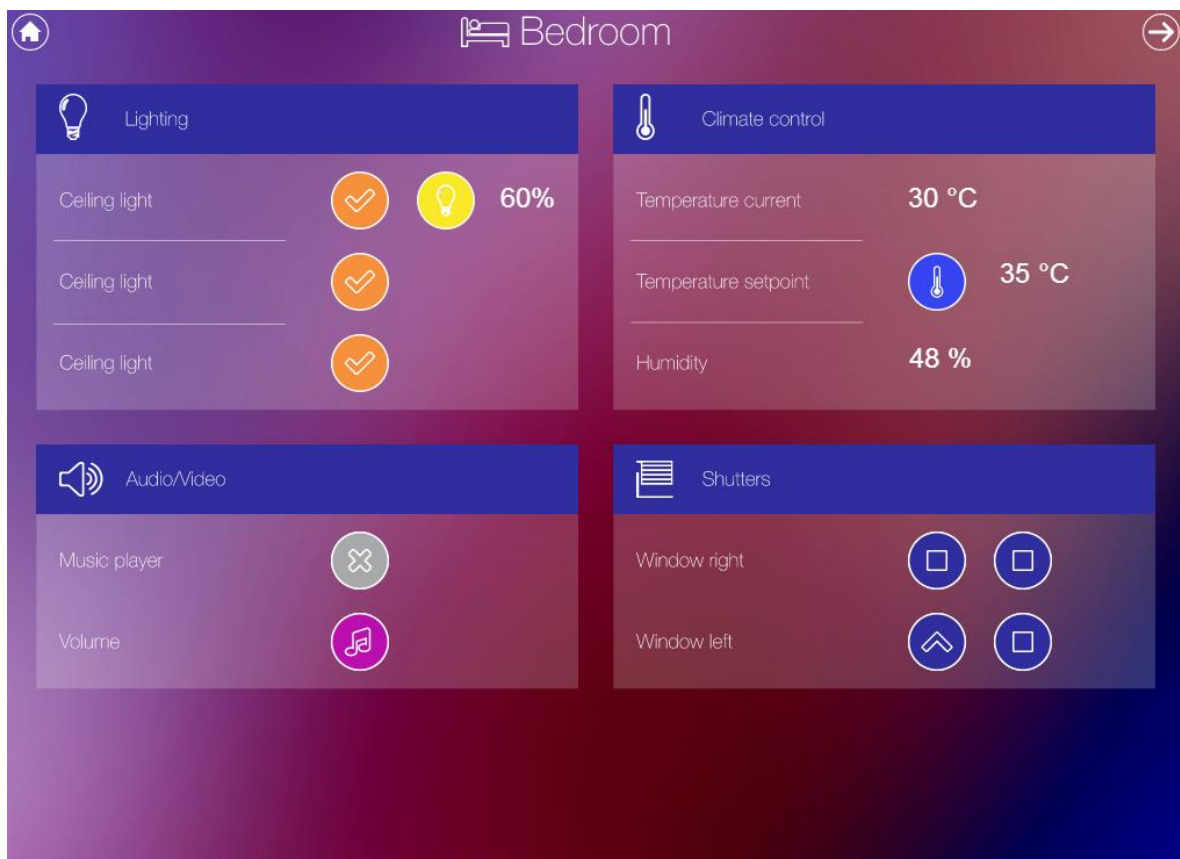

Touch visualization is also automatically created with list of Floor objects.

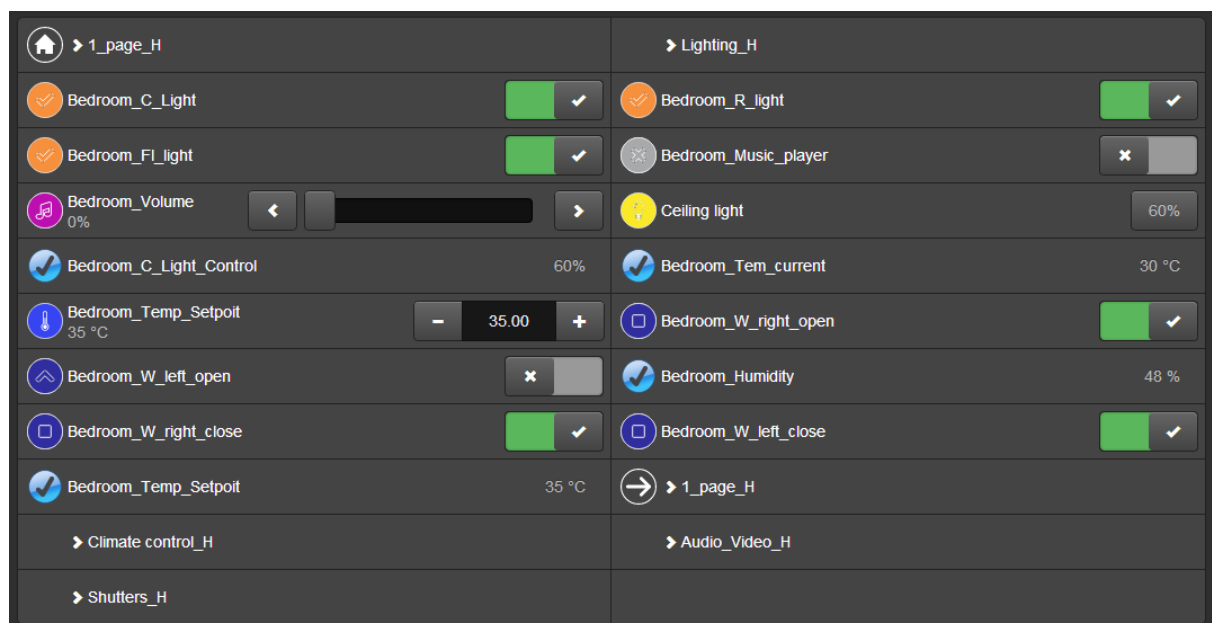


4. Graphical User Interface Login

LogicMachine has IP address 192.168.0.10 set by default to LAN interface. Use this address as www address in the browser's address field.

Note! Make sure that the PC connecting to the LogicMachine has IP set from the same subnet.

After successful login a default page appears.

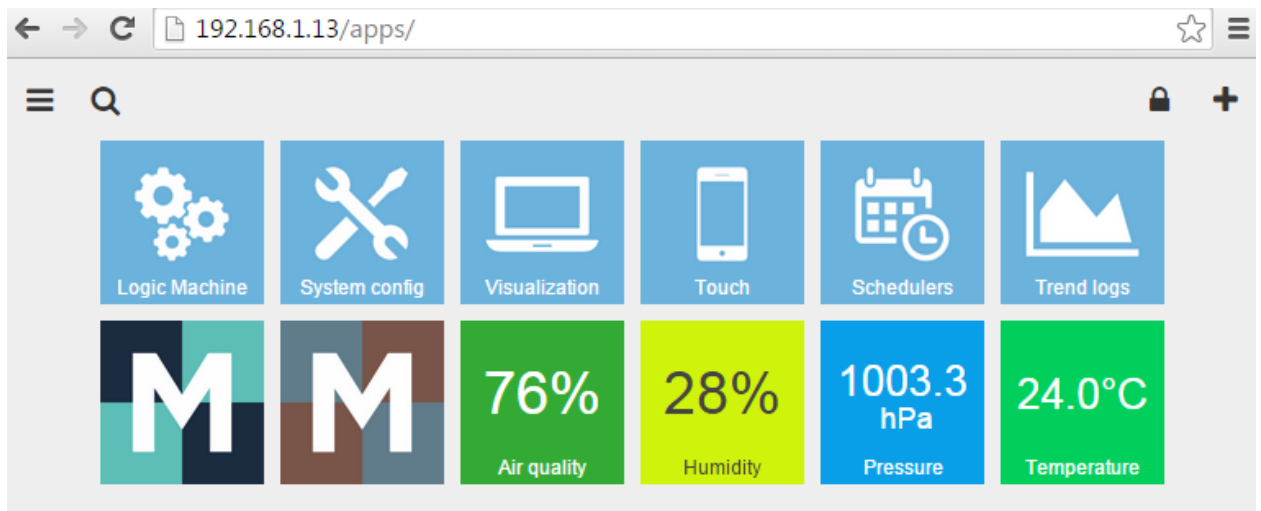


- **Logic Machine** – visualization creator, scripts, sensor configuration, gateway configuration, object relations, alerts, KNX objects and designing building view and visualization maps
- **System config** – IP and KNXnet/IP specific configuration, system logs
- **Visualization** – defined visualization maps with objects
- **Touch** – Light version of visualization for small touch screen devices
- **Schedulers** – User defined schedulers
- **Trend logs** – Trends for data logs

First screen of the interface is a constructor of applications – you can change applications which you see on specific device, change background color, install or remove apps, sort order etc. Note that the mentioned settings are individual for each device you are connecting from.


4.1. Show/hide apps

With Show/hide feature you can define which applications you see or not on the first interface screen. You will see in the list only default and installed applications.

You can access control window by clicking on the icon on top left corner 

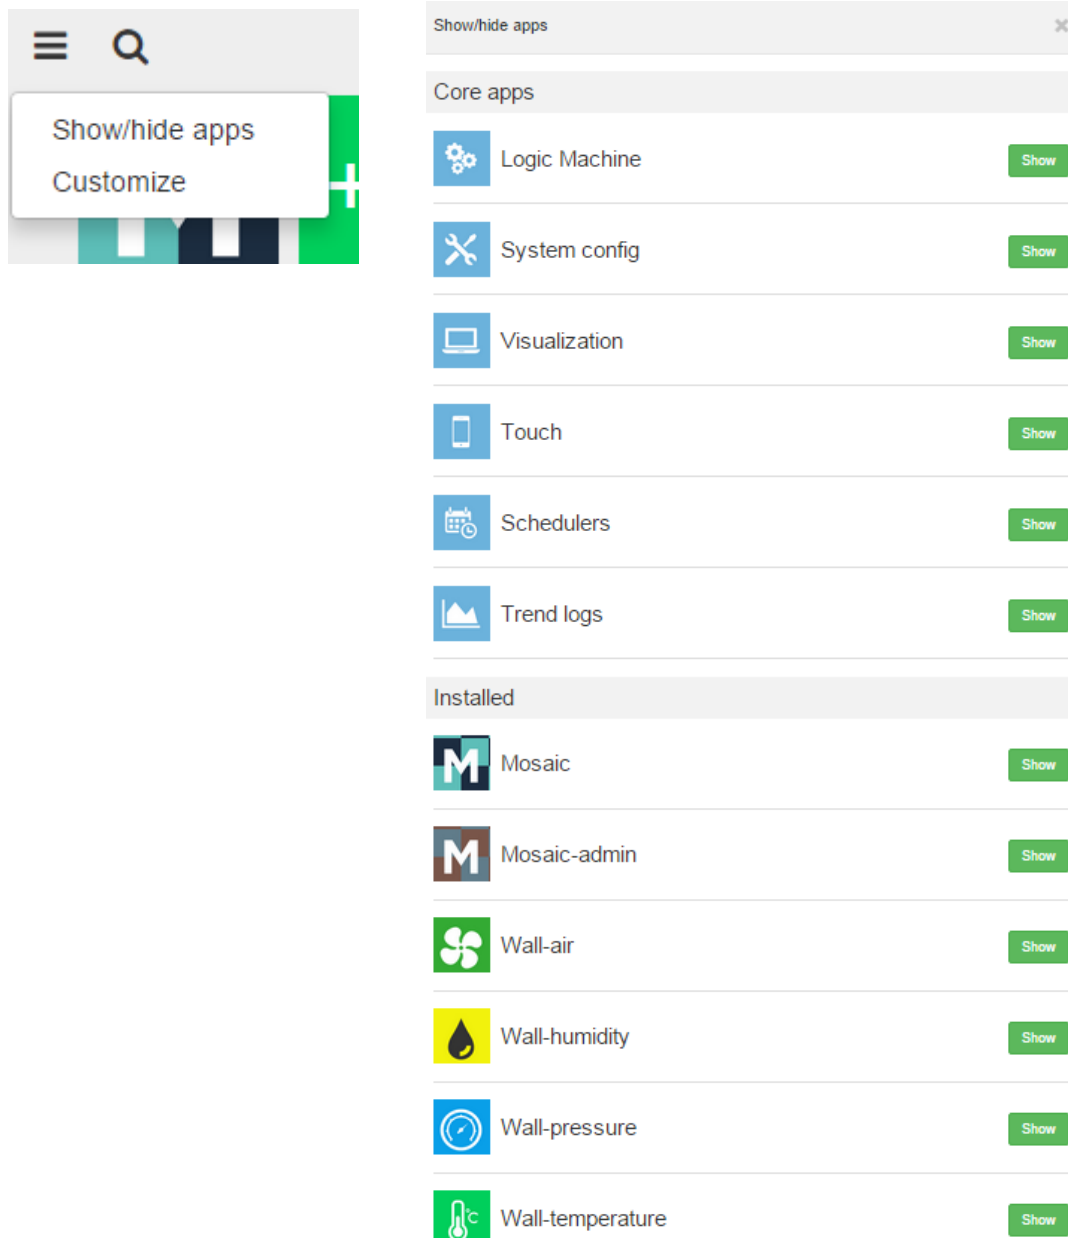


After unchecking some of the apps, the interface looks like this

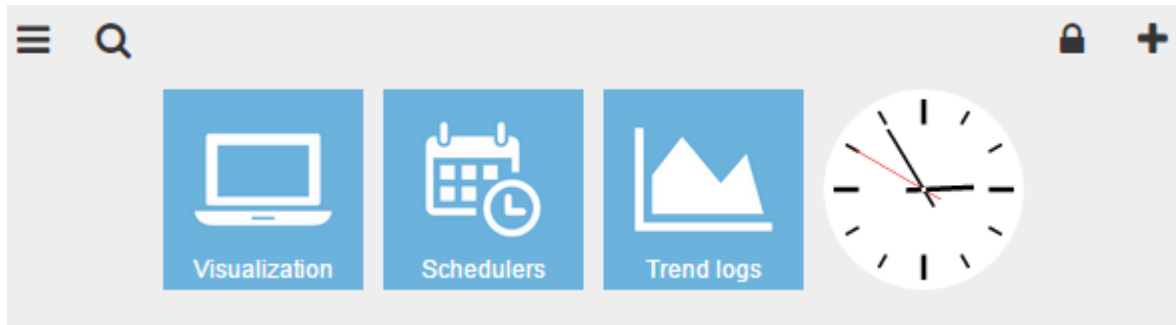


4.2. *Customize background / Language*

By clicking on Customize menu, you access the window where you can choose background image of your first screen for this particular device

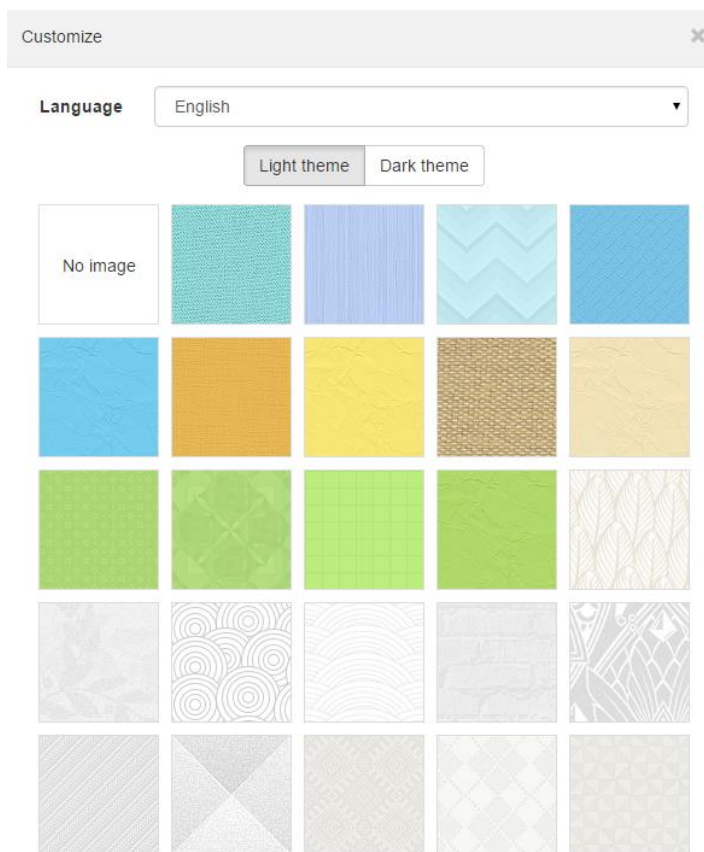


You can choose the interface language by clicking on *Language* drop-down menu.

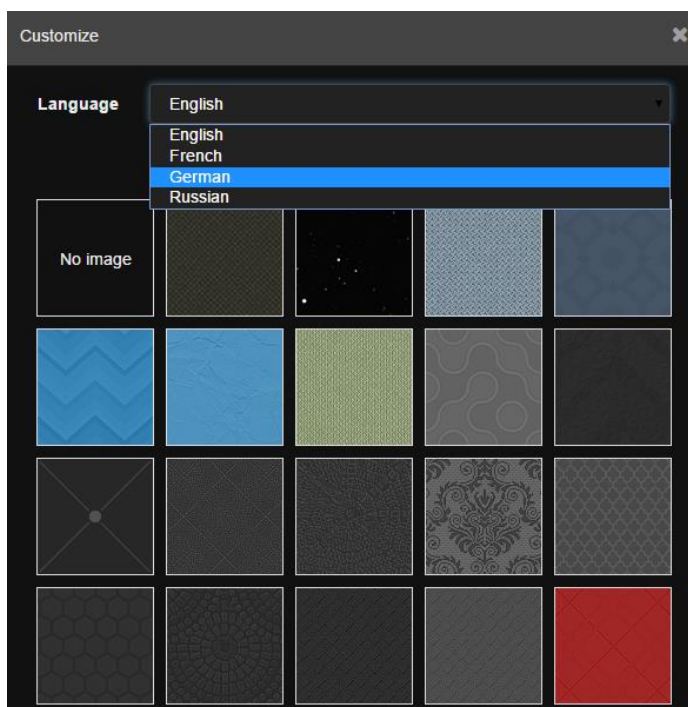


After you choose the style, the interface is automatically set to chosen background




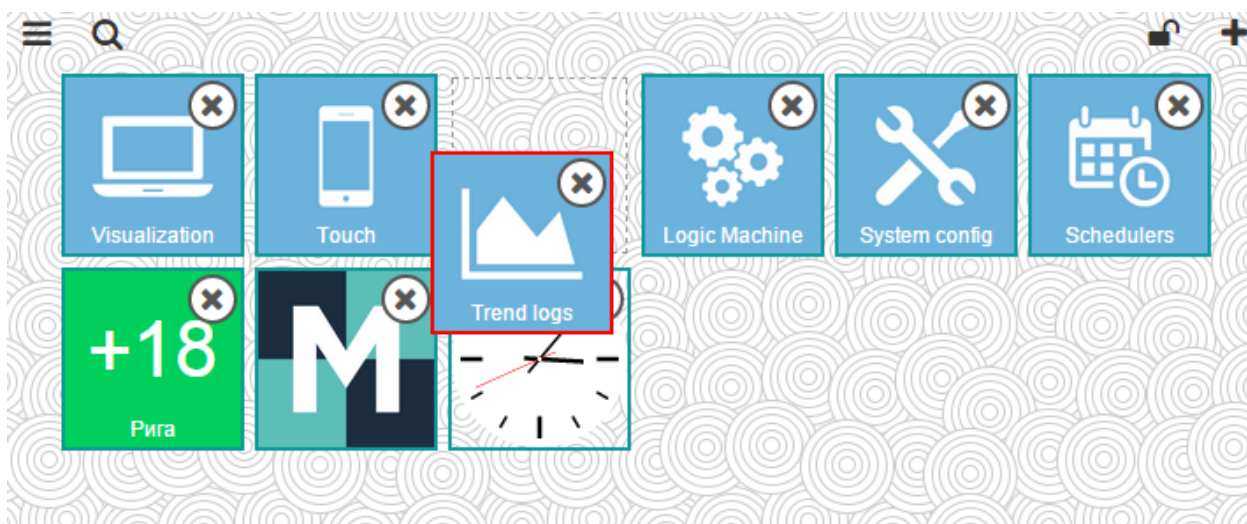
4.3. Find applications


By clicking on the zoom icon  on the left top corner, you can quickly find applications containing search phrase.

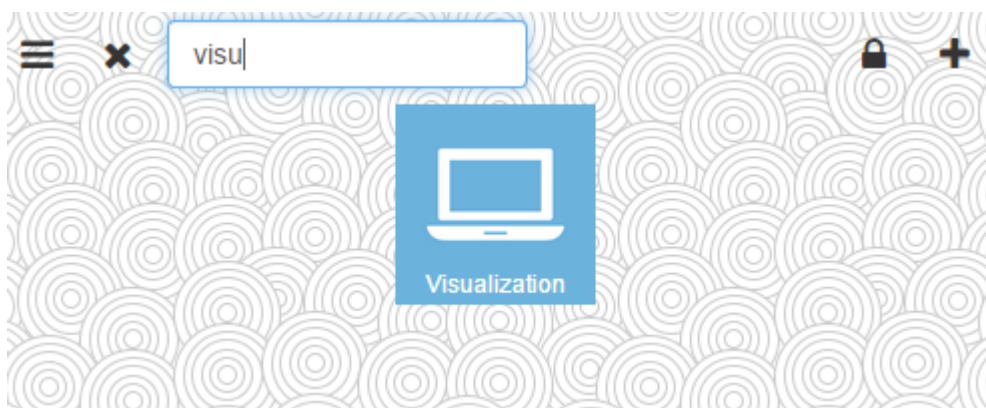

4.4. *Unlock the screen for sorting order*


Sorting the order of applications is available when the screen is unlocked. Press Unlock icon for this purpose 



Once sorting is done, click on Lock icon 

4.5. *Adding/removing apps – app administration*

| Password |
|----------|
| admin |


Click on plus icon to enter the administration window of apps 
 The access password is '**admin**' by default.

Enter admin password



OK

On the default App management page you see available applications.

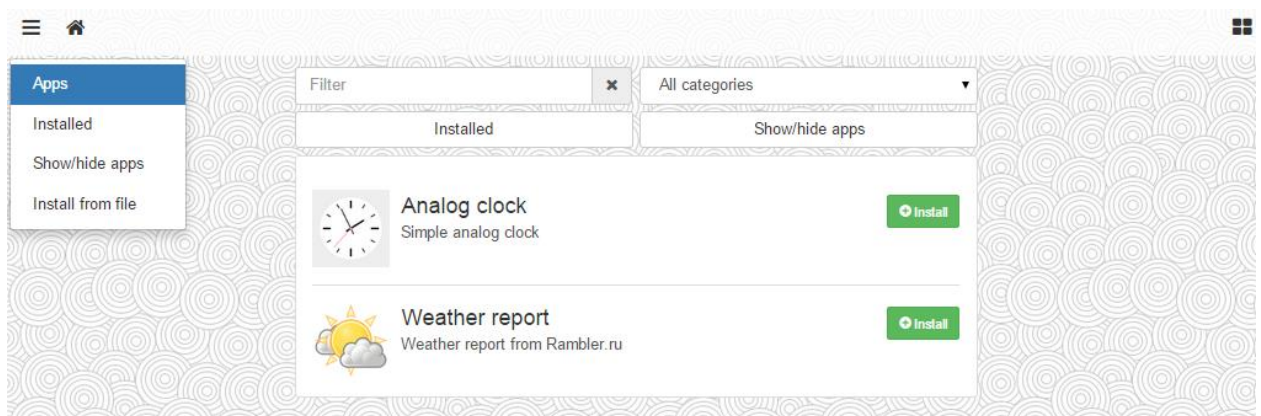


You can add the App to your first screen by clicking on **Install** button and approve the choice

Install Analog clock?


Yes

No


The installed Apps will appear then in **Installed** section where you can uninstall them by necessity.

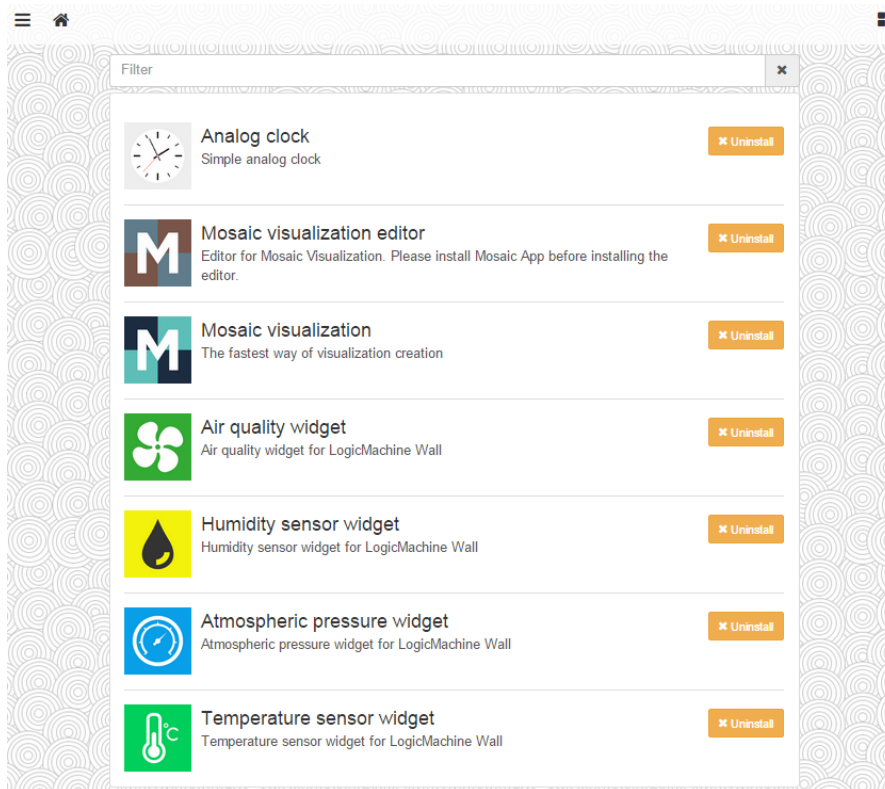


You can install the app also from the file, by clicking on **Install from file** entry

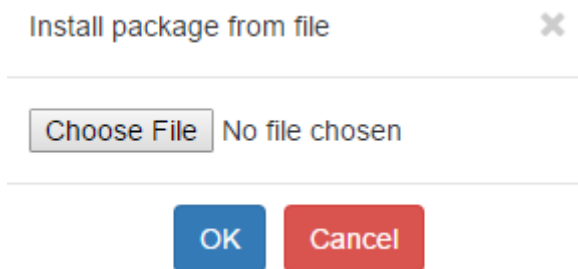

There is also an option to Show/Hide Apps on the first screen

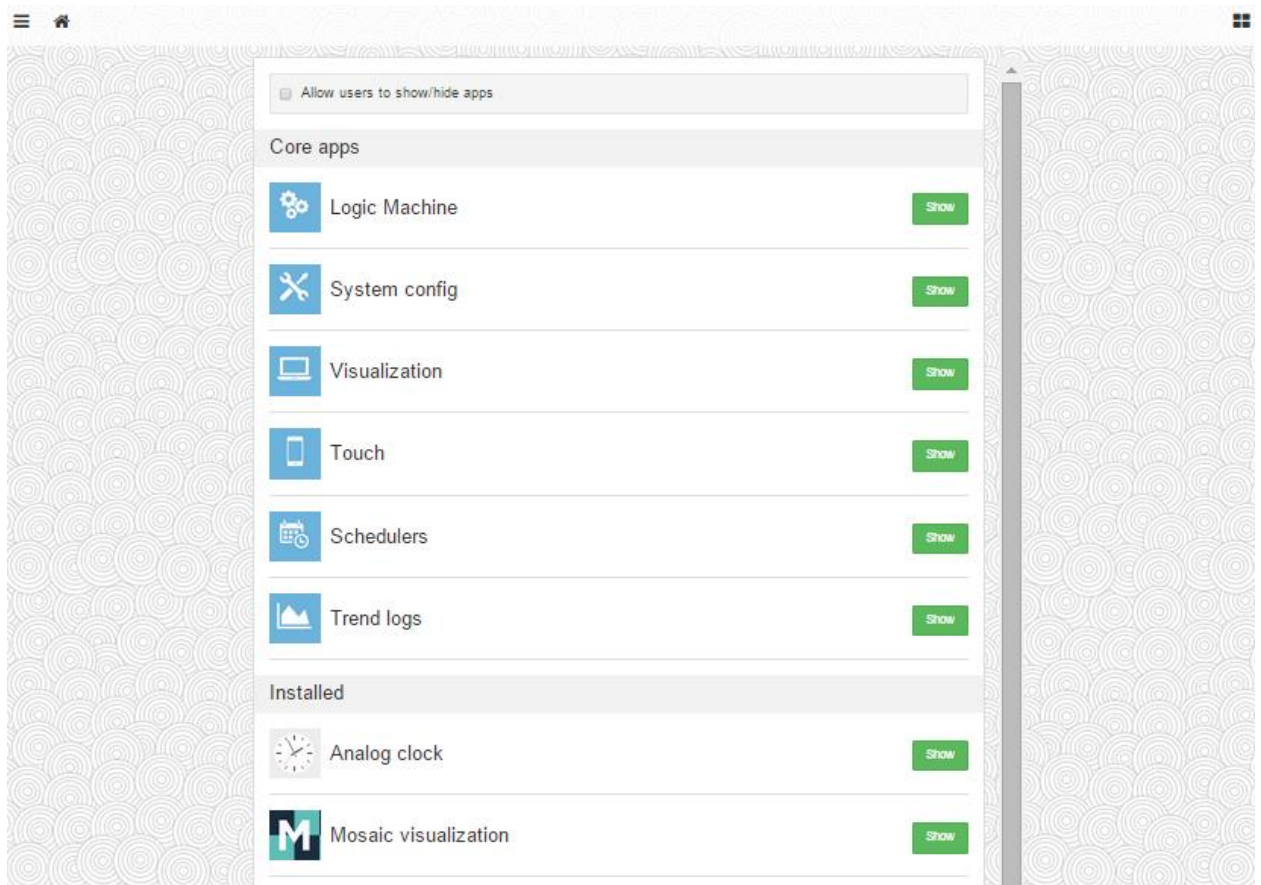

By checking *Allow user to show/hide apps* you can enable or disable this possibility for visualization users.

By pressing on this icon  you will be redirected to initial front page.

5. Application development

Available libraries/frameworks

- jQuery v2 (<http://jquery.com/>)
- Bootstrap v3 (<http://getbootstrap.com>)
- Font Awesome v4 (<http://fontawesome.io>)

Bootstrap comes without *Glyphicons*, use *Font Awesome* instead.

Base directory structure

- `/data` – apps and widgets are stored here, accessible at `http://IP/apps/data/`
- `/libs` – Lua library storage, loaded via `require('custom.lib')` where *lib* is library name.
- `/user` – allows storing user files and LP scripts, accessible at `http://IP/user/`

App / Widget structure

Application name (ID) must be unique and can only contain alphanumeric characters, hyphens and underscores. Maximum name length is 64 characters.

Directory structure

- *index.lp* or *index.html* – required for apps, unless *url* is specified, clicking app icon will open app directory in the same window. Applications must provide a *Back* button so user can return to starting page
- *icon.svg* or *icon.png* – required for apps, contains application icon, *SVG* is recommended
- *widget.lp* or *widget.js* – required for widgets, can contain *JavaScript* + *Lua* code or pure *JavaScript* source which displays widget contents
- *title* – optional for apps, text file with title that is shown beneath the icon
- *url* – optional for apps, text file with *URL* that should be open when icon is clicked
- *style.css* – optional for widget, contains custom CSS stylesheet for given widget
- *config.lp* or *config.html* – optional configuration file, see description below

In widget mode icon element ID is the same as widget name, all other HTML element IDs must be prefixed with unique application name to minimize collisions between different applications. The same rule applies to CSS selectors.

Default widget size is 100×100px. Width/height can be increased by calling *setWidgetSize(cols, rows)* on widget element. Width formula: $cols * 110 - 10$, height formula: $rows * 110 - 10$

Example

Clock widget which takes double width/height and places SVG image which fills all available space inside of widget container:

```
(function() {  
    // get widget element and set double width/height  
    var el = $('#clock').setWidgetSize(2, 2);  
    $('<object type="image/svg+xml"></object>') // object allows SVG+JavaScript  
    .css('width', '100%') // full width  
    .css('height', '100%') // full height  
    .attr('data', '/apps/data/clock/clock.svg') // SVG image source  
    .appendTo(el); // add to container  
})();
```

Configuration

- Application directory must contain either *config.lp* or *config.html* file
- This file must contain *form* element, id must be set in *myapp-config* format, where *myapp* is unique application name
- Data exchange is done via events triggered on *form* element:
 - *config-load* – (to app) provides an object with all configuration key/value pairs
 - *config-check* – (to app) triggered when *Save* button is clicked, app configuration must either show an error message if configuration is invalid or trigger *config-save*
 - *config-save* – (from app) saves configuration on server side and closed modal window, application must pass configuration parameters as an object
- Configuration can be accessed from Lua using these functions:
 - *config.get(app, key, default)* – returns single value for given application name, default value or *nil* if key is not found
 - *config.getall(app)* – return *table* with all configuration values for given application name or *nil* if configuration is empty
 - *config.set(app, key, value)* – adds a new key/value pair or overwrites an existing one
 - *config.setall(app, cfg)* – overwrites existing config with given *cfg table* with keys/values
 - *config.delete(app, key)* – deletes existing key/value pair
- Unpublished apps that have configuration file present will appear under *Dev apps* in admin page

Example (config.html)

Create a simple form element with single numeric input which accepts values in 0..100 range

```
<form id="myapp-config">
  <div class="form-group">
    <label for="myapp-input">Numeric input</label>
    <input type="number" name="input" id="myapp-input" class="form-control" min="0"
max="100">
  </div>
</form>

<script>
(function() {
  var el = $('#myapp-config') // form element
    , input = $('#myapp-input'); // input element

  // set element values when config is loaded
  el.on('config-load', function(event, data) {
    $.each(data, function(key, value) {
      $('#myapp-' + key).val(value);
    });
  });

  // runs when Save button is clicked
  el.on('config-check', function() {
    var val = parseInt(input.val(), 10) // input value
      , min = parseInt(input.attr('min'), 10) // minimum value
      , max = parseInt(input.attr('max'), 10); // maximum value

    // invalid value
    if (isNaN(val) || val < min || max < val) {
      alert('Please enter a value between ' + min + ' and ' + max);
    }
    // all good, save configuration
    else {
      el.triggerHandler('config-save', { input: val });
    }
  });
})();
</script>
```

localStorage wrapper functions

localStorage allows saving client-side configuration. Several functions are provided to safely execute *localStorage* functions, as they might fail in some cases like private mode on iOS. It also allows storing any values that can be serialized using *JSON.stringify*.

- *storeSet(key, value)* – sets key/value pair
- *storeGet(key)* – retrieves key value, returns *null* when key is not found
- *storeRemove(key)* – removes key from storage

Storage keys must be prefixed with unique application name to minimize collisions between different applications

Examples

Get currently selected theme (light/dark)

```
var theme = storeGet('theme') || 'light';
```

Store JavaScript objects

```
var user = { name: 'John', surname: 'Doe', age: 42 };  
storeSet('myapp_user', user);
```

Translation

- `$.i18n.lang` – current language or *undefined* if default language is used
- `$.i18n.add(ns, dictionary)` – adds translations to current dictionary, *ns* must be a unique application name
- `$.i18n.translate(key, default, vars)` or `$.tr(key, default, vars)` – translates a given *key* or uses *default* value if translation is not found for current language. Additional *vars* object can be passed to replace variables inside of translation text

Example 1

```
// register translation for application "myapp"
$.i18n.add('myapp', {
  // translation for mylang
  mylang: {
    hello: 'Hello %{username}, current temperature is %{temperature}',
    goodbye: 'Goodbye %{username}'
  }
});

var text = $.tr('myapp.hello', 'No translation', { username: 'John', temperature: 21 });

// alerts "Hello John, current temperature is 21" if current language is "mylang"
// otherwise alerts "No translation"
alert(text);
```

Example 2

You can apply translation to *jQuery* selectors by using *tr* function: all HTML elements that have *tr* class and *data-tr-key* attribute will have contents replaced with translated version

HTML:

```
<div id="myapp-container">
  <span class="tr" data-tr-key="myapp.hello">Hello!</span>
</div>
```

JavaScript:

```
// register french translation
$.i18n.add('myapp', {
  fr: {
    hello: 'Bonjour!'
  }
});

// apply translation to all elements inside of myapp-container
$('#myapp-container').tr();
```

LP scripts

Allows mixing HTML and Lua inside a single file, Lua chunks must be enclosed in `<? ?>` tags, closing tag at the end of the document is not required.

Example

Print current date

```
<!DOCTYPE html>
<html>
<body>Current date is <? write(os.date()) ?></body>
</html>
```

Available functions:

- *header(hdr)* – adds a custom header to the output
- *getvar(name)* – returns named *GET/POST* variable or *nil* when variable is not set
- *getvars()* – returns all *GET/POST* variables as *Lua table*
- *getcookie(name)* – returns named *cookie* contents or *nil* when cookie is not set
- *print(...)* – outputs any number of variables, ending output with *CRLF*
- *write(...)* – similar to *print* but does not output *CRLF* at the end
- *escape(val)* – escape single/double quotes, less than/greater than characters to HTML entities

Library package is loaded via *require('apps')* and provides access to these functions:

- all built-in LM functions: *alert*, *log*, *grp*, *storage* etc
- *config* library
- *vprint(...)* and *vprinthex(...)* functions to view variable contents in human-readable form
- *json* library

Example

Output multiplication table. Size can be a *GET/POST* variable in 1..20 range (defaults to 10).

```
<!DOCTYPE html>
<html>
<body>
<?
size = getvar('size') -- GET/POST variable
size = tonumber(size) or 0 -- convert to number
if size < 1 or 20 < size then
    size = 10 -- set to default value if empty or invalid
end
?>
<table border="1" cellpadding="3">
```

```

<? for i = 1, size do ?>
  <tr>
    <? for j = 1, size do ?>
      <td><? write(i * j) ?></td>
    <? end ?>
  </tr>
<? end ?>
</table>
</body>
</html>

```

Full Lua function reference manual is available at:

<http://openrb.com/docs/lua.htm>

Object functions

Most functions use *alias* parameter — either object group address or object name. (e.g. '1/1/1' or 'My object')

Finding single/multiple objects

grp.find(alias)

Returns single object for given alias. Object value will be decoded if data type is set.

Returns *nil* when object cannot be found, otherwise it returns *table* with the following items:

- address — object group address
- updatetime — latest update time in *UNIX timestamp* format. Use `os.date()` to convert to readable date formats
- name — unique object name
- datatype — object data type
- decoded — set to *true* when decoded value is available
- value — decoded object value

grp.tag(tags [, mode])

Returns a *table* containing objects with given tag. Tags parameter can be either table or a string. Mode parameter can be either 'or' (default — returns objects that have any of given tags) or 'and' (return objects that have all of given tags). You can use object functions on the returned table.

grp.dpt(dpt, [strict])

Find all objects with matching data type. *Dpt* can be either a *string* ("bool", "scale",

“uint32” etc) or a field from *dt* table (*dt.bool*, *dt.scale*, *dt.uint32*). For example, if *dpt* is set to *dt.uint8*, in normal mode all sub-datatypes like *dt.scale* and *dt.angle* will be included. If exact data type match is required, set *strict* to *true*.

grp.all()

Returns a table with all known objects.

Helpers

grp.alias(alias)

Converts group address to object name or name to address. Returns *nil* when object cannot be found.

grp.getvalue(alias)

Returns value for given alias or *nil* when object cannot be found.

Bus requests

grp.write(alias, value [, datatype])

Sends group write request to given alias. Data type is taken from the database if not specified as third parameter. Returns boolean as the result.

grp.response(alias, value [, datatype])

Similar to *grp.write*. Sends group response request to given alias.

grp.read(alias)

Sends group read request to given alias. Note: this function returns immediately and cannot be used to return the result of read request. Use event-based script instead.

grp.update (alias, value [, datatype])

Similar to *grp.write*, but does not send new value to the bus. Useful for objects that are used only in visualization.

Tag manipulation

grp.gettags(alias)

Returns a *table* with all tags that are set for given alias.

grp.addtags(alias, tags)

Adds single or multiple tags to given alias. *Tags* parameter can be either a *string* (single tags) or *Lua table* consisting of strings (multiple tags).

grp.removetags(alias, tags)

Removes single or multiple tags from given alias. *Tags* parameter can be either a *string*

(single tags) or *Lua table* consisting of strings (multiple tags).

grp.removealltags(alias)

Removes all tags for given alias.

grp.settags(alias, tags)

Overwrites all tags for given alias. *Tags* parameter can be either a *string* (single tags) or *Lua table* consisting of strings (multiple tags)

Object creation and modification

grp.setcomment(alias, comment)

Sets *comment* field for given alias

grp.create(config)

Creates a new or overwrites an existing object based on provided *config*, which must be a *Lua table*. Returns object ID on success, nil plus error message otherwise.

Config fields:

- *datatype* – *required*, object data type. Can be either a *string* (“bool”, “scale”, “uint32” etc) or a field from *dt* table (dt.bool, dt.scale, dt.uint32)
- *name* – *optional*, unique object name. If an object with the same name already exists, numeric prefix will be added
- *comment* – *optional*, object comment (*string*)
- *units* – *optional*, object units/suffix (*string*)
- *address* – *optional*, object group address (*string*). If not set the first free address from configured range will be used
- *tags* – *optional*, object tags, can be either a *string* (single tags) or *Lua table* consisting of strings (multiple tags)

If an object with the same group address already exists, only *units*, *datatype* and *comment fields* will be changed. All other properties will be kept unchanged.

Examples

Create new object with known address

```
address = grp.create({
  datatype = dt.float16,
  address = '1/1/1',
  name = 'My first object',
  comment = 'This is my new object',
  units = 'W',
  tags = { 'My tag A', 'My tag B' },
})
```

Create new object with automatic address assignment

```
address = grp.create({
    datatype = dt.bool,
    name = 'My second object',
})
```

Database functions

SQLite v3 is used as the database engine.

Note: Database tables must be prefixed with unique application name to minimize collisions between different applications.

Core functions

- *db:execute(query)* – executes given query, return value can be either a database cursor or query result
- *db:escape(value)* – escapes given *string* value so it can be safely used in a query
- *db:query(query, ...)* – executes given query, question marks in the query are replaced by additional parameters (see examples below)

INSERT/UPDATE/DELETE helpers

Note: *Lua tables* passed as *values* and *where* parameters must not have fields that are not present in given database table. Otherwise query will fail

- *db:insert(tablename, values)* – performs *INSERT* query based on given *values*
- *db:update(tablename, values, where)* – performs *UPDATE* query based on given *values* and *where* parameters
- *db:delete(tablename, where)* – performs *DELETE* query based on *where* parameter

SELECT helpers

Note: parameters must be passed in the same way as for *db:query()* function

- *db:getone(query, ...)* – returns first field value from the first matching row from given query
- *db:getrow(query, ...)* – returns first matching row from given query

- *db:getlist(query, ...)* – returns complete query result as *Lua table*, where each table item is first field from each row
- *db:getall(query, ...)* – returns complete query result as *Lua table*, where each table item is Lua table with field→value mapping

Examples

```
-- Query parameter replacement
db:query('UPDATE table SET field=? WHERE id=?', 'test', 42)
-- Same as INSERT INTO table (id, value) VALUES (42, 'test')
db:insert('table', {
    id = 42,
    value = 'test',
})
-- Same as UPDATE table SET value='test' WHERE id=42
db:update('table', { value = 'test' }, { id = 42 })
-- Same as DELETE FROM table WHERE id=42
db:delete('table', { id = 42 })
```

6. LogicMachine configuration

| Login | Password |
|-------|----------|
| admin | admin |

This is a home directory for LogicMachine configuration management. The main menu consists of the following menus:

- **Scripting** – scripting repository management
- **Objects**– KNX bus object management
- **Object logs**– KNX bus object historical logs
- **Schedulers**– administrator interface for user mode schedulers
- **Trend logs** – administrator interface for trend logs
- **Vis.structure** – visualization structure definition
- **Visualization**– Visualization creation, control and monitoring
- **Vis.graphics**– icon, background, font management
- **Utilities** – utilities including import from ETS, reset object DB, backup, update system installation
- **User access** – User access management
- **BACnet** – BACnet client with scanner
- **Modbus** – Modbus mapper
- **Enocean** – Enocean mapper
- **BLE** – Bluetooth mapper
- **1-wire** – 1-wire object mapping to KNX
- **Alerts** – alert messages defined with *alert* function
- **Logs** – log messages defined with *log* function
- **Error log** – error messages in KNX bus
- **Help** – documentation for scripting syntaxes

6.1. Scripting

Scripting menu allows adding and managing various scripts, depending on the type of the script. There are two ways to program logics – blocks and via Lua programming language. Most of the Lua language aspects are covered in the first edition of "Programming in Lua" which is freely available at <http://lua.org/pil/>

Note! Here is available LUA Reference Manual for LogicMachine: <http://openrb.com/docs/lua.htm>

There are six main types of scripts:

Event-based – scripts that are executed when a group event occurs on the bus. Usually used when nearly real-time response is required.

Resident– scripts that use polling to check for object state changes. Usually used for heating and ventilation when data is gathered from more than one group address.

Scheduled– scripts that run at the required time and day. Can be used for various security systems and presence simulations.

User libraries – user defined scripts to call from other scripts


Common functions – common functions to call from other scripts

Start-up (init) script – initialization script that is run upon system starting.


6.1.1. Block programming

In order to create blocks, enable this functionality in *Utilities* → *General configuration* → *Enable Block Editor*.


Once the script is added, you can see puzzle icon to access Block editor.

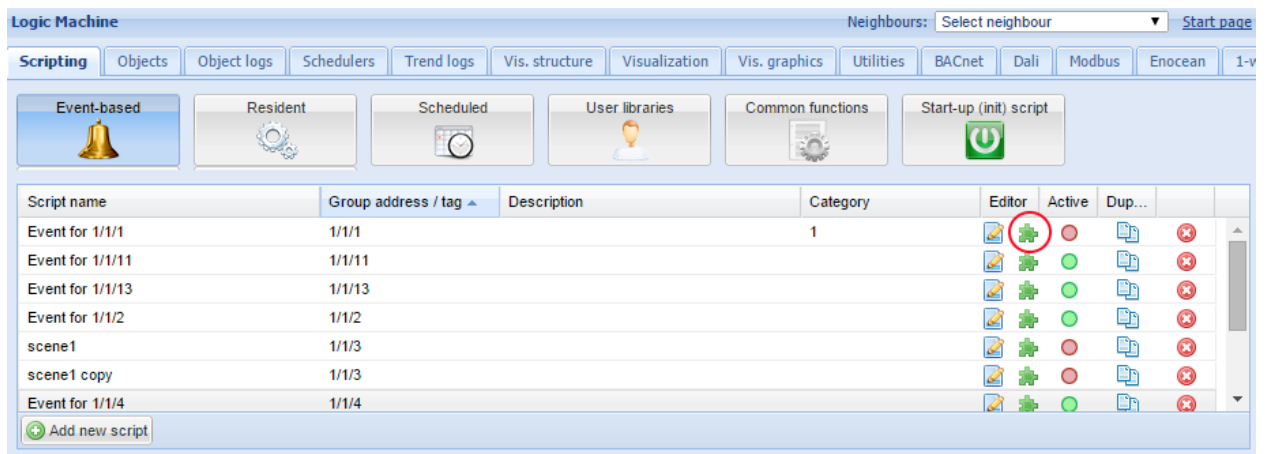

Blocks are sorted by categories on the left side. Each block is puzzle based and can be put only in appropriate location / other block.

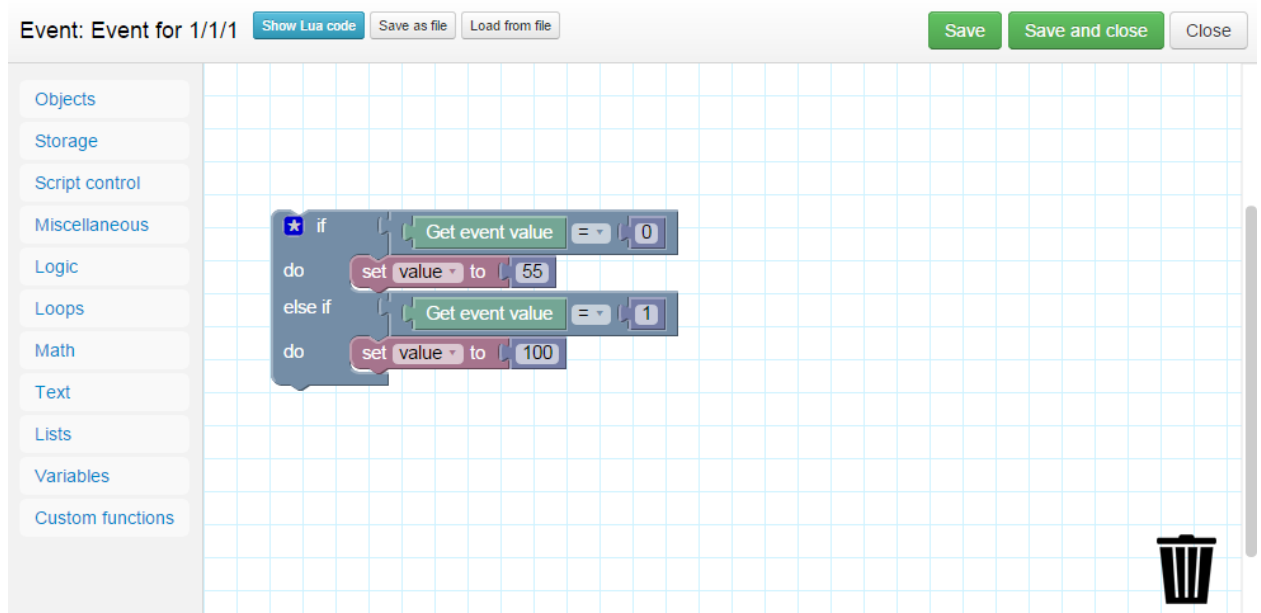


If the block is indicated with the blue label on the top left corner, you can define the structure of the block (e.g. If Else)

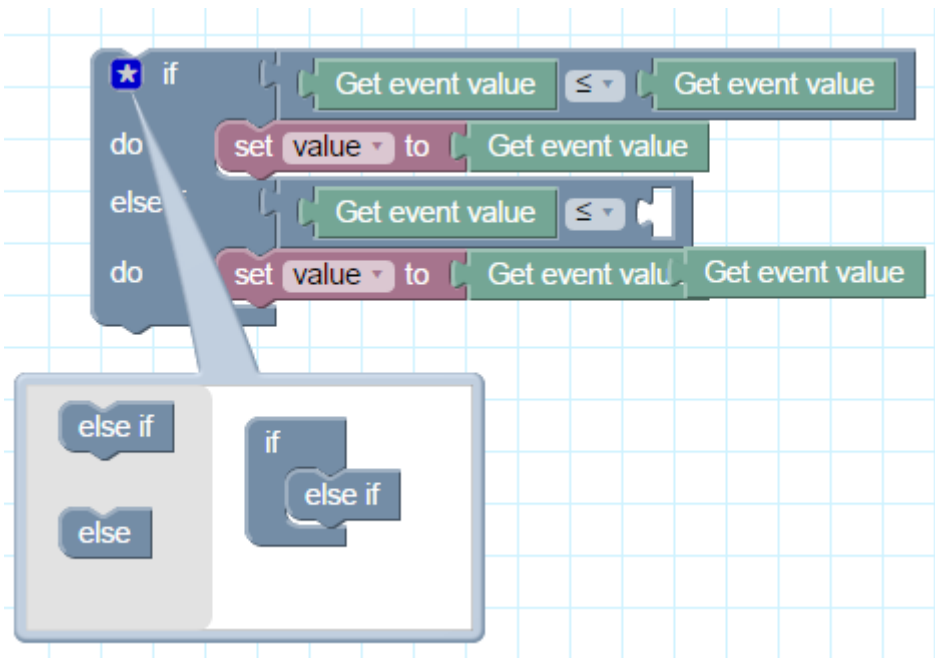

Press Delete button or drag the block to the garbage if you want to delete it




You can always look at the LUA code by clicking on *Show/Hide Lua code* button. This will allow to learn the scripting language.

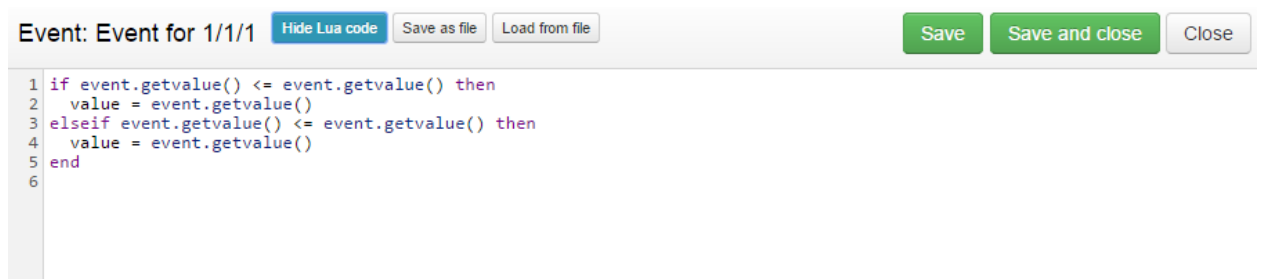

6.1.2. Block functions

In Scripting menu there is *Block functions* button. Here you can create custom block functions which can be later used as ready block in Block editor.

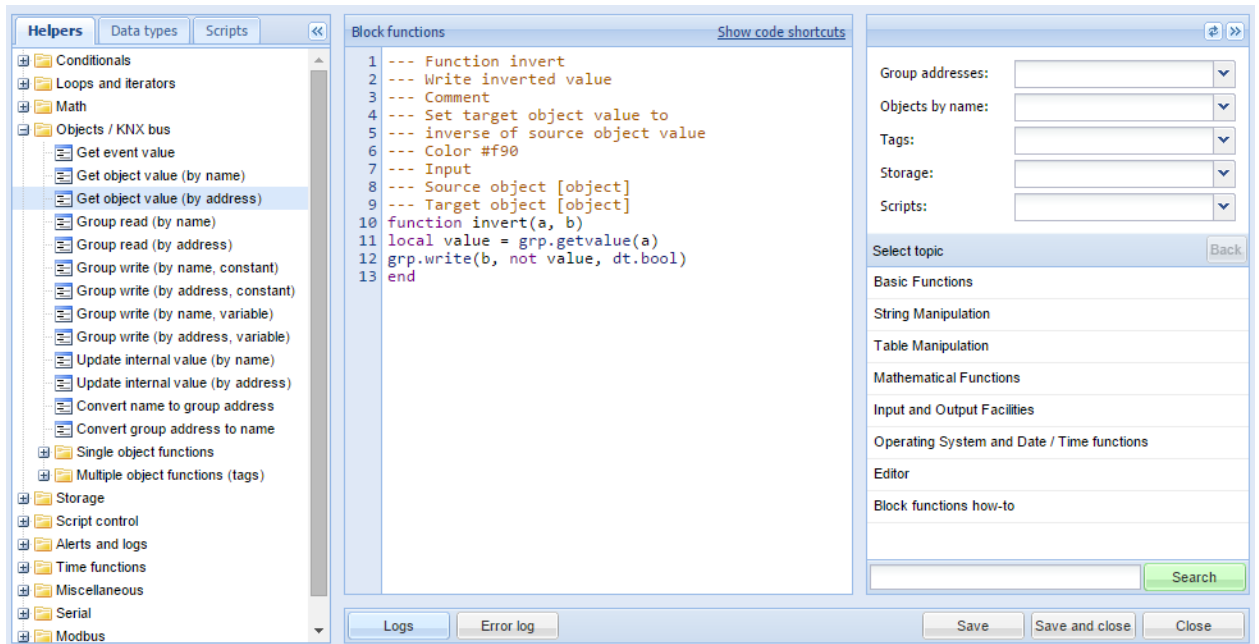

Each function must have a special comment in order to be converted to a block.

- First line must have **Function** keyword followed by the function name
- Second line contains short function description which is shown as block title
- If third line contains **Comment** keyword, all following lines until Input or Output will be added to block comment tooltip
- Optionally, block color may be specified in hexadecimal format (#f00 or #ff9900) or numeric format as hue value between 0 and 359
- Following lines contain input and output lists. Each block can have any number of inputs and outputs:

Inputs are a function parameter, other blocks can be connected to inputs by default. If input definition has **[object]**, **[storage]** or **[tag]** in its name then the input is replaced with object, storage or tag selection input.

Each output variable is assigned to the corresponding function return value.

Example:


```

--- Function invert
--- Write inverted value
--- Comment
--- Set target object value to
--- inverse of source object value
--- Color #f90
--- Input
--- Source object [object]
--- Target object [object]
function invert(a, b)
local value = grp.getvalue(a)

```


```
grp.write(b, not value, dt.bool)
end
```

Once block function is added, it is available as a block in Block editor.

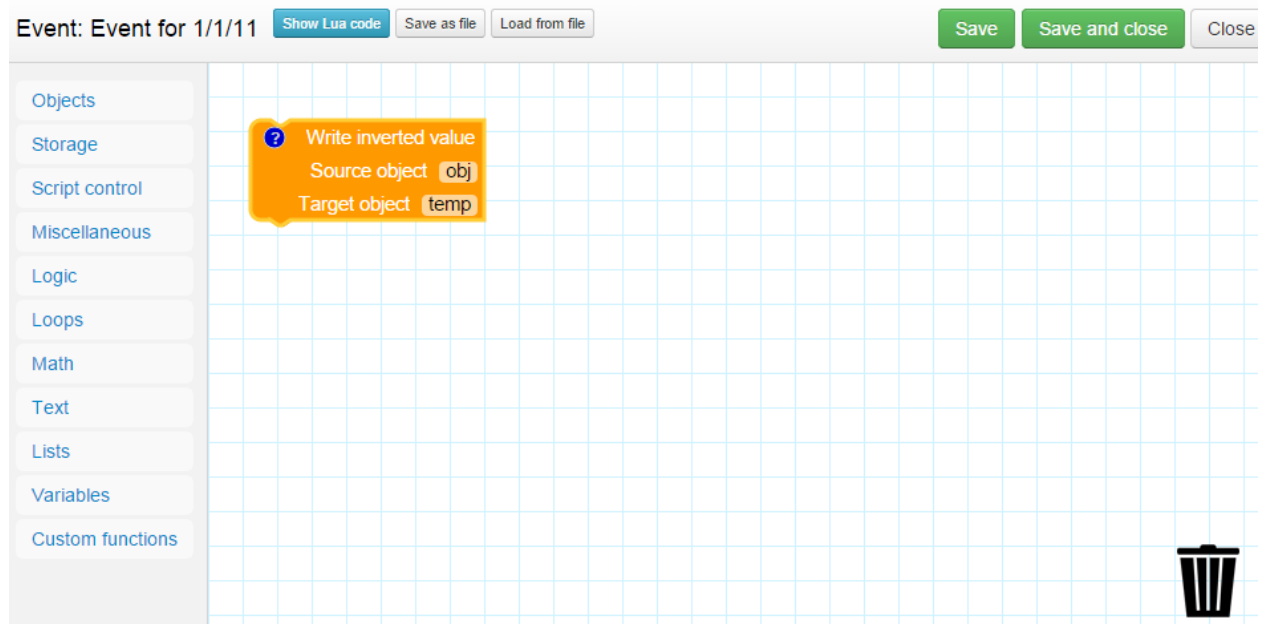

6.1.3. Adding a new script

Click on *Add new script* button on the bottom part of the *Event-based*, *Resident* or *Scheduled* submenus

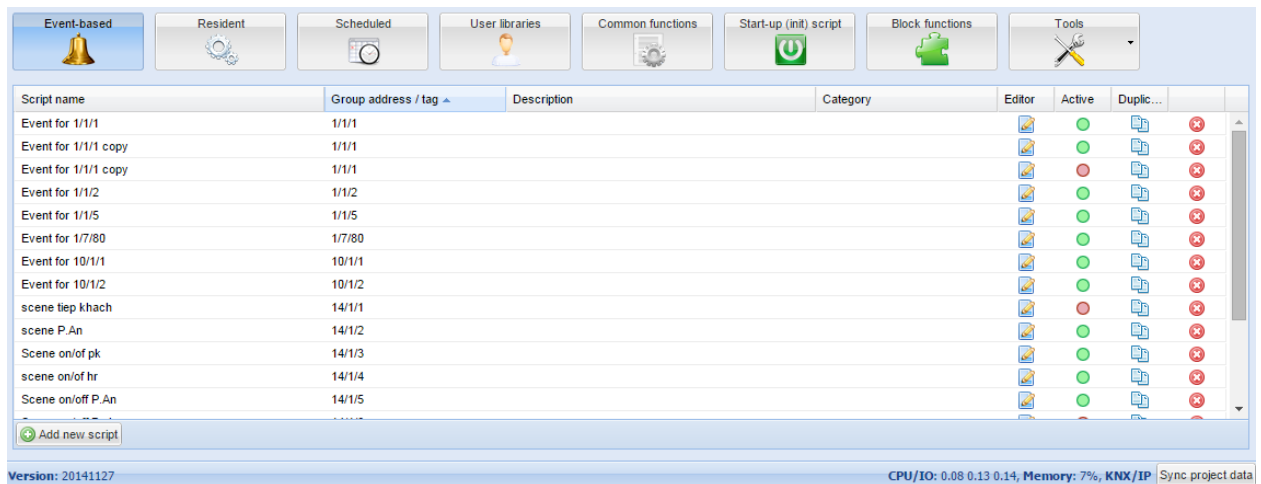

The following fields should be filled when adding a new script:

Event-based

- **Script name** – the name of the script
- **Group address / Tag** – specific group address or tag name on which the script will be triggered
- **Active**– specifies whether the script is active (green circle) or disabled (red circle)
- **Execute on group read**– specifies whether the script is executed on KNX group read telegram

- **Category** – a new or existing name of the category the script will be included. This will not affect on script action, helps only by grouping the scripts and watching by categories in *Tools* ➤ *Print* script listings page
- **Description**– description of the script

Resident

Resident script

Script name:

Sleep interval (seconds):

Active: ☒

Category:

Description:

- **Script name** – the name of the script
- **Sleep interval (seconds)** – interval after which the script will be executed.
- **Active**– specifies whether the script is active (green circle) or disabled (red circle)
- **Category** – a new or existing name of the category the script will be included. This will not affect on script action, helps only by grouping the scripts and watching by categories in *Tools* ➤ *Print* script listings page
- **Description**– description of the script

Scheduled

Scheduled script

Script name: Floor heating off

Minute: 0

Hour: 8,19

Day of the month: *

Month of the year: Every month of the year

Day of the week: Every day of the week

Active: ☐

Category:

Description: Turns floor heating OFF at 8:00 and 19:00

Save Cancel

- **Script name** – the name of the script
- **Minute** – Minute
- **Hour** – Hour
- **Day of the month** – Day of the month
- **Month of the year** – Month of the year
- **Day of the week** – Day of the week
- **Active**– specifies whether the script is active (green circle) or disabled (red circle)
- **Category** – a new or existing name of the category the script will be included. This will not affect on script action, helps only by grouping the scripts and watching by categories in *Tools* [Print script listings page](#)
- **Description**– description of the script

List of scripts

| Script name | Sleep interval (seconds) | Description | Category | Editor | Active | Dupli... |
|-------------|--------------------------|-------------|----------|--------|--------|----------|
| mpd | 30 | | | | | |
| redis | 2 | | | | | |

There are five actions you can do with each of the script:

- Duplicate** – Duplicate the script with its source code
- Editor** – Enter scripting editor to write specific code for the particular program. It can be source code editor or block programming
- Active** – Make script active (green) or deactivate it (red)

Delete – Delete the script. When pressing this icon the confirmation is asked to accept the delete.

6.1.4. Event-based scripting

Event-based scripting can be used to implement custom logic for group address or tag events. User-defined function is executed when a "group write" or "group read" (if checked while adding the script) event occurs for given group address. Event information is stored in global **event** variable. Variable contents:

- *dstraw (integer)* — raw destination group address
- *srcraw (integer)* — raw source individual address
- *dst (string)* — decoded destination group address (for example: 1/1/4)
- *src (string)* — decoded source individual address (for example: 1.1.2)
- *type (string)* — type of event, either "groupwrite", "groupread", "groupresponse". Currently user-defined scripts are bound to "group write" events only.
- *dataraw (integer/string)* — raw binary data
- *datahex (string)* — data as a hex-encoded string which can be used to convert value to Lua variable

Note! **event** variable is available only in Event-based functions, not in Resident and Scheduled.

Note! All event-based scripts are executed in a single queue-like manner. Make sure event scripts do not contain infinite loops, sleep calls or other blocking parts.

Note! To get event value in scripts, use the following command: **a = event.getvalue()**

Note! To get event group address object name, use the following command:

a = grp.alias(event.dst)

6.1.5. Resident scripting

Resident scripts are executed infinite amount of times. Scripts are put into inactive state after each call and are resumed after delay timer expires.

Note! even though resident scripts are executed in parallel they should not have infinite loops or it will not be possible to reload scripts after editing.

6.1.6. Scheduled scripting

Scheduled scripts are executed when the system time matches the specified script start time. Scheduled script is run only once after each timer call.

Scheduled scripting date/time format

Scheduled scripting uses standard [cron](#) format for date/time parameters. Valid values are:

***** — execute script every minute, hour or day.


***/N** — execute script every N minutes, hours or days. N is an integer, script is executed when current value divided by N gives 0 in modulo. For example, script with hour parameter set to */8 will be executed when hour is 0, 8 and 16.


N — execute script exactly at N minute, hour or day.

N-K — execute script when minute, hour or day is between N-K range (inclusive).

N,K — it is possible to specify several N and N-K type parameters separated by comma. For example, script with minute parameter set to 15,50-52 will get executed when minute is 15, 50, 51 and 52

6.1.7. Script editor

When a script is added  icon appears in *Editor* column that allows opening a script in scripting editor and re-working it with built-in code snippets.

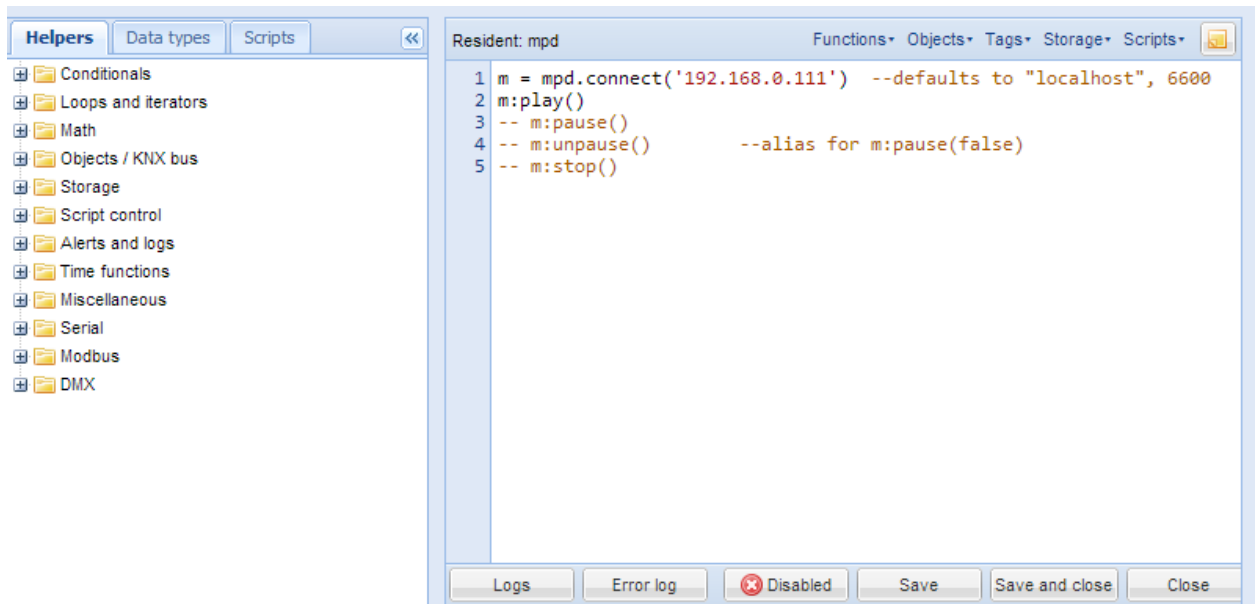

The idea is that not knowing the syntaxes you get a helper for writing your own scripts. Code snippets save also a time and make the coding much more convenient. After clicking on appropriate snippet, it automatically adds code to the editor field.

There are three main groups of Script editor:

Helpers – predefined code snippets, like if-then statement. Helpers consist of three main sub-groups:

Conditionals – If Else If, If Then etc.

Loops and iterators – Array, Repeat..Untiletc

Math – Random value, Ceiling, Absolute value, Round etc.

Objects/KNX bus – Get object value, Group read, Group write, Update interval etc.

Storage – Get data from storage, Save data to storage

Script control – Get other script status, enable or disable other scripts

Alerts and logs – Alert, Log variables, Formatted alert

Time functions – Delay script execution

Miscellaneous – Sunrise/sunset etc.

Serial – Communication through internal LogicMachine IO ports


Modbus – Create RTU/TCP connection, Write register, Read register etc.

DMX – Communication with DMX devices


Data types – choose object by data type

Scripts – list of all scripts added in the LogicMachine
Code helpers on the right side of the editor


There is a special section in scripting editor which allows quickly find functions, objects or tags by name and storage variables.

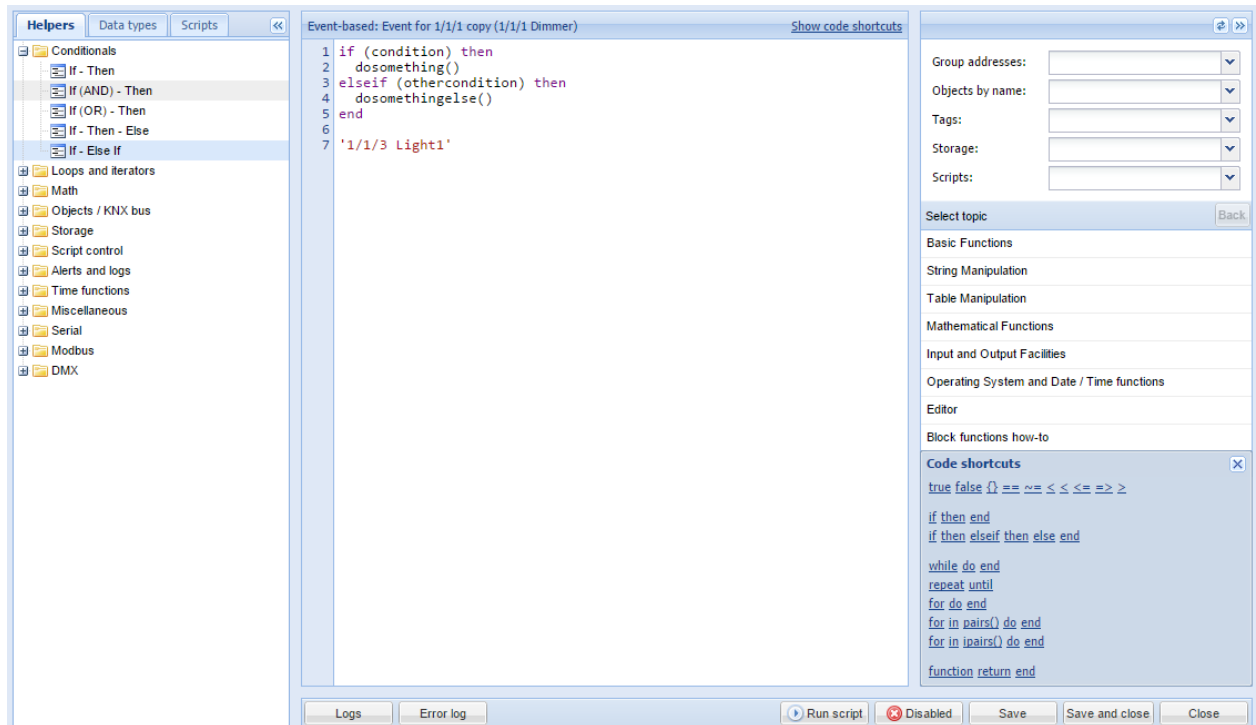

There is also a code shortcut button, which helps with most common function structure.

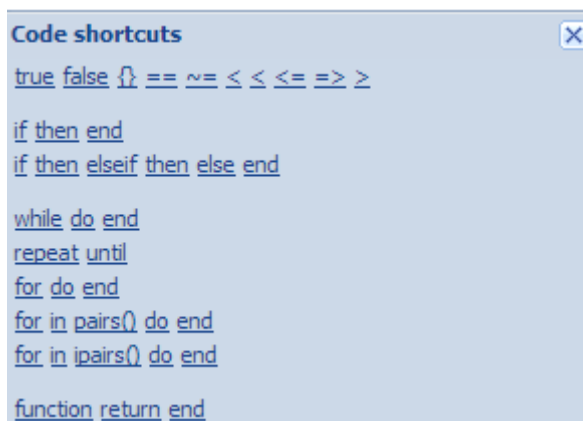

There are also following helpful button in the script editor, which allows quickly access Error Logs, Test the script, Enable or disable it.



6.1.8. Object functions

grp provides simplified access to the objects stored in the database and group address request helpers.

Most functions use **alias** parameter — object group address or unique object name. (e.g. '1/1/1' or 'My object')

grp.getvalue(alias)

Returns value for the given alias or Lua **nil** when object cannot be found.

grp.find(alias)

Returns single object for the given alias. Object value will be decoded automatically only if the data type has been specified in the 'Objects' module. Returns Lua **nil** when object cannot be found, otherwise it returns Lua **table** with the following items:

- **address** — object group address
- **updatetime** — latest update time in UNIX timestamp format. Use Lua **os.date()** to convert to readable date formats

When object data type has been specified in the 'Objects' module the following fields are available:

- **name** — unique object name
- **datatype** — object data type as specified by user
- **decoded** — set to **true** when decoded value is available
- **value** — decoded object value

grp.tag(tags, mode)

Returns Lua **table** containing objects with the given tag. Tags parameter can be either Lua **table** or a string. Mode parameter can be either 'all' (return objects that have all of the given tags) or 'any' (**default** — returns objects that have any of the given tags). You can use *Returned object functions* on the returned table.

grp.alias(alias)

Converts group address to object name or name to address. Returns Lua **nil** when object cannot be found.

6.1.9. Returned object functions, group communication functions

Objects received by using **grp.find(alias)** or **grp.tag(tags, mode)** have the following functions attached to them:

Always check that the returned object was found otherwise calling these functions will result in an error. See the example below.

object:write(value, datatype)

Sends group write request to object's group address. Data type is taken from the database if not specified as second parameter. Returns Lua **boolean** as the result.

object:response(value, datatype)

Similar to **object:write**. Sends group response request to object's group address.

object:read()

Sends group read request to object's group address. Note: this function returns immediately and cannot be used to return the result of read request. Use event-based script instead.

object:update(value, datatype)

Similar to **object:write**, but **does not send** new value to the bus. Useful for objects that are used only in visualization.

6.1.10. Group communication functions

These functions should only be used if it is required to access objects by group address directly, it is recommended to use single or multiple object functions.

grp.write(alias, value, datatype)

Sends group write request to the given alias. Data type is taken from the database if not specified as third parameter. Returns Lua **boolean** as the result.

grp.response(alias, value, datatype)

Similar to **grp.write**. Sends group response request to the given alias.

grp.read(alias)

Sends group read request to the given alias. Note: this function returns immediately and cannot be used to return the result of read request. Use event-based script instead.

grp.update(alias, value, datatype)

Similar to **grp.write**, but **does not send** new value to the bus. Useful for objects that are used only in visualization.

6.1.11. Object function examples

Find object by name and write new value.

```
1. myobject=grp.find('My object')
2. -- grp.find will return nil if object was not found
3. if myobject then
4. myobject:write(1)-- update object value with 1
```

5. end

Find object by address and write new value.

```
1. myobject=grp.find('1/1/15')
2. -- verify that the requested object was found
3. if myobject then
4. myobject:write(52.12, dt.float16)-- explicitly set data type to dt.float16 (2-byte
   floating point)
5. end
```

Switch all binary objects tagged 'lights' off.

```
1. lights =grp.tag('lights')
2. lights:write(false)
```

Group write to the specified group address and data type.

```
1. grp.write('1/1/1', true, dt.bool)-- write 1-bit 'on' to 1/1/1
2. grp.write('1/1/2', 50, dt.scale)-- write 1-byte 50% to 1/1/2
```

6.1.12. Data type functions, data types

knxdatatype object provides data encoding and decoding between Lua and KNX data formats.

knxdatatype.decode(value, datatype)

Converts hex-encoded data to Lua variable based on given data type. Data type is specified either as KNX primary data type (integer between 1 and 16) or a secondary data type (integer between 1000 and 16000). Return values:

- success — decoded data as Lua variable (type depends on data type), value length in bytes
- error — nil, error string

6.1.13. Data types

The following data types can be used for encoding and decoding of KNX data. Data representation on Lua level and predefined constants (in bold) is given below:

- 1 bit (boolean) - **dt.bool** — boolean
- 2 bit (1 bit controlled) - **dt.bit2** — number
- 4 bit (3 bit controlled) - **dt.bit4** — number
- 1 byte ASCII character - **dt.char** — string
- 1 byte unsigned integer - **dt.uint8** — number
- 1 byte signed integer - **dt.int8** — number

- *2 byte unsigned integer* - **dt.uint16** — number
- *2 byte signed integer* - **dt.int16** — number
- *2 byte floating point* - **dt.float16** — number
- *3 byte time / day* - **dt.time** — table with the following items:
 - day — number (0-7)
 - hour — number (0-23)
 - minute — number (0-59)
 - second — number (0-59)
- *3 byte date* - **dt.date** — table with the following items:
 - day — number (1-31)
 - month — number (1-12)
 - year — number (1990-2089)
- *4 byte unsigned integer* - **dt.uint32** — number
- *4 byte signed integer* - **dt.int32** — number
- *4 byte floating point* - **dt.float32** — number
- *4 byte access control* - **dt.access** — number, currently not fully supported
- *14 byte ASCII string* - **dt.string** — string, null characters ('\0') are discarded during decoding

6.1.14. Data storage function

storage object provides persistent key-value data storage for user scripts. Only the following Lua data types are supported:

- **boolean**
- **number**
- **string**
- **table**

storage.set(key, value)

Sets new value for the given key. Old value is overwritten. Returns boolean as the result and an optional error string.

storage.get(key, default)

Gets value for the given key or returns default value (**nil** if not specified) if key is not found in the data storage.

Note: all user scripts share the same data storage. Make sure that same keys are not used to store different types of data.

Examples

- The following examples shows the basic syntax of **storage.set**. Result will return boolean **true** since the passed parameters are correct

```
result=storage.set('my_stored_value_1', 12.21)
```

- This example will return `false` as the result because we are trying to store a function which is not possible.

```
1. testfn=function(t)
2. return t * t
3. end
4. result =storage.set('my_stored_value_2', testfn)-- this will result in an error
```

- The following examples shows the basic syntax of `storage.get`. Assuming that key value was not found, first call will return `nil` while second call will return number `0` which was specified as a default value.

```
1. result =storage.get('my_stored_value_3')-- returns nil if value is not found
2. result =storage.get('my_stored_value_3', 0)-- returns 0 if value is not found
```

- When storing tables make sure to check the returned result type. Assume we have created a storage item with key `test_object_data`.

```
1. objectdata={}
2. objectdata.temperature=23.1
3. objectdata.scene='default'
4. result =storage.set('test_object_data', objectdata)-- store objectdata variable as
   'test_object_data'
```

- Now we are retrieving data from storage. Data type is checked for correctness.

```
1. objectdata=storage.get('test_object_data')
2. if type(objectdata)=='table' then
3. if objectdata.temperature> 24 then
4. -- do something if temperature level is too high
5. end
6. end
```

6.1.15. Alert function

`alert(message, [var1, [var2, [var3]]])`

Stores alert message and current system time in the main database. All alerts are accessible in the "Alerts" module. This function behaves exactly as Lua `string.format`.

Example

```
1. temperature = 25.3
2. if temperature > 24 then
3. -- resulting message: 'Temperature levels are too high: 25.3'
4. alert('Temperature level is too high: %.1f', temperature)
5. end
```

6.1.16. Log function

log(var1, [var2, [var3, ...]])

Converts variables to human-readable form and stores them in the main database. All items are accessible in the "Logs" module.

Example

```
1. -- log function accepts Lua nil, boolean, number and table (up to 5 nested levels) type
   variables
2. a = { key1 = 'value1', key2 = 2 }
3. b = 'test'
4. c = 123.45
5. -- logs all passed variables
6. log(a, b, c)
```

6.1.17. Scheduled scripting date/time format

Scheduled scripting uses standard *cron* format for date/time parameters. Valid values are:

- * — execute script every minute, hour or day.
- */N — execute script every N minutes, hours or days. N is an integer, script is executed when current value divided by N gives 0 in modulo. For example, script with hour parameter set to */8 will be executed when hour is 0, 8 and 16.
- N — execute script exactly at N minute, hour or day.
- N-K — execute script when minute, hour or day is between N-K range (inclusive).
- N,K — it is possible to specify several N and N-K type parameters separated by comma. For example, script with minute parameter set to 15,50-52 will get executed when minute is 15, 50, 51 and 52

6.1.18. Time function

os.sleep(delay)

Delay the next command execution for the *delay* seconds.

os.microtime ()

Returns two values: current timestamp in seconds and timestamp fraction in nanoseconds

os.udifftime (sec, usec)

Returns time difference as floating point value between now and timestamp components passed to this function (seconds, nanoseconds)

6.1.19. Data Serialization

serialize.encode (value)

Generates a storable representation of a value.

serialize.decode (value)

Creates a Lua value from a stored representation.

6.1.20. String functions

This library provides generic functions for string manipulation, such as finding and extracting substrings, and pattern matching. When indexing a string in Lua, the first character is at position 1 (not at 0, as in C).

Indices are allowed to be negative and are interpreted as indexing backwards, from the end of the string. Thus, the last character is at position -1, and so on.

The string library provides all its functions inside the table `string`. It also sets a meta table for strings where the `__index` field points to the string table. Therefore, you can use the string functions in object-oriented style. For instance, `string.byte(s, i)` can be written as `s:byte(i)`. The string library assumes one-byte character encodings.

string.trim (str)

Trims the leading and trailing spaces off a given string.

string.split (str, sep)

Splits string by given separator string. Returns Lua table.

string.byte (s [, i [, j]])

Returns the internal numerical codes of the characters `s[i]`, `s[i+1]`, ..., `s[j]`. The default value for `i` is 1; the default value for `j` is `i`. Note that numerical codes are not necessarily portable across platforms.

string.char (...)

Receives zero or more integers. Returns a string with length equal to the number of arguments, in which each character has the internal numerical code equal to its corresponding argument. Note that numerical codes are not necessarily portable across platforms.

string.find (s, pattern [, init [, plain]])

Looks for the first match of pattern in the string *s*. If it finds a match, then *find* returns the indices of *s* where this occurrence starts and ends; otherwise, it returns *nil*. A third, optional numerical argument *init* specifies where to start the search; its default value is 1 and can be negative. A value of true as a fourth, optional argument *plain* turns off the pattern matching facilities, so the function does a plain "find substring" operation, with no characters in pattern being considered "magic". Note that if *plain* is given, then *init* must be given as well. If the pattern has captures, then in a successful match the captured values are also returned, after the two indices.

string.format (formatstring, ...)

Returns a formatted version of its variable number of arguments following the description given in its first argument (which must be a string). The format string follows the same rules as the *printf* family of standard C functions. The only differences are that the options/modifiers ***, *l*, *L*, *n*, *p*, and *h* are not supported and that there is an extra option, *q*. The *q* option formats a string in a form suitable to be safely read back by the Lua interpreter: the string is written between double quotes, and all double quotes, newlines, embedded zeros, and backslashes in the string are correctly escaped when written. For instance, the call

```
string.format('%q', 'a string with "quotes" and \n new line')
```

will produce the string:

```
"a string with \"quotes\" and \n new line"
```

The options *c*, *d*, *E*, *e*, *f*, *g*, *G*, *i*, *o*, *u*, *X*, and *x* all expect a number as argument, whereas *q* and *s* expect a string. This function does not accept string values containing embedded zeros, except as arguments to the *q* option.

string.gmatch (s, pattern)

Returns an iterator function that, each time it is called, returns the next captures from pattern over strings. If pattern specifies no captures, then the whole match is produced in each call. As an example, the following loop

```
1. s = "hello world from Lua"
2. for w in string.gmatch(s, "%a+") do
3.   print(w)
4. end
```

will iterate over all the words from string *s*, printing one per line. The next example collects all pairs *key=value* from the given string into a table:

```
1. t = {}
2. s = "from=world, to=Lua"
3. for k, v in string.gmatch(s,("(%w+)=(%w+)") do
4.   t[k] = v
5. end
```

For this function, a '^' at the start of a pattern does not work as an anchor, as this would prevent the iteration.

string.gsub (s, pattern, repl [, n])

Returns a copy of *s* in which all (or the first *n*, if given) occurrences of the pattern have been replaced by the replacement string specified by *repl*, which can be a string, a table, or a function. *gsub* also returns, as its second value, the total number of matches that occurred.

If *repl* is a string, then its value is used for replacement. The character *%* works as an escape character: any sequence in *repl* of the form *%n*, with *n* between 1 and 9, stands for the value of the *n*-th capture string (see below). The sequence *%0* stands for the whole match. The sequence *%%* stands for a single *%*.

If *repl* is a table, then the table is queried for every match, using the first capture as the key; if the pattern specifies no captures, then the whole match is used as the key.

If *repl* is a function, then this function is called every time a match occurs, with all captured substrings passed as arguments, in order; if the pattern specifies no captures, then the whole match is passed as a sole argument.

If the value returned by the table query or by the function call is a string or a number, then it is used as the replacement string; otherwise, if it is *false* or *nil*, then there is no replacement (that is, the original match is kept in the string).

Examples:

```
x =string.gsub("hello world", "(%w+)", "%1 %1")
--> x="hello hello world world"

x =string.gsub("hello world", "%w+", "%0 %0", 1)
--> x="hello hello world"

x =string.gsub("hello world from Lua", "(%w+)%s*(%w+)", "%2 %1")
--> x="world hello Lua from"

x =string.gsub("home = $HOME, user = $USER", "%$(%w+)", os.getenv)
--> x="home = /home/roberto, user = roberto"

x =string.gsub("4+5 = $return 4+5$", "%$(.)%$", function(s)
returnloadstring(s)()
end)
--> x="4+5 = 9"

local t ={name="lua", version="5.1"}
x =string.gsub("$name-$version.tar.gz", "%$(%w+)", t)
--> x="lua-5.1.tar.gz"
```

string.len (s)

Receives a string and returns its length. The empty string *""* has length 0. Embedded zeros are counted, so *"a\000bc\000"* has length 5.

string.lower (s)

Receives a string and returns a copy of this string with all uppercase letters changed to lowercase. All other characters are left unchanged. The definition of what an uppercase letter is depends on the current locale.

string.match (s, pattern [, init])

Looks for the first match of *pattern* in the string *s*. If it finds one, then *match* returns the captures from the pattern; otherwise it returns *nil*. If *pattern* specifies no captures, then the whole match is returned. A third, optional numerical argument *init* specifies where to start the search; its default value is 1 and can be negative.

string.rep (s, n)

Returns a string that is the concatenation of n copies of the string s.

string.reverse (s)

Returns a string that is the string s reversed.

string.sub (s, i [, j])

Returns the substring of s that starts at i and continues until j; i and j can be negative. If j is absent, then it is assumed to be equal to -1 (which is the same as the string length). In particular, the call *string.sub(s,1,j)* returns a prefix of s with length j, and *string.sub(s, -i)* returns a suffix of s with length i.

string.upper (s)

Receives a string and returns a copy of this string with all lowercase letters changed to uppercase. All other characters are left unchanged. The definition of what a lowercase letter is depends on the current locale.

Patterns

Character Class:

A character class is used to represent a set of characters. The following combinations are allowed in describing a character class:

- **x**: (where x is not one of the magic characters `^$()%.*+?`) represents the character x itself.
- **.**: (a dot) represents all characters.
- **%a**: represents all letters.
- **%c**: represents all control characters.
- **%d**: represents all digits.
- **%l**: represents all lowercase letters.
- **%p**: represents all punctuation characters.
- **%s**: represents all space characters.
- **%u**: represents all uppercase letters.
- **%w**: represents all alphanumeric characters.
- **%x**: represents all hexadecimal digits.
- **%z**: represents the character with representation 0.
- **%x**: (where x is any non-alphanumeric character) represents the character x. This is the standard way to escape the magic characters. Any punctuation character (even the non magic) can be preceded by a '%' when used to represent itself in a pattern.
- **[set]**: represents the class which is the union of all characters in set. A range of characters can be specified by separating the end characters of the range with a '-'. All classes %x described above can also be used as components in set. All other characters in set represent themselves. For example, `[%w_]` (or `[_%w]`) represents all alphanumeric characters plus the underscore, `[0-7]` represents the octal digits, and `[0-7%l%-]` represents the octal digits plus the lowercase letters plus the '-' character.
- The interaction between ranges and classes is not defined. Therefore, patterns like `[%a-z]` or `[a-%%]` have no meaning.
- **[^set]**: represents the complement of set, where set is interpreted as above.

For all classes represented by single letters (%a, %c, etc.), the corresponding uppercase letter represents the complement of the class. For instance, %S represents all non-space characters. The definitions of letter, space, and other character groups depend on the current locale. In particular, the class [a-z] may not be equivalent to %l.

Pattern Item:

A pattern item can be:

- a single character class, which matches any single character in the class;
- a single character class followed by '*', which matches 0 or more repetitions of characters in the class. These repetition items will always match the longest possible sequence;
- a single character class followed by '+', which matches 1 or more repetitions of characters in the class. These repetition items will always match the longest possible sequence;
- a single character class followed by '-', which also matches 0 or more repetitions of characters in the class. Unlike '*', these repetition items will always match the shortest possible sequence;
- a single character class followed by '?', which matches 0 or 1 occurrence of a character in the class;
- %n, for n between 1 and 9; such item matches a substring equal to the n-th captured string (see below);
- %bxy, where x and y are two distinct characters; such item matches strings that start with x, end with y, and where the x and y are balanced. This means that, if one reads the string from left to right, counting +1 for an x and -1 for a y, the ending y is the first y where the count reaches 0. For instance, the item %b() matches expressions with balanced parentheses.

Pattern:

A pattern is a sequence of pattern items. A '^' at the beginning of a pattern anchors the match at the beginning of the subject string. A '\$' at the end of a pattern anchors the match at the end of the subject string. At other positions, '^' and '\$' have no special meaning and represent themselves.

Captures:

A pattern can contain sub-patterns enclosed in parentheses; they describe captures. When a match succeeds, the substrings of the subject string that match captures are stored (captured) for future use. Captures are numbered according to their left parentheses. For instance, in the pattern "(a*(.)%w(%s*))", the part of the string matching "a*(.)%w(%s*)" is stored as the first capture (and therefore has number 1); the character matching "." is captured with number 2, and the part matching "%s*" has number 3.

As a special case, the empty capture () captures the current string position (a number). For instance, if we apply the pattern "()aa()" on the string "flaaap", there will be two captures: 3 and 5. A pattern cannot contain embedded zeros. Use %z instead.

6.1.21. Input and output functions

io.exists (path)

Checks if given path (file or directory) exists. Return boolean.

io.readfile (file)

Reads whole file at once. Return file contents as a string on success or nil on error.

io.writefile (file, data)

Writes given data to a file. Data can be either a value convertible to string or a table of such values. When data is a table then each table item is terminated by a new line character. Return boolean as write result when file can be open for writing or nil when file cannot be accessed.

Example: Write event status to log file located on plugged USB flash drive:

```
1. value = knxdatatype.decode(event.datahex, dt.bool)
2. data =string.format('%s value is %s', os.date('%c'), tostring(value))
3. -- write to the end of log file preserving all previous data
4. file =io.open('/mnt/usb/log.txt', 'a+')
5. file:write(data .. '\r\n')
6. file:close()
```

Output:

```
Mon Jan 3 05:25:13 2011 value is false
Mon Jan 3 05:25:14 2011 value is true
Mon Jan 3 05:25:32 2011 value is false
Mon Jan 3 05:25:33 2011 value is true
```

Example: Read data from file (config in format key=value)

```
1. for line inio.lines('/mnt/usb/config.txt')do
2. -- split line by '=' sing
3. items = line:split('=')
4. -- two items, line seems to be valid
5. if #items == 2 then
6. key = items[1]:trim()
7. value = items[2]:trim()
8. alert('[config] %s = %s', key, value)
9. end
10. end
```

6.1.22. Script control functions

script.enable('scriptname')

Enable the script with the name `scriptname`.

script.disable('scriptname')

Disable the script with the name `scriptname`.

status = script.status('scriptname')

Returns true/false if script is found, nil otherwise

6.1.23. JSON library

Note: json is not loaded by default, use *require('json')* before calling any functions from this library.

json.encode (value)

Converts Lua variable to JSON string. Script execution is stopped in case of an error.

json.pencode (value)

Converts Lua variable to JSON string in protected mode, returns nil on error.

json.decode (value)

Converts JSON string to Lua variable. Script execution is stopped in case of an error.

json.pdecode (value)

Converts JSON string to Lua variable in protected mode, returns nil on error.

6.1.24. Conversion

Compatibility layer: *lmc core* is an alias of *cnv*.

cnv.strtohex (str)

Converts given binary string to a hex-encoded string.

cnv.hextostr (hex [, keepnulls])

Converts given hex-encoded string to a binary string. NULL characters are ignored by default, but can be included by setting second parameter to true.

cnv.tonumber (value)

Converts the given value to number using following rules: numbers and valid numeric strings are treated as is, boolean *true* is 1, boolean *false* is 0, everything else is *nil*.

cnv.hextoint(hexvalue, bytes)

Converts the given hex string to and integer of a given length in bytes.

cnv.inttohex(intvalue, bytes)

Converts the given integer to a hex string of given bytes.

cnv.strtohex(str)

Converts the given binary string to a hex-encoded string.

cnv.hextostr(hexstr)

Converts the given hex-encoded string to a binary string.

6.1.25. Bit operators

bit.bnot (value)

Binary not

bit.band (x1 [, x2...])

Binary and between any number of variables

bit.bor (x1 [, x2...])

Binary or between any number of variables

bit.bxor (x1 [, x2...])

Binary xor between any number of variables

bit.lshift (value, shift)

Left binary shift

bit.rshift (value, shift)

Right binary shift

6.1.26. Input and Output Facilities

The I/O library provides two different styles for file manipulation. The first one uses implicit file descriptors; that is, there are operations to set a default input file and a default output file, and all input/output operations are over these default files. The second style uses explicit file descriptors.

When using implicit file descriptors, all operations are supplied by table *io*. When using explicit file descriptors, the operation *io.open* returns a file descriptor and then all operations are supplied as methods of the file descriptor.

The table *io* also provides three predefined file descriptors with their usual meanings from C: *io.stdin*, *io.stdout*, and *io.stderr*. The I/O library never closes these files.

Unless otherwise stated, all I/O functions return *nil* on failure (plus an error message as a second result and a system-dependent error code as a third result) and some value different from *nil* on success.

io.close ([file])

Equivalent to `file:close()`. Without a file, closes the default output file.

io.flush ()

Equivalent to `file:flush` over the default output file.

io.input ([file])

When called with a file name, it opens the named file (in text mode), and sets its handle as the default input file. When called with a file handle, it simply sets this file handle as the default input file. When called without parameters, it returns the current default input file. In case of errors this function raises the error, instead of returning an error code.

io.lines ([filename])

Opens the given file name in read mode and returns an iterator function that, each time it is called, returns a new line from the file. Therefore, the construction

```
for line in io.lines(filename) do body end
```

will iterate over all lines of the file. When the iterator function detects the end of file, it returns `nil` (to finish the loop) and automatically closes the file.

The call `io.lines()` (with no file name) is equivalent to `io.input():lines()`; that is, it iterates over the lines of the default input file. In this case it does not close the file when the loop ends.

io.open (filename [, mode])

This function opens a file, in the mode specified in the string mode. It returns a new file handle, or, in case of errors, `nil` plus an error message. The mode string can be any of the following:

- "r": read mode (the default);
- "w": write mode;
- "a": append mode;
- "r+": update mode, all previous data is preserved;
- "w+": update mode, all previous data is erased;
- "a+": append update mode, previous data is preserved, writing is only allowed at the end of file.

The mode string can also have a 'b' at the end, which is needed in some systems to open the file in binary mode. This string is exactly what is used in the standard C function `fopen`.

io.output ([file])

Similar to `io.input`, but operates over the default output file.

6.1.27. Mathematical functions

This library is an interface to the standard C math library. It provides all its functions inside the table `math`.

math.abs (x)

Returns the absolute value of `x`.

math.acos (x)

Returns the arc cosine of x (in radians).

math.asin (x)

Returns the arc sine of x (in radians).

math.atan (x)

Returns the arc tangent of x (in radians).

math.atan2 (y, x)

Returns the arc tangent of y/x (in radians), but uses the signs of both parameters to find the quadrant of the result. (It also handles correctly the case of x being zero.)

math.ceil (x)

Returns the smallest integer larger than or equal to x.

math.cos (x)

Returns the cosine of x (assumed to be in radians).

math.cosh (x)

Returns the hyperbolic cosine of x.

math.deg (x)

Returns the angle x (given in radians) in degrees.

math.exp (x)

Returns the value e^x .

math.floor (x)

Returns the largest integer smaller than or equal to x.

math.fmod (x, y)

Returns the remainder of the division of x by y that rounds the quotient towards zero.

math.frexp (x)

Returns m and e such that $x = m2^e$, e is an integer and the absolute value of m is in the range [0.5, 1) (or zero when x is zero).

math.huge

The value HUGE_VAL, a value larger than or equal to any other numerical value.

math.ldexp (m, e)

Returns $m2^e$, (e should be an integer).

math.log (x)

Returns the natural logarithm of x.

math.log10 (x)

Returns the base-10 logarithm of x.

math.max (x, ...)

Returns the maximum value among its arguments.

math.min (x, ...)

Returns the minimum value among its arguments.

math.modf (x)

Returns two numbers, the integral part of x and the fractional part of x.

math.pi

The value of pi.

math.pow (x, y)

Returns x^y . (You can also use the expression x^y to compute this value.)

math.rad (x)

Returns the angle x (given in degrees) in radians.

math.random ([m [, n]])

This function is an interface to the simple pseudo-random generator function rand provided by ANSI C. (No guarantees can be given for its statistical properties.)

When called without arguments, returns a uniform pseudo-random real number in the range [0,1). When called with an integer number m, math. random returns a uniform pseudo-random integer in the range [1,m]. When called with two integer numbers m and n, math. random returns a uniform pseudo-random integer in the range [m, n].

math.randomseed (x)

Sets x as the "seed" for the pseudo-random generator: equal seeds produce equal sequences of numbers.

math.sin (x)

Returns the sine of x (assumed to be in radians).

math.sinh (x)

Returns the hyperbolic sine of x.

math.sqrt (x)

Returns the square root of x. (You can also use the expression $x^{0.5}$ to compute this value.)

math.tan (x)

Returns the tangent of x (assumed to be in radians).

math.tanh (x)

Returns the hyperbolic tangent of x.

6.1.28. Table manipulations

This library provides generic functions for table manipulation. It provides all its functions inside the table. Most functions in the table library assume that the table represents an array or a list. For these functions, when we talk about the "length" of a table we mean the result of the length operator.

table.concat (table [, sep [, i [, j]]])

Given an array where all elements are strings or numbers, returns *table[i]..sep..table[i+1] ... sep..table[j]*. The default value for *sep* is the empty string, the default for *i* is 1, and the default for *j* is the length of the table. If *i* is greater than *j*, returns the empty string.

table.insert (table, [pos,] value)

Inserts element value at position *pos* in table, shifting up other elements to open space, if necessary. The default value for *pos* is *n+1*, where *n* is the length of the table, so that a call *table.insert(t,x)* inserts *x* at the end of table *t*.

table.maxn (table)

Returns the largest positive numerical index of the given table, or zero if the table has no positive numerical indices. (To do its job this function does a linear traversal of the whole table.)

table.remove (table [, pos])

Removes from table the element at position *pos*, shifting down other elements to close the space, if necessary. Returns the value of the removed element. The default value for *pos* is *n*, where *n* is the length of the table, so that a call *table.remove(t)* removes the last element of table *t*.

table.sort (table [, comp])

Sorts table elements in a given order, in-place, from *table[1]* to *table[n]*, where *n* is the length of the table. If *comp* is given, then it must be a function that receives two table elements, and returns true when the first is less than the second (so that not *comp(a[i+1],a[i])* will be true after the sort). If *comp* is not given, then the standard Lua operator *<* is used instead.

The sort algorithm is not stable; that is, elements considered equal by the given order may have their relative positions changed by the sort.

6.1.29. Operating system facilities

os.date ([format [, time]])

Returns a string or a table containing date and time, formatted according to the given string format. If the time argument is present, this is the time to be formatted (see the *os.time* function for a description of this value). Otherwise, date formats the current time.

If format starts with '!', then the date is formatted in Coordinated Universal Time. After this optional character, if format is the string "**t*", then date returns a table with the following fields: year (four digits), month (1--12), day (1--31), hour (0--23), min (0--59), sec (0--61), wday (weekday, Sunday is 1), yday (day of the year), and isdst (daylight saving flag, a boolean).

If format is not `"*t"`, then date returns the date as a string, formatted according to the same rules as the C function `strftime`.

When called without arguments, date returns a reasonable date and time representation that depends on the host system and on the current locale (that is, `os.date()` is equivalent to `os.date("%c")`).

os.difftime (t2, t1)

Returns the number of seconds from time `t1` to time `t2`. In POSIX, Windows, and some other systems, this value is exactly `t2-t1`.

os.execute ([command])

This function is equivalent to the C function `system`. It passes `command` to be executed by an operating system shell. It returns a status code, which is system-dependent. If `command` is absent, then it returns nonzero if a shell is available and zero otherwise.

os.exit ([code])

Calls the C function `exit`, with an optional code, to terminate the host program. The default value for code is the success code.

os.getenv (varname)

Returns the value of the process environment variable `varname`, or *nil* if the variable is not defined.

os.remove (filename)

Deletes the file or directory with the given name. Directories must be empty to be removed. If this function fails, it returns *nil*, plus a string describing the error.

os.rename (oldname, newname)

Renames file or directory named `oldname` to `newname`. If this function fails, it returns *nil*, plus a string describing the error.

os.time ([table])

Returns the current time when called without arguments, or a time representing the date and time specified by the given table. This table must have fields `year`, `month`, and `day`, and may have fields `hour`, `min`, `sec`, and `isdst` (for a description of these fields, see the `os.date` function).

The returned value is a number, whose meaning depends on your system. In POSIX, Windows, and some other systems, this number counts the number of seconds since some given start time (the "epoch"). In other systems, the meaning is not specified, and the number returned by `time` can be used only as an argument to `date` and `difftime`.

os.tmpname ()

Returns a string with a file name that can be used for a temporary file. The file must be explicitly opened before its use and explicitly removed when no longer needed. On some systems (POSIX), this function also creates a file with that name, to avoid security risks. (Someone else might create the file with wrong permissions in the time between getting the name and creating the file.) You still have to open the file to use it and to remove it (even if you do not use it).

When possible, you may prefer to use *io.tmpfile*, which automatically removes the file when the program ends.

6.1.30. Extended function library

toboolean(value)

Converts the given value to boolean using following rules: *nil*, boolean *false*, 0, empty string, '0' string are treated as *false*, everything else as *true*

string.split(str, sep)

Splits the given string into chunks by the given separator. Returns Lua table.

knxlib.decodeia(indaddressa, indaddressb)

Converts binary-encoded individual address to Lua string. This function accepts either one or two arguments (interpreted as two single bytes).

knxlib.decodega(groupaddressa, groupaddressb)

Converts binary-encoded group address to Lua string. This function accepts either one or two arguments (interpreted as two single bytes).

knxlib.encodega(groupaddress, separate)

Converts Lua string to binary-encoded group address. Returns group address a single Lua number when second argument is *nil* or *false* and two separate bytes otherwise.

ipairs (t)

Returns three values: an iterator function, the table *t*, and 0, so that the construction

```
for i,v in ipairs(t) do body end
```

will iterate over the pairs (1,t[1]), (2,t[2]), ..., up to the first integer key absent from the table.

next (table [, index])

Allows a program to traverse all fields of a table. Its first argument is a table and its second argument is an index in this table. *next* returns the next index of the table and its associated value. When called with *nil* as its second argument, *next* returns an initial index and its associated value. When called with the last index, or with *nil* in an empty table, *next* returns *nil*. If the second argument is absent, then it is interpreted as *nil*. In particular, you can use *next(t)* to check whether a table is empty. The order in which the indices are enumerated is not specified, even for numeric indices. (To traverse a table in numeric order, use a numerical *for* or the *ipairs* function.) The behavior of *next* is undefined if, during the traversal, you assign any value to a non-existent field in the table. You may however modify existing fields. In particular, you may clear existing fields.

pairs (t)

Returns three values: the *next* function, the table *t*, and *nil*, so that the construction

```
for k,v in pairs(t) do body end
```

will iterate over all key–value pairs of table *t*.

tonumber (e [, base])

Tries to convert its argument to a number. If the argument is already a number or a string convertible to a number, then *tonumber* returns this number; otherwise, it returns *nil*.

An optional argument specifies the base to interpret the numeral. The base may be any integer between 2 and 36, inclusive. In bases above 10, the letter 'A' (in either upper or lower case) represents 10, 'B' represents 11, and so forth, with 'Z' representing 35. In base 10 (the default), the number can have a decimal part, as well as an optional exponent part. In other bases, only unsigned integers are accepted.

tostring (e)

Receives an argument of any type and converts it to a string in a reasonable format. For complete control of how numbers are converted, use *string.format*.


If the meta table of *e* has a `"__tostring"` field, then *tostring* calls the corresponding value with *e* as

argument, and uses the result of the call as its result.

type (v)

Returns the type of its only argument, coded as a string. The possible results of this function are "nil" (a string, not the value *nil*), "number", "string", "boolean", "table", "function", "thread", and "userdata".

6.1.31. User libraries

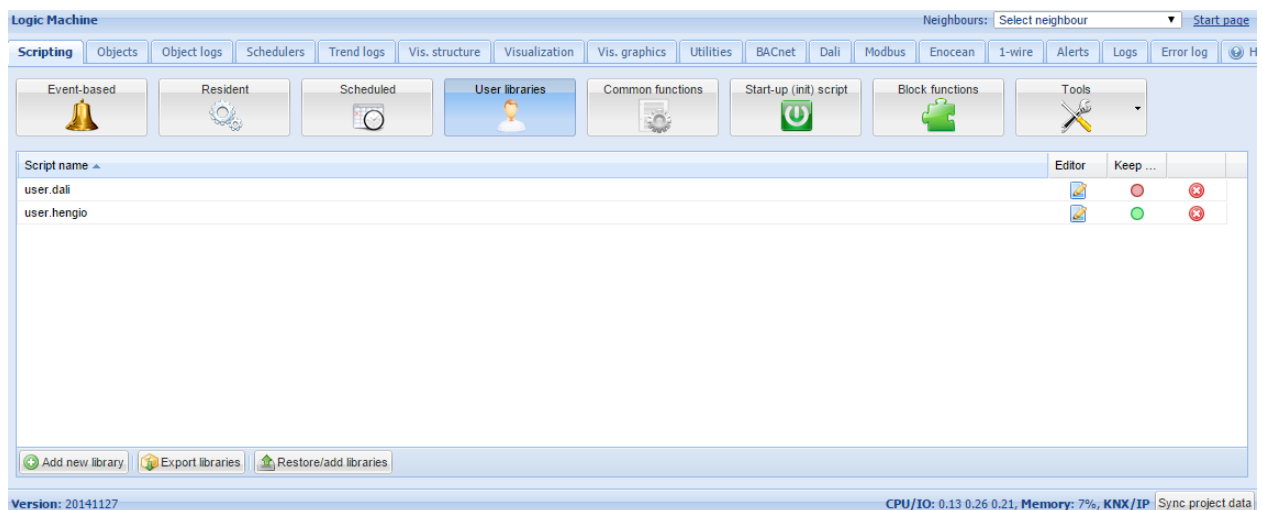


User libraries usually contain user defined functions which are later called from other scripts.

You have to include your library in the script with the following command:

require('user.test') unless you have enabled *Auto load library*.

Secure the code

There is an option *keep source* available for user libraries. Once disabled, the code is compiled in the binary form and can't be seen for further editing. If this option is enabled, the source code is seen in the editor.

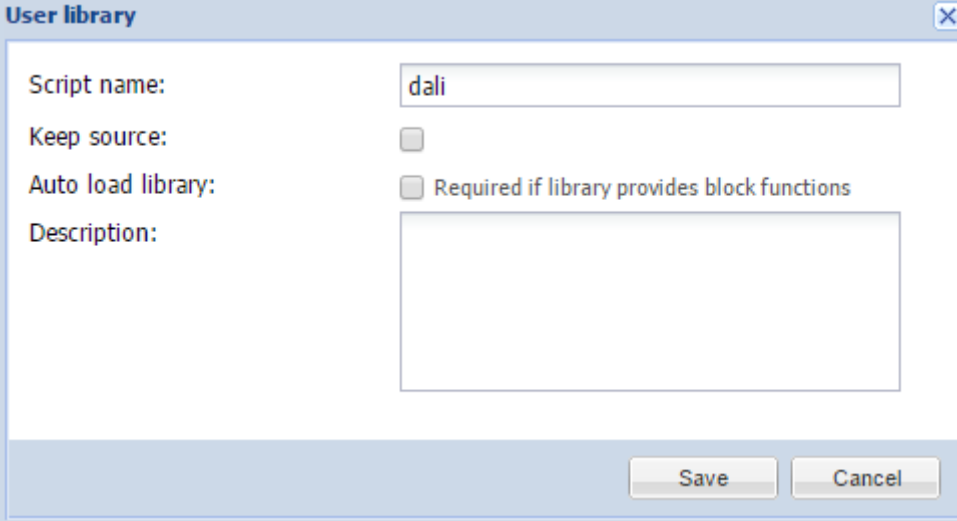

The image shows a 'User library' dialog box with a light blue border and a close button (X) in the top right corner. Inside the dialog, there are four labels on the left: 'Script name:', 'Keep source:', 'Auto load library:', and 'Description:'. To the right of 'Script name:' is a text input field containing the word 'dali'. To the right of 'Keep source:' is an unchecked checkbox. To the right of 'Auto load library:' is another unchecked checkbox, followed by the text 'Required if library provides block functions'. To the right of 'Description:' is a large, empty text area. At the bottom right of the dialog, there are two buttons: 'Save' and 'Cancel'.

Auto load library means that the library will be automatically loaded so you don't have to use **require** when writing scripts. Also this have to be checked if Block programming is used.

6.1.32. Common functions

Common functions contains library of globally used functions. They can be called from any script, any time, without special including like with *user libraries*. Functions like *sunrise/sunset*, *Email* are included by default in *Common functions*.




6.1.33. Start-up (init) script


Init script is used for initialization on specific system or bus values on system start. Init script is run each time after system is restarted for some reason.



6.1.34. Tools

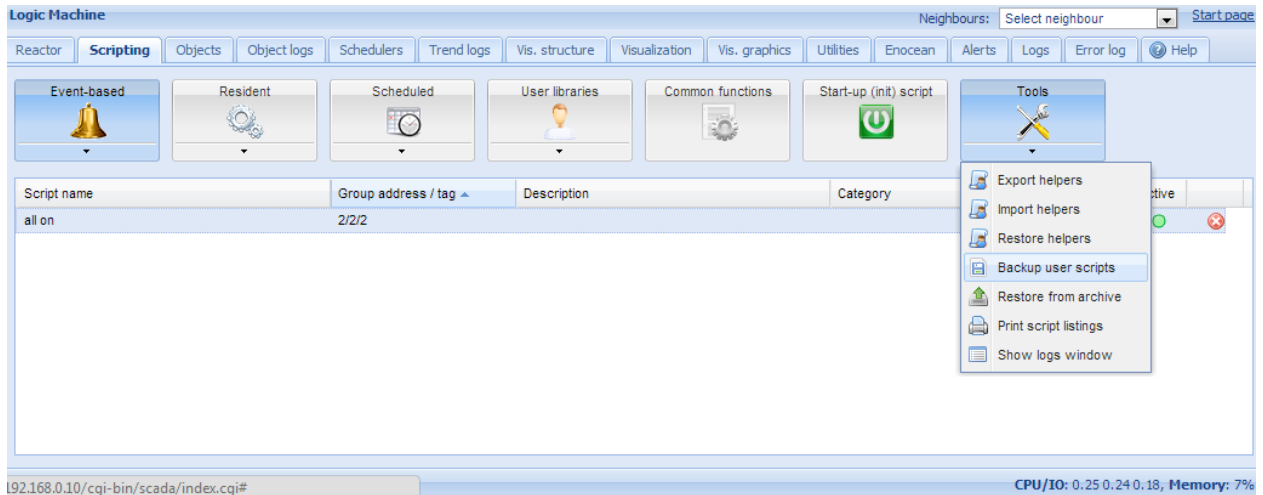

- **Export helpers** – export scripting helpers
- **Import helpers** – import scripting helpers
- **Restore helpers** – restore default scripting helpers
- **Backup user scripts** – backup all scripts in *.gz file
- **Restore from archive** – restore script from archive (*.gz) file with two possibilities:
 - Remove existing scripts and import from backup
 - Append keeping existing (s) scripts

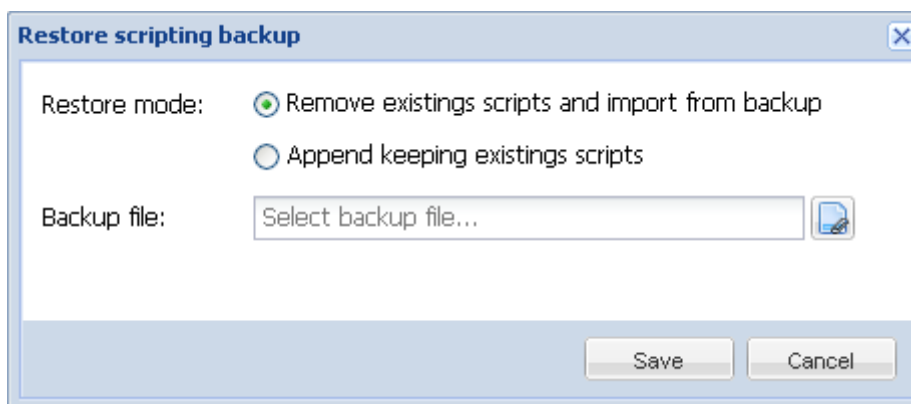

- **Print script listings** – shows all scripts with codes in list format sorted by Categories.

Category: Presence

Presence simulator (id: 1)

Type: Resident

Active: Yes

Script sleep interval: 20

Synchronizes 0/0/2 value with 0/0/1

```
-- if object exists "presence" variable will be a table, nil otherwise
presence = knxobject.get('address', '0/0/1')

-- check that object exists and data has been decoded
if presence and presence.decoded then
  -- result will be either "value = true" or value = "false"
  alert('value = %s', tostring(presence.data))


  -- update 0/0/2 with the same data
  knxobject.write('0/0/2', presence.data, dt.bool)
else
  alert('read error')
end
```

➤ **Show logs window** – show logs in separate window

6.2. Objects

List of KNX network objects appears in *Objects* menu. The object appears in the list by way of:

- sniffing the bus for telegrams from unknown group addresses (if enabled in *Utilities*)
- adding manually
- importing ESF file (in *Utilities*)

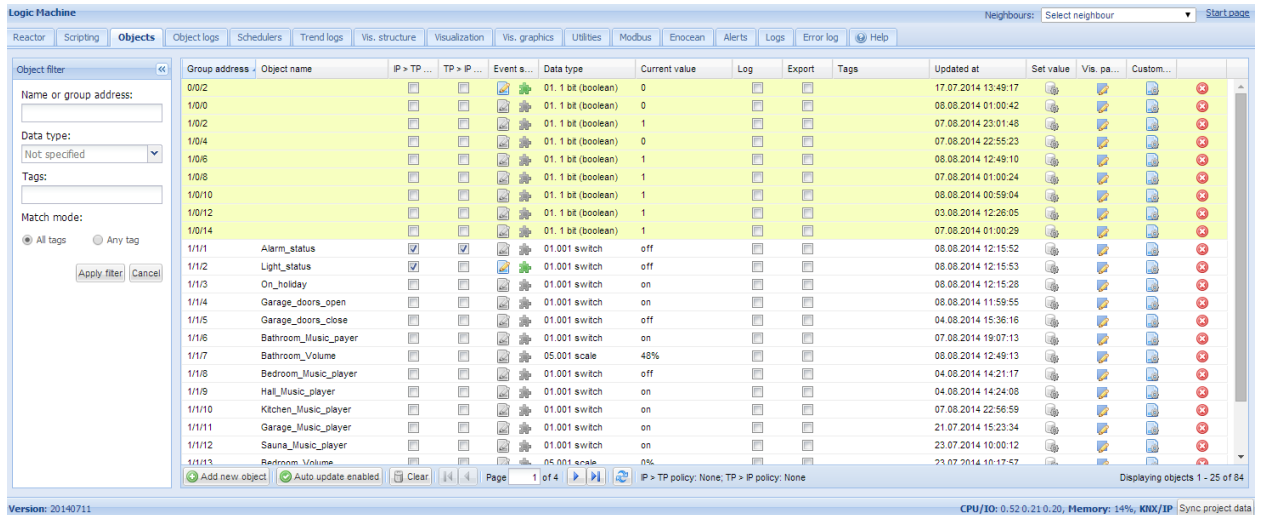


The screenshot shows the 'Objects' menu in the Logic Machine software. The menu includes tabs for Reactor, Scripting, Objects, Object logs, Schedulers, Trend logs, Vis. structure, Visualization, Vis. graphics, Utilities, Modbus, EnOcean, Alerts, Logs, Error log, and Help. The 'Objects' tab is active, displaying a table of objects. The table has columns for Group address, Object name, IP > TP, TP > IP, Event, Data type, Current value, Log, Export, Tags, Updated at, Set value, Vis. pa..., and Custom... The objects listed include Alarm_status, Light_status, On_holiday, Garage_doors_open, Garage_doors_close, Bathroom_Music_player, Bathroom_Volume, Bedroom_Music_player, Hall_Music_player, Kitchen_Music_player, Garage_Music_player, Sauna_Music_player, and Bedroom_Volume. The status bar at the bottom indicates 'Version: 20140711', 'CPU/IO: 0.52 0.21 0.20', 'Memory: 14%', 'KNX/IP', and 'Sync project data'.

| Group address | Object name | IP > TP | TP > IP | Event | Data type | Current value | Log | Export | Tags | Updated at | Set value | Vis. pa... | Custom... |
|---------------|-----------------------|---------|---------|-------|---------------------|---------------|-----|--------|------|---------------------|-----------|------------|-----------|
| 0/0/2 | | | | | 01. 1 bit (boolean) | 0 | | | | 17.07.2014 13:49:17 | | | |
| 1/0/0 | | | | | 01. 1 bit (boolean) | 0 | | | | 08.08.2014 01:00:42 | | | |
| 1/0/2 | | | | | 01. 1 bit (boolean) | 1 | | | | 07.08.2014 23:01:48 | | | |
| 1/0/4 | | | | | 01. 1 bit (boolean) | 0 | | | | 07.08.2014 22:55:23 | | | |
| 1/0/6 | | | | | 01. 1 bit (boolean) | 0 | | | | 08.08.2014 12:49:10 | | | |
| 1/0/8 | | | | | 01. 1 bit (boolean) | 1 | | | | 07.08.2014 01:00:24 | | | |
| 1/0/10 | | | | | 01. 1 bit (boolean) | 1 | | | | 08.08.2014 00:59:04 | | | |
| 1/0/12 | | | | | 01. 1 bit (boolean) | 1 | | | | 03.08.2014 12:26:05 | | | |
| 1/0/14 | | | | | 01. 1 bit (boolean) | 1 | | | | 07.08.2014 01:00:29 | | | |
| 1/1/1 | Alarm_status | | | | 01.001 switch | off | | | | 08.08.2014 12:15:52 | | | |
| 1/1/2 | Light_status | | | | 01.001 switch | off | | | | 08.08.2014 12:15:53 | | | |
| 1/1/3 | On_holiday | | | | 01.001 switch | on | | | | 08.08.2014 12:15:28 | | | |
| 1/1/4 | Garage_doors_open | | | | 01.001 switch | on | | | | 08.08.2014 11:59:55 | | | |
| 1/1/5 | Garage_doors_close | | | | 01.001 switch | off | | | | 04.08.2014 16:36:16 | | | |
| 1/1/6 | Bathroom_Music_player | | | | 01.001 switch | on | | | | 07.08.2014 19:07:13 | | | |
| 1/1/7 | Bathroom_Volume | | | | 05.001 scale | 48% | | | | 08.08.2014 12:49:13 | | | |
| 1/1/8 | Bedroom_Music_player | | | | 01.001 switch | off | | | | 04.08.2014 14:21:17 | | | |
| 1/1/9 | Hall_Music_player | | | | 01.001 switch | on | | | | 04.08.2014 14:24:08 | | | |
| 1/1/10 | Kitchen_Music_player | | | | 01.001 switch | on | | | | 07.08.2014 22:56:59 | | | |
| 1/1/11 | Garage_Music_player | | | | 01.001 switch | on | | | | 21.07.2014 15:23:34 | | | |
| 1/1/12 | Sauna_Music_player | | | | 01.001 switch | on | | | | 23.07.2014 10:00:12 | | | |
| 1/1/13 | Bedroom_Volume | | | | 05.001 scale | 0% | | | | 23.07.2014 10:17:57 | | | |

6.2.1. Object parameters

To change the settings for existing or new objects, press on the specific list entry.

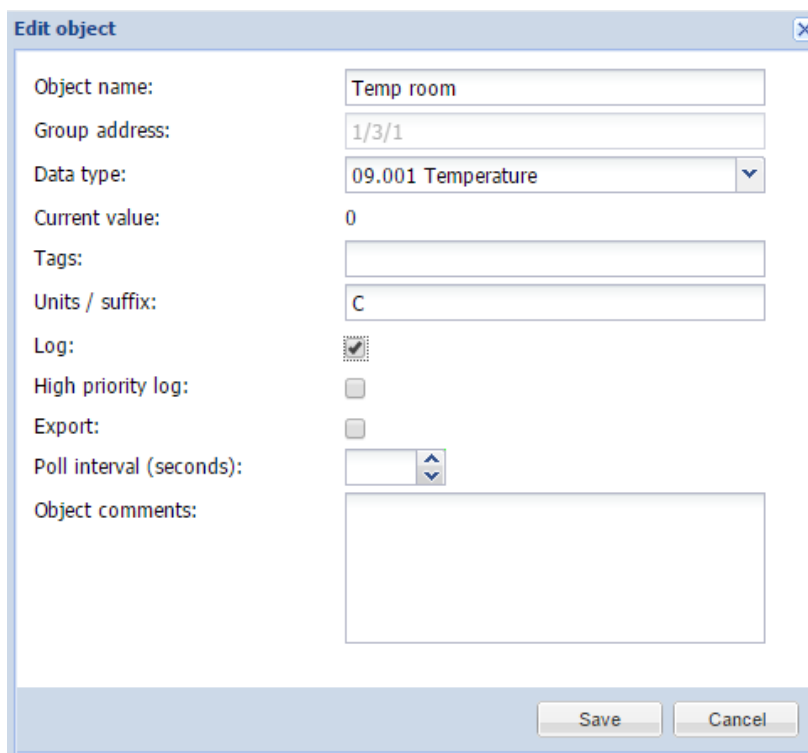

The screenshot shows the 'Edit object' dialog box. It contains the following fields and options:


- Object name: Temp room
- Group address: 1/3/1
- Data type: 09.001 Temperature
- Current value: 0
- Tags: (empty field)
- Units / suffix: C
- Log: ☒
- High priority log: ☐
- Export: ☐
- Poll interval (seconds): (empty field with up/down arrows)
- Object comments: (empty text area)
- Buttons: Save, Cancel


- **Object name** – Name for the object
- **Group address** – Group address of this object
- **Data type** – KNX data type for the object. This has to be set once the LM sniffs the new object for proper work.
- **Units / suffix** – units for the object which will appear on the visualization along with the value
- **Log** – enable logging for this object. Logs will appear in *Objects logs* menu.
- **High priority log** – mark the object for high priority logging; when the log database is cleared, first standard logs are cleared, only then high priority
- **Export** – Make object visible by remote XML requests and in BACnet network (if KNX – BACnet gateway functionality is used)
- **Poll interval (seconds)** – perform automatic object read after some time interval
- **Tags** – assign this object to some tag which can be later used in writing scripts, for example, *All_lights_first_floor*.
- **Current value** – Current value of the object
- **Object comments** – Comment for the object

There is a possibility to sort the objects by one of the following – Name, Group address, Data type, Current value, Tags, Comments

6.2.2. RGB group object

A special *RGB color* data type is added in *Data type* list.

In *Visualization Parameters*  you can do the following settings for the object:

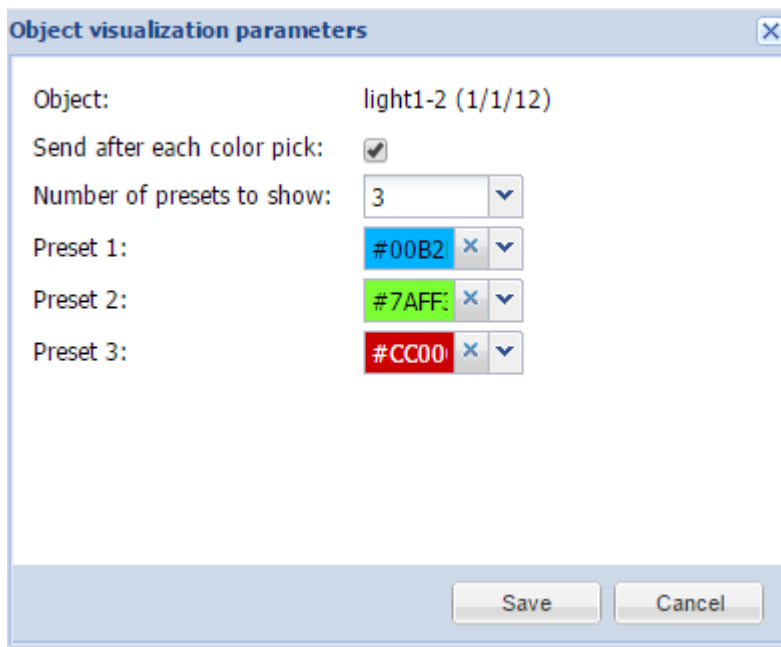

Send after each color pick – specifies either to send the telegram automatically into KNX bus once the color is selected in color picker.


Number of presets to show – count of predefined presets in color picker in Visualization

Preset 1..6 – preset color


When you add the object with RGB color data type in the Visualization, the color picker with predefined colors appears.



6.2.3. Object visualization parameters


By pressing on the  button of the corresponding object you can set specific visualization parameters for this type of object.

1 bit

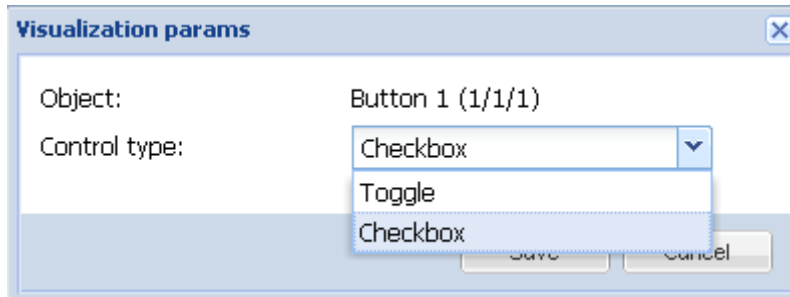


- **Control type** – type of the visual control element which will appear in Touch Visualization

- Toggle
- Checkbox




4 bit (3 bit controlled)

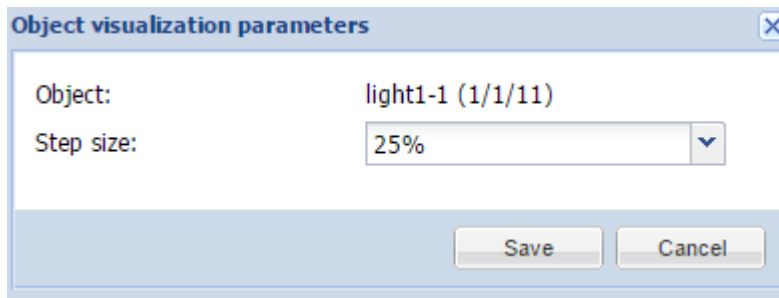

- **Step size** – step size for object change, example for blinds control

1byte and 4byte float

- Control type – type of the visual control element
 - Slider

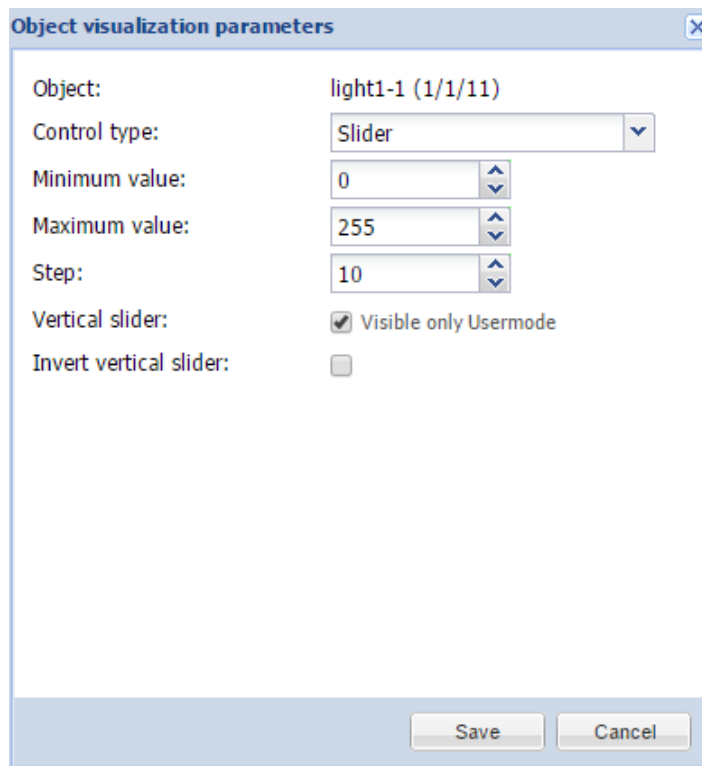

- *Minimum value* – minimum value on the slider
- *Maximum value* – maximum value on the slider
- *Step* – step for one slider movement
- *Vertical slider* – special option for Usermode visualization

- *Invert vertical slider* – invert vertical slider so the maximum is on top
- Direct input / Step +/-

Object visualization parameters

Object: light1-1 (1/1/11)

Control type: Direct input / Step +/-


Minimum value: 0

Maximum value: 255

Step: 10

Save Cancel

- *Minimum value* – minimum value on the control bar
- *Maximum value* – maximum value on the control bar
- *Step* – step for one position change



- Circular slider
 - *Minimum value* – minimum value on the control bar
 - *Maximum value* – maximum value on the control bar
 - *Step* – step for one position change
 - *Slider color* – color of slider
 - *Background color* – background color of the slider
 - *Round line cap* – make round ends of slider
 - *Hide title* – hide title
 - *Hide min/max/step buttons* – hide min, max and step buttons
 - *Line thickness* – specify the thickness of slider line
 - *Size* – Size in px of the control

Object visualization parameters

Object: light1-1 (1/1/11)

Control type: Circular slider

Minimum value: 0

Maximum value: 255

Step: 10

Slider color: #00991E

Background color: #3351FF

Round line cap: ☒


Hide title: ☐

Hide min/max/step buttons: ☐

Line thickness: 15 %

Size: 200 In Show control mode

Save Cancel

- Custom value select – select from list of custom values. Custom values should be defined  in
 - *Show icons in Usermode* – show icons instead of values for the object in visualization. Icons should be defined in visualization constructor as *Additional Icons*

Object visualization parameters


Object: light1-1 (1/1/11)


Control type: Custom value select

Show icons in Usermode: ☐

Save Cancel

6.2.4. Change the object state


In the object list, by pressing on the  button, you can change the state of the object. The appearance of the *New value* depends on what visualization parameters are set for specific object.

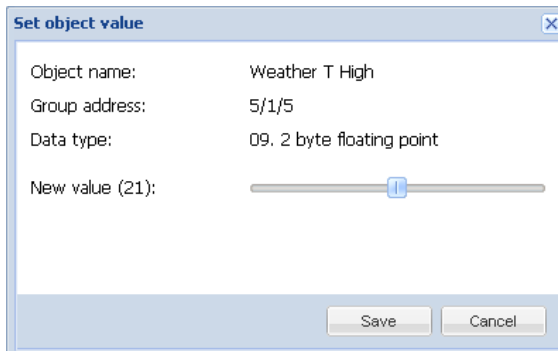

Set object value

Object name: Weather T High
Group address: 5/1/5
Data type: 09. 2 byte floating point
New value (21):

Save Cancel

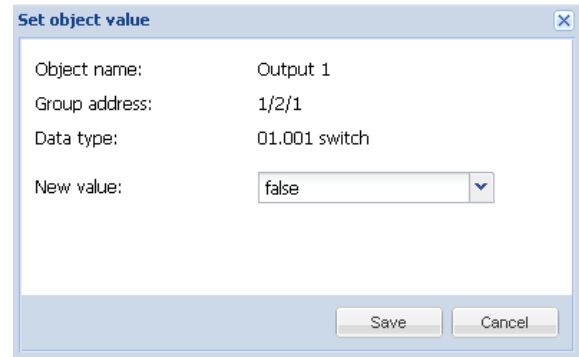


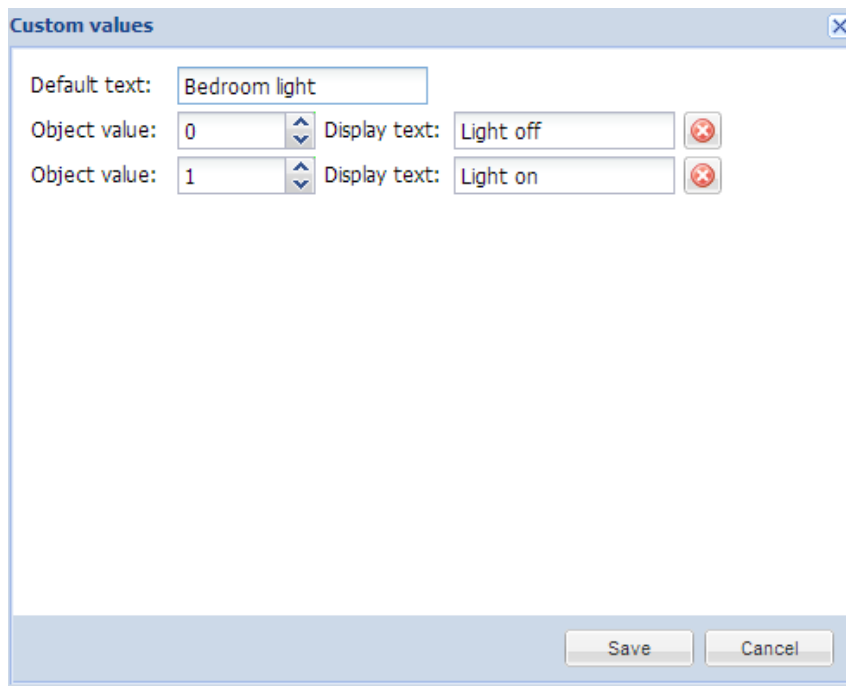
Set object value

Object name: Output 1
Group address: 1/2/1
Data type: 01.001 switch
New value:

Save Cancel

6.2.5. Custom values

If special value naming is necessary, use this icon  to set it up (only for Boolean and Integer data types)



Custom values

Default text:

Object value: Display text:

Object value: Display text:

Save Cancel


6.2.6. Object control bar




+ Add new object Auto update enabled Clear Mass edit Page 1 of 1

➤ **Add new object** – Manually add new object to the list

- **Auto update enabled** – Specifies either the object list is updated automatically or not
- **Clear** – Clear the list of group addresses
- **Next/Previous page** – move to next or previous page
- **Refresh** – refresh the object list
- **Mass edit** – mass edit objects by a specific criteria

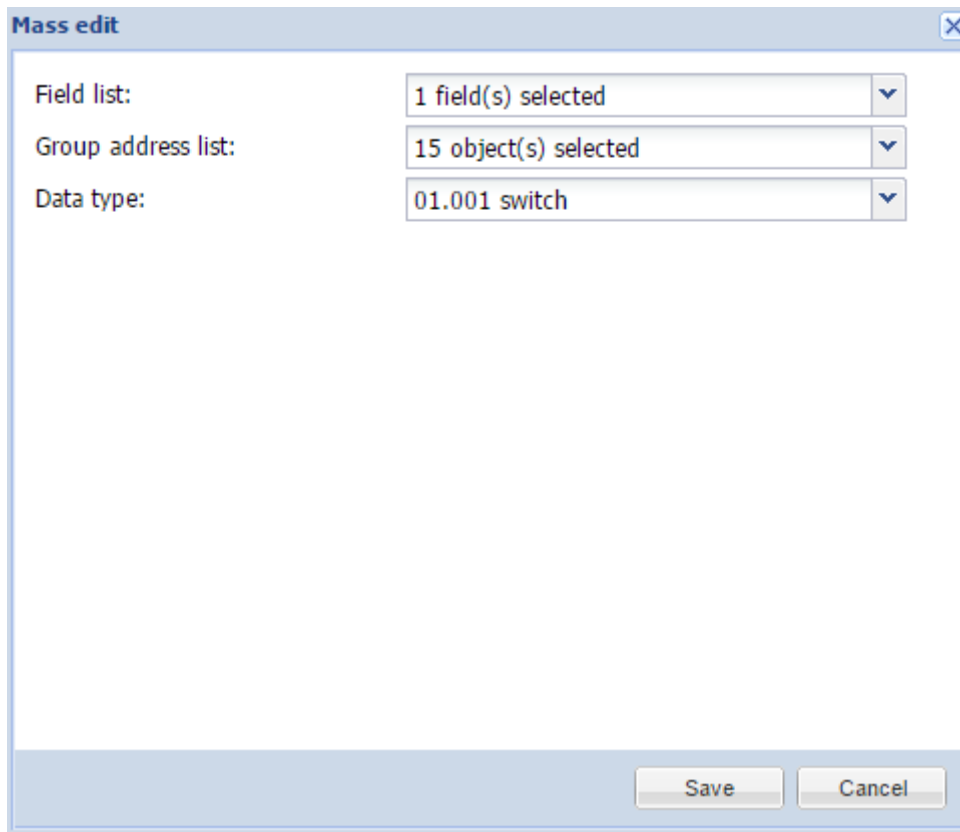

There is also the following bar on the bottom of the configuration screen:



- **CPU/IO** – Load average. The load average represents the average system load over a period of time. It conventionally appears in the form of three numbers which represent the system load during the last one-, five-, and fifteen-minute periods. The lower number the better.

Note! Inspect your running tasks if the load exceeds the level 0.70!

More on UNIX style load calculation can be found here:


[http://en.wikipedia.org/wiki/Load_\(computing\)#Unix-style_load_calculation](http://en.wikipedia.org/wiki/Load_(computing)#Unix-style_load_calculation)

- **Memory** – memory usage in %
- **KNX/IP / KNX/TP** – type of connection to KNX bus. If KNX/TP is set and it is not available, there will be error notification

- **Sync project data** – save all project data to internal flash by pressing this button. Otherwise the data is saved once in 30 minutes from RAM to Flash, or when Reboot or Shutdown commands are sent

6.2.7. Filter objects

On the left side of the object list there is filtering possible. To perform the filtering type the name, group address, tag or specify the data type of the object and press on *Filter* button.

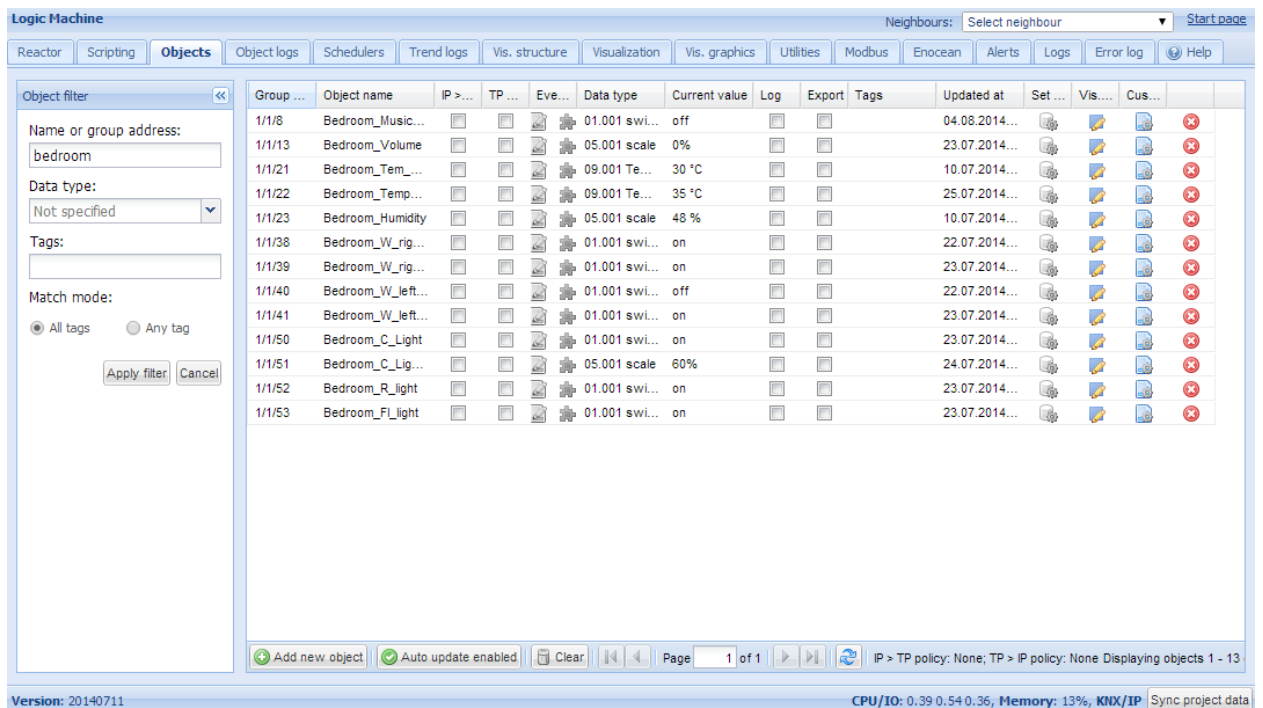

Match mode:

All tags – represents AND function when all tags should match

Any tag – represents OR function when any one of listed should match

6.3. Object logs

Object historical telegrams are available in *Object logs*. Once logging is enabled for object, all it's further history will be logged.

Logic Machine

Neighbours: Select neighbour Start page

Reactor | Scripting | Objects | **Object logs** | Schedulers | Trend logs | Vis. structure | Visualization | Vis. graphics | Utilities | Modbus | EnOcean | Alerts | Logs | Error log | Help

Object log filter

Start date: 07.08.2014 00:00

End date: 14.08.2014 23:30

Name or group address: 1/1/1

Tags:

Value:

Source address:

Apply filter Cancel

| Log time | Object address | Type | Source address | Object name | Decoded value | Data type | Object data (number) |
|---------------------|----------------|-------|----------------|--------------|---------------|---------------|----------------------|
| 14.08.2014 10:34:44 | 1/1/1 | write | 1.1.11 | Alarm_status | on | 01.001 switch | 01 |
| 14.08.2014 10:34:43 | 1/1/1 | write | 1.1.11 | Alarm_status | off | 01.001 switch | 00 |
| 14.08.2014 10:34:43 | 1/1/1 | write | 1.1.11 | Alarm_status | on | 01.001 switch | 01 |
| 14.08.2014 10:34:42 | 1/1/1 | write | 1.1.11 | Alarm_status | off | 01.001 switch | 00 |
| 14.08.2014 10:34:42 | 1/1/1 | write | 1.1.11 | Alarm_status | on | 01.001 switch | 01 |
| 14.08.2014 10:34:41 | 1/1/1 | write | 1.1.11 | Alarm_status | off | 01.001 switch | 00 |

Clear Page 1 of 1

Displaying logs 1 - 6 of 6


Version: 20140711 CPU/IO: 0.12 0.12 0.07, Memory: 13%, KIX/IP Sync project data

Filtering is available when there is a need to find specific period information

- **Start date** – start date and time for log filtering
- **End date** – start date and time for log filtering
- **Name or group address** – specific name or group address of object
- **Tags** – tag names
- **Value** – specific object value
- **Source address** – specific source address

You can clear all logs by pressing on *Clear* button.

Size of log is defined in *Utilities* → *General Configuration*

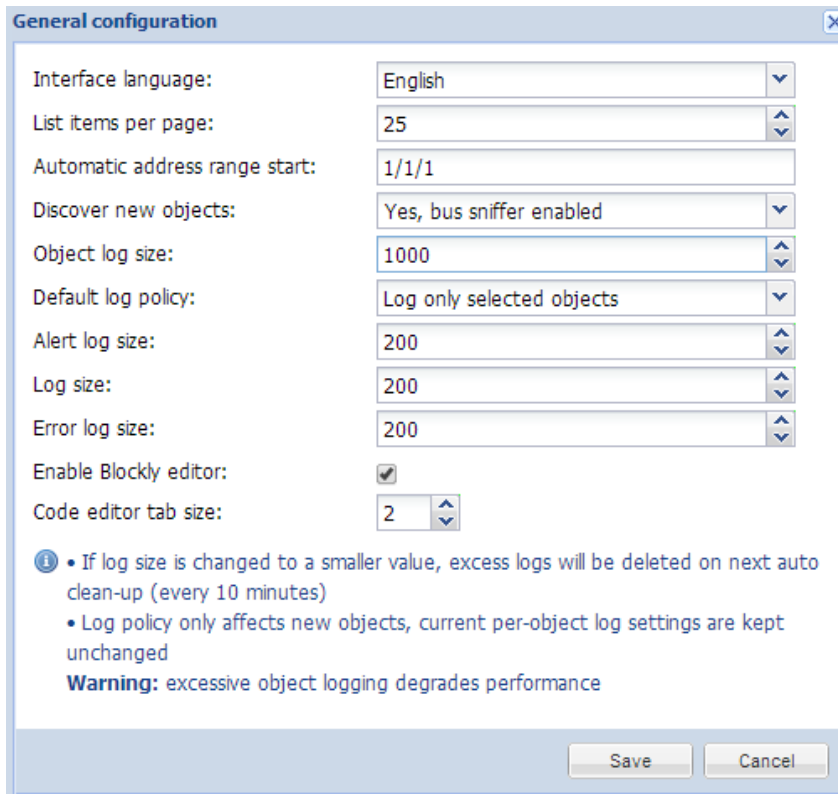

The screenshot shows a 'General configuration' dialog box with the following settings:

- Interface language: English
- List items per page: 25
- Automatic address range start: 1/1/1
- Discover new objects: Yes, bus sniffer enabled
- Object log size: 1000
- Default log policy: Log only selected objects
- Alert log size: 200
- Log size: 200
- Error log size: 200
- Enable Blockly editor: ☒
- Code editor tab size: 2

Below the settings, there is an information icon and the following text:

- If log size is changed to a smaller value, excess logs will be deleted on next auto clean-up (every 10 minutes)
- Log policy only affects new objects, current per-object log settings are kept unchanged

Warning: excessive object logging degrades performance


At the bottom right, there are 'Save' and 'Cancel' buttons.

6.3.1. Export logs

Example

Once an hour, make CSV file with all objects logs and send to external FTP server with IP 192.168.1.11, login 'ftplugin', password 'ftppassword'.

- In *Scripting* -> *Scheduled* add the script which will run once an hour

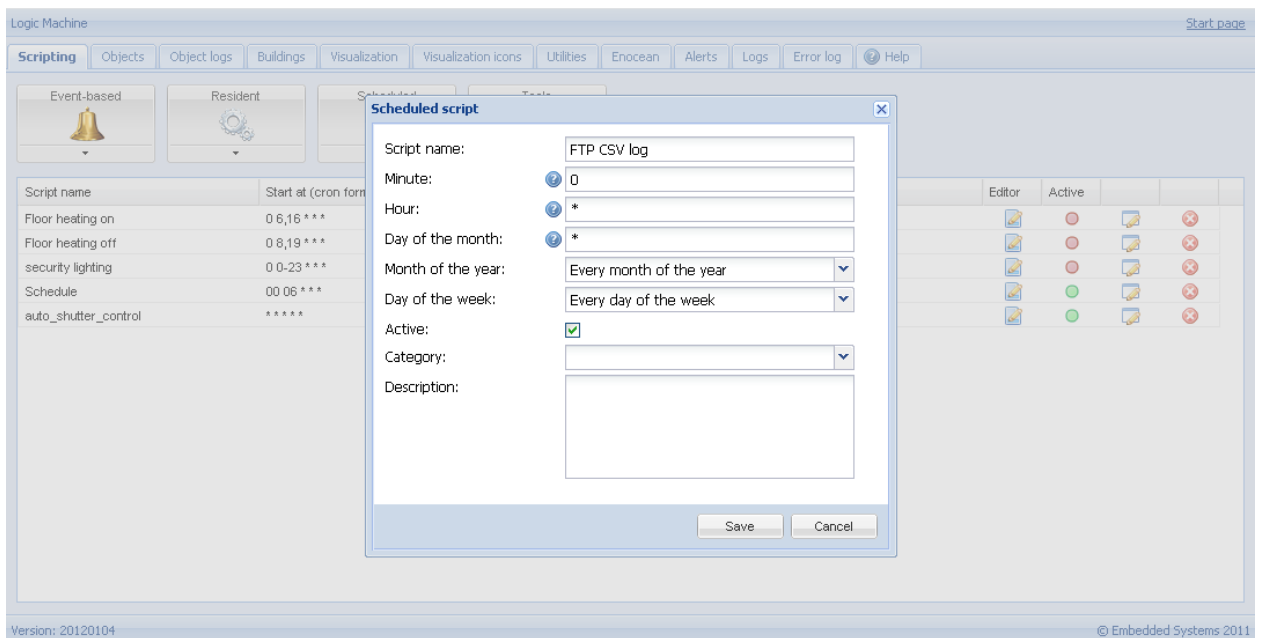

- Add the following code in Script editor for this particular script.

```

1. require('socket.ftp')
2.
3. -- ftp file
4. ftpfile=string.format('ftp://ftplogin:ftppassword@192.168.1.11/%s.csv', os.date('%Y-%m-%d_%H-%M'))
5. -- get past hour data (3600 seconds)
6. logtime=os.time() - 60*60
7.
8. -- list of objects by id
9. objects ={}
10.
11. -- objects with logging enabled
12. query = 'SELECT address, datatype, name FROM objects WHERE disablelog=0'
13. for _, object in ipairs(db:getall(query)) do
14.   objects[tounumber(object.address)]= {
15.     datatype=tounumber(object.datatype),
16.     name =tostring(object.name or ''),
17.   }
18. end
19.
20. -- csv buffer
21. buffer ={"date","address","name","value"}
22.
23. -- get object logs
24. query='SELECT src, address, datahex, logtime, eventtype FROM objectlog WHERE logtime>=
? ORDER BY id DESC'
25. for _, row in ipairs(db:getall(query, logtime))do
26.   object = objects[tounumber(row.address)]

```


```

27.
28. -- found matching object and event type is group write
29. if object and row.eventtype=='write' then
30. datatype=object.datatype
31.
32. -- check that object datatype is set
33. if datatype then
34. -- decode data
35.     data =knxdatatype.decode(row.datahex, datatype)
36.
37. -- remove null chars from char/string datatype
38. if datatype==dt.char or datatype==dt.string then
39.     data =data:gsub('%z+', '')
40. -- date to DD.MM.YYYY
41. elseifdatatype==dt.date then
42.     data =string.format('%02d.%02d.%02d', data.day, data.month, data.year)
43. -- time to HH:MM:SS
44. elseif datatype==dt.time then
45.     data =string.format('%02d:%02d:%02d', data.hour, data.minute, data.second)
46. end
47. else
48.     data =''
49. end
50.
51. -- format csv row
52. logdate=os.date('%Y.%m.%d %H:%M:%S', row.logtime)
53. csv=string.format('%q,%q,%q,%q', logdate, knxlib.decodega(row.address), object.name,
    tostring(data))
54.
55. -- add to buffer
56. table.insert(buffer, csv)
57. end
58. end
59.
60. -- upload to ftp only when there's data in buffer
61. if #buffer > 1 then
62.     result, err =socket.ftp.put(ftpfile, table.concat(buffer, '\r\n'))
63. end
64.
65. -- error while uploading
66. if err then
67.     alert('FTP upload failed: %s', err)
68. end

```



6.4. Schedulers

Schedulers contain administration of user mode schedulers. Schedulers allow for end user to control KNX group address values based on the date or day of the week.

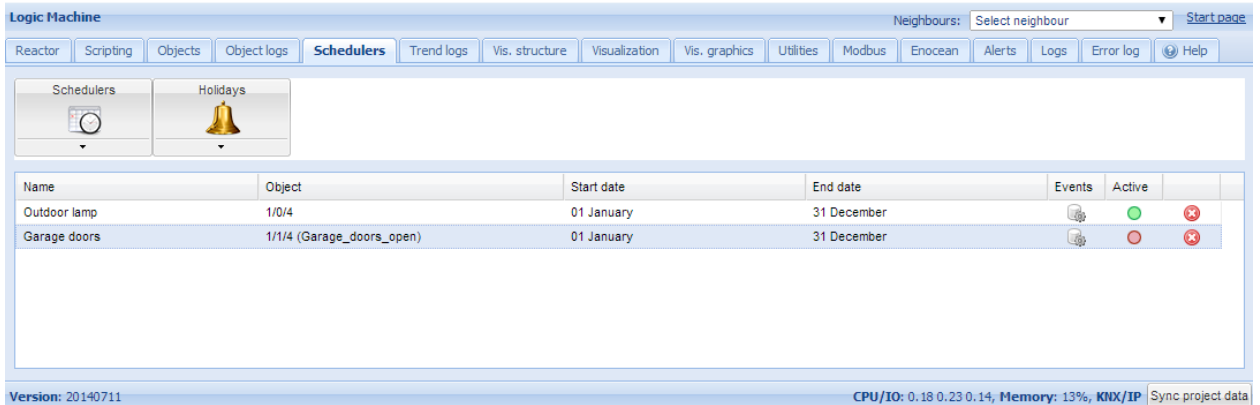

6.4.1. Add new scheduler

By clicking on the Schedulers → Add new scheduler you will see such parameter window:

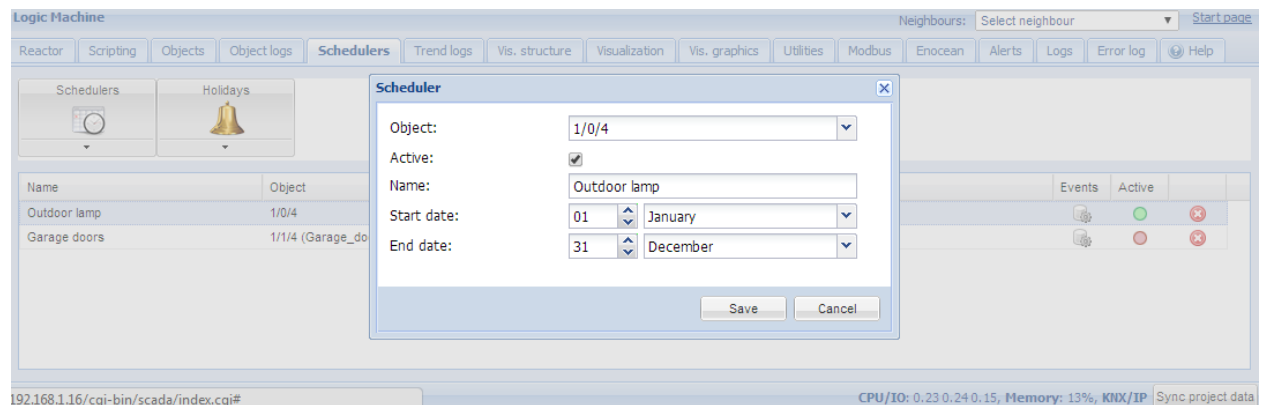

- **Object** – the object group address which will be controlled by scheduler
- **Active** – define this scheduler as active or not
- **Name** – name of the scheduler
- **Start date** – start date of the scheduler
- **End date** – end date of the scheduler

6.4.2. Scheduler events

Event can be added both in administrator interface as well as by end user in the special *User mode schedulers* interface.

| Events for scheduler Thermostat | | | | |
|---------------------------------|------------------|-------|-------------------------------------|--------------------------|
| Start time | Days of the week | Value | Active | |
| 12:00 | We, Th | 24 | <input checked="" type="checkbox"/> | <input type="checkbox"/> |
| 22:00 | Mo, Tu, We, Th | 20 | <input checked="" type="checkbox"/> | <input type="checkbox"/> |

| | |
|---|--|
| Active: | <input checked="" type="checkbox"/> |
| Value: | <input type="text" value="22"/> |
| Start time: | <input type="text" value="00"/> <input type="text" value="00"/> |
| Days of the week: | <input type="checkbox"/> Mo <input type="checkbox"/> Tu <input type="checkbox"/> We <input type="checkbox"/> Th <input type="checkbox"/> Fr <input type="checkbox"/> Sa <input type="checkbox"/> Su <input checked="" type="checkbox"/> Hol |
| <input type="button" value="Save"/> <input type="button" value="Cancel"/> | |

Active – define the event active or not

Value – value to send to the group address when the event will be triggered

Start time – start time for the event

Days of the week – days of the week when the event will be triggered.

Hol – holidays which are defined in *Holidays* tab

6.4.3. Scheduler holidays

Once the event will be marked to run in *Hol*, Holiday entries will be activated.

| | |
|---|---|
| Name: | <input type="text" value="New Year"/> |
| Date: | <input type="text" value="31"/> <input type="text" value="December"/> <input type="text" value="2013"/> |
| <input type="button" value="Save"/> <input type="button" value="Cancel"/> | |

Name – the name of the holiday entry

Date – date of the holiday

6.5. Trend logs

Trends logs are administration of user mode trends, used to see historical object graphical values, compare with other period values.

| Name | Object | Log type | 1 minute data | Hourly data | Daily data | Monthly data | Log size | Created |
|----------|--------------|----------------|---------------|-------------|------------|--------------|----------|------------------|
| Test1233 | 5/1/8 | Absolute value | 1 hour | 1 year | 1 year | 1 year | 73 KB | 2012.11.15 02:00 |
| Setpoint | 1/1/6 (temp) | Absolute value | 1 hour | 30 days | 30 days | 1 year | 2 KB | 2013.02.12 15:25 |

Version: 20130208 © Embedded Systems 2013

6.5.1. Add new trend log

Object: 1/1/6 temp

Name: Setpoint

Log type: Absolute value

1 minute data: 1 hour

Hourly data: 30 days

Daily data: 30 days

Monthly data: 1 year

Save Cancel

Object – choose from list of object the one to make trends for

Name – name of the trend

Log type [Counter, Absolute value] – type of the log. *Counter* type is used to count the date, *Absolute value* – saves the actual readings

1 minute data – average value of 1 minute for specific time interval data will be shown on the trend. E.g. if 1 hour – trend step will be 1 hour with average 60 readings data

Hourly data – average value of hourly data for specific time interval

Daily data –average value of daily data for specific time interval

Monthly data – average value of monthly data for specific time interval

Note! One trend data point reading takes 8bytes of flash memory. E.g. reading some value once in every 10 minutes, will consume ~0.4MB of flash each year.

6.5.2. Trend logs functions

To process logged information in trends, you can use built in trend log functions from scripting.

Include library before calling trend log functions:

```
require('genohm-scada.trends')
```

Fetch one or many values for the given period:

```
trends.fetch(name, mode, period)
```

```
trends.fetchone(name, mode, period)
```

Parameters:

- **name** – trend log name, required
- **mode** – either 'day', 'month' or 'year', required
- **period** – optional, will use current date if not specified
If specified, must be a Lua table with the following fields:
 - day* – required for day mode only
 - month* – required for day and month modes
 - year* – required for all modes

Return values:

fetch returns Lua table with values for the given period or nil on error. Number of values in the table depends on period and log retention settings. For example, in month mode this function can return values for each day or only a single value for the whole month

fetchone returns single value for the given period or nil on error

Example:

```
require('genohm-scada.trends')

-- fetch current value
today = trends.fetchone('Gas', 'day')

-- get current date as table and set day to yesterday
date = os.date('*t')
date.day = date.day - 1
```

```
-- fetch previous value
yesterday = trends.fetchone('Gas', 'day', date)
```

trends.NaN value is used for points which contain invalid values or cannot be found. The default value is 0, but it can also be set to 0 / 0 (NaN - not a number).

Example:

```
require('genohm-scada.trends')


-- use not a number for invalid value
trends.NaN = 0 / 0

-- get total hot water usage for year 2011
value = trends.fetchone('Hot Water', 'year', { year = 2011 })

-- NaN ~= NaN, means value was not found
if value ~= value then
    return
end
```

6.6. Visualization structure

In *Vis.structure* menu the structure of the visualization is defined and visualization backgrounds are uploaded.

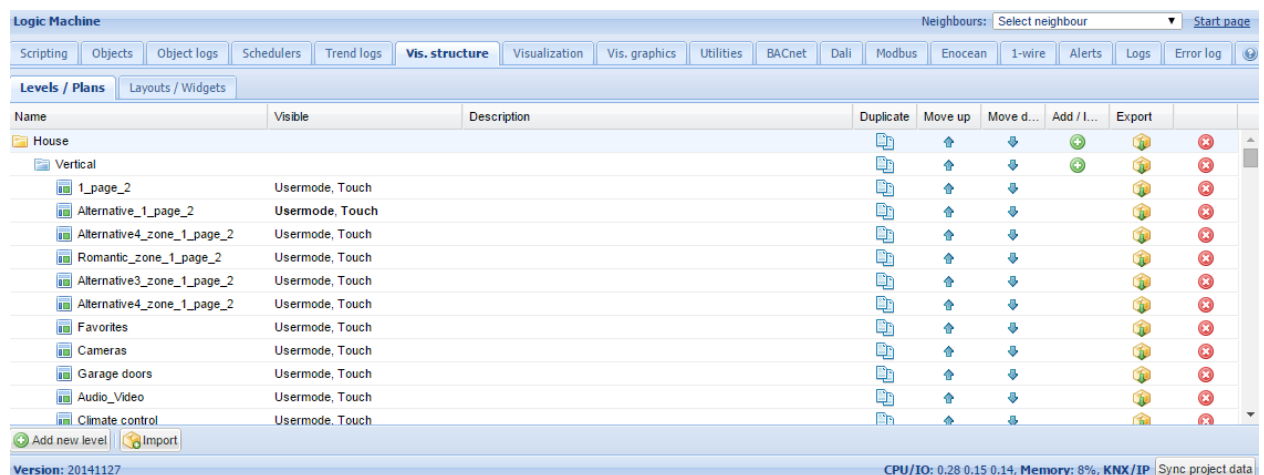

6.6.1. Levels / Plans

By default there is *Main* level added. To add a new level/building, press “Add new level” button. Please note that you can limit access to this specific level by adding PIN code.

Level

Level name: Villa

Pin code: 203

Description:

Save Cancel



You can also add a new level by importing it from the file (which is exported on other LM for example). Press *Import* button for this purpose. Object linkage can be either cleared or imported as-is.

Import

Linked objects: ☒ Clear ☐ Keep

File: Choose File No file chosen

Save Cancel

Once a new level is added, you can add second level or upload floor pictures related to this particular building. To add a new entry, click on the green icon , to delete a specific entry press on the red icon .

Select an action

Add second level

Add plan

Import

When adding new plan, the following parameters should be defined:

Plan

Parent: Vertical

Name: 1_page_2

Plan size: 768 x 1320

Layout: -

Usermode visualization: Show

Touch visualization: Show

Pin code:

Primary background image: BG_page_768x1692px.jpg

Secondary background image: JAX_test.svg

Background color: #E5E5E5

Touch background color:

Repeat background image: ☐

Fixed primary background: ☐

Admin only access: ☐

Save Cancel


- **Parent** – name of parent level
- **Name** – name for the plan
- **Plan size** – plan size in pixels. There are predefined resolutions available when clicking on the icon on the right side of this parameter:





| |
|---|
| iPad landscape, fullscreen (XGA) 1024 x 748 |
| iPad landscape, browser (XGA) 1024 x 672 |
| iPad portrait, fullscreen (XGA) 768 x 1004 |
| iPad portrait, browser (XGA) 768 x 928 |
| Tablet landscape (WSVGA) 1024 x 600 |
| Tablet portrait (WSVGA) 600 x 1024 |
| Laptop / Tablet landscape (WXGA) 1280 x 800 |
| Laptop / Tablet portrait (WXGA) 800 x 1280 |
| Laptop / Tablet landscape (HD) 1360 x 768 |
| Laptop / Tablet portrait (HD) 768 x 1360 |
| Big screen (Full HD) 1920 x 1080 |

- **Layout** – layout for this specific plan. All object from Layout will be duplicated on this particular plan including background color and plan image if they are not defined separately for this specific plan
- **Usermode visualization [Show, Show and make default, Hide]** – visibility for this particular plan in Usermode visualization

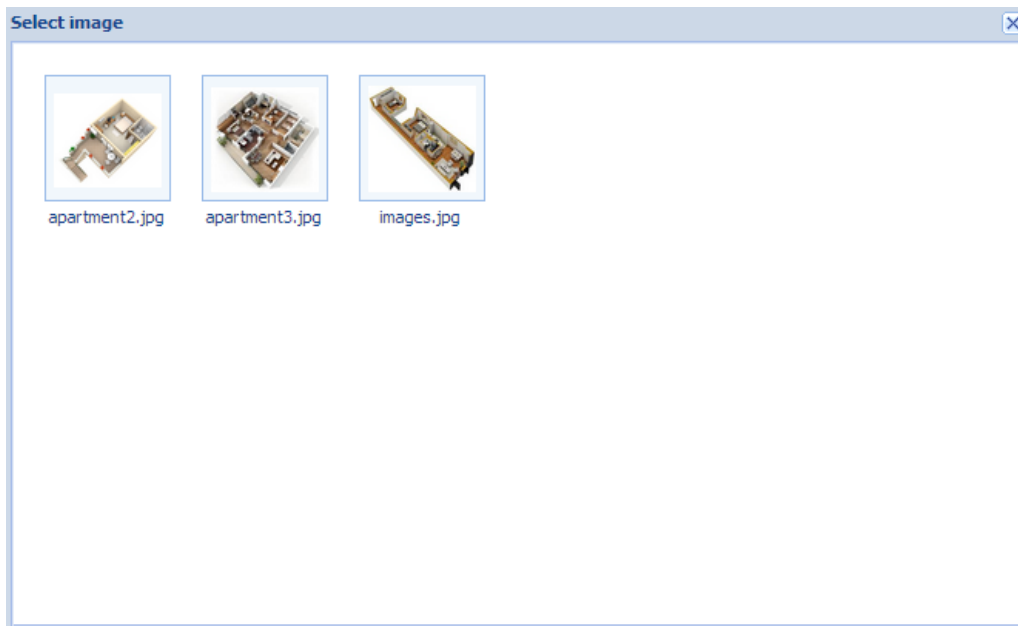- **Touch visualization [Show, Show and make default, Hide]**– visibility for this particular plan in Touch visualization
- **PIN code** – specify PIN code to access the plan
- **Primary background image** – choose primary background image from the list added in *Vis.graphics* → *Images/Backgrounds*
- **Secondary background image** – choose secondary background image from the list added in *Vis.graphics* → *Images/Backgrounds*
- **Background color** – choose background color of the plan
- **Touch background color** – define a color for touch visualization
- **Repeat background image** – either to show the image once or repeat it and fill the whole plan
- **Fixed primary background** – specify if first background image should be fixed. By enabling this, you can enable Parallax effect for your visualization
- **Admin only access** – enable admin only access for this floor

When clicking on Background image, the following window appears with background images which has to be added in *Vis.graphics* → *Images/Backgrounds* in advance:



You can duplicate the plan with all its objects and settings by pressing on  icon. Levels can be sorted by pressing  and  icons. You can export the plan structure by clicking in this icon .

6.6.2. Layouts / Widgets

Layouts are used as templates for further use when adding *Levels* in *Levels/Plans* tab.

Layouts will not be visible from the Usermode/Touch visualizations. When you add any background, objects to layouts level in *Visualization*, they will automatically appear on all linked Levels.

The screenshot shows a 'Layout' dialog box with the following fields and controls:

- Parent:** A text field with the value 'Layout'.
- Name:** An empty text field.
- Plan size:** Two spinners showing '1024' and '768', followed by a small icon of a document with a grid.
- Primary background image:** A text field with a dropdown arrow and a small 'x' icon.
- Secondary background image:** A text field with a dropdown arrow and a small 'x' icon.
- Background color:** A color picker field with a dropdown arrow and a small 'x' icon.
- Touch background color:** A color picker field with a dropdown arrow and a small 'x' icon.
- Repeat background image:** A checkbox that is currently unchecked.
- Fixed primary background:** A checkbox that is currently unchecked.
- Buttons:** 'Save' and 'Cancel' buttons at the bottom right.

- **Parent** – name of parent layout
- **Name** – name for the layout
- **Plan size** – plan size in pixels. There are predefined resolutions available when clicking on the icon on the right side of this parameter
- **Primary background image** – choose primary background image from the list added in *Vis.graphics* → *Images/Backgrounds*
- **Secondary background image** – choose secondary background image from the list added in *Vis.graphics* → *Images/Backgrounds*
- **Background color** – choose background color of the plan
- **Touch background color** – define a color for touch visualization
- **Repeat background image** – either to show the image once or repeat it and fill the whole plan
- **Fixed primary background** – specify if first background image should be fixed. By enabling this, you can enable Parallax effect for your visualization

Widgets are used to combine several objects under one object in visualization.

Background image for the widget should be added in *Vis.graphics* → *Images/Backgrounds* in advance.

Widget

Parent: _____

Name:

Plan size:

Widget position:

Primary background image:

Background color:


Touch background color:

Repeat background image: ☐


Fixed primary background: ☐

- **Parent** – name of parent widget
- **Name** – name for the widget
- **Plan size** – plan size in pixels. There are predefined resolutions available when clicking on the icon on the right side of this parameter
- **Widget position** – default position of the widget on the screen
- **Primary background image** – choose primary background image from the list added in *Vis.graphics* → *Images/Backgrounds*
- **Background color** – choose background color of the widget
- **Touch background color** – define a color for touch visualization
- **Repeat background image** – either to show the image once or repeat it and fill the whole plan
- **Fixed primary background** – specify if first background image should be fixed. By enabling this, you can enable Parallax effect for your visualization

When you have defined the widget in *Layouts/Widgets* tab, you can add objects to it in *Visualization* tab.

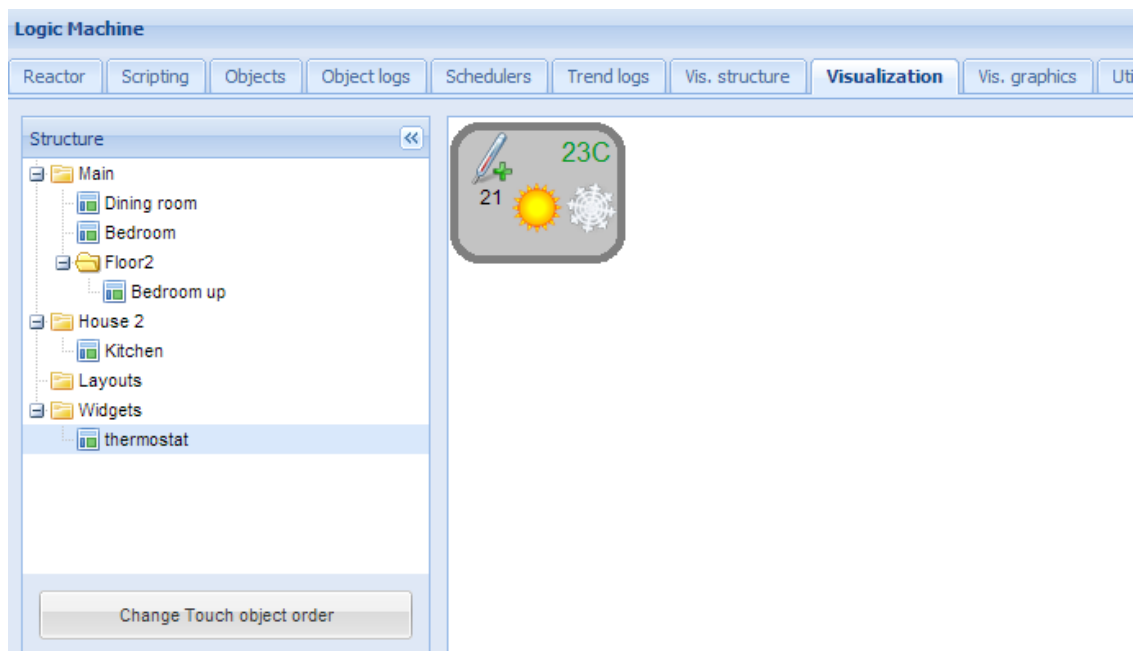

When you have added necessary objects to the widget, you can choose it when adding objects for main Levels e.g. Bedroom in Main level.

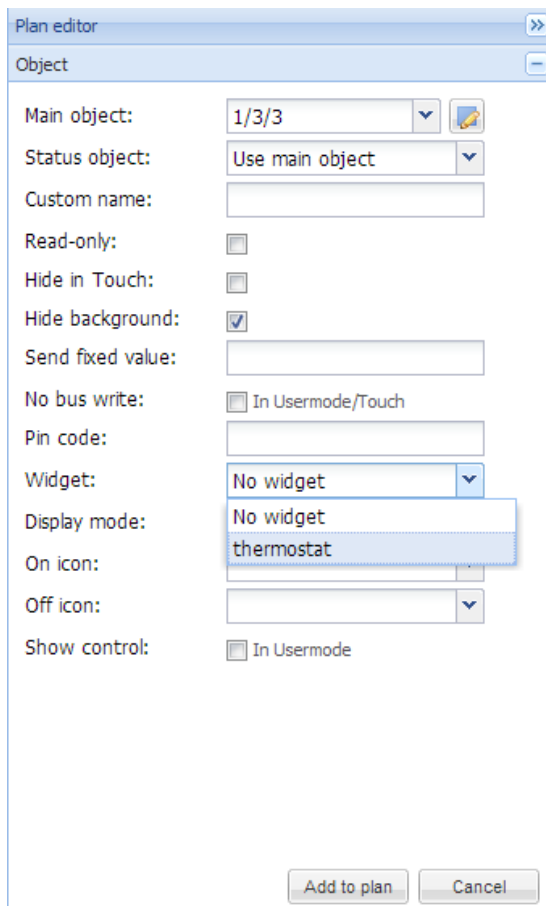


Once added, you can try out the widget in *Usermode visualization* by clicking on added object (temperature sensor icon on the left), the widget appears on click.



6.7. Visualization

After the building and floor structure is defined in Vis.structure tab, it is visualized in *Visualization* tab. Controlled and monitored objects can be added and managed in this section.

Both side bars can be minimized by pressing on  icon making the map more visible especially on small displays.

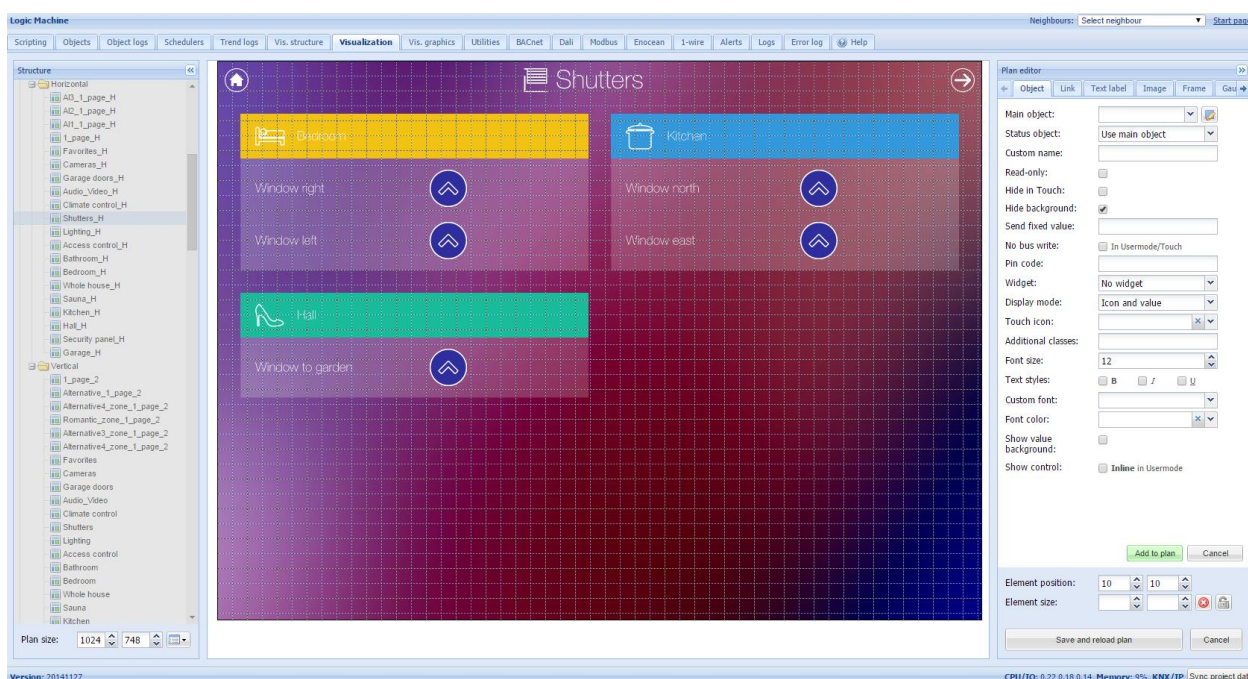

6.7.1. Plan editor

Plan editor is located on the right side of the visualization map. By clicking on *Unlock current plan for editing* button, the following main menus appear for configuration:

- **Object** – new object to be added to the map
- **Link** – linking several floors with special icons

- **Text Label** – text label to put on visualization
- **Image** – Add specific image on the visualization
- **Frame** – add frame object to the visualization
- **Gauge** – Metering gauge
- **Camera** – IP web camera integration into visualization
- **Graph** – Real-time graph to monitor value of scale-type objects

While in editing mode, on the left side you can change plan resolution on the fly



When some object is selected and in the editing mode, there appears Delete / Duplicate buttons so you can either delete or copy the object



6.7.2. Object


- **Main object** – list of existing group addresses on KNX/EIB bus, the ones available for configuration in *Objects* tab
- **Status object** – list of status objects on KNX/EIB bus
- **Custom name** – Name for the object
- **Read-only** – the object is read-only, no write permission
- **Hide in touch** – do not show this object in *Touch Visualization*
- **Hide background** – Hide icon background
- **Send fixed value** – Allows to send specific value to the bus each time the object is pressed
- **No bus write** – do not send telegram into the bus once clicked on this object in Usermode/Touch visualizations
- **PIN code** – PIN code which will be asked to provide when click on this object to perform group write
- **Widget** – specify widget which will be launched when click on this object
- **Display mode [icon and value; icon; value]** – how to display the object
- **Touch icon** – icon for Touch visualization
- **On icon** – On state icon for binary-type objects. Icons library is located in *Vis.graphics* → *Icons tab*
- **Off icon** – Off state icon for binary-type objects. Icons library is located in *Vis.graphics* → *Icons tab*
- **Additional classes** – additional CSS classes for the element
- **Show control** – scale-type object defining either to show the control visualization without icon



specific setting
in Usermode

Plan editor

Object Link Text label Image Frame Gau

Main object: 

Status object: Use main object

Custom name:

Read-only: ☐

Hide in Touch: ☐

Hide background: ☒


Send fixed value:

No bus write: ☐ In Usermode/Touch

Pin code:

Widget: No widget

Display mode: Icon and value


Touch icon: 

Additional classes:

Font size: 12

Text styles: ☐ B ☐ I ☐ U

Custom font:



Font color: 

Show value background: ☐

Show control: ☐ Inline in Usermode

Add to plan Cancel





Element position: 10 10


Element size:  

Save and reload plan Cancel



For scale-type objects additional button appears while specifying parameters – *Additional icons*. It's possible to define different icons for different object values in the window.


Additional icons

| | | | | | | |
|-----------|-----|-----------|----|------|--------------|---|
| Min value | -10 | Max value | 0 | Icon | sun-moon-off |  |
| Min value | 0 | Max value | 10 | Icon | sun-moon-on |  |
| Min value | 10 | Max value | 20 | Icon | sun-rain-on |  |
| Min value | 20 | Max value | 30 | Icon | sun-rain-off |  |

 Add icon

Save Cancel

On the bottom of setting you can see element position and size parameters, which you can freely change. By pressing  you will reset size. By pressing  you can lock aspect ratio.

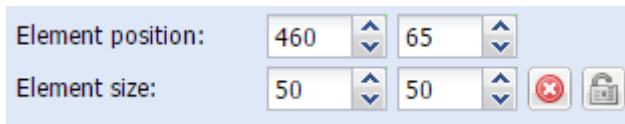


Once the object parameters are defined, press *Add to plan* button and newly created object will appear. You can move the object to the location it will be located. Note that while being in editing mode, the object will not work. When all necessary objects are added, press *Save and reload plan* button so the objects starts functioning.

You can edit each added object when clicking on it while in Editing mode.

6.7.3. Link

In order to make visualization more convenient, there are floor links integrated. You can add icons or text on the map, which links to other floors.

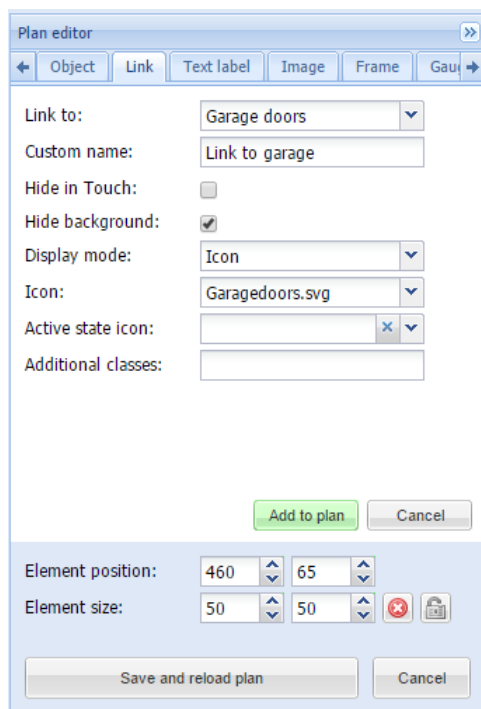

- **Link to** – Linked plan name or link to Schedulers / Trends or External Link (use the link in form <http://www.openrb.com>)
- **Custom name** – name for the link
- **Hide in touch** – do not show this object in *Touch Visualization*
- **Hide background**– Hide icon background
- **Display mode [Icon; Value]** – either to show icon or its value

- **Icon** – Icon which will be showed in visualization (if chosen, no further parameters are available)
- **Active state icon** – active state icon if the link is to current plan (in case you have several smaller plans on one visualization and want to display the current one)
- **Additional classes** – additional CSS classes for the element

Once the floor link parameters are defined, press *Add to plan* button and newly created object will appear. You can move the object to the location it will be located. Note that while being in editing mode, the object will not work. Press on *Save and reload plan* button so the objects starts functioning.

6.7.4. Text Label

Text labels can be added and moved across the visualization map.

The screenshot shows the 'Plan editor' dialog box with the 'Text label' tab selected. The dialog contains the following fields and controls:


- Text:** A text input field containing 'Test'.
- Font size:** A numeric input field with '29' and up/down arrows.
- Text styles:** Checkboxes for Bold (checked), Italic, and Underline.
- Custom font:** A dropdown menu showing 'Tahoma'.
- Font color:** A color picker showing '#00CC28' with a small 'x' icon.
- Additional classes:** An empty text input field.
- Buttons:** 'Add to plan' (green) and 'Cancel' (grey) buttons.
- Element position:** Two numeric input fields with '360' and '65' and up/down arrows.
- Element size:** Two numeric input fields with '50' and '50' and up/down arrows, followed by a red 'x' icon and a lock icon.
- Buttons:** 'Save and reload plan' (grey) and 'Cancel' (grey) buttons.

- **Text** – label text
- **Font size** – label font size
- **Text style** – style of the text – bold, italic, underscored
- **Custom font** – font name
- **Font color** – label font color
- **Additional classes** – additional CSS classes for the element

Once the label parameters are defined, press *Add to plan* button and newly created object will appear on the map. You can move the object to the location it will be located. Press on *Save and reload plan* button so the objects starts functioning.

6.7.5. Image

Image section allows adding images from the internet into the visualization map. Useful for example, to grab dynamic weather cast images.

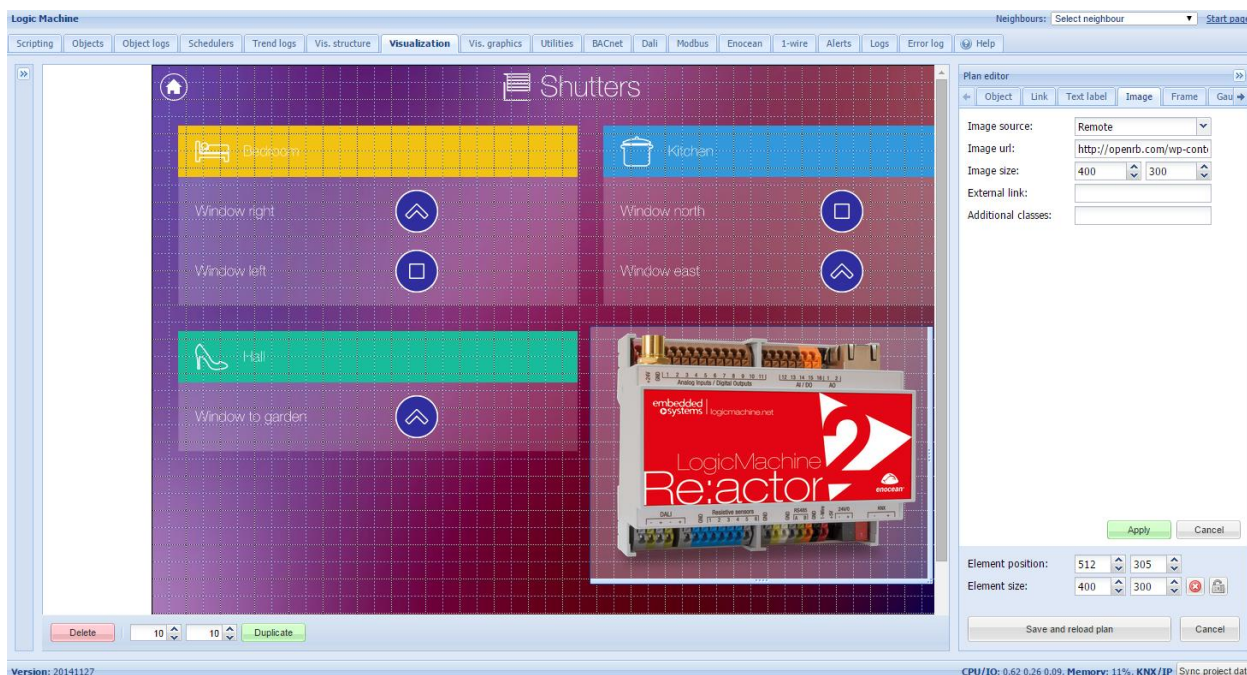

- **Image source [Local; Remote]** – image source location
- **Source url / Select image** – Source URL of the image or image from local database
- **Image size** – width and height of the image
- **External link** – external link URL when pressing on the image
- **Additional classes** – additional CSS classes for the element

Once the image parameters are defined, press *Add to plan* button and newly created object will appear on the map. You can move the object to the location it will be located. Press on *Save and reload plan* button so the objects starts functioning.

6.7.6. Frame

With Frame functionality you can integrate 3rd party applications, we resources or local Trends/Schedulers into one common visualization.

- **Source [Url, Schedulers; Trend logs]** – frame source
- **Url** – Source URL of the page to integrate
- **Frame size** – width and height of the frame
- **Custom name** – custom name of the frame object
- **External link** – external link URL when pressing on the image
- **Hide in Touch** – defines either to hide frame in Touch visualization

➤ **Additional classes** – additional CSS classes for the element

Plan editor

Object Link Text label Image Frame Gau

Source: Schedulers

Frame size: 480 320

Custom name:

Hide in Touch: ☐

Additional classes:

Add to plan Cancel

Element position: 10 10

Element size:

Save and reload plan Cancel

123

Status: active, period: 1 January - 31 December

Edit

Add event

| | | | |
|-------|-------|------|--------|
| false | 12:00 | Edit | Delete |
| true | 12:00 | Edit | Delete |
| false | 12:00 | Edit | Delete |

Plan editor

Object Link Text label Image Frame Gau

Source: Url

Url:

Frame size: 480 320

Custom name:

Hide in Touch: ☐

Additional classes:

Add to plan Cancel


Element position: 10 10

Element size:

Unlock current plan for editing Cancel

6.7.7. Gauge

Gauge allows visualizing and changing object value in the gauge.

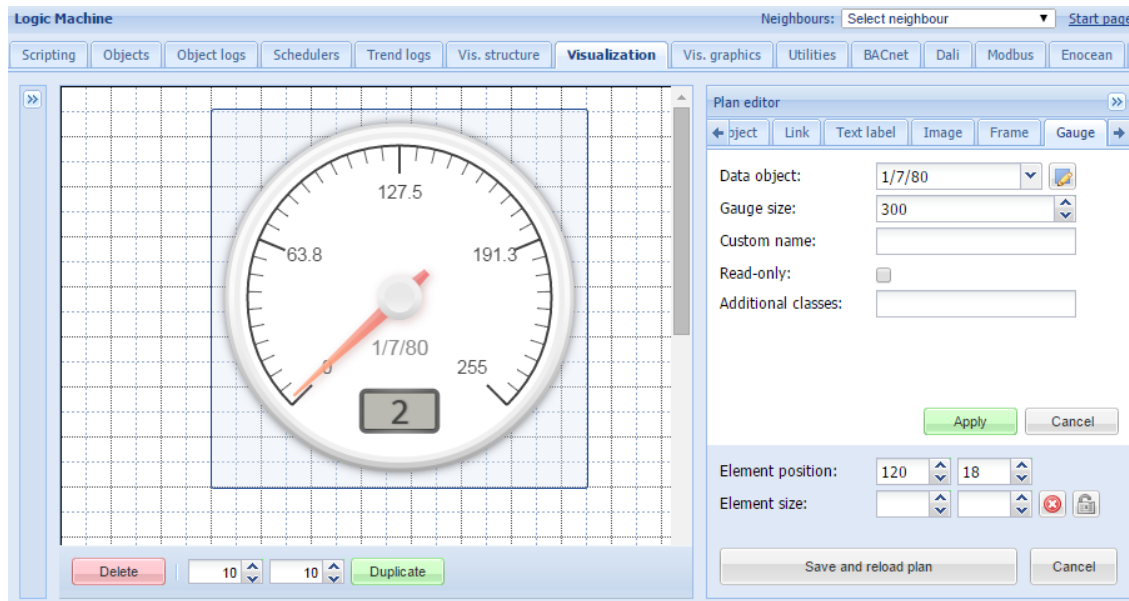

- **Data object** – KNX group address
- **Gauge size** – size of the gauge
- **Custom name** – custom name for the object
- **Read only** – make the gauge read only
- **Additional classes** – additional CSS classes for the element

Once the gauge parameters are defined, press *Add to plan* button and newly created object will appear on the map. You can move the object to the location it will be located. Press on *Save and reload plan* button so the objects starts functioning.


6.7.8. Camera

LogicMachine supports third party IP web camera integration into its visualization.

- **Source url** – source address of the video stream
- **Window size** – size of the window of camera picture
- **Custom name** – name for the object
- **Icon** – icon for the object
- **Auto open window** – automatically open video window, otherwise it is launched by click on the icon
- **Hide background** – hide icon background
- **Additional classes** – additional CSS classes for the element


Note! If IP camera requires user name and password, enter the url in form ***http://USER:PASSWORD@IP***

Once the camera parameters are defined, press *Add to plan* button and newly created object will appear in look of video camera. You can move the object to the location it will be located. Note that while being in editing mode, the object will not work. Press on *Save and reload plan* button so the objects starts functioning. By pressing on video camera, a new sub-window appears with a picture from your IP web camera. The window can be freely moved to other location so not to cover other visualization objects.

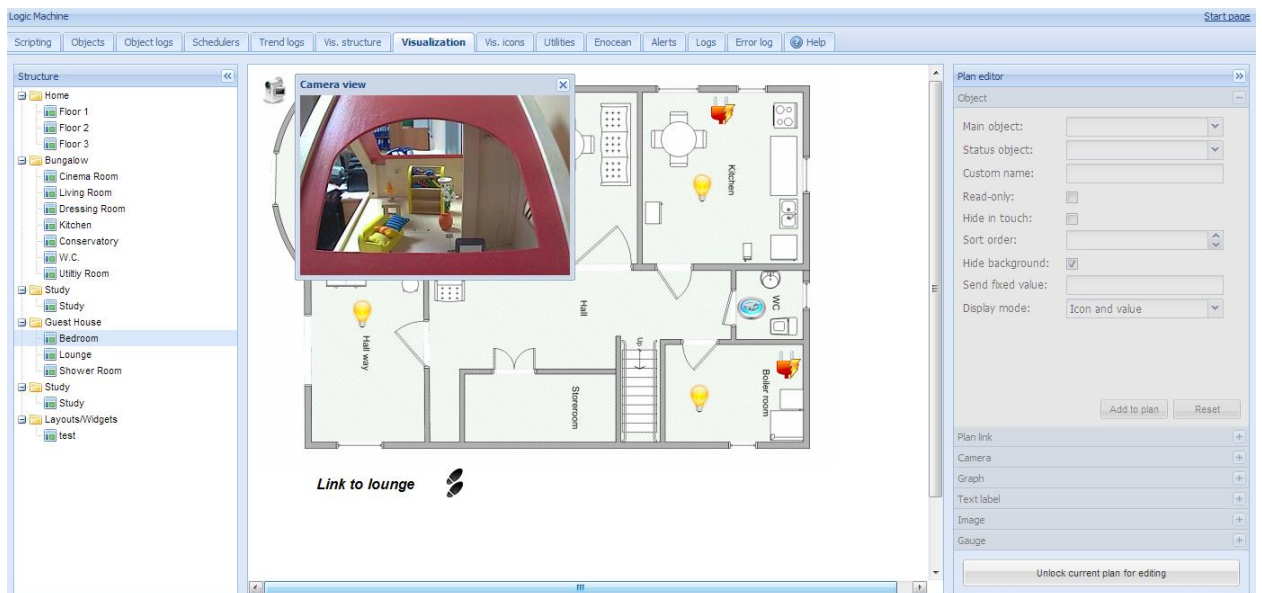

6.7.9. Graph


Real-time graphs can be integrated into visualization system to monitor the current and old value of scale-type objects. Make sure logging is enabled for the object in *Object* tab which values is planned to be shown in the graph.

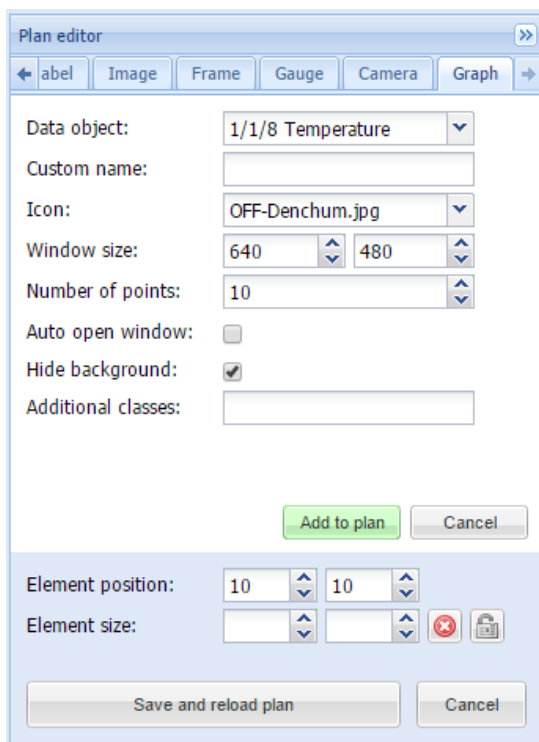

- **Data object** – group address of the object
- **Custom name** – name of the object
- **Icon** – icon to launch the graph


- **Windows size** – size of the graph window
- **Number of points** – number of data points to show in the graph
- **Auto open window** – graph window is automatically opened
- **Hide background** – hide icon background
- **Additional classes** – additional CSS classes for the element

Once the graph parameters are defined, press *Add to plan* button and newly created object will appear. You can move the object to the location it will be located. Note that while being in editing mode, the object will not work. Press on *Save and reload plan* button so the objects starts functioning.

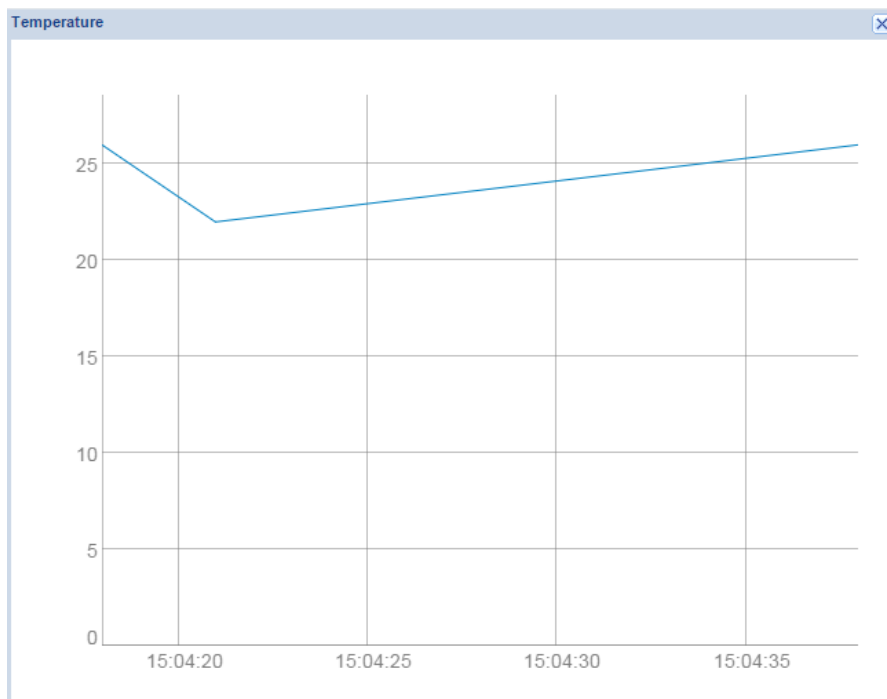


6.8. Vis.graphics

The list of predefined icons, list of images and backgrounds is available in *Vis.graphics* tab.

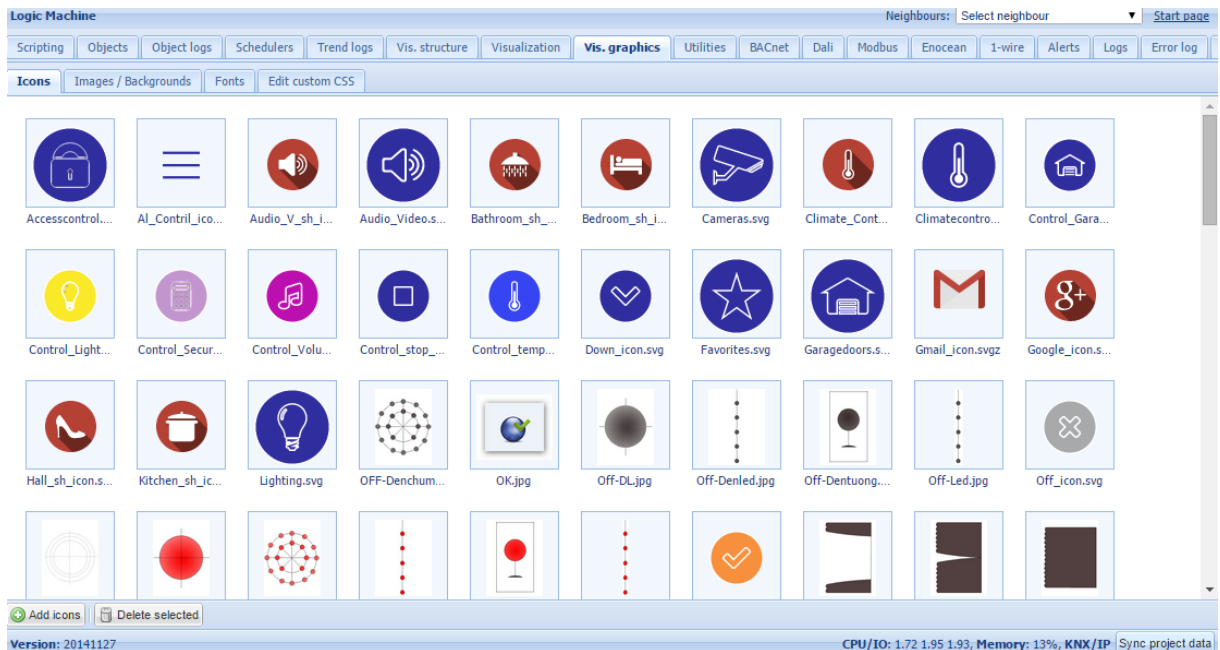


Press on *Add icons* button to add a new entry. The system accepts any size icons. GIF is also supported.

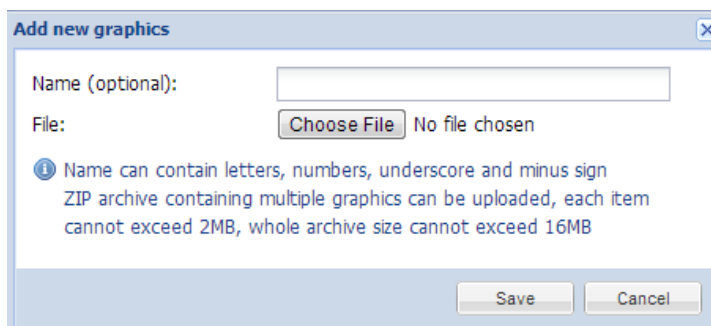


Name (optional) – the name of the icon

File – Icon file location

Images/Backgrounds tab is used to upload image files for visualization purposes

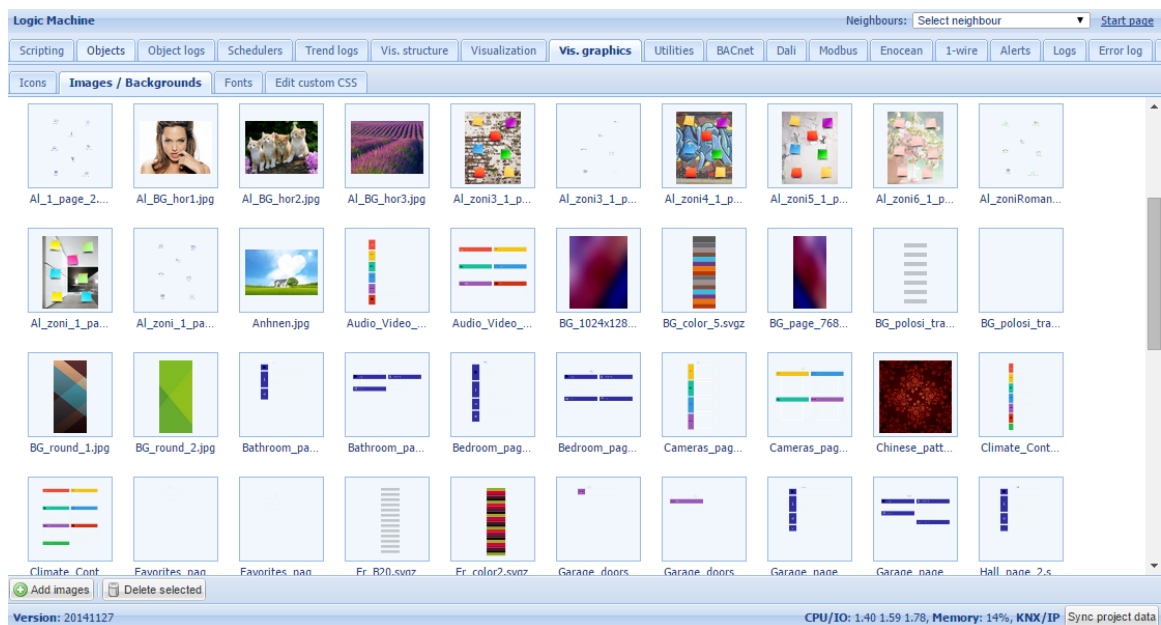


In *Fonts* tab you can add custom fonts

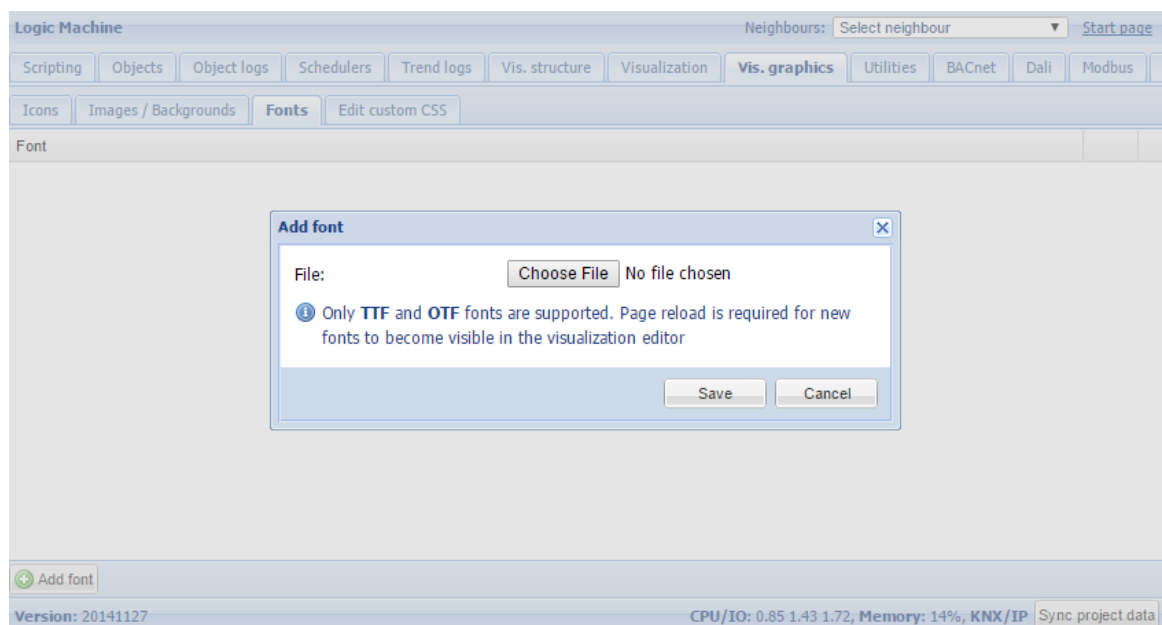


In *Custom CSS* tab you can add your CSS style for the visualization which you can use when adding elements into visualization, so any elements of Look and Feel is customizable with this solution.

6.9. Utilities


There are following utilities in the tab available:

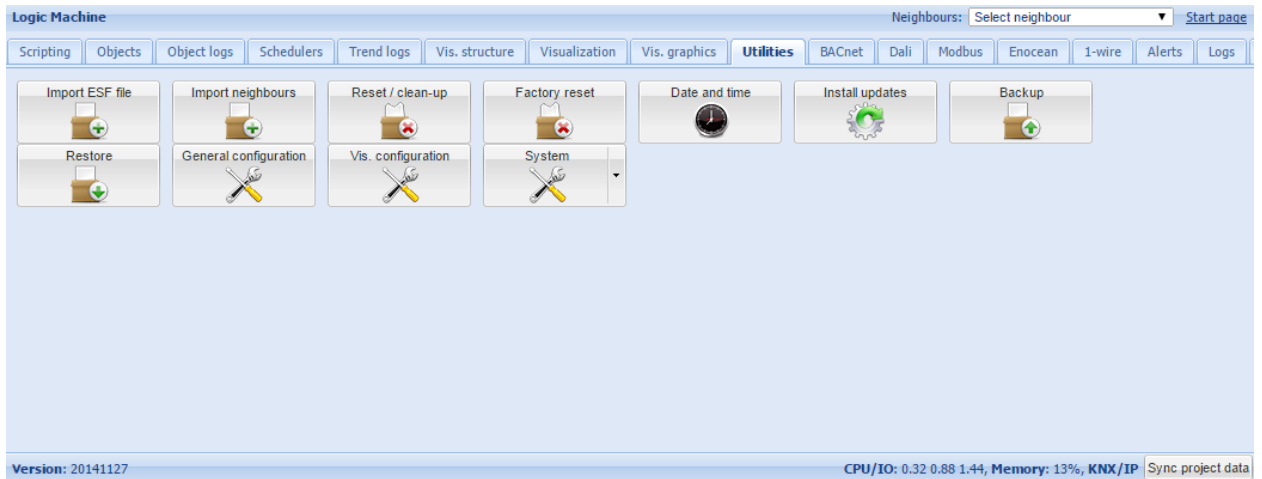


Import ESF file– imports ETS object file. It will be necessary to set correct data types for some imported objects. Existing objects will not be overwritten. Objects with the same name are considered duplicates and might not be imported

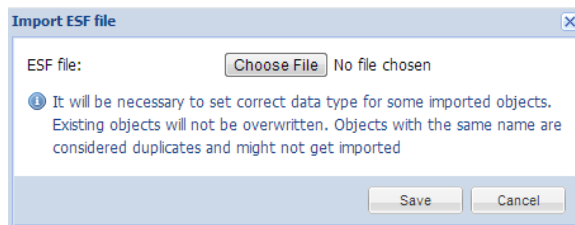


Import neighbours – import list of objects from network LM devices

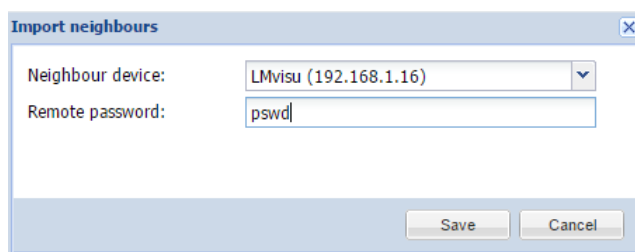


Reset / clean-up – delete all objects from the Logic Machine, they disappear from visualization as well

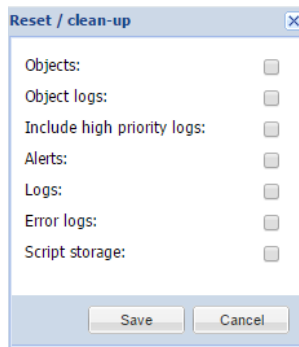


Factory reset – delete all configuration and return to factory defaults

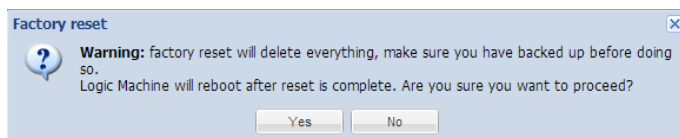

Date and time – data and time settings

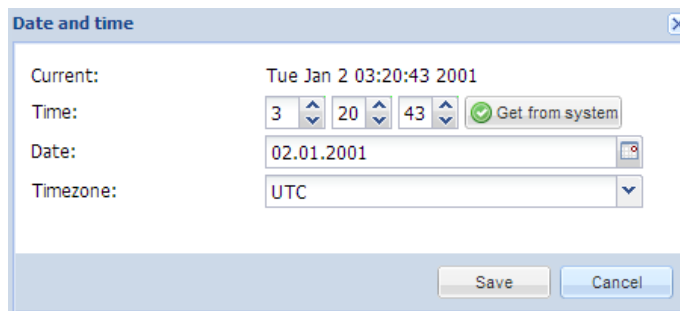


Install updates – install LogicMachine update file *.Imu. LogicMachine will reboot after successful update

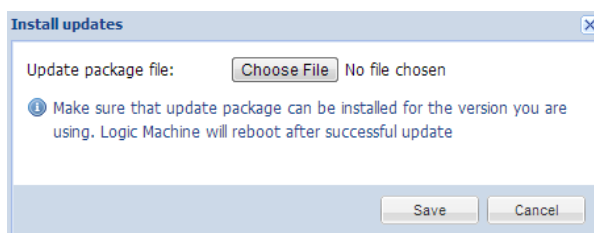


Backup – backup all objects, logs, scripts, visualization.

Restore– restore configuration from backup

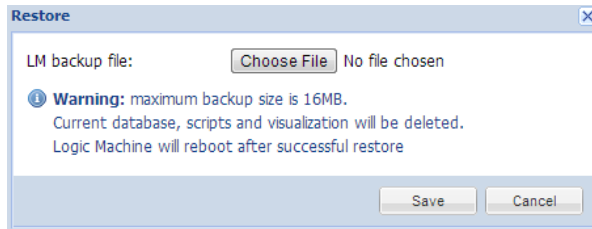

General Configuration – system general settings

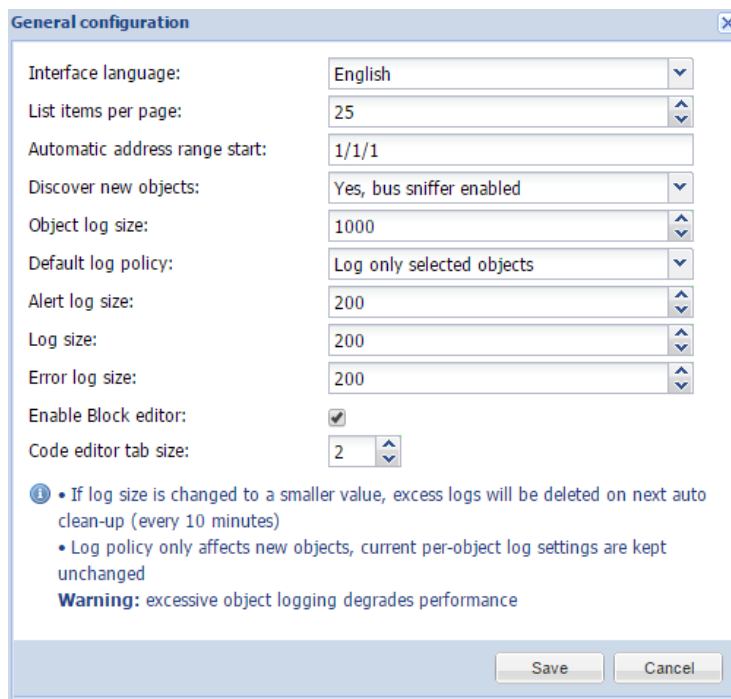

- **Interface language** – interface language
- **List items per page** –count of lines per page e.g. *Objects, Object logs, Alerts etc.*
- **Automatic address range start** – start group address when using automatic addressing in scripts, IO settings and other
- **Discover new objects**– either KNX object sniffer is enabled. If yes, once triggered all new objects will appear automatically in the Objects list
- **Object log size** – max count of object logs
- **Default log policy**– either to log status change for all objects or only for checked objects
- **Alert log size** – max count of alerts logged
- **Log size** – max count of logs
- **Error log size** – max count of errors logged
- **Enable block editor** – either to enable scripting block editor

- **Code editor tab size** – specify tab size to be used in the scripting editor

Note! If log size is changed to a smaller value, excess logs will be deleted on next auto clean-up (every 10 minutes)


Note! Log policy only affects new objects, current per-object log settings are kept unchanged

Warning! Excessive object logging degrades LogicMachine performance


Vis. Configuration – visualization specific settings

- **Usermode sidebar** [*Show docked, Show as overlay (auto-hide), Hide (fullscreen mode)*] – visibility of sidebar when in Usermode Visualization
- **Usermode view** [*Align plans to top left, no size limit; Center plans, limit size; Center plans, enable auto-sizing; Center horizontally, auto-size width*] – defines the look of Usermode visualization
- **Usermode page transition** [*Flip X; Flip Y; Shrink; Expand; Slide up; Slide down, Slide left; Slide right; Slide up big; Slide down big; Slide left big; Slide right big*] – transition when changing plans in visualization
- **Usermode auto-size upscaling** – enable this to scale the visualization automatically on each display device. Please note to use SVG format images and icons so the quality is not affected by upscaling
- **Usermode background color** – background color in usermode visualization
- **Usermode background image** – specific image for usermode visualization
- **Custom font** – select custom font to use in visualization

- **Use dark theme** – check to enable dark theme in both usermode and touch visualizations
- **Enable swipe gesture** – check to enable swipe gesture to move across plans from your touch device
- **Disable object click animation** – disable object click animation
- **Dim inactive visualization after** – define time in minutes after which the screen will be dimmed where visualization is opened
- **Dim level** – dim level for the display
- **Show alerts in Usermode** – once new Alerts is triggered it will pop-up in User mode visualization

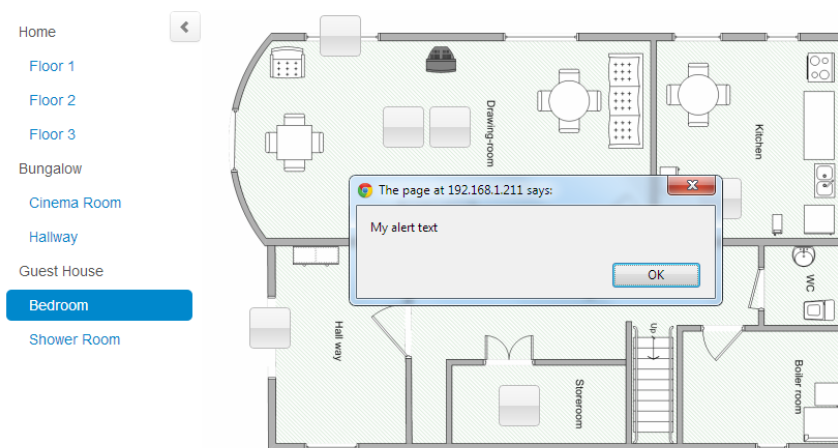


System – by clicking on the arrow near System button, *KNX Connection*, *User Access*, *Remote Services* settings can be access. By clicking on the *System* button, network configuration window opens in new browser's tab.

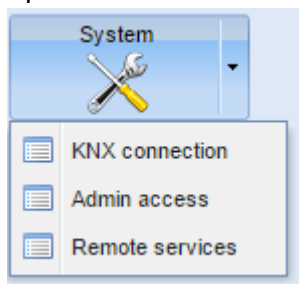

6.10. User access

User access management is located in *User access* tab.

User access settings

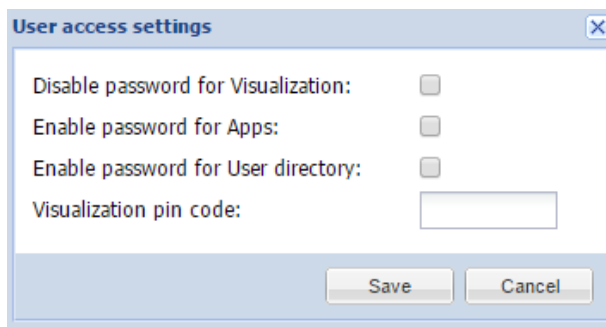

- ***Disable password for Visualization*** – disable password access for visualization
- ***Enable password for Apps*** – enable password to enter the initial Apps screen of LogicMachine (when entering <http://IP> in the web-browser)
- ***Enable password for User directory*** – enable password access for User directory
- ***Visualization PIN code*** – global PIN code visualization

User directory



You can upload files which are accessible through the main web server via FTP. In *System config* --> *Services* --> *FTP server* you have to enable the FTP server and set password for apps user. Then you can upload files into user directory which can then be accessed at <http://IP/user>. Password authentication for this directory can be enabled/disabled in *Logic Machine* --> *User access* --> *User access settings*.

Adding users

The screenshot shows a 'User' configuration window with the following fields and values:

| Field | Value |
|-----------------------|---------|
| Name: | Edgars |
| Login: | edgars |
| Password: | |
| Repeat password: | |
| Visualization access: | Partial |
| Schedulers access: | Partial |
| Trends access: | Partial |

- **Name** – name of the user
- **Login** – login name
- **Password** – password
- **Repeat password** – repeat password
- **Visualization access [None, Partial, Full]** – type of Visualization access
- **Schedulers access [None, Partial, Full]** – type of Schedulers access
- **Trends access [None, Partial, Full]** – type of Trends access
 - None* – access is limited
 - Partial* – access is granted for specific visualization floors, schedulers and trends
 - Full* – full access

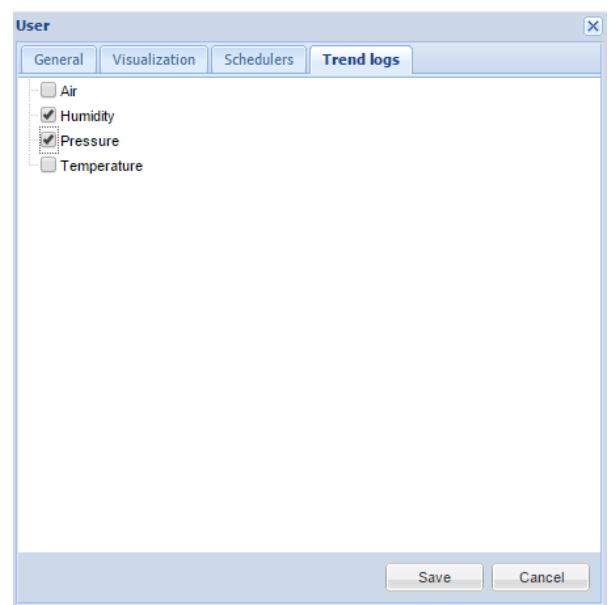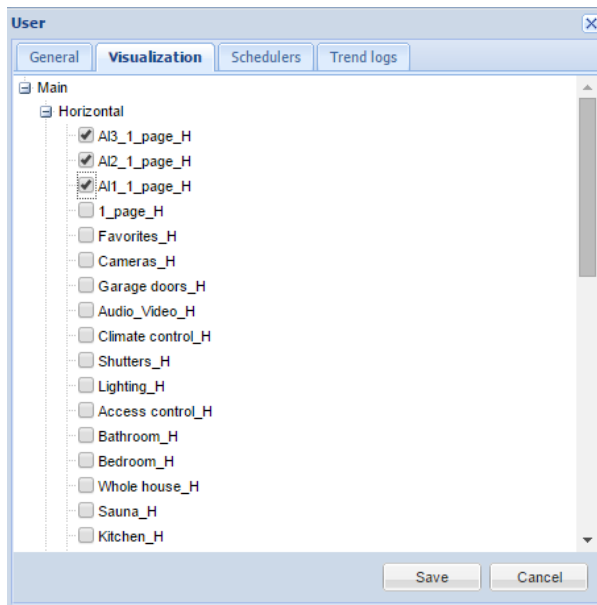

6.11. Alerts


In *Alert* tab a list of alert messages defined with **alert** function in scripts is located. The messages are stored on the compact flash. Information on system start and KNX connection status messages are also automatically displayed in this window.

| Alert time | Message |
|---------------------|------------|
| 01.01.1970 10:20:42 | read error |
| 01.01.1970 10:20:22 | read error |
| 01.01.1970 10:20:02 | read error |
| 01.01.1970 10:12:58 | read error |

Page 1 of 93

 Displaying alerts 1 - 25 of 2317

On the communication panel you can jump by pages and reload the page.



Example


```

1. temperature = 25.3
2.
3. if temperature > 24 then
4. -- resulting message: 'Temperature levels are too high: 25.3'
5. alert('Temperature level is too high: %.1f', temperature)
6. end

```



6.12. Error log

Error messages from scripts are displayed in *Error log* tab.

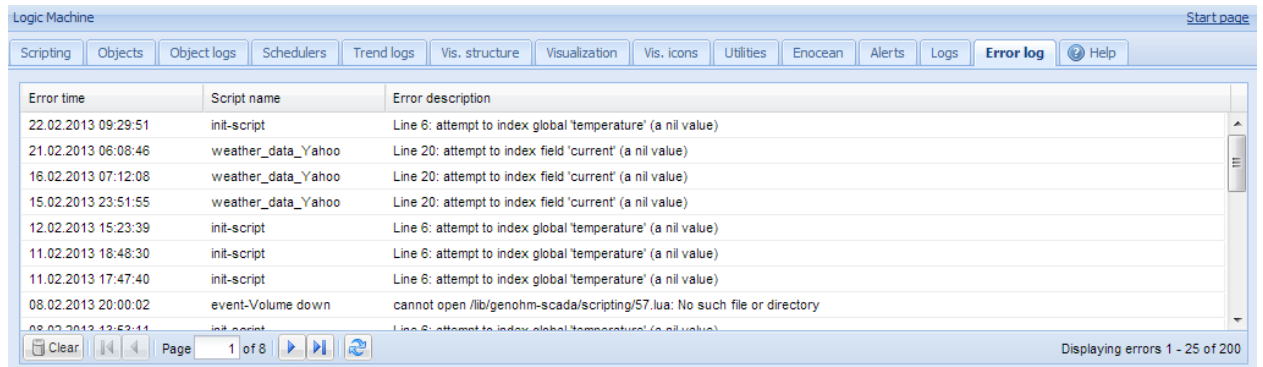


6.13. Logs

Logs can be used for scripting code debugging. The log messages appear defined by *log* function.

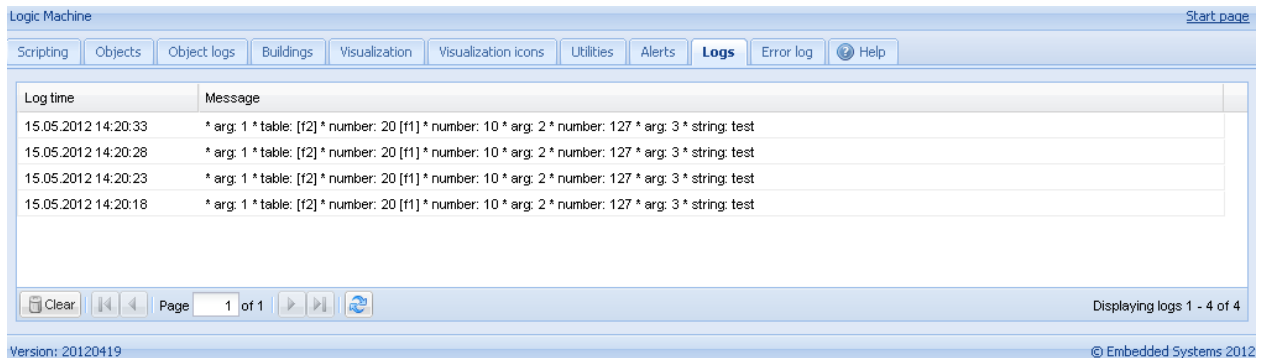


6.14. Help

Documentation for scripting syntaxes is displayed in *Help* tab.

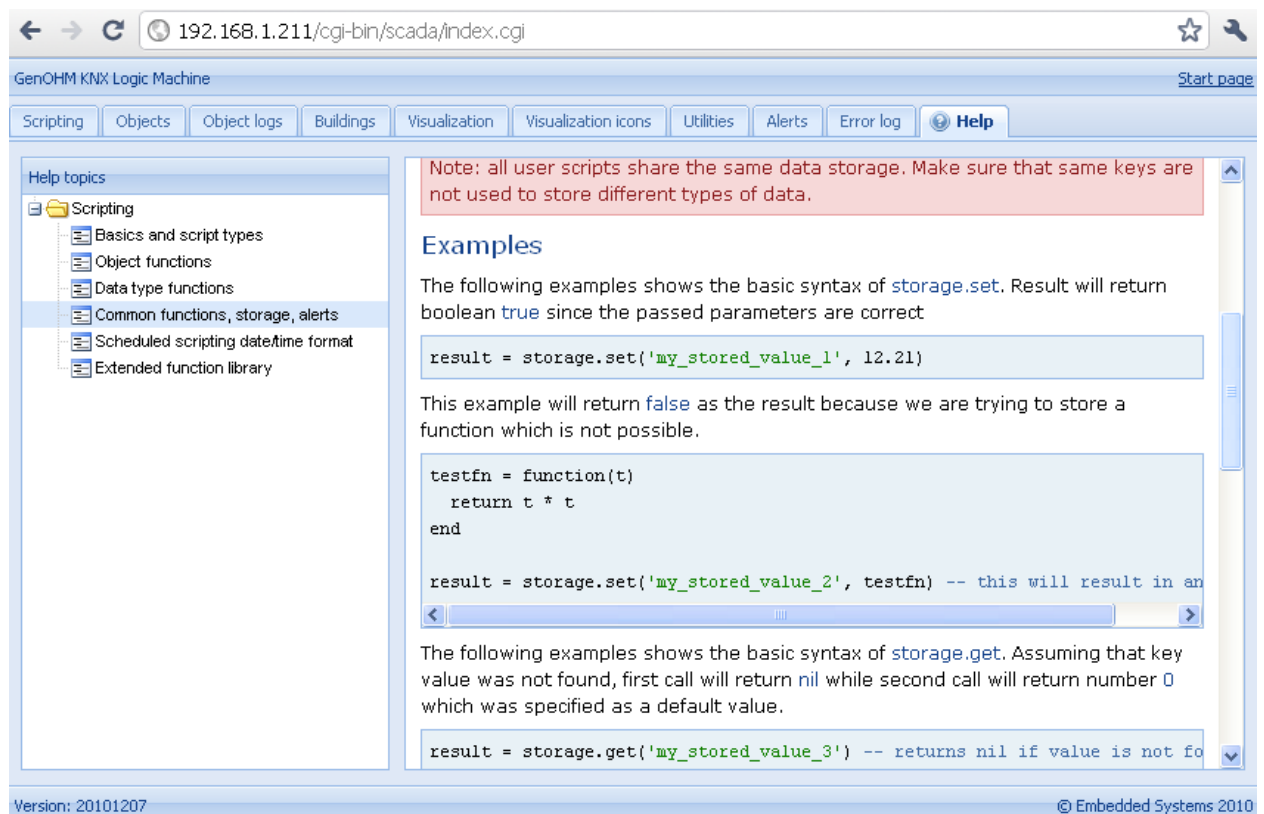

7. User mode visualization

User mode visualization contains created visualization maps. A password and users to access specific visualization maps can be created in *Logic Machine* --> *User access*

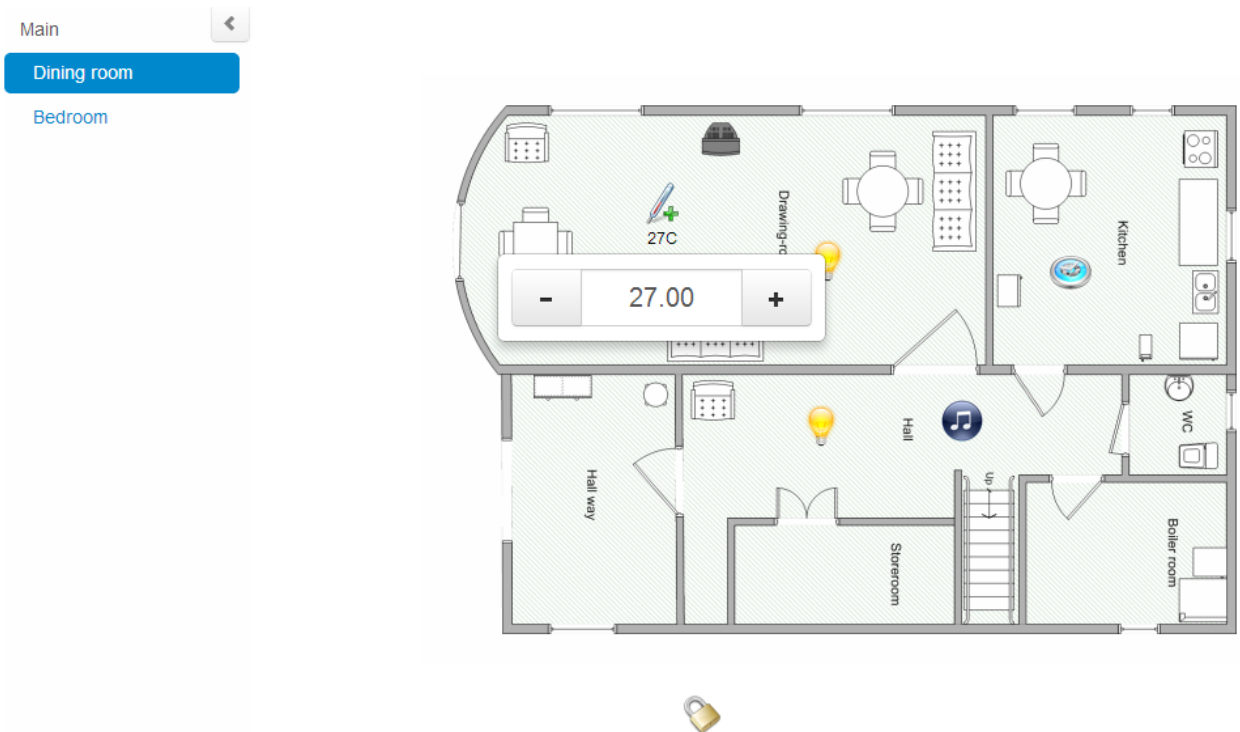

7.1. Custom design Usermode visualization


Through Custom CSS styles it is possible to create different type of visualization maps. Custom CSS can be done in *Vis. Graphics* → *Edit custom CSS* tab. For more information of CSS examples please see our user forum: <http://forum.logicmachine.net/>



8. Touch visualization

Touch visualization is designed for iPhone/iPod/iPad/Android touch screen devices. All objects which are added in *Logic Machine* configuration by default are visible in touch visualization (if there is no *Hide in touch* option enabled).

The main window is Building view where you can choose which Floor from which Building to control. Once you choose the floor, all objects which are assigned to it, are listed and can be controlled.

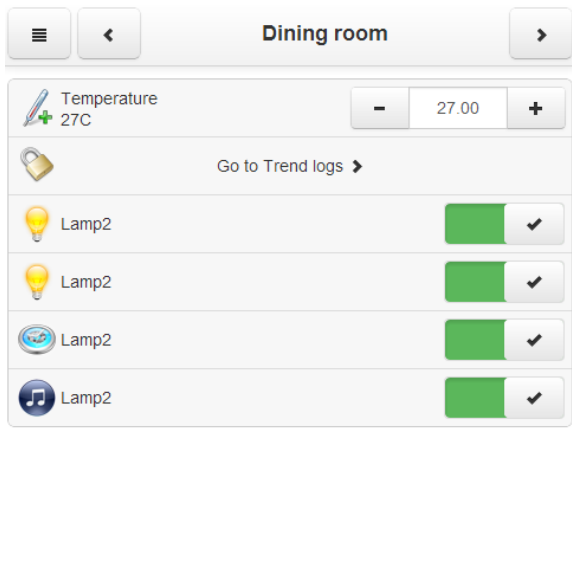


Launching visualization on touch device (iPad in this case)

- Make sure your iPad is connected wirelessly to the LogicMachine (either through separate access point or directly to Logic Machine's USB WiFi adapter).
- In the browser enter Logic Machine's IP (default 192.168.0.10).
- Click on the Touch Visualization icon.
- Save the application as permanent/shortcut in your iPad

9. System configuration


System configuration allows managing router functionality on KNX/EIB LogicMachine as well as do access control management, upgrade firmware, see network and system status and others.

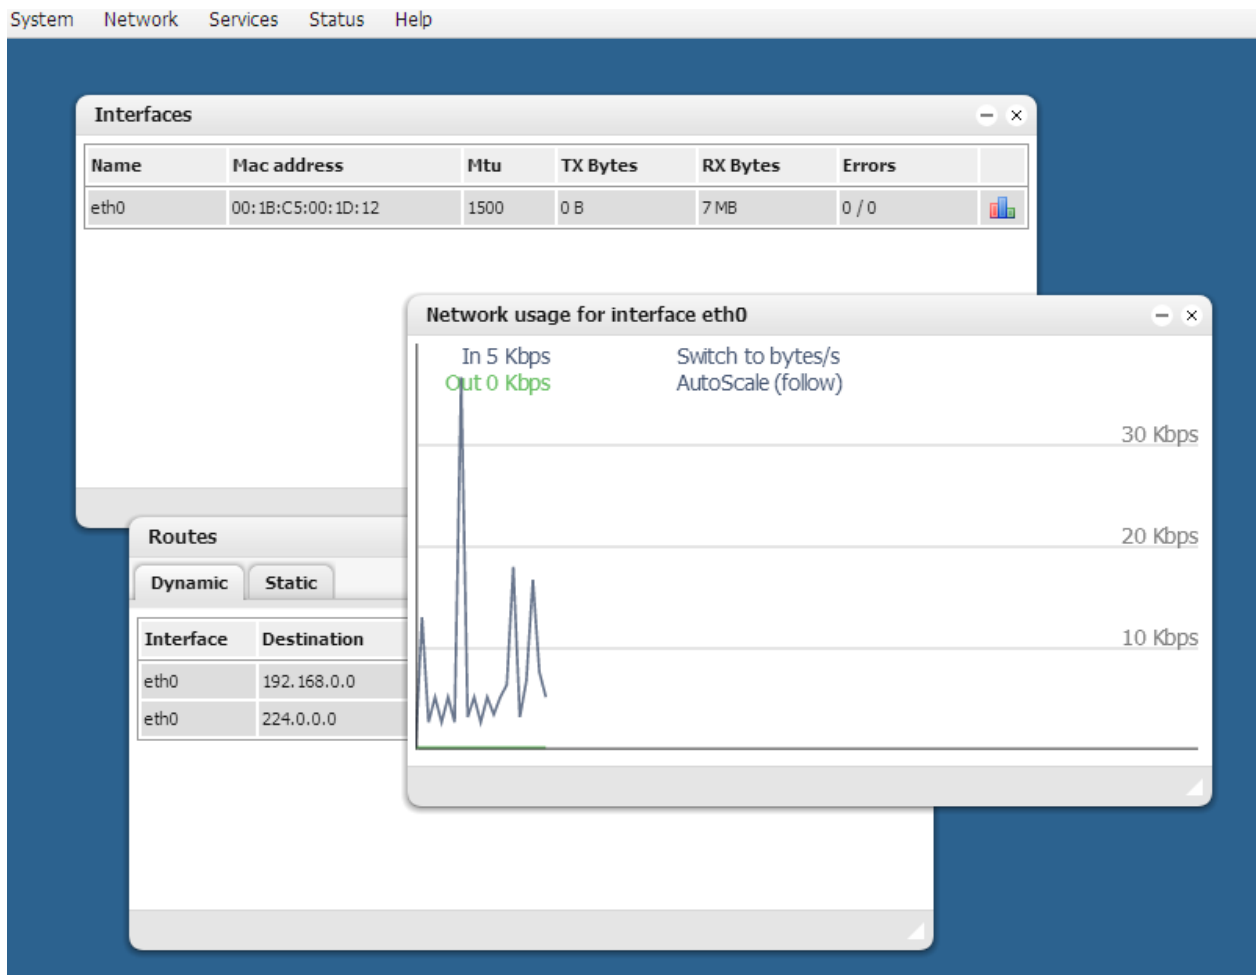

| Login | Password |
|-------|----------|
| admin | admin |

9.1. Hostname

Hostname can be change in System → Hostname. This name will appear when searching for the device through Zeroconf or Discovery applications.

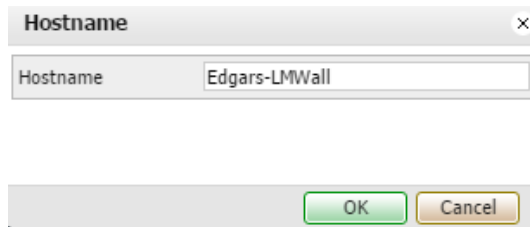


Hostname

Hostname Edgars-LMWall

OK Cancel

9.2. Changing Admin password

The admin password configuration window is located in *System* → *Admin access*.

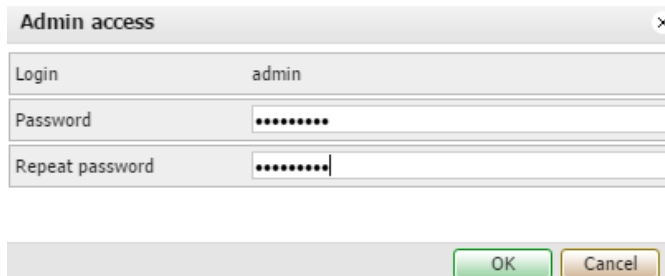

Admin access

Login admin


Password

Repeat password

OK Cancel

9.3. Packages

System → *Packages* shows the packages installed in the system. You can add new packaged by pressing on +

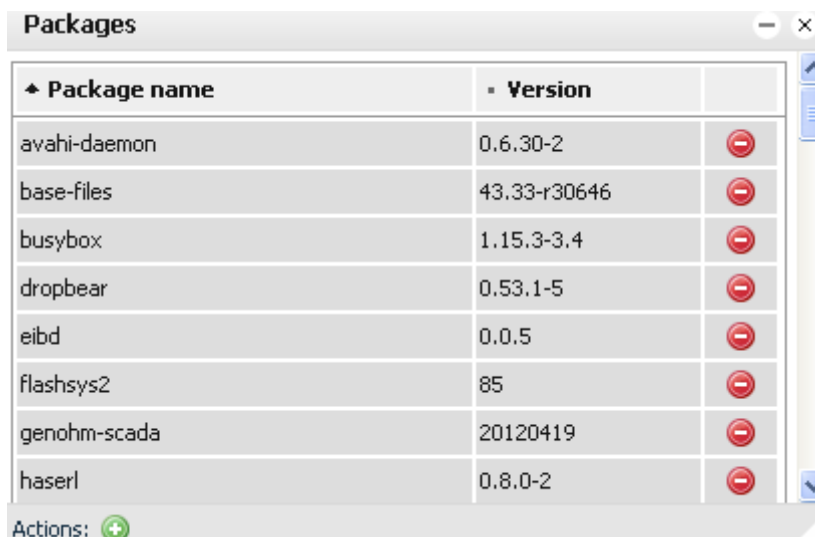


| Package name | Version | |
|--------------|--------------|---|
| avahi-daemon | 0.6.30-2 | ⊖ |
| base-files | 43.33-r30646 | ⊖ |
| busybox | 1.15.3-3.4 | ⊖ |
| dropbear | 0.53.1-5 | ⊖ |
| eibd | 0.0.5 | ⊖ |
| flashsys2 | 85 | ⊖ |
| genohm-scada | 20120419 | ⊖ |
| haserl | 0.8.0-2 | ⊖ |

Actions: ⊕

9.4. Upgrade firmware

System → *Upgrade firmware* is used to do a full upgrade of the system (both OS part as well as LogicMachine part).

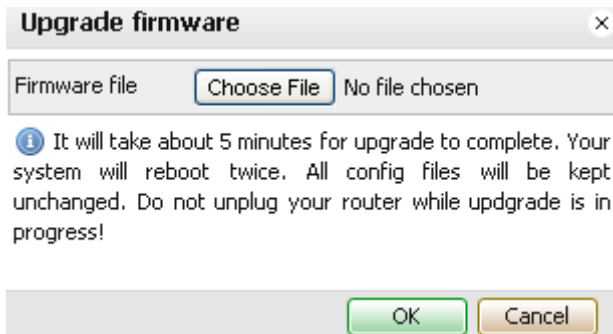

9.5. Reboot Logic Machine

You can restart the LogicMachine by executing *System → Reboot* command.

9.6. Shutdown Logic Machine

You can shutdown the LogicMachine by executing *System → Shutdown* command. It is advisable to shutdown the system before plug out the power, because the database is saved safely.

9.7. Interface configuration

Ethernet interface is listed in the first tab. There are possibilities to disable/enable or to take a look at the traffic flow graph using special icons on the right side.

| Interfaces | | | | | | |
|------------|-------------------|------|----------|----------|--------|--|
| Name | Mac address | Mtu | TX Bytes | RX Bytes | Errors | |
| eth0 | 00:1B:C5:00:1D:12 | 1500 | 0 B | 7 MB | 0 / 0 | |


By clicking on the interface you get to the configuration.


| | |
|--------------|---------------|
| Protocol | Static IP |
| IP address | 192.168.1.13 |
| Network mask | 255.255.255.0 |
| Gateway IP | 192.168.1.100 |
| DNS server 1 | 8.8.8.8 |
| DNS server 2 | |
| MTU | |

OK Cancel

- **Protocol**– specific protocol used for addressing
 - Static IP** – static IP address. By default 192.168.0.10
 - DHCP** – use DHCP protocol to get IP configuration.
 - Current IP**– the IP address got from DHCP server. This field appears only if the IP address is given otherwise it's hidden.
- **Network mask** – network mask. By default 255.255.255.0 (/24)
- **Gateway IP** – gateway IP address
- **DNS server** – DNS server IP address
- **MTU**– maximum transmission unit, the largest size of the packet which could be passed in the communication protocol. By default 1500

Ethernet interface data throughput graph

On the main window of the Ethernets tab, if you click on the  button, a new window is opened. It draws a real-time graph of the traffic flow passing the interface (both In and Out). There is a possibility to switch the units of measurement – bytes/s or bytes/s.

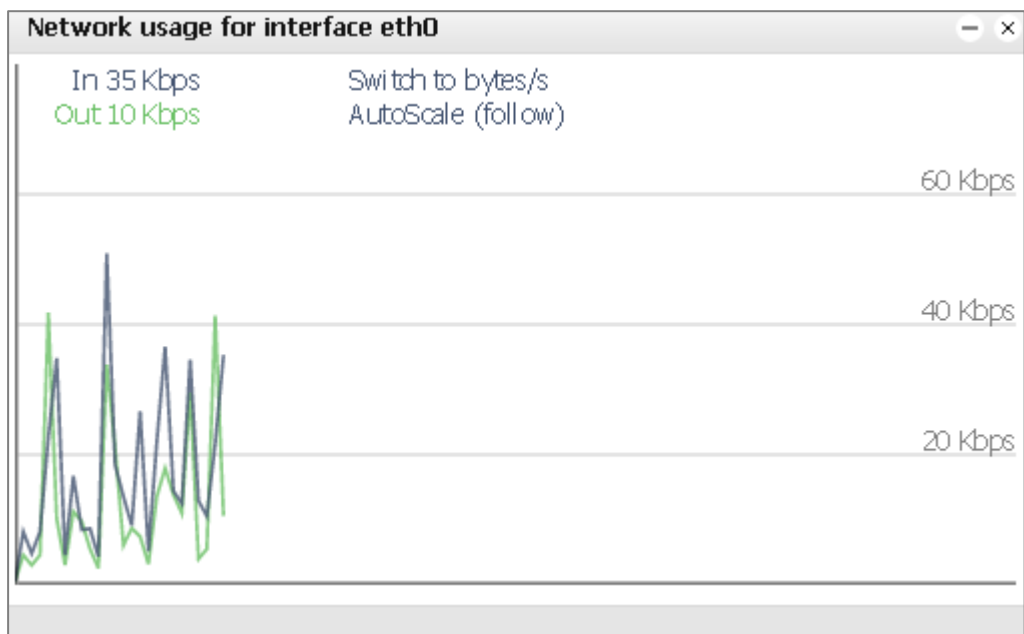

9.8. Routing Table

System routing table is located in *Network* → *Routes* menu.

| Routes | | | | |
|-----------|-------------|---------------|---------------|-------|
| Interface | Destination | Gateway | Network mask | Flags |
| eth0 | 0.0.0.0 | 192.168.1.100 | 0.0.0.0 | UG |
| eth0 | 192.168.1.0 | 0.0.0.0 | 255.255.255.0 | U |
| eth0 | 224.0.0.0 | 0.0.0.0 | 224.0.0.0 | U |

- **Interface** – interface name
- **Destination** – destination IP address
- **Network mask** – network mask
- **Gateway** – gateway IP address

9.9. ARP table

Address Resolution Protocol table is listed in *Network* → *ARP table*.

| ARP table | | | | |
|-----------|---------------|------|-------------------|-------|
| Interface | IP address | Mask | MAC address | Flags |
| eth0 | 192.168.1.208 | * | 00:0e:2e:cd:35:e9 | 0x2 |
| eth0 | 192.168.1.100 | * | 00:1c:c0:54:88:cb | 0x2 |

9.10. KNX connection

KNX specific configuration is located in *Network* ? *KNX connection* window.

KNX connection

General IP > TP filter TP > IP filter

Mode EIBnet/IP Routing

KNX address 15.15.2455

KNX IP features ☒

Multicast IP 224.0.23.12

Multicast TTL 1

Maximum telegrams in queue 100

OK Cancel

General tab

- **Mode** [*EIBnet IP Tunneling* / *EIBnet IP Tunneling(NAT mode)* / *EIBnet IP Routing*] – KNX connection mode. LogicMachine Ambient has KNX IP support, by default it is set to EIBnet IP Routing
- **KNX address** – KNX physical address of the device
- **KNX IP features** – Use this device with KNX IP features e.g. for KNXnet/IP network configuration
- **Multicast IP** – multicast IP address
- **Multicast TTL** – Time to live for multicast telegram in seconds
- **Maximum telegrams in queue** – count of maximum telegrams in the queue

IP > TP filter

Filtering table for telegrams going from IP network to KNX TP1 is located in this submenu.

KNX connection

General IP > TP filter TP > IP filter

Apply filter to tunneling ☐

SRC policy No filter

Ind. address list

One address/range per line. Use * (e.g. 1.1.*) to filter all addresses in the given line.

DST group policy No filter

Group address list 1/1/1-1/1/2

One address/range per line. Use * (e.g. 1/1/1/*) to filter all addresses in the given line.


Note: KNX IP features are required for filter to work.
Filtering lists are updated at once, changing policies requires restart.

OK Cancel

- **Apply filter to tunneling** – either to apply filter policy to telegrams in tunneling mode. If ETS is used it is recommended to turn this feature off.
- **SRC policy** [No filter / Accept selected individual addresses / Drop selected individual addresses]– policy to apply to the list of source addresses
- **Ind. address list** – list of individual addresses. One address/range per line. Use * (e.g. 1.1.*) to filter all addresses in the given line.
- **DST group policy**[No filter / Accept selected group addresses / Drop selected group addresses]– policy to apply to the list of destination group addresses
- **Group address list** – list of group addresses. One address/range per line. Use * (e.g. 1/1/*) to filter all addresses in the given line.

Note! *KNX IP features* should be on for filter to work. Filtering lists are updated at once, changing policies requires restart.

Note that group address list can be filled automatically by checking necessary group addresses in *LogicMachine* → *Objects* list

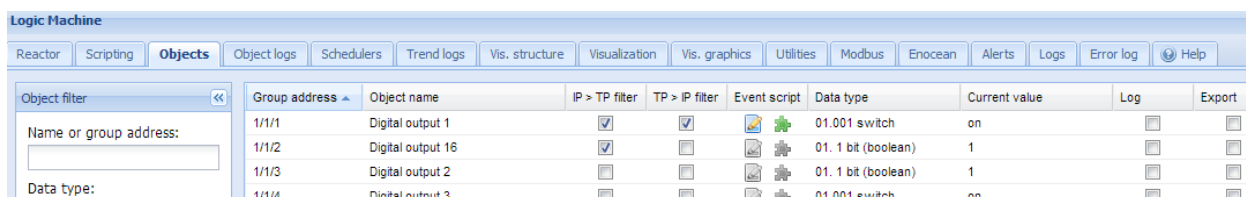

The screenshot shows the 'Logic Machine' interface with the 'Objects' tab selected. On the left, there is an 'Object filter' section with a search box labeled 'Name or group address:' and a dropdown for 'Data type:'. The main table lists objects with columns: Group address, Object name, IP > TP filter, TP > IP filter, Event script, Data type, Current value, Log, and Export.

| Group address | Object name | IP > TP filter | TP > IP filter | Event script | Data type | Current value | Log | Export |
|---------------|-------------------|-------------------------------------|-------------------------------------|--------------|---------------------|---------------|--------------------------|--------------------------|
| 1/1/1 | Digital output 1 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | | 01.001 switch | on | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/1/2 | Digital output 16 | <input checked="" type="checkbox"/> | <input type="checkbox"/> | | 01. 1 bit (boolean) | 1 | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/1/3 | Digital output 2 | <input type="checkbox"/> | <input type="checkbox"/> | | 01. 1 bit (boolean) | 1 | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/1/4 | Digital output 3 | <input type="checkbox"/> | <input type="checkbox"/> | | 01.001 switch | on | <input type="checkbox"/> | <input type="checkbox"/> |

TP > IP filter

Filtering table for telegrams going from KNX TP1 to IP network is located in this submenu.

KNX connection [X]

General | **IP > TP filter** | TP > IP filter

Apply filter to virtual objects ☐

SRC policy: No filter ▼

Ind. address list:

i One address/range per line. Use * (e.g. 1.1.*) to filter all addresses in the given line.

DST group policy: No filter ▼

Group address list: 1/1/1

i One address/range per line. Use * (e.g. 1/1/*) to filter all addresses in the given line.
Note: KNX IP features are required for filter to work.
Filtering lists are updated at once, changing policies requires restart.


OK Cancel

- **Apply filter to virtual objects** – either to apply filter policy to objects added in Objects tab as virtual objects without attraction to bus
- **SRC policy** [No filter / Accept selected individual addresses / Drop selected individual addresses]– policy to apply to the list of source individual addresses
- **Ind. address list** – list of individual addresses. One address/range per line. Use * (e.g. 1.1.*) to filter all addresses in the given line.
- **DST group policy** [No filter / Accept selected group addresses / Drop selected group addresses]– policy to apply to the list of destination group addresses
- **Group address list** – list of group addresses. One address/range per line. Use * (e.g. 1/1/*) to filter all addresses in the given line.

Note! *KNX IP features* should be on for filter to work. Filtering lists are updated at once, changing policies requires restart.

9.11. KNX statistics

KNX related statistics can be found in *Network* → *KNX statistics* menu.

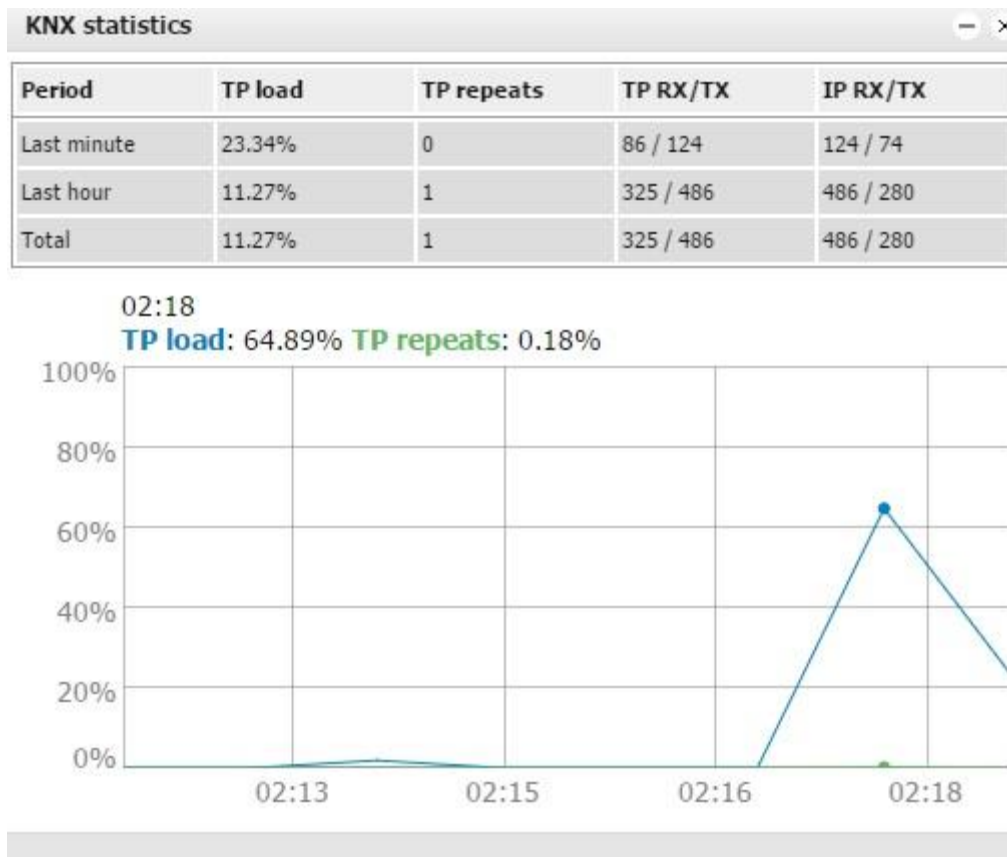

9.12. BACnet settings

BACnet server specific configuration can be done in *Network* → *BACnet Settings*

| BACnet settings | |
|---------------------------|-------------------------------------|
| Server enabled | <input checked="" type="checkbox"/> |
| Device ID | 222 |
| Password | mybacpwd |
| Object priority | 16 |
| Port | 47808 |
| BBMD IP | |
| BBMD port | |
| BBMD lease time (seconds) | |

Server enabled – specify if BACnet server is enabled or not

Device ID – device ID in BACnet network

Password – device password

Object priority – object priority


Port – port number

BBMD IP – BACnet router IP. When router IP and port are set, LM will act as a foreign device and will attempt to register with BACnet router.

BBMD port – BACnet router port. When router IP and port are set, LM will act as a foreign device and will attempt to register with BACnet router

BBMD lease time (seconds) – registration resend interval

To make KNX/EIB objects BACnet readable/writable, mark necessary objects in LogicMachine as “Export object”. Binary objects will appear as Binary Values, other numeric values will appear as Analog Values. Other types are not currently supported. KNX bus write changes priority array value at configured object priority index

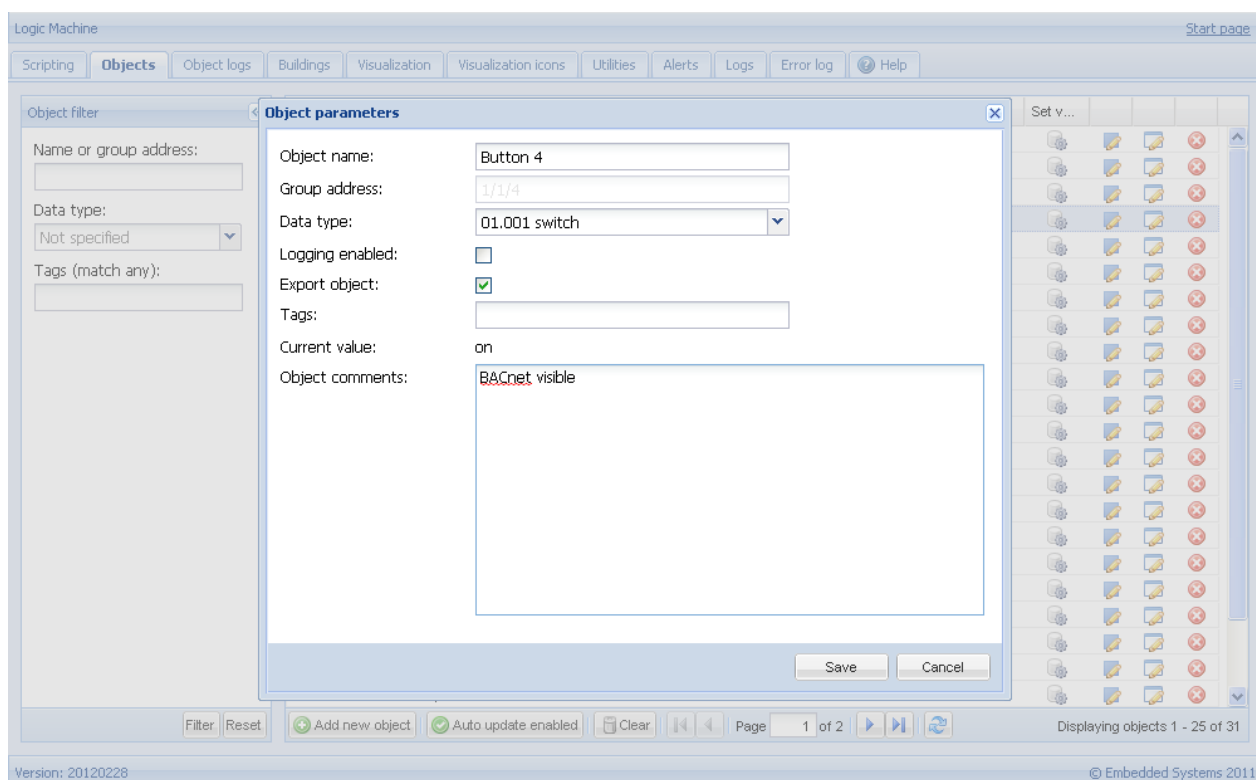

9.13. BACnet objects

In *Network* → *BACnet objects* you can see marked objects on LogicMachine which are sent to BACnet network.

BACnet objects

— ×

Device name: LogicMachine_222

Device ID: 222

Object priority: 16


Port: 47808

Download CSV

| Type | Instance | Device name | Current value |
|--------|----------|------------------------|---------------|
| 2 (AV) | 6500 | PassivPlus 1 (3.1.100) | 29 |
| 2 (AV) | 6501 | PassivPlus 2 (3.1.101) | 29 |

9.14. HTTP server


In case additional www ports are needed to run the web-server on, use *Network* → *HTTP server* menu. Default HTTP port is 80, default HTTPS port is 443.

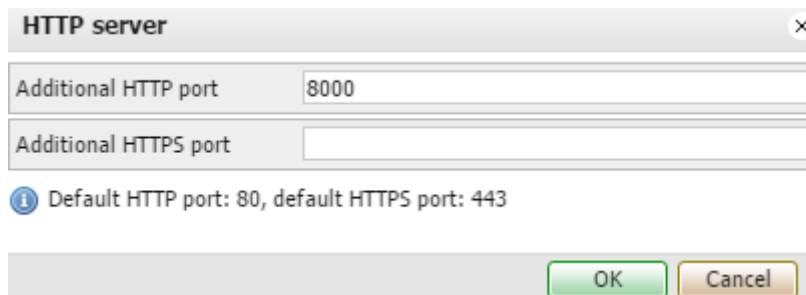

The screenshot shows a dialog box titled "HTTP server" with a close button (X) in the top right corner. It contains two input fields: "Additional HTTP port" with the value "8000" and "Additional HTTPS port" which is empty. Below these fields is an information icon (i) followed by the text "Default HTTP port: 80, default HTTPS port: 443". At the bottom right are "OK" and "Cancel" buttons.

9.15. FTP server

You can enable access to FTP server of LogicMachine by enabling this service in *Service* → *FTP Server*.

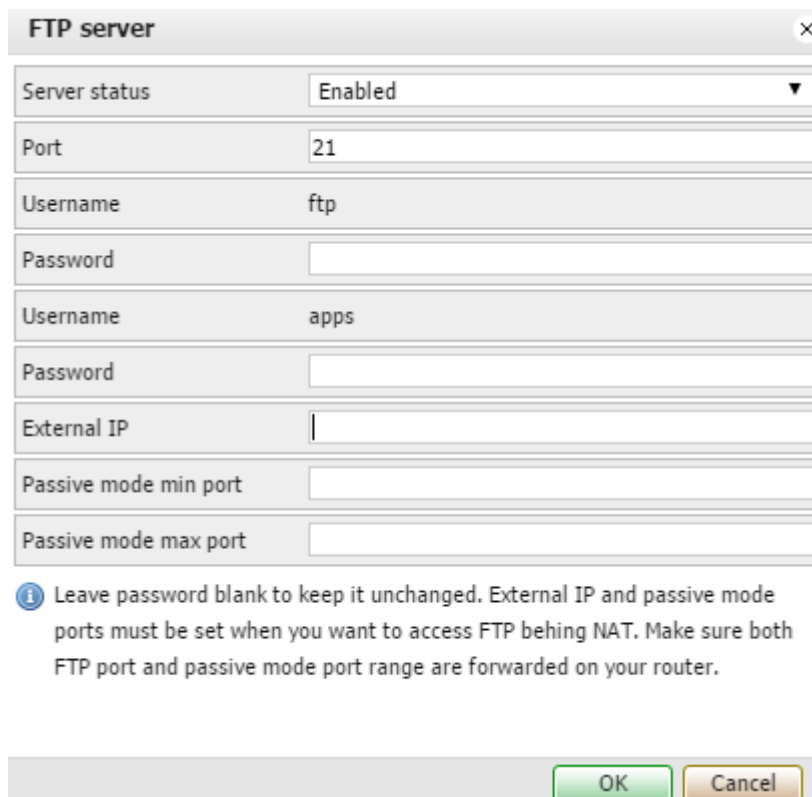

The screenshot shows a dialog box titled "FTP server" with a close button (X) in the top right corner. It contains several fields: "Server status" is a dropdown menu set to "Enabled"; "Port" is an input field with "21"; "Username" is an input field with "ftp"; "Password" is an empty input field; "Username" is an input field with "apps"; "Password" is an empty input field; "External IP" is an empty input field; "Passive mode min port" is an empty input field; and "Passive mode max port" is an empty input field. Below these fields is an information icon (i) followed by the text: "Leave password blank to keep it unchanged. External IP and passive mode ports must be set when you want to access FTP behind NAT. Make sure both FTP port and passive mode port range are forwarded on your router." At the bottom right are "OK" and "Cancel" buttons.

- **Server status** – define either FTP server is enabled or disabled
- **Port** – port of the service
- **Username** – login name, *ftp*
- **Password** – password for user *ftp*, length 4-20 symbols

- **Username** – login name to user directory <http://IP/user>, *apps* user. You can enable or disable password authorization for this directory in *Logic Machine* → *User access* → *User access settings*
- **Password** – password for user *apps*, length 4-20 symbols
- **Passive mode min port** – FTP passive mode minimum port
- **Passive mode max port** – FTP passive mode maximum port

9.16. Remote services

- **Service status** – define either remote services are enabled or disabled
- **Username** – user name
- **Password** – password

URL

Change the IP and password according to your LM settings

```
http://remote:remote@192.168.0.10/cgi-bin/scada-remote/request.cgi?m=rss&r=alerts
```

Request parameters

m set the return value format

- **json**
- **xml**
- **rss** only for alerts and errors

r requested function name

- **alerts** newest 50 alerts

Return values:

- **alert** alert text

- `time` alert time (UNIX timestamp)
- `date` alert time (RFC date)

- `errors` newest 50 errors

Return values:

- `error` error text
- `script` error script name
- `time` error time (UNIX timestamp)
- `date` error time (RFC date)

- `objects` list of objects marked for export, ordered by update time

Return values:

- `address` object address (e.g. "1/1/1")
- `name` object name (e.g. "My object")
- `data` decoded object value (e.g. 42 or "01.01.2012")
- `datatype` object datatype (e.g. 1 or 5.001)
- `time` object update time (UNIX timestamp)
- `date` object update time (RFC date)
- `comment` object comment (e.g. "Second floor entry lights")
- `tags` optional array of object tags (e.g. "Light", "Second floor")

- `grp` execute one of grp functions

Parameters:

- `fn` function name, *required*
 - `getvalue` returns current object value if found
 - `find` return object info
 - `write` send KNX bus group write telegram
 - `response` send KNX bus group response telegram
 - `read` send KNX bus group read telegram
 - `update` update local LM object value without KNX bus group write

- `alias` group address or name, *required*

- `value` new value to write, *required* for write / response / update, except for time and date datatypes

Parameters for `time` datatype:

- `day` number (0-7), day of the week, *optional*

- `hour` number (0-23)
- `minute` number (0-59)
- `second` number (0-59)

Parameters for `date` datatype:

- `day` number (1-31)
- `month` number (1-12)
- `year` number (1990-2089)
- `datatype` *optional* for write / response / update, data type is taken from the **database** if not specified

Possible values:

| | | | | | | | | |
|-------------------|-------------------|---------------------|--------------------|----------------------|---------------------|---------------------|--------------------|----------------------|
| <code>bool</code> | <code>bit2</code> | <code>bit4</code> | <code>char</code> | <code>uint8</code> | <code>int8</code> | <code>uint16</code> | <code>int16</code> | <code>float16</code> |
| <code>time</code> | <code>date</code> | <code>uint32</code> | <code>int32</code> | <code>float32</code> | <code>access</code> | <code>string</code> | | |

Examples

Write value of `50` to `1/1/1`

```
http://remote:remote@192.168.0.10/cgi-bin/scada-remote/request.cgi?m=json&r=grp&fn=write&alias=1/1/1&value=50
```

Write boolean value to `1/1/2`, you can use `true` or `false`, as well as `1` or `0`


```
http://remote:remote@192.168.0.10/cgi-bin/scada-remote/request.cgi?m=json&r=grp&fn=write&alias=1/1/2&value=true
```

Explicit datatype setting to `scale`, send `50` to `1/1/1`

```
http://remote:remote@192.168.0.10/cgi-bin/scada-remote/request.cgi?m=json&r=grp&fn=write&alias=1/1/1&value=50&datatype=scale
```


9.17. System monitoring

System monitoring is used to monitor system processes, hardware. In case of failure, the system will be rebooted or specific task restarted.

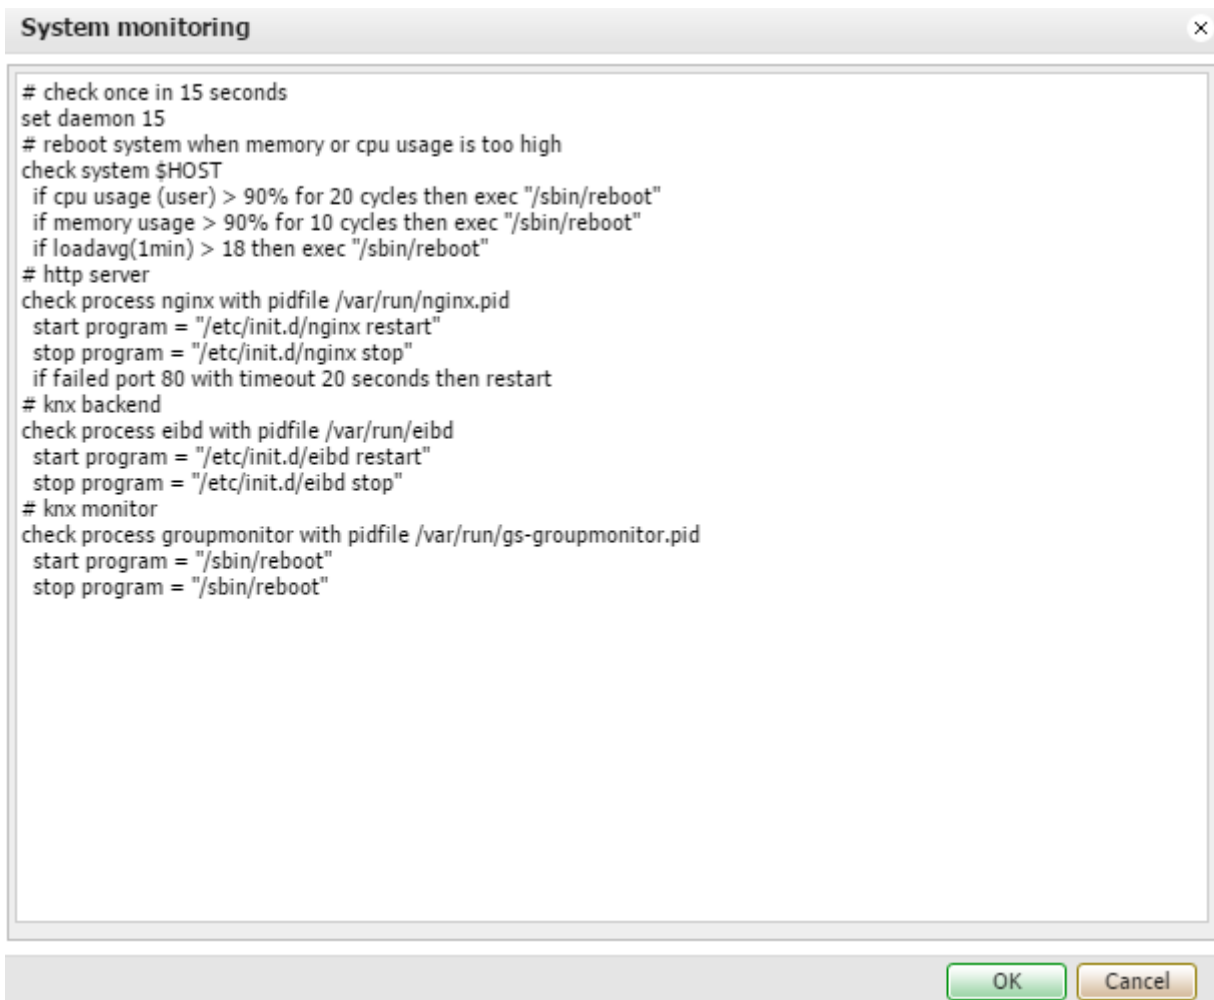

9.18. Remote diagnostics

Remote diagnostics should be enabled only when there is remote Embedded Systems support necessary for the device. It enables SSH access to the device.

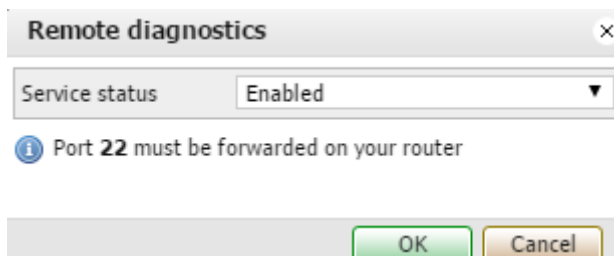

- **Service status** – define either remote SSH access is enabled or disabled.

9.19. NTP client

NTP servers can be specified in *Service* → *NTP client* window.

NTP client (clock synchronization)

Server 1

0.europe.pool.ntp.org

Server 2

1.europe.pool.ntp.org

Server 3

2.europe.pool.ntp.org

Server 4

3.europe.pool.ntp.org

OK

Cancel

9.20. System status

General system status with CPU usage, Memory usage, Partition, Serial ports information can be seen in *Status* →*System status* window.

System status

General

Memory usage


Partitions

Serial ports

| Parameter | Value |
|----------------------|------------------------|
| CPU model | ARM926EJ-S rev 5 (v5l) |
| CPU BogoMips | 227.12 |
| Linux kernel version | 3.18.24 |
| System uptime | 2d 2h 0m |
| Load averages | 0.01 0.03 0.05 |


9.21. Network utilities

Ping and *Traceroute* utilities are located in *Status* → *Network utilities* window. Both IP address and DNS names are accepted.

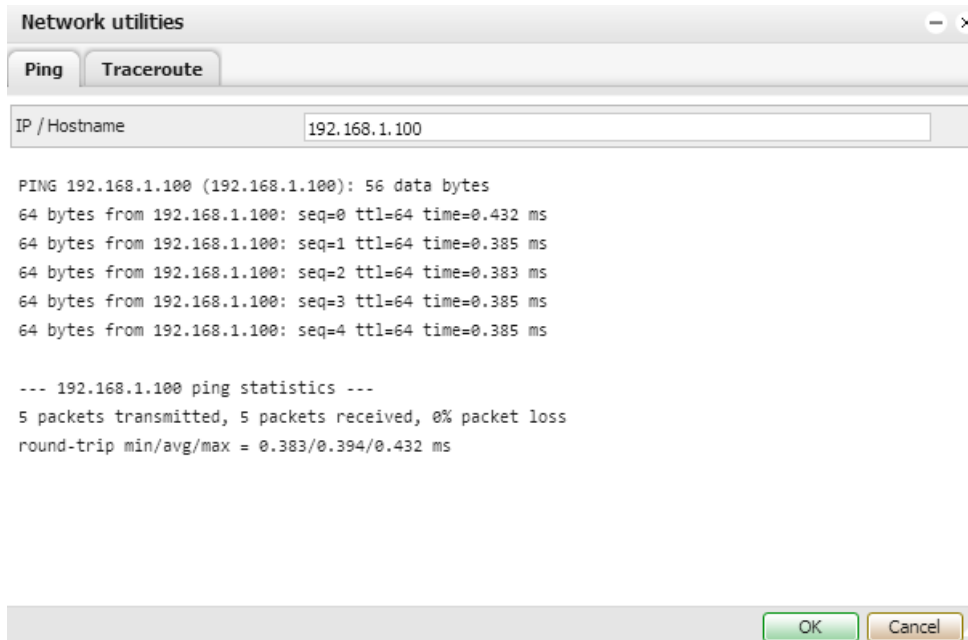


9.22. System log

Operating system log is available in *Status* → *System log*.

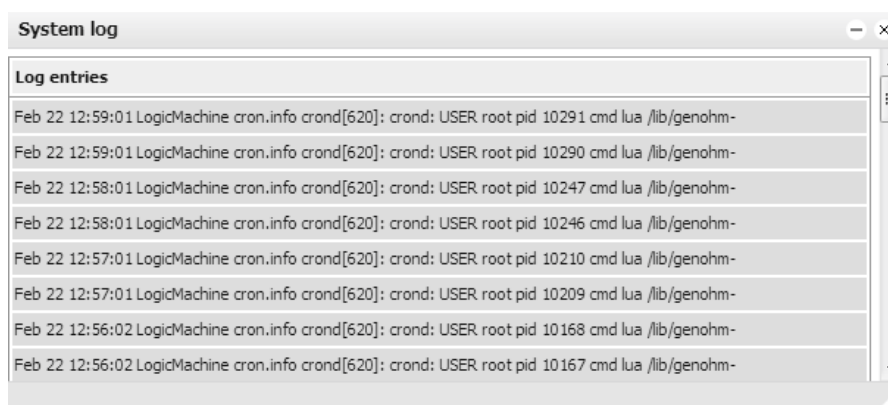

9.23. Running processes

System running processes can be seen in *Status* → *Running processes* window.

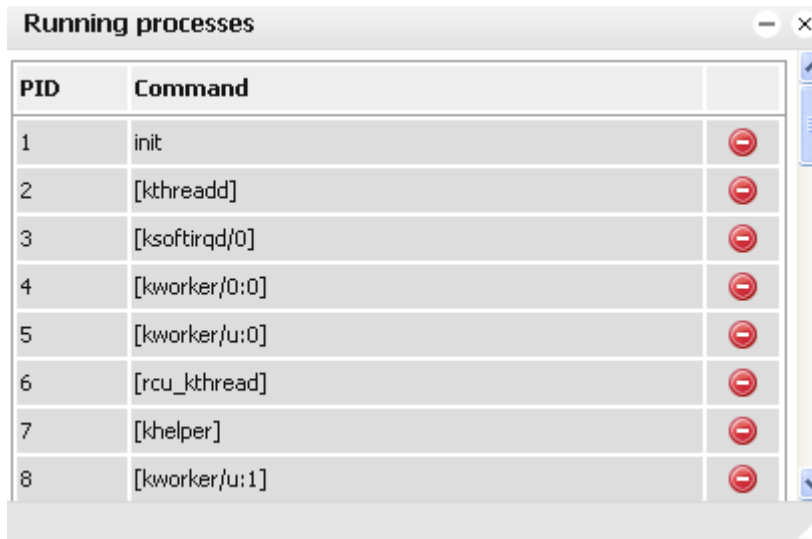

The screenshot shows a window titled "Running processes" with a table of system processes. The table has three columns: "PID", "Command", and a red minus button. The processes listed are:

| PID | Command | |
|-----|---------------|---|
| 1 | init | ⊖ |
| 2 | [kthreadd] | ⊖ |
| 3 | [ksoftirqd/0] | ⊖ |
| 4 | [kworker/0:0] | ⊖ |
| 5 | [kworker/u:0] | ⊖ |
| 6 | [rcu_kthread] | ⊖ |
| 7 | [khelper] | ⊖ |
| 8 | [kworker/u:1] | ⊖ |

10. User mode schedulers

User mode schedulers contains user-friendly interface for end-user to manage scheduler tasks, for example, specify thermostat values depending of the day of the week, time and holidays.

10.1. Events

Each scheduler is mapped to specific group address in administration panel (*see section 1.4 of this manual*).

The screenshot shows the 'Outdoor lamp' scheduler configuration interface. On the left, a sidebar contains a blue button labeled 'Outdoor lamp' and two links, 'AC' and 'Holidays'. The main area is titled 'Outdoor lamp' and shows the status 'active, period: 1 January - 31 December' with an 'Edit' button. Below this is a table with two columns: 'Value' and 'Run at'. The table contains two rows: 'Light off' at '12:00 Tu-Fr' and 'Light off' at '13:00 Sa-Su Holiday'. On the right, the 'Add event' panel is visible, featuring a checked 'Event is active' checkbox, a 'Run at' section with time pickers set to '12' and '00', day selection buttons for 'Mo', 'Tu', 'We', 'Th', 'Fr', 'Sa', 'Su', 'Holiday', and 'All', a 'Value' dropdown menu currently showing 'Light on', and 'Save' and 'Cancel' buttons at the bottom.

When adding the new task for specific scheduler you can specify day of the week, start time, value to send to the object.

10.2. Holidays

In *Holidays* special days are specified which are then used adding new events.

<

Holidays

>

Outdoor lamp

AC

Holidays

| Name | Date | |
|-------------|------------------|--|
| New Year | 31 December 2013 | <div>+ Add holiday</div> <div>EditDelete</div> |
| New holiday | 24 October | <div>EditDelete</div> |

Click on *Add new holiday* button to specify a holiday.

<

Holidays

>

Outdoor lamp

AC

Holidays

| Name | Date |
|-------------|------------------|
| New Year | 31 December 2013 |
| New holiday | 24 October |

Add holiday

Name

New holiday

Date

←October 2013→


| Mo | Tu | We | Th | Fr | Sa | Su |
|----|----|----|----|----|----|----|
| 30 | 1 | 2 | 3 | 4 | 5 | 6 |
| 7 | 8 | 9 | 10 | 11 | 12 | 13 |
| 14 | 15 | 16 | 17 | 18 | 19 | 20 |
| 21 | 22 | 23 | 24 | 25 | 26 | 27 |
| 28 | 29 | 30 | 31 | 1 | 2 | 3 |
| 4 | 5 | 6 | 7 | 8 | 9 | 10 |


☐ Recurring every year


SaveCancel

11. Trend logs

Trend logs are end user interface for trends (*defined in administrator interface in section 1.5*).

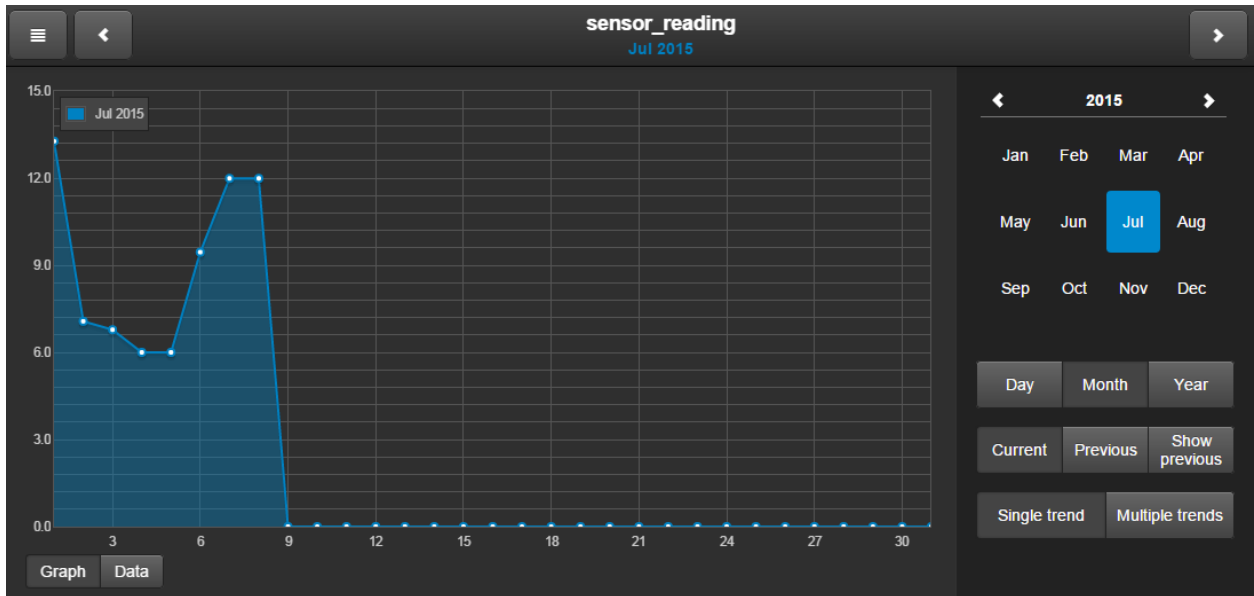


By clicking on the menu button  you can change to different trends where each is mapped to a specific KNX group address.

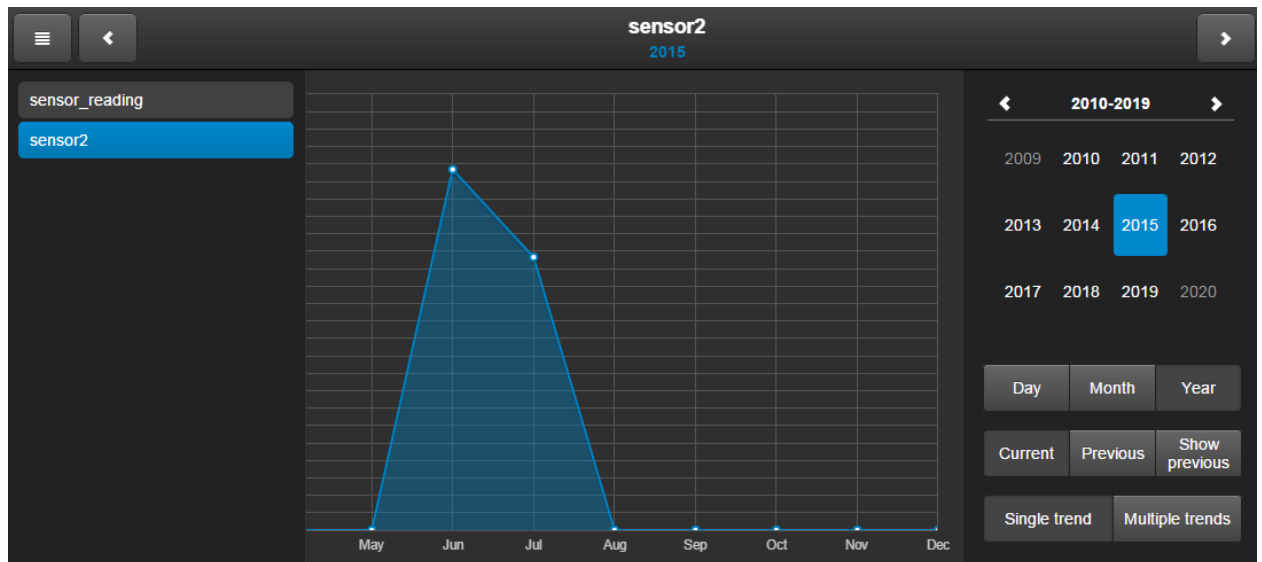


- **Day** – Trend with Day view
- **Month** – Trend with Month view
- **Year** – Trend with year view
- **Current** – Current trend is drawn in blue, you can choose either to show Day, Month or Year view
- **Previous** – previous time period, you can choose either to show Day, Month or Year view


- **Show previous** – when enabled a yellow trend line appears showing *Previous* trend above *Current* trend

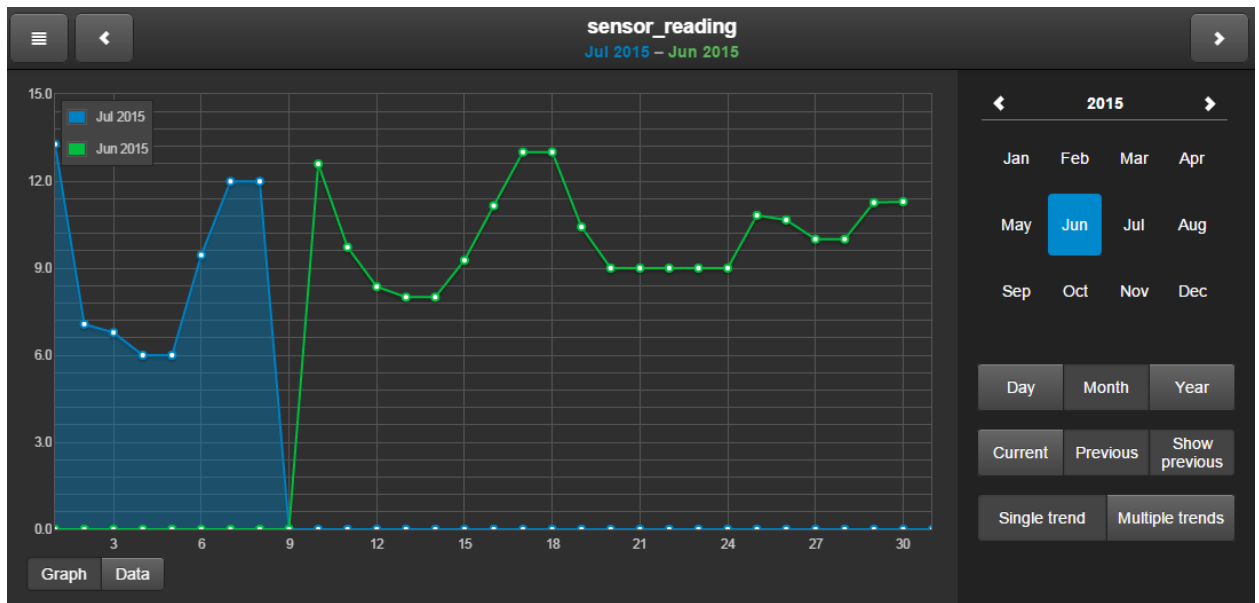

- **Single trend** – view single trend
- **Multiple trends** – view multiple trends. When this mode is chosen, you can select several object on the left side to be shown

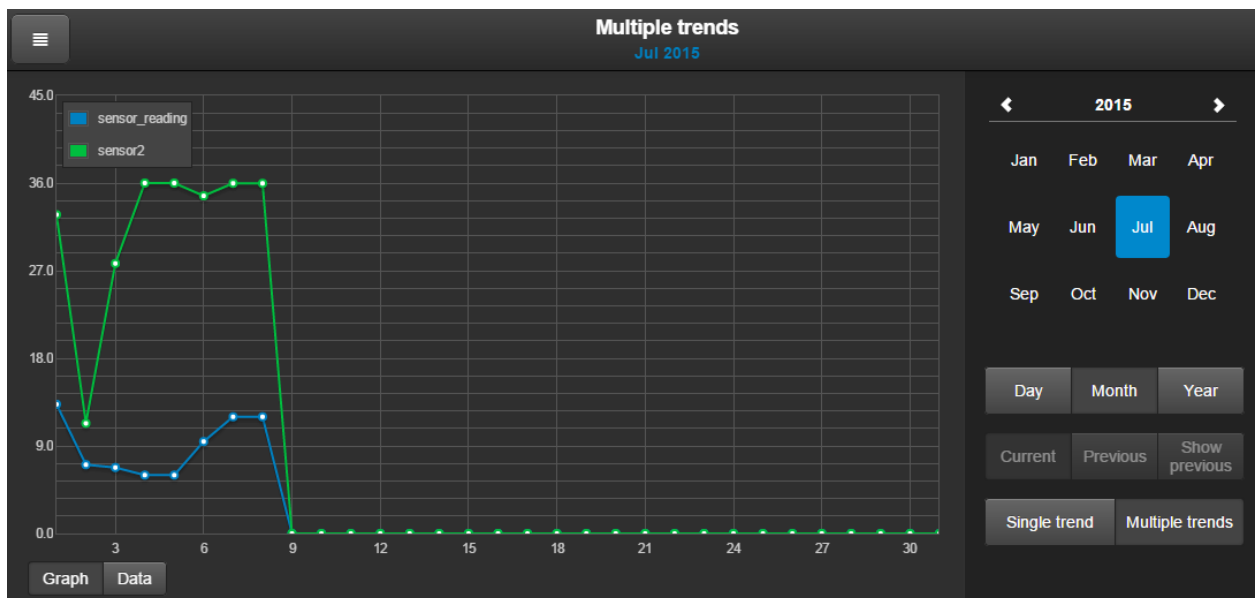


By clicking on *Data* button, data points will be shown in a way of table which can be later exported as CSV file.

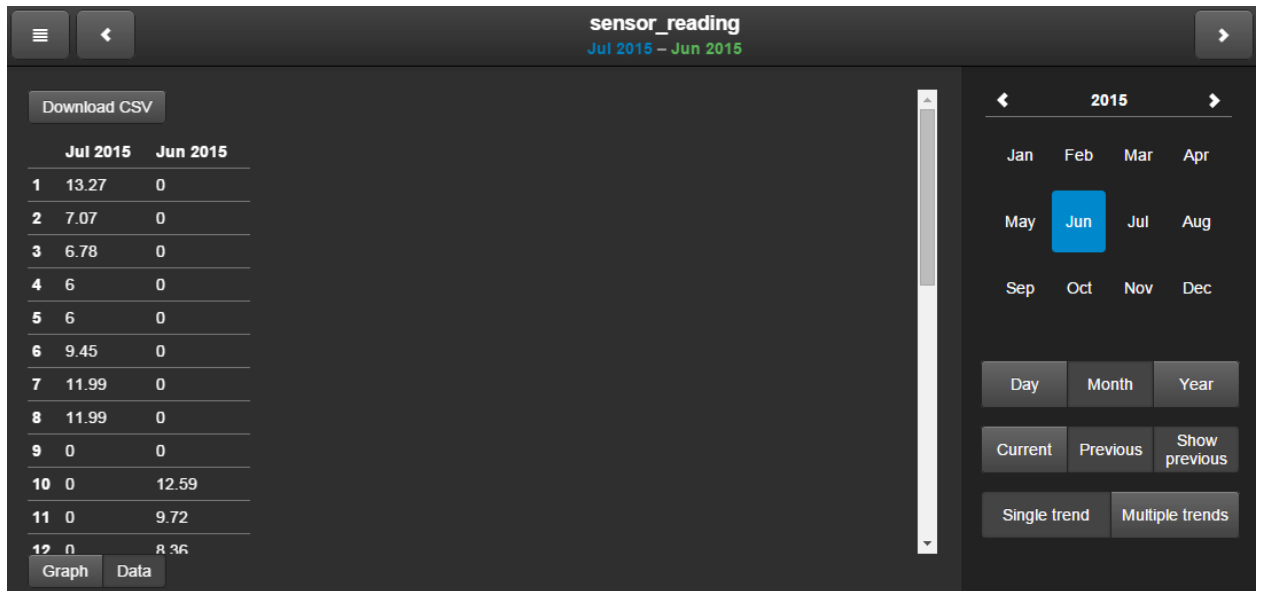

12. Modbus RTU/TCP interconnection with LM

Modbus TCP support is added by installing a special package through *Sys config* → *System* → *Packages*. Modbus TCP is supported over Ethernet port. Modbus communication is done either from visual Modbus mapper for Modbus Master or through scripts for Modbus Slave.

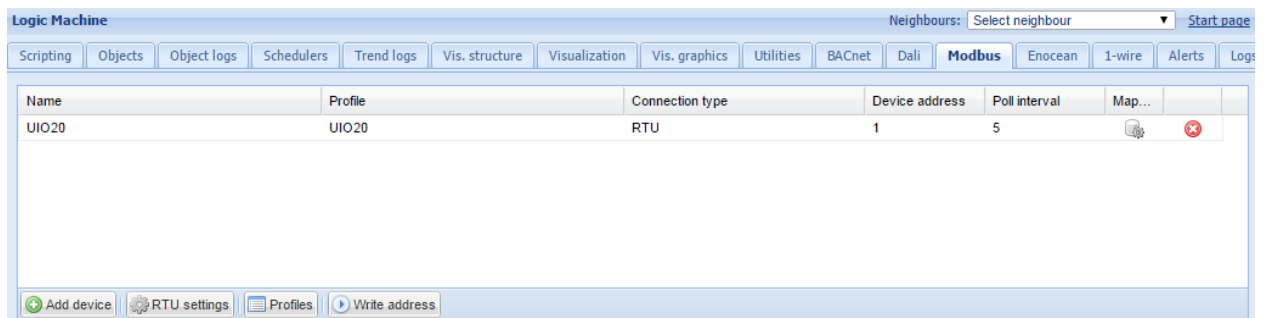

Modbus Master – user graphical mapper interface in Modbus tab

Modbus Slave – to use LM as Modbus Slave, disable Modbus RTU in Modbus → RTU settings, and use scripts for the communication

12.1. Modbus device profile

First thing you should do is to define Modbus device profile – it is a *.json file with the following structure e.g. a fragment from UIO20 device by Embedded Systems:

```
{
  "manufacturer": "Embedded Systems",
  "description": "Universal 16+4 I/O module",
  "mapping": [
    { "name": "Output 1", "bus_datatype": "bool", "type": "coil", "address": 0, "writable": 1 },
    { "name": "Input 1", "bus_datatype": "float16", "type": "inputregister", "address": 0,
      "value_multiplier": 0.001, "units": "V" }
  ]
}
```

Name – Object name, e.g. Output 2 (String, Required)

Bus_datatype - KNX object data type, key from [dt](#) table, e.g. float32 (String/Number, Required)

Type – Modbus register type, possible values: [coil](#) [discreteinput](#) [register](#) [inputregister](#) (String, Required)

Address – Register address (0-based) (Number, Required)

Writable - Set to [true](#) to enable writing to register if [type](#) is either [coil](#) or [register](#) (Boolean)

Datatype – Modbus value data type. If set, conversion will be done automatically.

Possible values: [uint16](#) [int16](#) [float16](#) [uint32](#) [int32](#) [float32](#) [uint64](#) [int64](#) [quad10k](#) [s10k](#) (String)

Value_delta – New value is sent when the difference between previously sent value and current value is larger than delta. Defaults to 0 (send after each read) (Number)

Value_multiplier – Multiply resulting value by the specified number, $value = value_base + value * value_multiplier$ (Number)

Value_bitmask – Bit mask to apply, shifting is done automatically based on least significant 1 found in the mask (Number)

Value_nan – Array of 16-bit integers. If specified and read operation returns the same array no further processing of value is done (Array)

Value_conv – Apply one of built-in conversion functions (String, Internal)

Value_custom – Name of a built-in enumeration or a list of [key](#) -> [value](#) mapping, resulting value will be 0 if key is not found (String/Object)

Internal – Not visible to user when set to [true](#), should be used for [scale](#) registers (Boolean)

Units – KNX object units/suffix (String)


Address_scale – Address of register containing value scale, $value = value * 10 ^ scale$ (Number)

Read_count – Number of register to read at once (for devices that only support reading of a specific block of registers) (Number)

Read_swap – Swap register order during conversion (endianness) (Boolean)

Read_offset – Position of first register of data from the block of registers (0-based) (Number)

When the Modbus device profile file is created, upload it by clicking on *Profiles* button.

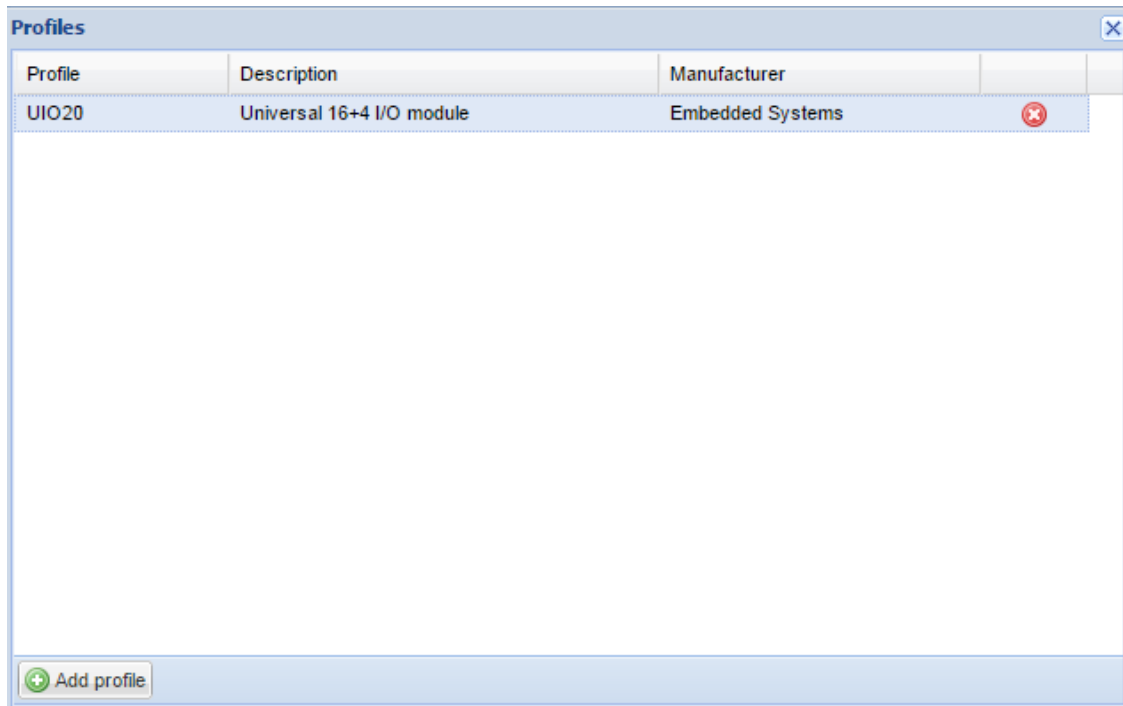

12.2. Adding Modbus device

Once profiles are added, add Modbus device by clicking *Add device* button.

Connection type: ☐ RTU (RS-485) ☒ TCP/IP

Name:

Profile:

IP:


Port:

Device address:
































Poll interval:

Save Cancel

- **Connection type** – define either it is Modbus RTU or Modbus TCP connection
- **Name** – name of the device
- **Profile** – profile of the device
- **Device address** – device address
- **Poll interval (seconds)** – interval to poll the device
- **IP** – IP address of the device in case Modbus TCP is used
- **Port** – Communication port of the device in case Modbus TCP is used

Once the device is added, you can do mapping to KNX addresses by clicking on  icon. First, you see a list of all objects on the Modbus device.



Object mapping for UIO20


| Name | Linked to object | Current value | Type | |
|-------------------|------------------|---------------|--------------------|---|
| UIO20 - Output 1 | | | Coil: 0 |  |
| UIO20 - Output 2 | | | Coil: 1 |  |
| UIO20 - Output 3 | | | Coil: 2 |  |
| UIO20 - Output 4 | | | Coil: 3 |  |
| UIO20 - Output 5 | | | Coil: 4 |  |
| UIO20 - Output 6 | | | Coil: 5 |  |
| UIO20 - Output 7 | | | Coil: 6 |  |
| UIO20 - Output 8 | | | Coil: 7 |  |
| UIO20 - Output 9 | | | Coil: 8 |  |
| UIO20 - Output 10 | | | Coil: 9 |  |
| UIO20 - Output 11 | | | Coil: 10 |  |
| UIO20 - Output 12 | | | Coil: 11 |  |
| UIO20 - Output 13 | | | Coil: 12 |  |
| UIO20 - Output 14 | | | Coil: 13 |  |
| UIO20 - Output 15 | | | Coil: 14 |  |
| UIO20 - Output 16 | | | Coil: 15 |  |
| UIO20 - Input 1 | | | Input register: 0 |  |
| UIO20 - Input 2 | | | Input register: 1 |  |
| UIO20 - Input 3 | | | Input register: 2 |  |
| UIO20 - Input 4 | | | Input register: 3 |  |
| UIO20 - Input 5 | | | Input register: 4 |  |
| UIO20 - Input 6 | | | Input register: 5 |  |
| UIO20 - Input 7 | | | Input register: 6 |  |
| UIO20 - Input 8 | | | Input register: 7 |  |
| UIO20 - Input 9 | | | Input register: 8 |  |
| UIO20 - Input 10 | | | Input register: 9 |  |
| UIO20 - Input 11 | | | Input register: 10 |  |
| UIO20 - Input 12 | | | Input register: 11 |  |
| UIO20 - Input 13 | | | Input register: 12 |  |
| UIO20 - Input 14 | | | Input register: 13 |  |
| UIO20 - Input 15 | | | Input register: 14 |  |

Click on specific object to do mapping.

Mapping for UIO20 - Output 1

Name: UIO20 - Output 1

Link to object: 1/1/1  

Write to bus: 



Tags:


Comments:

Save Cancel

12.3. Program address for UIO20 Modbus device

Write new device address

Device address: 2  

 Press programming button and click save afterwards. Programming LED will turn off after successful write operation.

Save Cancel

There is a separate Write address button to program address for UIO20 device. Press programming button and click save afterwards. Programming LED will turn off after successful write operation.

Once script is added, you can add the code in the Script Editor. There are lots of predefined code blocks in the Helpers.

12.4. Modbus Slave examples

Add the following code to *Common functions*

```
1. -- modbus proxy
2. mbproxy = {
3. -- supported function list
4.   functions = {
5.     'readdo',
6.     'readcoils',
7.     'readdi',
8.     'readdiscreteinputs',
9.     'readao',
10.    'readregisters',
11.    'readai',
12.    'readinputregisters',
13.    'writebits',
14.    'writemultiplebits',
15.    'writeregisters',
16.    'writemultipleregisters',
17.    'reportslaveid',
18.    'getcoils',
19.    'getdiscreteinputs',
20.    'getinputregisters',
21.    'getregisters',
22.    'setcoils',
23.    'setdiscreteinputs',
24.    'setinputregisters',
25.    'setregisters',
26.  },
27. -- new connecton init
28.   new = function()
29.     require('rpc')
30.     local mb = setmetatable({}, { __index = mbproxy })
31.
32.     mb.slaveid = 0
33.     mb.rpc = rpc.client('127.0.0.1', 28002, 'mbproxy')
34.
35.     for _, fn in ipairs(mbproxy.functions) do
36.       mb[fn] = function(self, ...)
```

```

37. return mb:request(fn, ...)
38. end
39. end
40.
41. return mb
42. end
43. }
44.
45. -- set local slave id
46. function mbproxy:setslave(slaveid)
47.   self.slaveid = slaveid
48. end
49.
50. -- send rpc request for a spefic function
51. function mbproxy:request(fn, ...)
52. local res, err = self.rpc:request({
53.   fn = fn,
54.   params = { ... },
55.   slaveid = self.slaveid or 0,
56. })
57.
58. -- request error
59. if err then
60. return nil, err
61. -- request ok
62. else
63. -- reply with an error
64. if res[ 1 ]==nil then
65. return nil, res[2]
66. -- normal reply
67. else
68. return unpack(res)
69. end
70. end
71. end

```

Handler (resident script with 0 delay) configuration

1. *mb:open()*

Open Modbus TCP connection

2. *mb:setslave(10)*

set slave device id

3. *mb:setmapping(10, 10, 10, 10)*

set number coils, discrete inputs, holding registers and input registers

4. *mb:setwritecoilcb(function(coil, value)...*

callback function which is executed for each coil write

5. *mb:setwriteregistercb(function(coil, value)...*

callback function which is executed for each register write

Handler script example

```
1.  -- modbus init
2.  if not mb then
3.    require('luamodbus')
4.    mb = luamodbus.tcp()
5.    mb:open()
6.
7.  -- init slave storage for coils, discrete inputs, holding registers and input registers
8.    mb:setmapping(10, 10, 10, 10)
9.
10. -- coil write callback
11.  mb:setwritecoilcb(function(coil, value)
12.  if coil == 0 then
13.    grp.write('1/1/1', value, dt.bool)
14.  else
15.    alert('coil: %d = %s', coil, tostring(value))
16.  end
17. end)
18.
19. -- register write callback
20.  mb:setwriteregistercb(function(register, value)
21.  if register == 0 then
22.    -- send value limited to 0..100
23.    grp.write('4/1/5', math.min(100, value), dt.scale)
24.  else
25.    alert('register: %d = %d', register, value)
26.  end
27. end
28. end
29.
30. -- server part init
31.  if not server then
32.    require('rpc')
33.
34.  -- incoming data handler
35.  local handler = function(request)
36.  local fn, res
37.
```

```

38.     fn =tostring(request.fn)
39.
40.     if not mb[ fn ]then
41.         return{nil, 'unknown function ' .. fn }
42.     end
43.
44.     if type(request.params)=='table' then
45.         table.insert(request.params, 1, mb)
46.         res ={ mb[ fn ](unpack(request.params))}
47.     else
48.         res ={ mb[ fn ](mb)}
49.     end
50.
51.     return res
52. end
53.
54.     server = rpc.server('127.0.0.1', 28002, 'mbproxy', handler, 0.01)
55. end
56.
57. mb:handleslave()
58. server:step()

```

Example: event script which changes modbus slave coil (address 0)

Must be mapped to a group address with binary value.

```

1. value = event.getvalue()
2. mb = mbproxy.new()
3. mb:setcoils(0, value)

```

Example: event script which changes modbus slave register (address 5)

Must be mapped to a group address with scaling (0..100) value

```


1. value = event.getvalue()
2. mb = mbproxy.new()
3. mb:setregisters(5, value)

```

13. BACnet IP interconnection with LM4

13.1. BACnet server mode: transparent data transfer to BACnet network

BACnet server specific configuration can be done in *Sys Config* → *Network* → *BACnet Settings*.

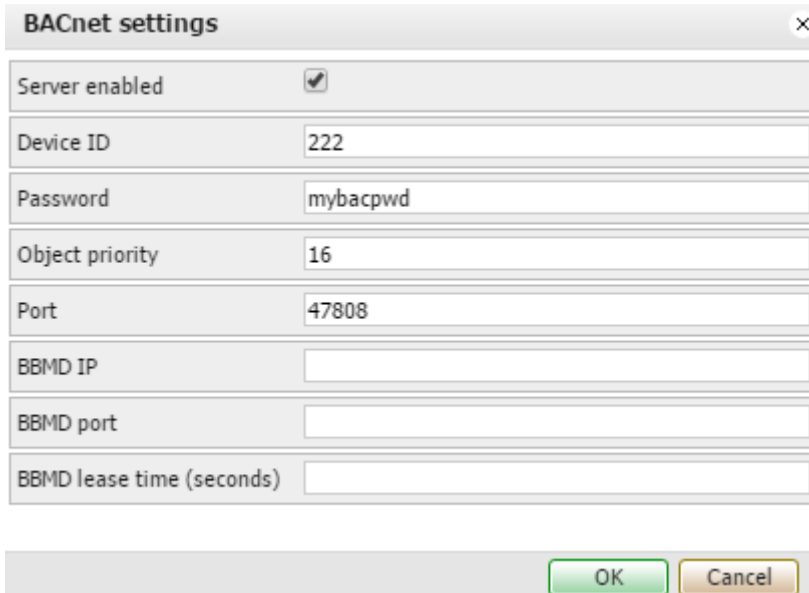


| BACnet settings | |
|---------------------------|-------------------------------------|
| Server enabled | <input checked="" type="checkbox"/> |
| Device ID | 222 |
| Password | mybacpwd |
| Object priority | 16 |
| Port | 47808 |
| BBMD IP | |
| BBMD port | |
| BBMD lease time (seconds) | |

OK Cancel

- **Server enabled** – specify if BACnet server is enabled or not
- **Device ID** – device ID in BACnet network
- **Password** – device password
- **Object priority** – object priority
- **Port** – port number
- **BBMD IP** – BACnet router IP. When router IP and port are set, LM will act as a foreign device and will attempt to register with BACnet router.
- **BBMD port** – BACnet router port. When router IP and port are set, LM will act as a foreign device and will attempt to register with BACnet router
- **BBMD lease time (seconds)** – registration resend interval

To make KNX/EIB objects BACnet readable/writable, mark necessary objects in LogicMachine as “Export object”. Binary objects will appear as Binary Values, other numeric values will appear as Analog Values. Other types are not currently supported. KNX bus write changes priority array value at configured object priority index

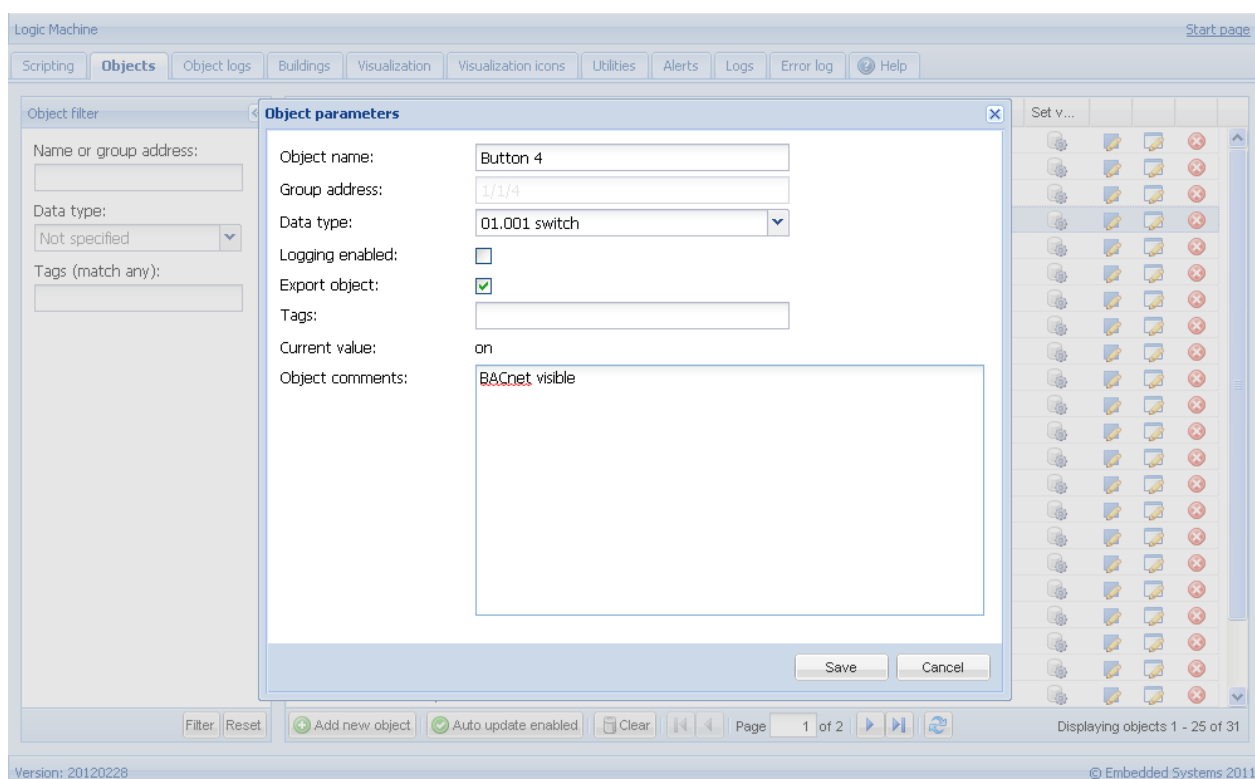

In **System Configuration** → **Network** → **BACnet objects** you can see marked objects on LogicMachine which are sent to BACnet network.

BACnet objects
⌵ ⌵

Device name: LogicMachine_222

Device ID: 222

Object priority: 16


Port: 47808

Download CSV

| Type | Instance | Device name | Current value |
|--------|----------|-------------------------|---------------|
| 2 (AV) | 6500 | PassivPluss 1 (3.1.100) | 29 |
| 2 (AV) | 6501 | PassivPluss 2 (3.1.101) | 29 |

13.2. BACnet client mode

Normally this mode is used to interconnect LogicMachine, for example, with VRV systems over BACnet IP protocol. The settings are available in BACnet tab.

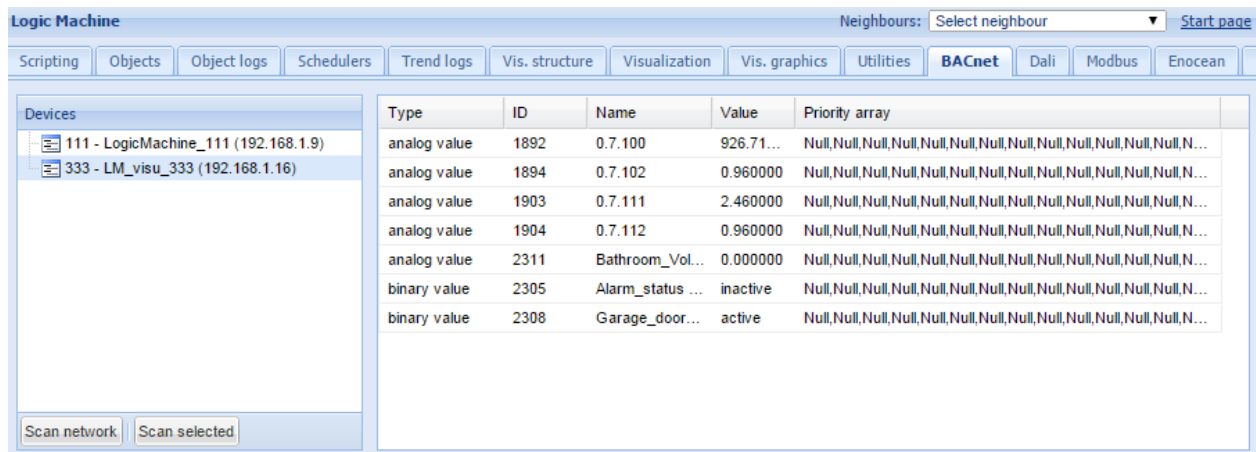

By clicking on *Scan Network* button you can see a list of BACnet server devices on the network. With *Scan Selected* you can rescan specific BACnet server for respective objects.

Mapping to KNX objects currently is done over scripting.

Before using any BACnet function, you must include the library:

```
require('bacnet')
```

Read current value of binary or analog object:

```
bacnet.readvalue(device_id, object_type, object_id)
```

Read binary object:

```
value = bacnet.readvalue(127001, 'binary value', 2305)
```

Read analog object:

```
value = bacnet.readvalue(127001, 'analog value', 2306)
```

Write new value to binary or analog object priority array:

```
bacnet.write = function(device_id, object_type, object_id, value, priority)
```

Value can be nil, boolean, number or a numeric string

Priority parameter is optional, lowest priority is used by default

Set binary object value:

```
bacnet.write(127001, 'binary value', 2305, true)
```

Set analog object value:

```
bacnet.write(127001, 'analog value', 2306, 22.5)
```

Set binary object value at priority 12:

```
bacnet.write(127001, 'binary value', 2305, true, 12)
```

Set analog object value at priority 10:

```
bacnet.write(127001, 'analog value', 2306, 22.5, 10)
```

Clear binary object value at priority 12:

`bacnet.write(127001, 'binary value', 2305, nil, 12)`

14. 1-wire configuration

1-wire is a bus technology which is built based on client-server topology and allowing to connect up to 100 devices to one controller. It is either 2-wire or 3-wire bus installation. In case of 2-wire system, a parasitic powering is used directly from the bus, normally up to 20 devices can work in this way. In case of bigger amount of 1-wire sensors, you can use LogicMachine 5V DC output to power 1-wire devices.


Advantages of 1-wire over KNX:

- No need in ETS
- Very cost-effective
- You can use the same wiring as KNX does and connect all standard sensors


Advantages of 1-wire over resistive sensors:

- Substantial savings on equipment
- Easier connection diagram allows to reduce the complexity of laying wiring
- Extension possibility: connection of additional sensors without changing basic wiring
- Ability of remote monitoring of sensors (open circuit, short circuit etc.)
- No need to take into account the resistance of conductors like in the circuit with resistive sensors

1-wire connection diagrams:

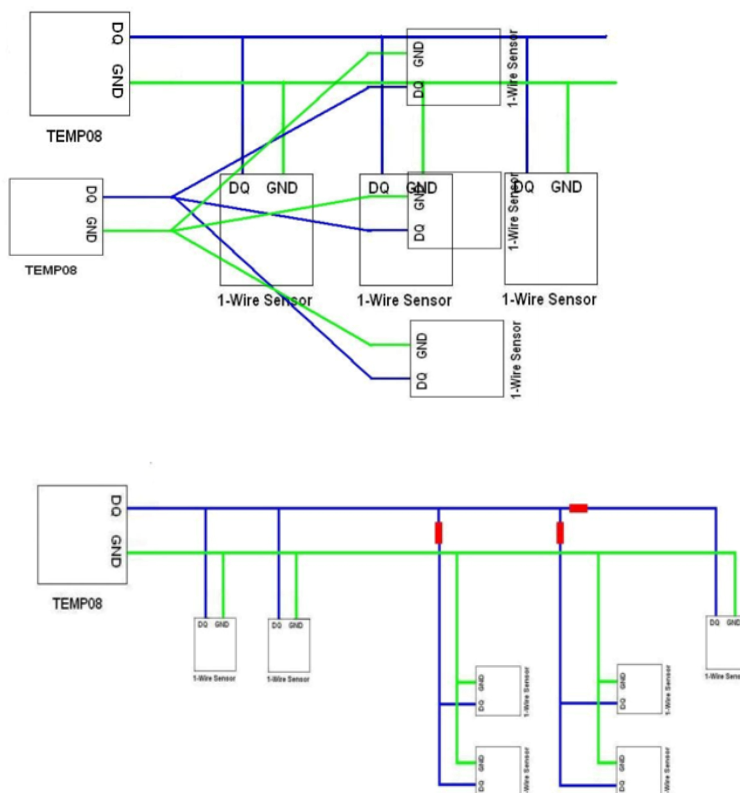


Once 1-wire sensors are connected to the 1-wire interface of LogicMachine Ambient

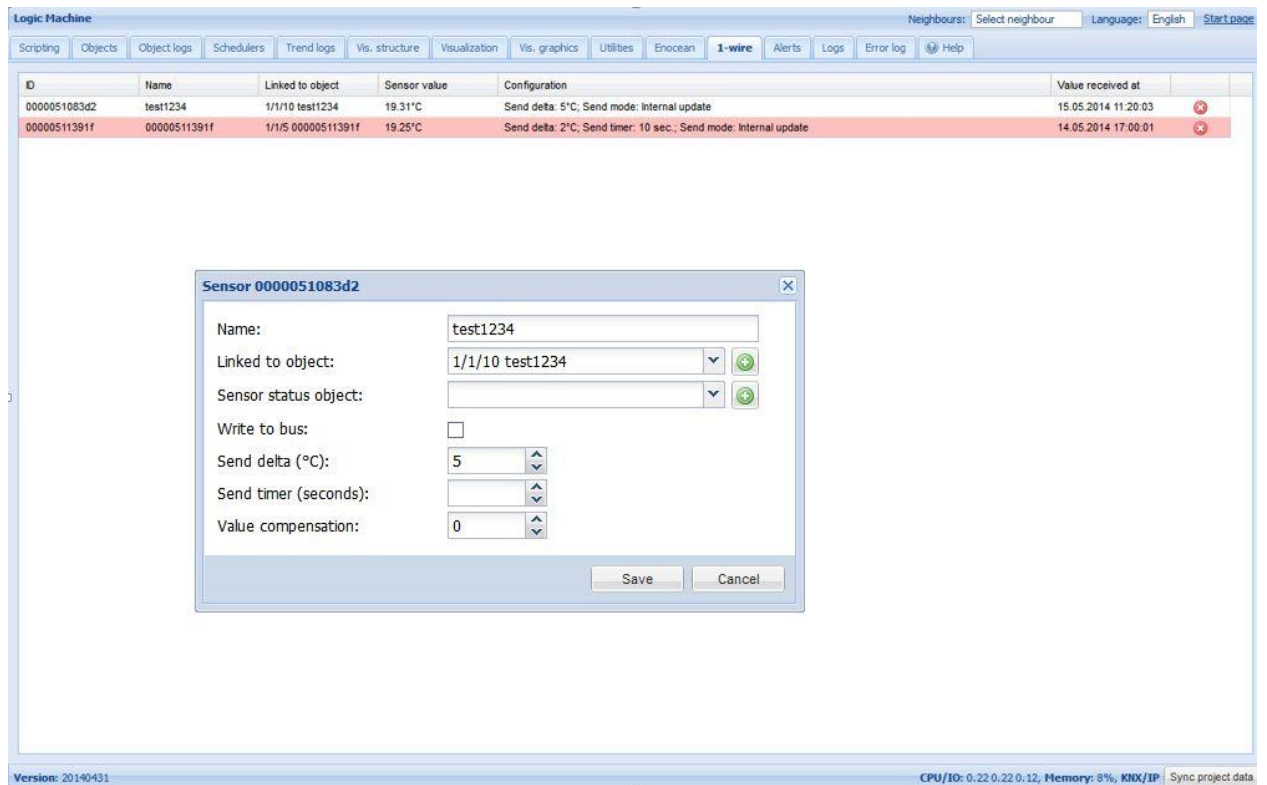

- **Name** – name of the 1wire device
- **Linked to object** – mapped KNX object
- **Sensor status object** – mapped KNX status object
- **Write to bus** – define either to write telegram in KNX bus on read value
- **Send delta** – define either to send delta of temperature sensor
- **Send timer (seconds)** – define interval in which send the measurement
- **Value compensation** – compensate value of the reading of temperature

1-wire PUZZLE - 2 Universal Digital Inputs / Outputs

With PUZZLE you can interconnect regular binary sensors with 1-wire fieldbus or use the device as digital output to control relays/contactors. By pairing the PUZZLE with LogicMachine Ambient, you can finish the installation in very cost-effective way. Up to 64 PUZZLE can be connected to one 1-wire port of LogicMachine and all objects can be then managed from any of KNX, Modbus, BACnet etc. devices.






15. EnOcean interconnection with LogicMachine


LogicMachine Ambient (LMWE02 and LMWE00) has EnOcean transceiver built-in with no limitation on supported count of devices.

EnOcean interface Base address can be found in *EnOcean* → *Interfaces* tab.

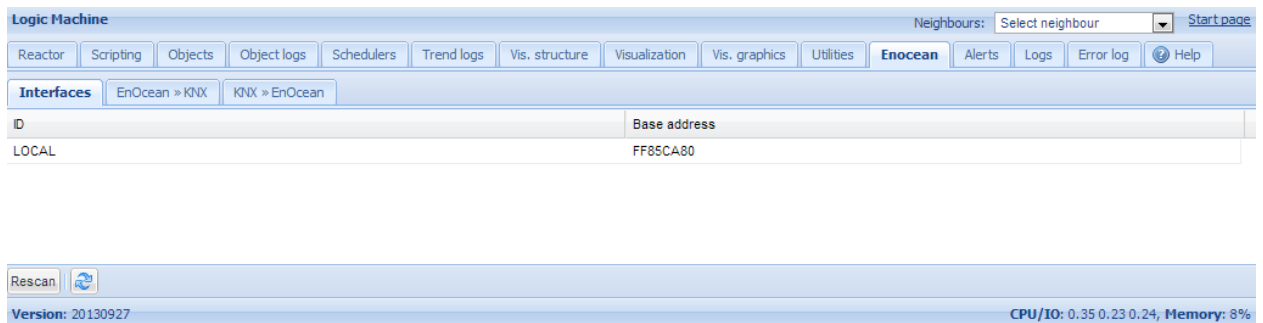


15.1. EnOcean to KNX mapping


All telegrams received from EnOcean devices appears in *EnOcean* → *KNX* section.

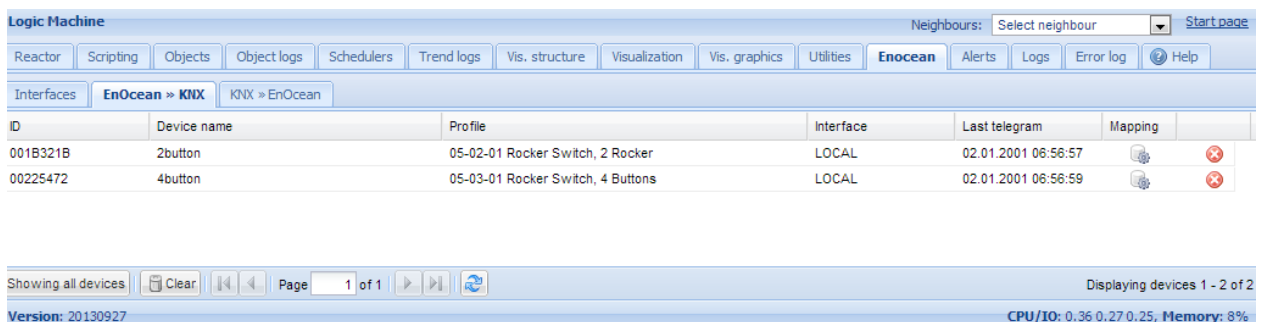


Once some specific device has to be mapped to KNX, the corresponding row has to be clicked and profile has to be chosen. There are all main profiles predefined in the list.

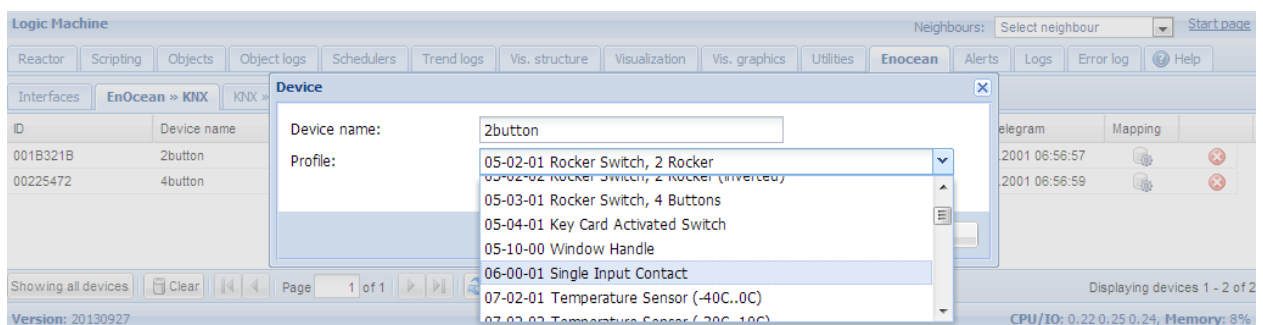


Once the device profile is set, you can map functionality of the specific device to KNX group addresses by clicking on *Mapping* icon.

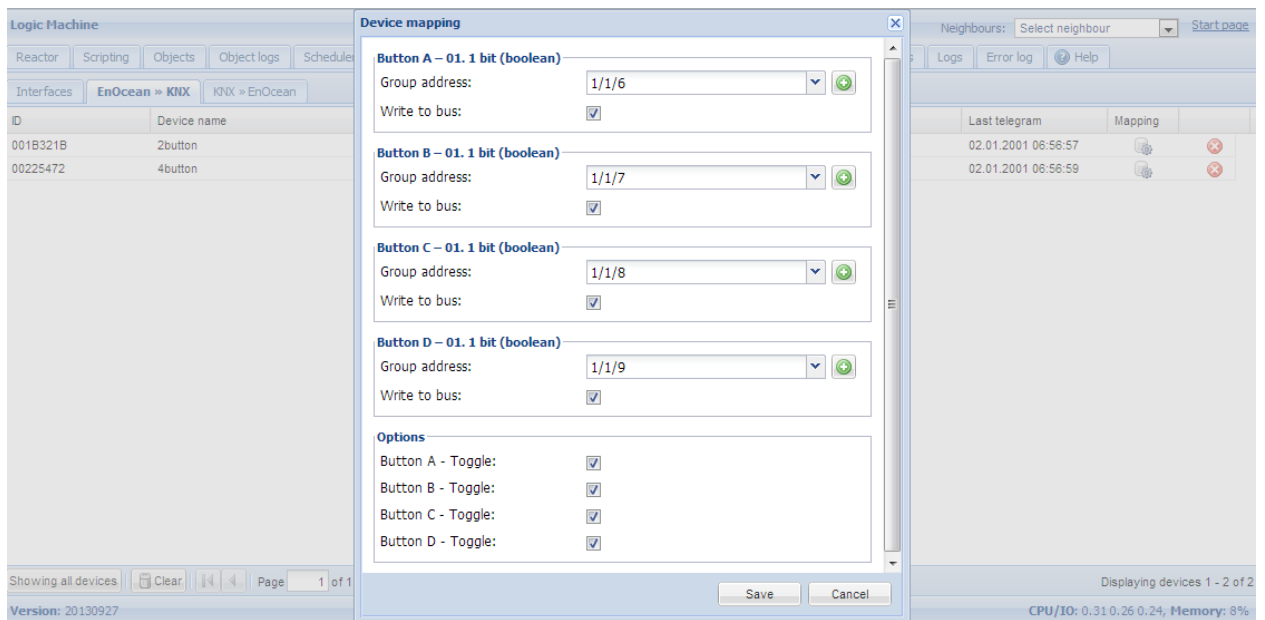

When EnOcean gateway received telegram from specific device, the respective row gets light green.

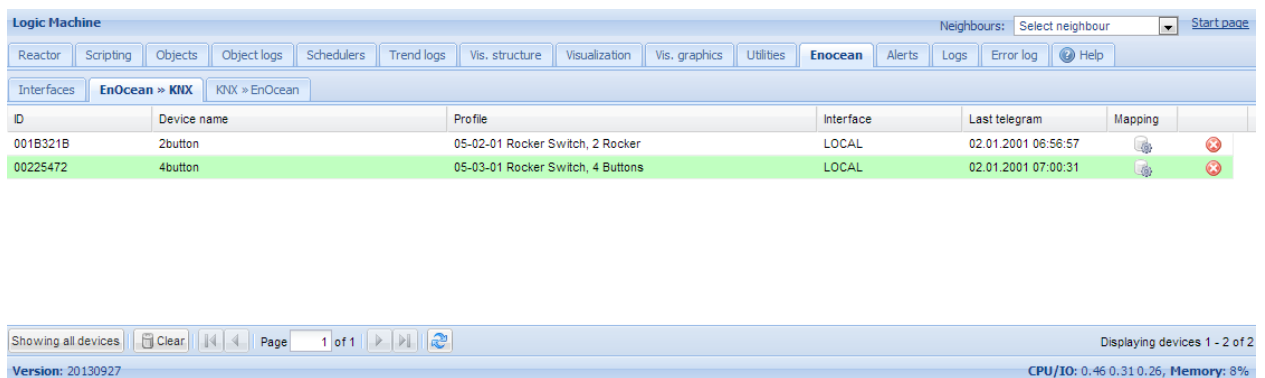


Respective KNX group addresses get updated with the new values.

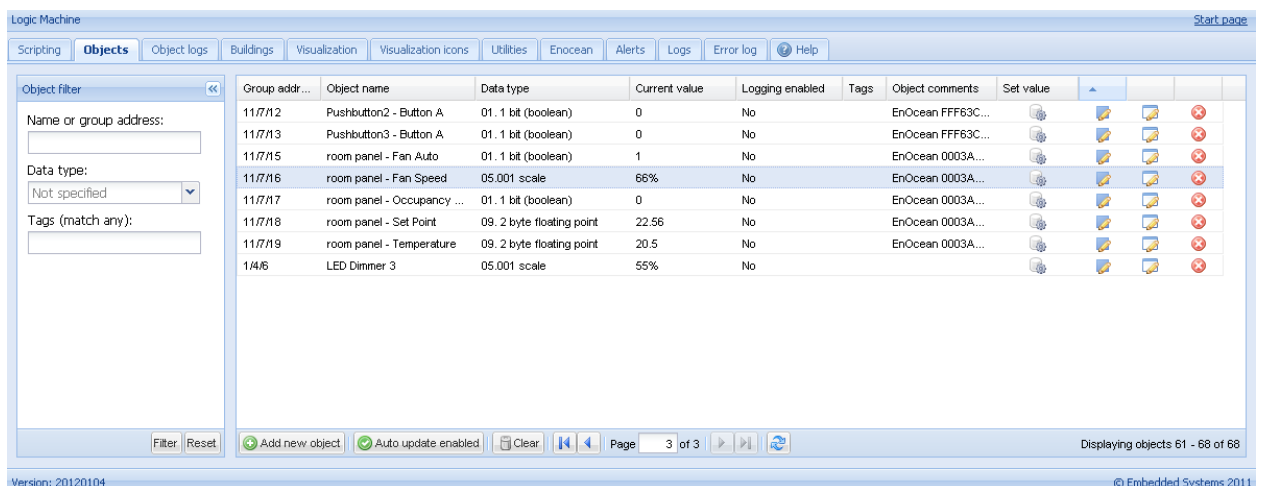


15.2. KNX to EnOcean mapping

You should click on *Add new device* button to add EnOcean device which will be communicated from specific KNX object.

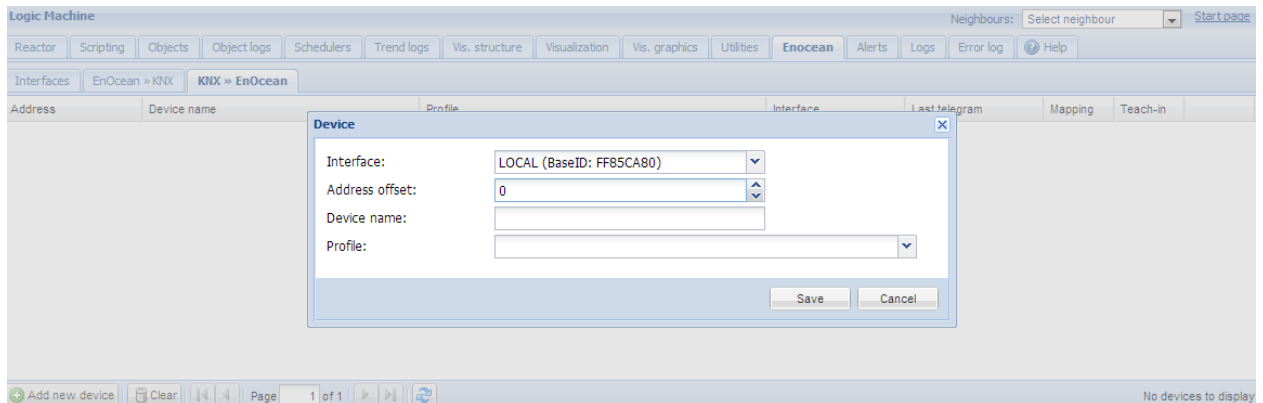


Once the device is added, you should pair it with specific device in EnOcean network, press *Tech-in* button.

Note! EnOcean device should be set in learning mode in order to pair it successfully.

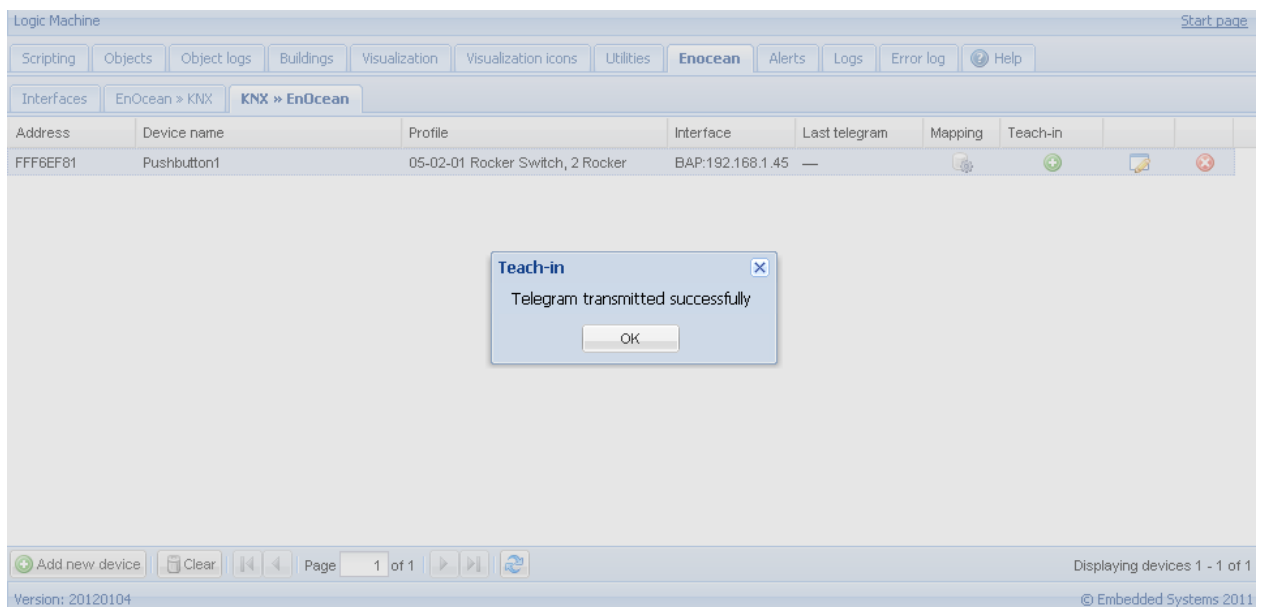

Further this device can be mapped with specific KNX addresses. When KNX object value will be updated, the telegram will be sent to respective EnOcean device.

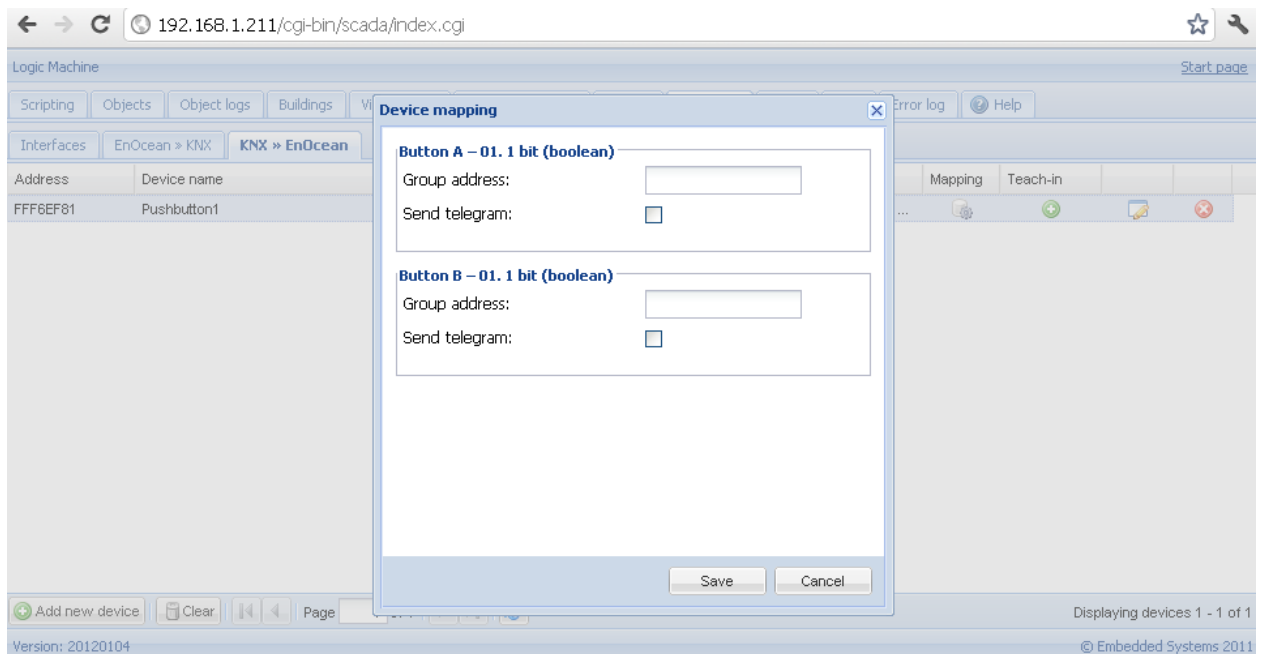

15.3. Mapping to EnOcean profiles out of the supported list

In case you don't find a profile of your EnOcean device in the list of profiles, you can use RAW format. For example here below is step by step guide for Eltako FUD61NPN-230V wireless switch integration.

- a) First of all turn on confirmation signal on the actuator: top rotary switch to CLR, LED flashes, during 10 seconds turn bottom rotary switch all the way to the left 3 times, LED light is on for 2 seconds.
- b) create one object with 4-byte unsigned integer data type and another with 1-byte scaled. 4-byte object should be mapped to KNX → EnOcean object with 4-byte RAW profile.
- c) Add the following script to the 1-byte scaled object (just for initial teach command)

```

b3 = 0xE0
b2 = 0x47
b1 = 0xFF
b0 = 0x00

a3 = bit.lshift(b3, 24)
a2 = bit.lshift(b2, 16)
a1 = bit.lshift(b1, 8)

res = bit.bor(a3,a2,a1,b0)

grp.update('1/1/5', res, dt.uint32)

```

- d) Put the actuator into learning mode: turn bottom rotary to EC1, upper rotary to LRN
- e) Set an object value for 1-byte scaled object (0-100) to teach in. (The actuator should stop flashing)

- f) Turn back actuator to desired functionality
- g) Add the following script to 1-byte scaled object (to be able to control the actuator)

```
-- dimming
b3 = 0x02
-- dimmer value [0..100]
b2 = event.getvalue()
-- ramp time in seconds
b1 = 1
-- data telegram, absolute value, store final
b0 = 9

a3 = bit.lshift(b3, 24)
a2 = bit.lshift(b2, 16)
a1 = bit.lshift(b1, 8)

res = bit.bor(a3,a2,a1,b0)

grp.update('1/1/5', res, dt.uint32)
```

- h) The dimmer can now be controlled through the 1-byte scaled object

If you need to read the values from the actuator as a 1-byte scaled object:

- a) In EnOcean >> KNX tab find the actuator (that should send confirmation signals if step 1 above was followed)
- b) Set profile as "RAW 4-bytes, split"
- c) Map Data Byte 2 to an object.
- d) Create a new object as "5.001 scale" (in the example 1/1/6)
- e) Add the following script to the Data Byte 2 object created in point 3:

```
value = event.getvalue()

res = (value/100)*255

grp.write('1/1/6', res, dt.uint8)
```

16. 3G modem connection with LM Ambient

LogicMachine has a regular 3G modem driver built-in (Huawei and other vendor supported). Currently this can be used for SMS notifications only – receiving and sending commands. The modem has to be plugged into USB port. We suggest to use external 5V powering for the modem because by USB2.0 standard the output current on USB is 0.75A, but some modems requires up to 2A which is out of standard so the modem can lack the power and get disconnected.

List of supported 3G modems can be found here:

http://openrb.com/wp-content/uploads/2015/12/3G_USB_device_reference.txt

First thing is to lower the modem speed by adding the following code in *Start-up / Init* script:

```
1. os.execute('echo 1 > /sys/bus/platform/devices/ci_hdrc.0/force_full_speed')
2. os.execute('echo 1 > /sys/bus/platform/devices/ci_hdrc.1/force_full_speed')
3. os.execute('usbreset /dev/bus/usb/001/001')
```

After you need to add SMS handler program – a resident script with sleep interval 0.

Note! Change white list telephone numbers and SIM card's PIN code in the below script.

```
1. -- init
2. if not modem then
3. -- allowed numbers, SMS message from other number will be ignored
4.  numbers = {'1234567890', '0123456789'}
5. -- replace 0000 with SIM pin number, or remove the line below if PIN check is disabled
6. pincode='0000'
7. -- modem communication port, ttyUSB2 for Huawei E173
8.  comport = 'ttyUSB2'
9. -- open serial port
10.  modem = AT:init('/dev/' .. comport)
11. -- command parser
12.  parser = function(cmd, sender)
13.  local find, pos, name, mode, offset, value, jvalue, obj
14.  cmd=cmd:trim()
15.    mode =cmd:sub(1, 1):upper()
16.  if mode == 'W' or mode == 'R' then
17.  cmd=cmd:sub(3):trim()
18.  -- parse object name/address
19.    find =cmd:sub(1, 1)==' ' and '' or ' '
20.    offset = find == '' and 1 or 0
21.  -- pad with space when in read mode
22.  if mode == 'R' and find == ' ' then
23.  cmd=cmd .. ' '
24.  end
25.  -- find name
26.  pos=cmd:find(find, 1 + offset, true)
```

```

27. -- name end not found, stop
28. if not pos then
29. return false
30. end
31. -- get name part
32.     name =cmd:sub(1 + offset, pos - offset):trim()
33. if mode == 'W' then
34.     value =cmd:sub(pos + offset):trim()
35. if not value then
36. return false
37. end
38. -- try decoding value
39. jvalue=json.pdecode(value)
40.     value =jvalue ~=nilandjvalueor value
41. -- send to bus
42. grp.write(name, value)
43. -- read request
44. else
45. obj=grp.find(name)
46. -- send read request and wait for update
47. if obj then
48. obj:read()
49. os.sleep(1)
50. -- read new value
51.     value =grp.getvalue(name)
52. -- got value, send response
53. if value ~=nilthen
54. jvalue=json.pencode(value)
55. if obj.name then
56.     name =string.format('%s (%s)', obj.name, obj.address)
57. end
58. cmd=string.format('Value of %s is %s', name, jvalue)
59. modem:sendsms(sender, cmd)
60. end
61. end
62. end
63. end
64. end
65. -- incoming sms handler
66. handler =function(sms)
67.     alert('incoming sms from %s (%s)', sms.sender, sms.data)
68. -- sms from known number, call parser
69. if table.contains(numbers, sms.sender) then
70.     parser(sms.data, sms.sender)
71. end
72. end
73. -- set sms handler
74. modem:setsmsHandler(handler)

```

```

75. -- send pin if set
76. if pincode then
77. modem:send('AT+CPIN=' .. pincode)
78. end
79. -- set to pdu mode
80. modem:send('AT+CMGF=0')
81. -- enable sms notifications
82. modem:send('AT+CNMI=1,1,0,0,0')
83. alert('SMS handler started')
84. end
85. modem:run()

```

Command syntax:

- a. Write to bus:
W ALIAS VALUE
- b. Read from bus:
R ALIAS

On read request, script will reply with SMS message containing current value of selected object.

ALIAS can be:

- a. Group address (e.g. 1/1/1)
- b. Name (e.g. Obj1). If name contains spaces then it must be escaped using double quotes (e.g. "Room Temperature")

NOTE:

- a. Object data type and name must be set in Objects tab. Otherwise script won't be able to read and write to object.
- b. Only ASCII symbols are accepted in the message.

Examples

Binary write (send the following SMS to switch kitchen lights on):

W 1/1/1 true

Scaling write (send the following SMS to set value 67% for red LED):

W LED1Red 67

Temperature (floating point) write (send the following SMS to make setpoint in the living room to 22.5 degrees):

W "Room Setpoint" 22.5

Read (send the following SMS to read the security panel value:

R 2/1/1

Send SMS messages to specific SIM numbers after group-read or group-write is triggered

Task: Assume we have an Event-based script which triggers a program once group-read or group-write is triggered for address 1/1/1. We want to send SMS to numbers 23335555 and 23335556 with 1/1/1 actual status.

```
1. require('socket')
2.
3. client =socket.udp()
4.
5. -- in the message field the number where SMS has to be send should be specified at the
   beginning
6. localmsg='23335555 1/1/1 changes its value to: ' .. tonumber(event.datahex)
7. client:sendto(msg, '127.0.0.1', 12535)
8.
9. msg='23335556 1/1/1 changes its value to: ' .. tonumber(event.datahex)
10. client:sendto(msg, '127.0.0.1', 12535)
```

Send SMS messages without 3G modem

How to send event SMS to mobile phone from LogicMachine through Twilio service, without external 3G adapter?

You can use Twilio service which offers free of charge SMS in the test period and messaging at \$0.01 for regular usage. The only disadvantage is it will use your standard Internet connection to send messages to Twilio servers (not via GSM as with 3G adapters).

Twilio account

You can get ID and Token needed for the below example by registering on Twilio. Make sure you enter a verified SIM number list / recipients in your account. Or please contact us for ready example with our account data.

Function

Add the following function in *Scripting* → *Common functions*

```
1. function sms(id, token, from, to, body)
2.     local escape = require('socket.url').escape
3.     local request = require('ssl.https').request
4.     local url = string.format('https://%s:%s@api.twilio.com/2010-04-
   01/Accounts/%s/Messages.json', id, token, id)
5.     local body = string.format('From=%s&To=%s&Body=%s', escape(from), escape(to),
   escape(body))
6.
```

```
7.     return request(url, body)
8. end
```

Event-based script

Add event-based program for specific object, like 1/1/2 in this example

```
1. value = event.getvalue()
2.
3. from_nr = '+37112345679' -- put sender SIM nr here
4. to_nr = '+37112345678' -- put receipient SIM nr here
5. id_nr = 'ACe56f5' -- put your ID here
6. token_nr = '598c6ff' -- put your token here
7.
8. sms(id_nr, token_nr, from_nr, to_nr, 'The value for 1/1/2 has changed
    to'..tostring(value))
```



17. Bluetooth 4.0 integration

LM Ambient has Bluetooth 3.0 and 4.0 integrated. Configuration of Bluetooth is located in *LogicMachine* → *BLE* tab.

A support for any BLE device can be added if a communication protocol will be provided and will not change in the future software release of BLE device.


Profiles

List of supported BLE devices can be found by clicking *Profiles* button. To add a new profile, you have to upload *.lua profile file by clicking on *Add profile* button.

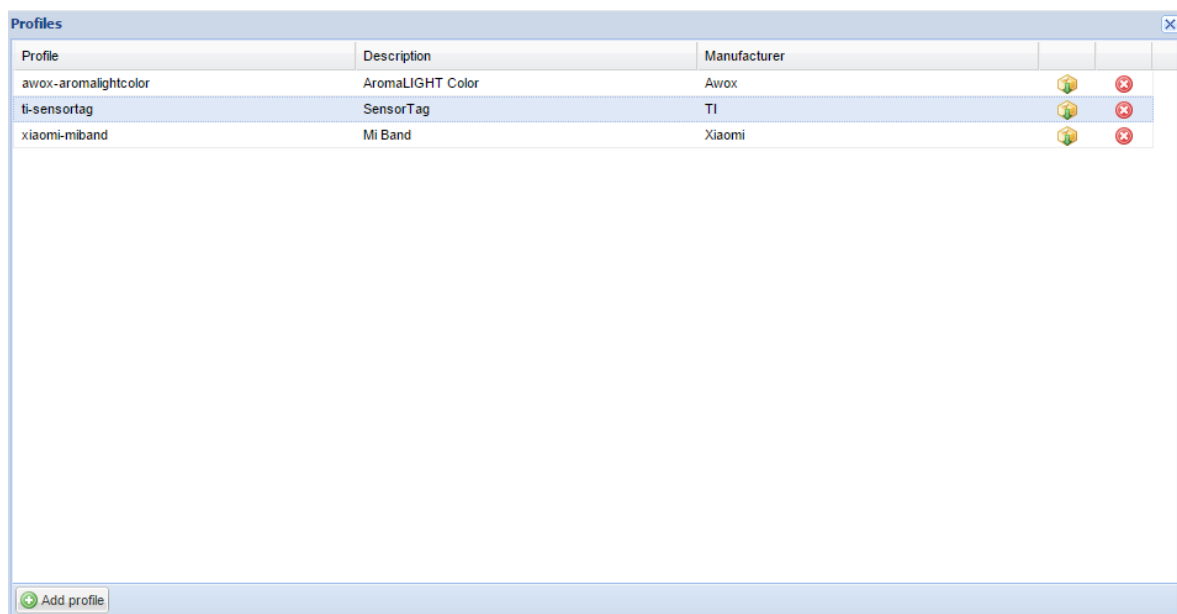


Mapping functionality to KNX group addresses


Once BLE device is seen by LogicMachine Ambient, it will automatically appear in the list.

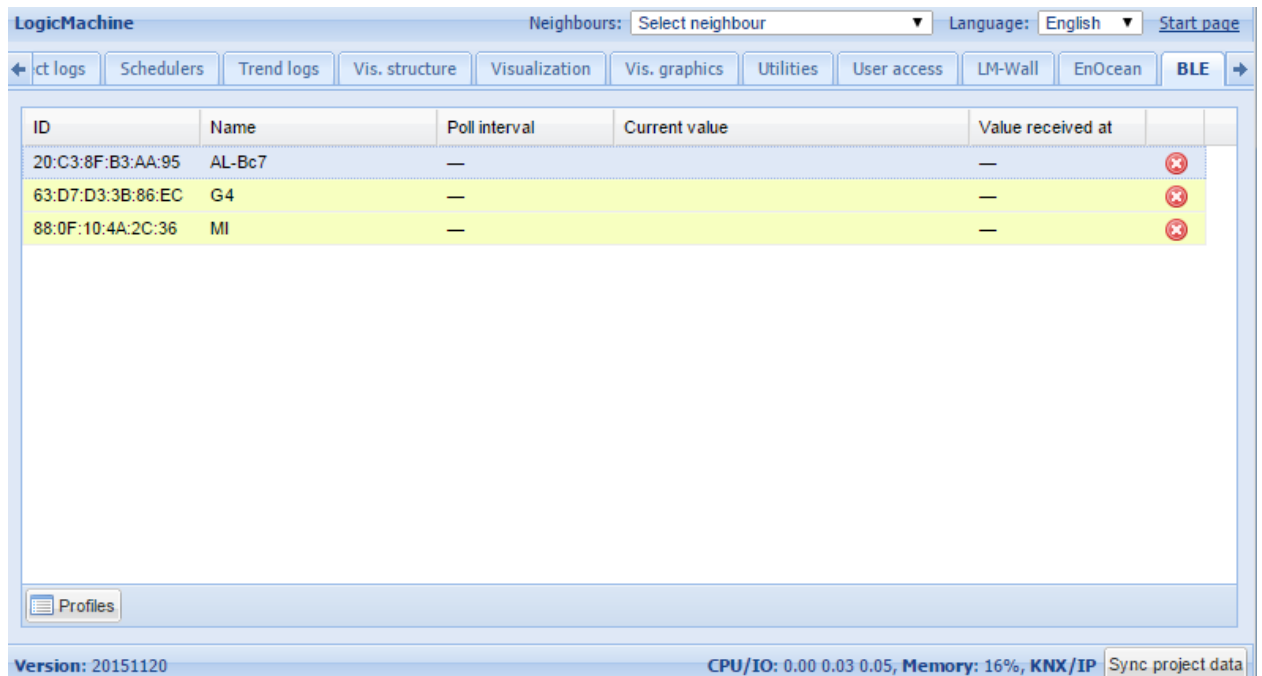

By clicking on specific device, you can map its functionality to KNX group addresses. For AWOX AromLight Color BLE lamp, you can map LED color object to KNX.

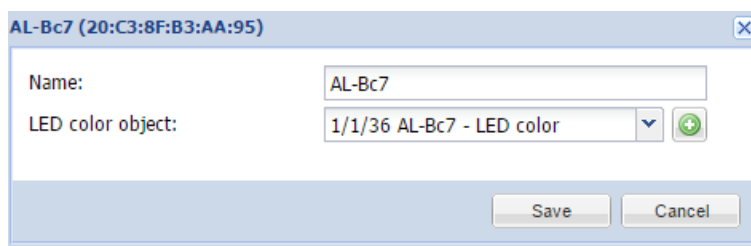

There are following mapping objects for Xiaomi Mi Band wearable – device present object, steps counter, battery level, vibrate the band.

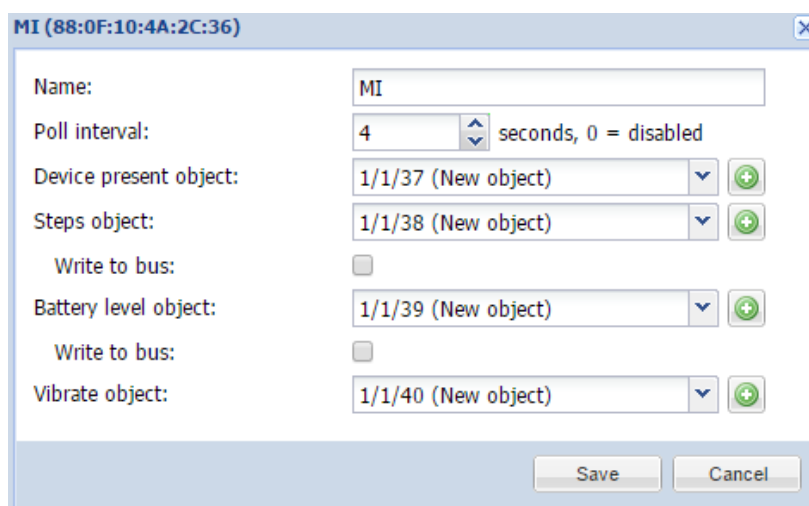

Example

Alpha MIO BLE watch has heart-rate as one of objects. This event-based script will switch on ventilation if the heart-rate is >80 and switch off if its lower

```
1. value = event.getvalue()
2. if value > 80 then
3.   grp.write('2/2/2', true)
4. else
5.   grp.write('2/2/2', false)
6. end
```

18. SIP server on LogicMachine

Task: How to pair SIP door entry systems with building automation project? In LogicMachine we have built SIP registrar which can send SIP requests to final SIP clients. For example, one can install Linphone SIP client app on touch devices which are used for visualization control. Upon SIP request from door entry system, LogicMachine will forward the request to the respective SIP client / recipient. On this client's device a new window will appear with options to answer or reject the call. When the call is answered, you will see video and audio from the door entry system. When the call is finished, Linphone app will go to the background.

SIP package installation on LM:

Add the following Resident script, 60 sec sleep time, run once:

```
os.execute('opkg --force-depends install http://dl.openrb.com/pkg/kamailio/terminfo_5.7-5_mxs.ipk')
os.execute('opkg --force-depends install http://dl.openrb.com/pkg/kamailio/libncurses_5.7-5_mxs.ipk')
os.execute('opkg --force-depends install http://dl.openrb.com/pkg/kamailio/libreadline_5.2-2_mxs.ipk')
os.execute('opkg --force-depends install http://dl.openrb.com/pkg/kamailio/kamailio3_3.3.7-1_mxs.ipk')
os.execute('opkg --force-depends install http://dl.openrb.com/pkg/kamailio/kamailio3-mod-maxfwd_3.3.7-1_mxs.ipk')
os.execute('opkg --force-depends install http://dl.openrb.com/pkg/kamailio/kamailio3-mod-registrar_3.3.7-1_mxs.ipk')
os.execute('opkg --force-depends install http://dl.openrb.com/pkg/kamailio/kamailio3-mod-rr_3.3.7-1_mxs.ipk')
os.execute('opkg --force-depends install http://dl.openrb.com/pkg/kamailio/kamailio3-mod-sl_3.3.7-1_mxs.ipk')
os.execute('opkg --force-depends install http://dl.openrb.com/pkg/kamailio/kamailio3-mod-tm_3.3.7-1_mxs.ipk')
os.execute('opkg --force-depends install http://dl.openrb.com/pkg/kamailio/kamailio3-mod-usrloc_3.3.7-1_mxs.ipk')

os.execute('/etc/init.d/kamailio enable')
os.execute('/etc/init.d/kamailio start')
```

Check if LM has Internet access

Check that IP, gateway, subnet, DNS are set correctly set.

Interface eth0

Protocol

Static IP

IP address

192.168.1.16

Network mask

255.255.255.0

Gateway IP

192.168.1.100

DNS server 1

8.8.8.8

DNS server 2

Mtu

OK

Cancel

SIP client application

You can use for example Linphone as your SIP client. You have to enter IP of LogicMachine in its settings.

iPad

11:47

76 %

Settings

About

SIP ACCOUNT

Run assistant

User name 2

Password

Domain 192.168.1.16

Proxy

Transport UDP

Outbound proxy OFF

AVPF OFF

SETTINGS

Enable video ON

Audio

Video

Call

Network

Advanced

History

Contacts


Chat

Settings

19. Object value export via XML

Make KNX objects XML readable

In the *Objects* tab click on the objects which you want to receive the current value by XML request. Check the Export object

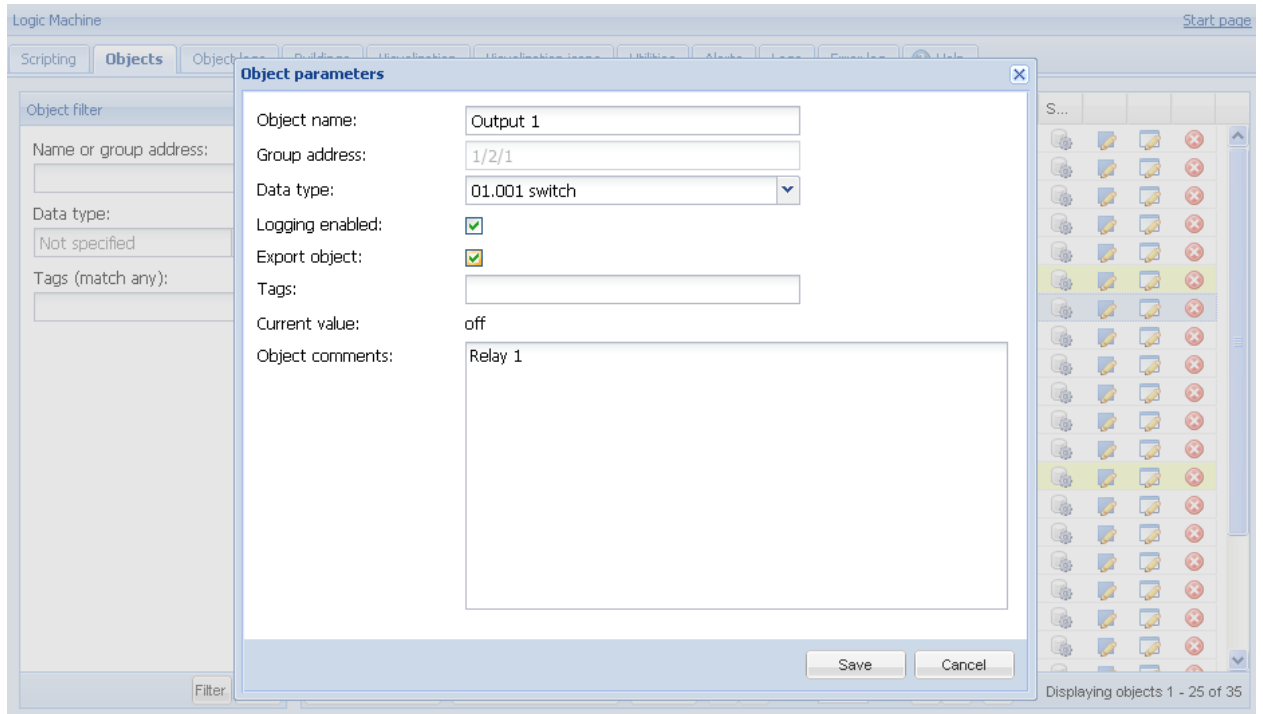

XML request from external PC

The XML request looks like this:

<http://remote:remote@192.168.1.211/cgi-bin/scada-remote/request.cgi?m=xml&r=objects>

Parameters:

- **address** – object address (e.g. “1/1/1”)
- **name** – object name (e.g. “My object”)
- **data** – decoded object value (e.g. 42 or “01.01.2012”)
- **datatype** – object datatype (e.g. 1 or 5.001) – standard KNX data types
- **time** – object update time (UNIX timestamp)
- **date** – object update time (RFC date)
- **comment** – object comment (e.g. “Second floor entry lights”)
- **tags** – optional array of object tags (e.g. “Light”, “Second floor”)

Note! To get list of objects that have been updated after specific time you can pass an optional “updatetime” parameter (UNIX timestamp format)

192.168.1.211/cgi-bin/scada-remote/request.cgi?m=xml&r=objects

This XML file does not appear to have any style information associated with it. The document tree is shown below.

```
<objects>
  <object>
    <comment/>
    <name>Weather Temperature</name>
    <address>5/1/2</address>
    <date>Tue, 14 Feb 2012 23:41:45 -1000</date>
    <time>1329298905</time>
    <data>-4</data>
    <datatype>9</datatype>
  </object>
  <object>
    <comment/>
    <name>Weather T Low</name>
    <address>5/1/4</address>
    <date>Tue, 14 Feb 2012 23:41:45 -1000</date>
    <time>1329298905</time>
    <data>-13</data>
    <datatype>9</datatype>
  </object>
  <object>
    <comment/>
    <name>Weather T High</name>
    <address>5/1/5</address>
    <date>Tue, 14 Feb 2012 23:41:45 -1000</date>
    <time>1329298905</time>
    <data>-8</data>
    <datatype>9</datatype>
  </object>
</objects>
```

Login, Password for remote XML request

Login and password can be changed in *Network Configuration* → *System* → *GUI Login* → *Admin/Remote* tab.

GUI login

Admin / Remote

Visualization

Login

admin

Password

.....

Repeat password

.....

Admin user has access to Logic Machine and Network Configuration interfaces

Login

remote

Password

Repeat password

OK

Cancel

More information of Remote services can be found here:

<http://openrb.com/docs/remote.htm>

Alerts, Errors values

In similar way also Alerts and Errors can be read by XML requests.

Alerts XML request:


<http://remote:remote@192.168.0.10/cgi-bin/scada-remote/request.cgi?m=xml&r=alerts>

Errors XML request:

<http://remote:remote@192.168.0.10/cgi-bin/scada-remote/request.cgi?m=xml&r=errors>


20. Read Alerts RSS feeds from LogicMachine

It is possible to read Alerts and Errors messages by remote RSS readers.

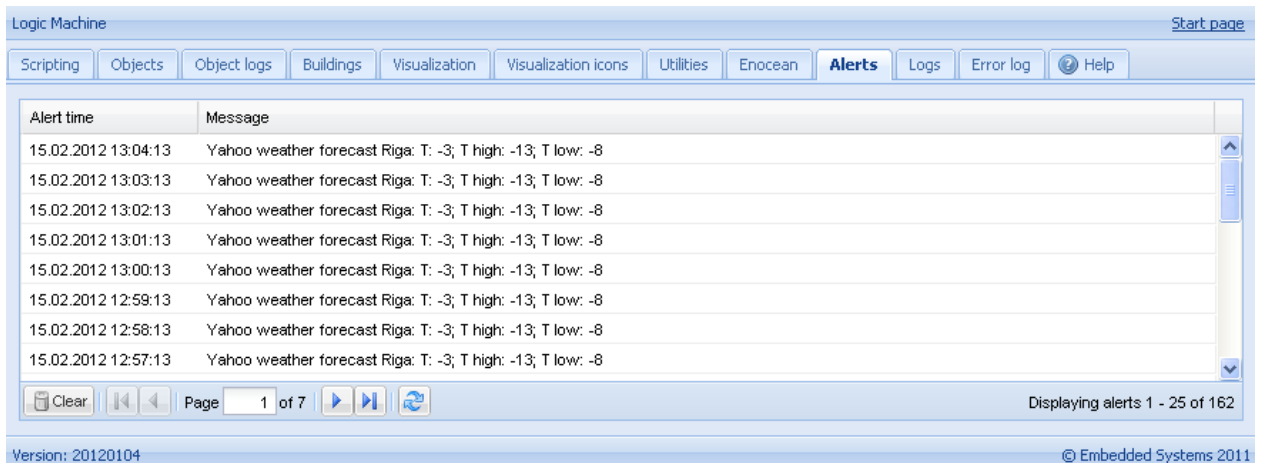

Add new RSS feed in the RSS reader

- Use the following URL:
- <http://remote:remote@192.168.1.211/cgi-bin/scada-remote/request.cgi?m=rss&r=alerts>
- 50 latest alerts will be shown
- *alert time* will be shown in *UNIX timestamp*, *alert date* will be shown as *RFC date*

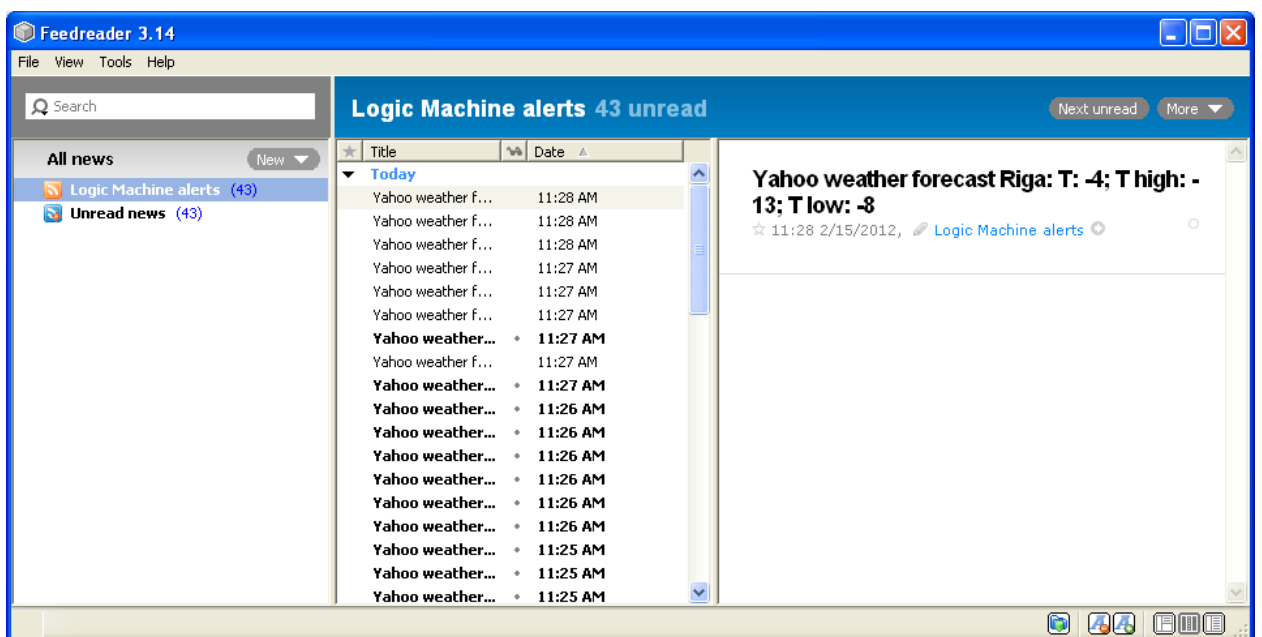


Error tab content by RSS

RSS can be used to read Error tab content as well. In this case the URL would look like:

<http://remote:remote@192.168.1.211/cgi-bin/scada-remote/request.cgi?m=rss&r=errors>

Login, Password for remote RSS requests

Login and password can be changed in *System Configuration* → *System* → *User access* → *Admin/Remote* tab.

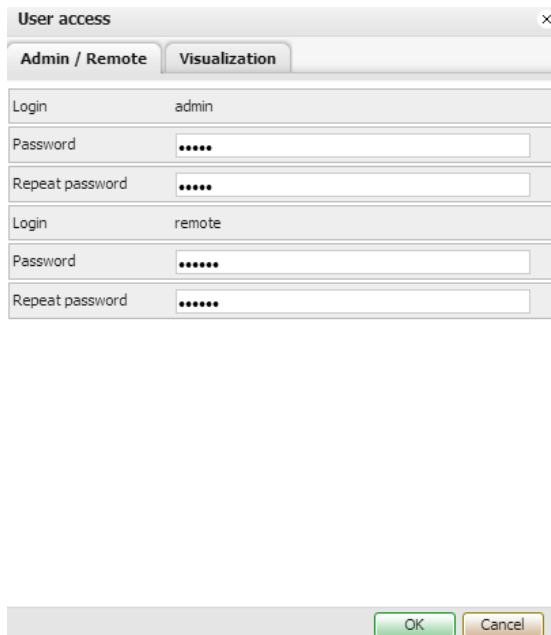

The image shows a 'User access' dialog box with two tabs: 'Admin / Remote' and 'Visualization'. The 'Admin / Remote' tab is active. It contains two sets of input fields for user credentials. The first set is for the 'admin' user, with the 'Login' field pre-filled with 'admin' and the 'Password' and 'Repeat password' fields masked with dots. The second set is for the 'remote' user, with the 'Login' field pre-filled with 'remote' and the 'Password' and 'Repeat password' fields masked with dots. At the bottom of the dialog, there are 'OK' and 'Cancel' buttons.

| User access | |
|------------------------------|--------|
| Admin / Remote Visualization | |
| Login | admin |
| Password | |
| Repeat password | |
| Login | remote |
| Password | |
| Repeat password | |

OK Cancel

21. Sending Email from LogicMachine

Task

Send email on KNX object 1/2/2 status change with its current value

Event-based script

```
mail('test@test.com', 'Alert', 'KNX object 1/2/2 value is: ' .. tostring(value))
```

Edit 'mail' function in Common functions

```
1. -- send an e-mail,
2. function mail(to, subject, message)
3.   -- make sure these settings are correct
4.   local settings = {
5.     -- "from" field, only e-mail must be specified here
6.     from = 'example@gmail.com',
7.     -- smtp username
8.     user = 'example@gmail.com',
9.     -- smtp password
10.    password = 'mypassword',
11.    -- smtp server
12.    server = 'smtp.gmail.com',
13.    -- smtp server port
14.    port = 465,
15.    -- enable ssl, required for gmail smtp
16.    secure = 'sslv23',
17.  }
18.
19.  local smtp = require('socket.smtp')
20.
21.  if type(to) ~= 'table' then
22.    to = { to }
23.  end
24.
25.  for index, email in ipairs(to) do
26.    to[ index ] = '<' .. tostring(email) .. '>'
27.  end
28.
29.  -- message headers and body
30.  settings.source = smtp.message({
31.    headers = {
32.      to = table.concat(to, ', '),
33.      subject = subject,
34.      ['Content-type'] = 'text/html; charset=utf-8',
35.    },
36.    body = message
```

```
37.  })
38.
39.  -- fixup from field
40.  settings.from = '<' .. tostring(settings.from) .. '>'
41.  settings.rcpt = to
42.
43.  return smtp.send(settings)
44. End
```

Note! Rcpt and from fields can contain only email address, no name.